

**Warranty:**

**LIMITED WARRANTY\* ONE (1) YEAR:**

Your *Elite* small kitchen appliance is built with precision, inspected and tested before leaving our factory. It is warranted, to the original purchaser, to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. During that period, should the appliance fail to operate properly, return the appliance with your sales receipt to the store where purchased. This warranty gives you special legal rights and you may also have other rights to which you are entitled, which may vary from state to state. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.

**This limited warranty covers appliances purchased and used within the surrounding United States and does NOT cover:**

- Damages caused from improper usage or installation of appliance.
- Damages caused from shipping.
- Defects other than manufacturing defects.
- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- The loss or missing parts of the appliance. Parts will need to be purchase separately.
- Damage from service by other than an authorized dealer or service center.
- Any transportation and shipping charges.

**RETURNS:** Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.

\*One Year Warranty valid only in the United States, **excluding** Alaska, Hawaii, and Puerto Rico. For international warranty, please contact the local distributor.

\*\*Any instructions or policy included in this manual may subject to change at any time.



## Juice Extractor



**Model TS-738**

**Model TS-738**

***Elite* Juice Extractor**

Distributed by: **MAXI-MATIC®**, USA  
18401 E. Arenth Ave. Building B. City of Industry, CA 91748  
Customer Service Department: (626) 912-9877 Ext. 116/120 MON-FRI 9am-5pm PCT  
Email: [info@maxi-matic.com](mailto:info@maxi-matic.com)

### **INSTRUCTION MANUAL**

Before operating your new appliance, please read all instructions carefully and keep for future reference.

## IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating.
2. Remove all packaging plastics and other materials from unit before operating.
3. Wash all removable accessories before using for the first time.
4. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
5. Close supervision is necessary when appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to OFF position, then remove plug from wall outlet.
13. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
14. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
16. Extreme caution should be exercised when using containers constructed of other material other than metal or glass.
17. Do not store any materials other than manufacturer's recommended accessories in this unit when not in use.
18. Do not place any of the following materials in the unit: Paper, cardboard, plastic and the like.

**SAVE THESE INSTRUCTIONS**


**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!**

## PARTS & FEATURES

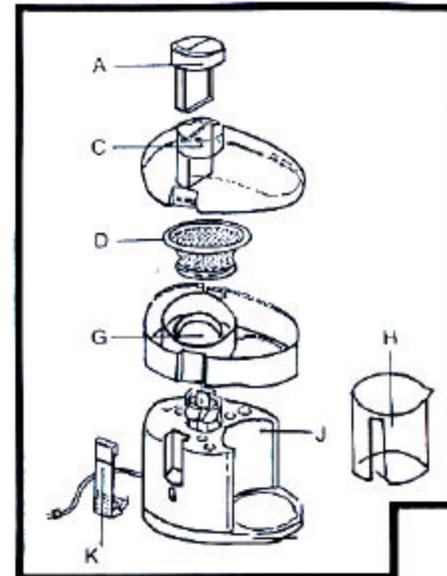

- |                  |                    |
|------------------|--------------------|
| A. Plunger       | G. Pulp Container  |
| B. Chute         | H. Juice Container |
| C. Cover         | I. ON/OFF/Switch   |
| D. Grater/Filter | J. Base            |
| E. Upper Housing | K. Clamps          |
| F. Gear          |                    |

- |                                            |
|--------------------------------------------|
| A. Brazo móvil                             |
| B. Conducto                                |
| C. Tapa                                    |
| D. Rallador/Filtro                         |
| E. Caja superior                           |
| F. Engranaje                               |
| G. Vasija de la pulpa                      |
| H. Vasija del jugo                         |
| I. Interruptor de ON/OFF (Encender/Apagar) |
| J. Base                                    |
| K. Abrazaderas                             |

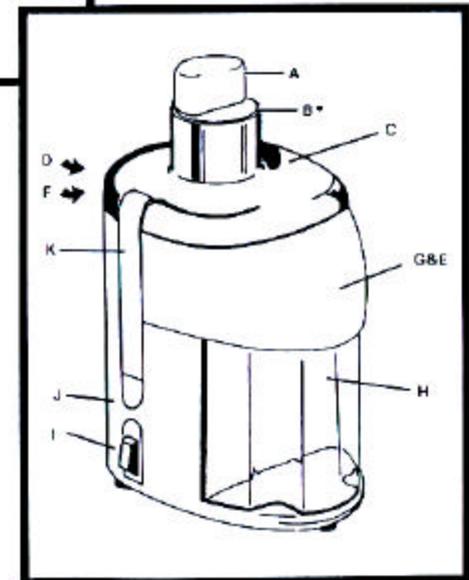

## HOW TO USE

Before using for the first time, remove all packaging materials and wash the Plunger, Cover, Grater/Filter, Pulp Catcher, and Juice Cup with warm soapy water. Rinse and dry thoroughly.

### ASSEMBLY & OPERATION:

**CAUTION:** Be sure the unit is switched to **OFF** and unplugged before beginning.

1. Place the Base on a dry level surface.
2. Place the hole in the bottom of the Pulp Catcher over the Gear. Position the Catcher so that it rests in the groove on the Base.
3. Place the Grater/Filter onto the Gear. Be sure the Grater/Filter is seated on the Gear before continuing.
4. Position the Cover onto the Pulp Catcher; the bottom of the Chute should sit inside the Grater/Filter. Be sure the Cover rests in the groove on the Pulp Catcher. Raise the Clamps to fit in the notches on the Cover. Press lower portion of each Clamp towards the Base until they snap into place.
5. Slide the Juice Cup into place.
6. Plug the unit into an A.C. wall outlet.
7. Turn unit to **ON** and **OFF** once to be sure it has been assembled correctly before beginning to extract juices.

### EXTRACTING JUICES :

1. Hold the Plunger with one hand while adding food to the Chute with the other hand. Insert the Plunger into the Chute as soon as you add the food and gently press down on the Plunger. As food is processed, continue to add food to the Chute. Do not turn the unit **OFF** to add food.

**CAUTION:** Keep hands and utensils out of the Chute while processing to prevent the possibility of severe personal injury and/or damage to the Juice Extractor.

**NOTE:** 1) To prevent food from jamming, do not put food into the Chute unless the unit is running. 2) Large Quantities: When the Juice Cup is  $\frac{3}{4}$  full, empty contents into a larger container. Empty the Pulp Catcher when it is half full.

If food becomes jammed and cannot be dislodged quickly using the Plunger, follow these steps to prevent damage to the unit:

- a. Turn the unit **OFF** immediately and unplug from the electrical outlet.
  - b. Loosen the Clamps and remove the Pulp Catcher.
  - c. Remove larger pieces of food which have become lodged.
  - d. Reassemble unit and continue juicing.
2. When finished, switch the unit to **OFF**.  
**CAUTION:** Be sure to unplug the A.C. cord when the Juice Extractor is not being used.

## CARE & CLEANING

1. Be sure unit is completely assembled before using. Do not operate the unit without the Pulp Catcher, Grater/Filter, Cover, Clamps, or the Juice Cup in place. Do not remove Pulp Catcher or Cover from the Base when the motor is running.
2. Remove all pits (peaches, plums, etc.), large seeds (melons, etc.), and stems before placing food into the Chute. Thick peels (oranges, lemons, grapefruit) should be removed. Items such as these may damage the unit or change the taste of the juice.
3. Keep hands and utensils out of the Chute while processing to prevent the possibility of severe injury to persons or damage to the unit.
4. Unplug from outlet when not in use, and before putting on or taking off parts, and before cleaning.
5. Clean spills promptly to make subsequent cleaning easier. Wipe the Base and Electrical Cord with a damp cloth. Wash Plunger, Cover, Pulp Catcher, Grater/Filter, and Juice Cup in warm soapy water and rinse thoroughly. To remove pulp from Grater/Filter, hold Grater/Filter, bottom side facing up, under running water and gently scrub with a soft nylon brush.

**CAUTION:** To protect against risk of electrical shock, do not put the Base in water or other liquids.

**Note:** Do not clean any part of the Juice Extractor with an abrasive cleaner. Do not put any part of the Juice Extractor into the dishwasher or boiling water.

6. Stains: Certain fruits and vegetables may stain white parts of the Juice Extractor. To remove stains: soak in a solution of 1 cup household bleach and 1 cup sudsy water. When clean, wash and rinse thoroughly.

## RECIPES:

### **Citrus Eye Opener**

1 red grapefruit  
1 lemon  
1 lime  
1 orange  
1/2 cup green grapes  
(peel the citrus fruits and remove before juicing)

### **Good Morning**

1/2 red beet  
1 celery stalk  
1 apple  
1 carrot

### **Spicy Veggie Blast**

1 cup of broccoli flowerets including stem  
1/4 green pepper  
1 carrot  
1 celery stalk  
1 tomato  
cayenne powder or hot pepper sauce to taste

### **Amazing Green Drink**

1/2 green pepper  
1 carrot  
1 celery  
1/2 cup parsley  
1 apple  
1/c cup spinach

### **Smooth Refresher**

1 cup of fresh jicama  
2 celery stalks  
1 green apple  
1 cucumber

### **Salad in a Glass**

1 ring of red onion  
2 medium tomatoes  
1 cup spinach  
1 cup lettuce  
1 lemon peeled  
1 cucumber