

Ford Motor Company Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

1 CD EJECT Press ▲ and a memory preset 1-6 to eject a CD from a specific slot. Press and hold to auto eject all CDs present in the system.

2 LOAD Press LOAD and a memory preset to load a specific slot. Press and hold to autoloop up to six CDs.

3 AM/FM Press to select AM/FM1/FM2 frequency band.

4 SEEK Press to access the previous or next strong station, CD track, previous/next channel (if equipped with satellite radio), previous/additional display text or category.

5 TEXT/SCAN Press and hold to hear a brief sampling of radio stations or CD tracks. Press again to stop. In CD/MP3 mode, press and release to display track title, artist name and disc title.

6 FOLDER In folder mode, press to access previous or next folder on MP3 discs, if available.

SATELLITE RADIO FEATURES AND CONTROLS (if equipped)

7 AUX Press repeatedly to cycle through FES/DVD (if equipped), SAT1, SAT2, SAT3 (satellite radio mode if equipped), LINE IN (auxiliary audio mode if equipped) or FES/DVD (if equipped). Once Satellite Radio mode is activated you may use the following functions:

Press MENU until CATEGORY MODE appears in the display. Press ▲/▼ to scroll through the list of SIRIUS channel categories. Press SEEK to select. Press SCAN to hear a brief sampling of channels in the selected category.

Press SEEK to access the previous/next channels. Press and release TEXT/SCAN to display the current song title. Press again to scroll through current song title, artist, channel category and the SIRIUS long channel name. Press and hold for a brief sampling of the next channels. Press again to stop.

8 TUNE/DISC SELECTOR In radio mode, press to go up/down the frequency band in individual increments.

9 MENU Press repeatedly to cycle through the following modes: Category (if equipped with satellite radio), Setting the Clock, Autoselect, RBDS ON/OFF, Treble, Bass, Balance, Fade, SPEEDVOL (Speed Sensitive Volume, if equipped), ALL SEATS (Occupancy Mode), Track/Folder, and Compression. For more information, please consult your Owner's Guide.

10 SETTING MEMORY PRE-SETS Select AM, FM1 or FM2 band, then tune to a station. Next, press and hold a numbered preset button until the sound returns.

SETTING THE CLOCK Press MENU until SELECT HOUR or SELECT MINS is displayed. Press up/down arrows/<SEEK> to adjust the hours/minutes.

 


SECOND ROW SEATS

IMPORTANT: Before folding the second row seats, ensure that the head restraints are fully flipped down by pulling on the strap and that all items have been removed from the floor and off the seats.

ENTERING THE THIRD ROW SEAT

Fold head restraint forward (**Pos. 1**). Pull up on the lever (**Lever 1**) located on the side of either outboard second row seat until the seat back folds forward to the cushion (**Pos. 2**). Pull lever fully upward (**Lever 1**). The seat will then flip forward (**Pos. 3**).

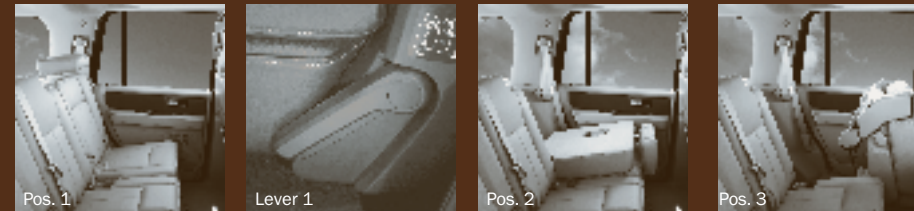

EXITING THE THIRD ROW SEAT

Fold head restraint forward (**Pos. 4**). Pull up on the strap located at the back of the second row seat by the outboard side shield (**Pull Strap**). The seat back will fold forward to the cushion (**Pos. 5**). Continue pulling up on the pull strap and the seat will flip forward (**Pos. 6**). To return the seat to the upright position, push the seat down until it is latched to the floor strikers. Then, lift the seat back to the upright position and flip the head restraint to the upright position.



FOLDING THE OUTBOARD SEAT BACKS TO A LOAD FLOOR POSITION – (REFER TO THE IMPORTANT NOTE ABOVE)

To fold the seats to a load floor position, lift the lever (**Lever 1**) located on the outboard side of the seat to release the seat back. To lower the seat further to the fully-lowered position for maximum cargo capacity, locate (**Lever 2**) on the seat back. Releasing the lever releases the seat into the kneel-down floor position. A moderate force may be required to move the seat forward and down.



SECOND ROW SEATS (CONTINUED)

RETURNING THE SEATS TO THE UPRIGHT POSITION FROM THE FULLY-LOWERED FLOOR POSITION

The seat back cannot be returned to the upright position until the seat is returned from the kneel-down position. To return the seat to the upright position, lift and pull the seat rearward until the latch is fully engaged. Do not attempt to unlatch the rear floor hooks while the seat is in the kneel-down position.

With the seat back in the folded down position, lift up on the seat back. This will allow the seat back to be lifted to the upright locked position.



FOLDING THE 20% MIDDLE SEAT (IF EQUIPPED) TO A LOAD FLOOR POSITION

To fold the seat, pull the lever (lever 3) located on the seat back to release the folding seat latch. With the latch released, the seat back can be lowered into the load floor position. A moderate force may be required to move the seat forward and down.



RETURNING THE 20% MIDDLE SEAT TO THE UPRIGHT POSITION FROM THE FULLY-LOWERED FLOOR POSITION

To return the seat to the upright position, lift and pull the seat back until the seat latch is fully engaged.

POWER LIFTGATE OPERATION

 


To open the optional power liftgate, push the button on the instrument panel (**Figure A**), or press and release the control located in the left rear quarter panel (**Figure B**). Keep clear of the liftgate when operating the rear switch.

To open the liftgate manually, place your hand on top of the liftgate handle (**Figure C**) and pull. Do not pull the handle from the bottom. To close, make certain the liftgate glass is closed, and then push the liftgate closed until it latches securely.

To unlatch the liftgate glass, push the button (**Figure D**) under the center of the license plate lamp shield. Pressing ⏏ on your keyfob will also unlatch the liftgate glass.

Do not open the liftgate or the liftgate glass in a garage or other enclosed area with a low ceiling.

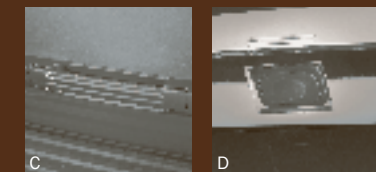

ESSENTIAL INFORMATION

FUEL TANK CAPACITY Your vehicle's fuel tank can accommodate 28 gallons (106L) of gasoline. (Expedition EL accommodates 33.5 gallons (126.8L) of gasoline.) Your vehicle is designed to use "Regular" unleaded gasoline with a pump (R+M)/2 octane rating of 87 for optimum performance. The use of gasoline with lower octane ratings may degrade performance.

TIRE PRESSURE Your tire pressure is properly set at the dealership according to the recommended specifications found on the Certification Label located on the front door latch pillar on the driver's side. Please check your tire pressure during routine maintenance and seasonal changes and when the Tire Pressure Monitoring System warning indicator (if equipped) is illuminated. ⚠ Warning: Improperly inflated tires can affect vehicle handling and tire performance. See "Additional Features" on the reverse side for more information.

FUSES If electrical components in the vehicle are not working, a fuse may have blown. For more information about changing a fuse, please consult your Owner's Guide.

FUEL PUMP SHUT-OFF SWITCH After a collision, if the engine cranks but does not start, the fuel pump shut-off switch may have to be reset. The switch is located in the left rear quarter trim panel, near the liftgate, behind an access panel. For complete details on resetting the switch, please consult your Owner's Guide.

CHANGING THE TIRES If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Prior to jacking, hoisting or towing your vehicle, be sure to turn OFF the running boards (if equipped), and the air suspension switch. Your vehicle may be equipped with a conventional spare tire that is different in one or more of the following: type, brand, size, speed rating and tread design. Your vehicle may be equipped with a spare wheel that may not match the road wheels and is not equipped with a Tire Pressure Monitor System (TPMS) Sensor.

LOCATION OF THE SPARE TIRE AND TOOLS

Item	Location
Spare Tire	Under the vehicle, just forward of the rear bumper
Jack Tools and Jacking Instructions	Under the access panel, located in the floor compartment behind the third row seat

ROADSIDE EMERGENCIES To fully assist you if you should have a vehicle concern, Ford Motor Company offers a complimentary roadside assistance program. This program is separate from the New Vehicle Limited Warranty. The service is available 24 hours a day, seven days a week for the New Vehicle Limited Warranty period (U.S.) or Basic Warranty period (Canada) of three years or 36,000 miles (60,000 km). Roadside assistance will cover:

- Changing a flat tire
- Jump-starts
- Limited fuel delivery
- Lockout assistance
- Towing of your vehicle
- Winch Out

ROADSIDE ASSISTANCE CENTERS

Country	Phone Number
United States	1-800-241-3673
Canada	1-800-665-2006

For complete details on any roadside assistance concern, please consult the Roadside Emergencies chapter, or the Customer Assistance chapter in your Owner's Guide.

07 EXPEDITION

QUICK REFERENCE GUIDE

 


07 FORD EXPEDITION

QUICK REFERENCE GUIDE

In order to help you fully appreciate the countless features of your new Expedition, we invite you to explore this easy-to-use Quick Reference Guide. For more information, please consult your Owner's Guide.

This vehicle handles differently from an ordinary passenger car in driving conditions which may occur on streets and highways and off-road. DRIVE WITH CARE AND WEAR A SAFETY BELT AT ALL TIMES. Ford urges you to read the Owner's Guide and Driving Your SUV or Truck Supplement for further information on safe driving precautions and instructions.

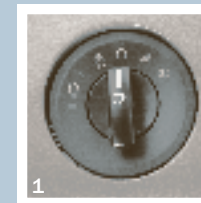

1 HEADLAMP AND PANEL DIMMER CONTROL Rotate clockwise to the first position to turn on the parking lamps. Rotate to the second position to also turn on the headlamps. Rotate counterclockwise to activate the autolamp, which provides light-sensitive automatic on-off control of the exterior lights and keeps them on for a short period of time after the ignition is turned OFF. When the control is in any position except high beams or off, pull the control toward you to activate the foglamps.

2 TURN SIGNAL AND WIPER/WASHER CONTROL Push down to activate the left turn signal, or up to activate the right turn signal. On equipped vehicles, the lower portion of the corresponding side view mirror will blink to provide an additional warning to other drivers that your vehicle is about to turn.

For front wiper operation, rotate the end of the control to the desired interval, low- or high-speed



position. When in the intermittent position, rotate the control up for fast, or down for slow intervals. The speed-sensitive feature also allows the wipers to adjust automatically as the vehicle's speed changes when the wiper control is set on the intermittent settings. Push in the end of the stalk briefly for a single wipe (no wash). Push in and hold to activate the washer.

The ring on the right operates the rear window wiper. Rotate the control toward you to activate the foglamps.

For extended wiper blade quality, occasional cleaning of the wiper blades is required.

3 ABS WARNING LAMP This lamp illuminates briefly when the ignition is turned to the ON position. In an emergency, apply continuous force on the brake to prevent wheel lockup when braking on slippery surfaces - do not pump your brakes. Any pulsation or noise you may feel or hear is normal.

 


4 SERVICE ENGINE SOON LAMP This lamp illuminates briefly to ensure the system is functional. If the lamp comes on after the engine is started, refer to your Owner's Guide. To help prevent activation, always secure your fuel cap by turning it clockwise 1/4 of a turn until at least a few clicks are heard.

Please note that if the fuel cap is not properly secured, the warning "Check Fuel Cap" will be displayed on the optional message center. The warning will be reset once the cap is properly tightened and your vehicle is driven a short distance. If your vehicle is not equipped with a message center, the Service Engine Soon lamp will illuminate.

5 MESSAGE CENTER (IF EQUIPPED) Please see "Additional Features" for more details.

6 AIR FLOW ADJUST You can direct or shut off the air flow from the instrument panel registers. Turn the steel portion on the round register module

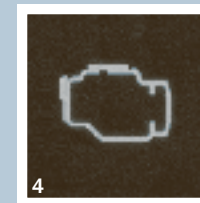

either clockwise or counterclockwise with the vents open to adjust the airflow. Close the vents flat to shut off the air flow.

7 PREMIUM/AUDIOPHILE AM/FM IN-DASH SIX CD/MP3 SATELLITE COMPATIBLE SOUND SYSTEM (if equipped) Please see reverse side for more details.

8 HAZARD FLASHER CONTROL Press to activate all hazard flashers simultaneously in an emergency to warn traffic of vehicle breakdown, approaching danger, etc. Press the control again to turn the flashers off. The hazard flashers can be operated when the ignition is off.

9 REAR WINDOW DEFROSTER Press to activate rear window defrost. The rear defrost indicator will illuminate. When in operation, the rear window defroster also defrosts the side view mirrors. The rear window defroster will automatically turn off after approximately 10 minutes of operation. Press the control again to re-engage if needed.

INSTRUMENT PANEL



1

2

3

4

5

6

7

8

15

14

 
13

12

11

10

9

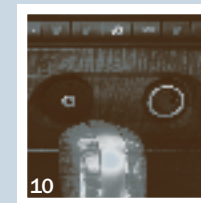


10 AUXILIARY INPUT JACK (AIJ) Your vehicle is equipped with an Auxiliary Input Jack (AIJ) located below the climate control. This allows you to plug and play auxiliary audio devices. Press AUX repeatedly on your audio system to access. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

11 CONTROL TRAC FOUR-WHEEL DRIVE (4X4) OPERATION (if equipped) 2H (2WD) delivers power to the rear wheels only. This is appropriate for normal on-road driving on dry pavement.

4A (4X4 AUTO) provides electronic control four-wheel drive with power delivered to all four wheels, as required, for increased traction. The message center will display "4X4 AUTO" when this position is selected.

 4H (4X4) provides electronically locked four-wheel drive power to all four wheels. The message center will display "4X4" when this position is selected. 4L

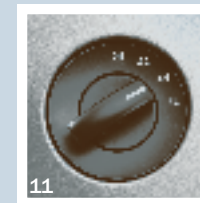

(4X4 LOW) provides electronically locked four-wheel drive when extra power at reduced speeds is required. The message center will display "4X4 LOW" when this position is selected.

To shift from 2H to 4A or 4H, move the control to the 4A or 4H position at any forward speed up to 55 mph (88 km/h) or at a stop. The message center may display "4X4 SHIFT IN PROGRESS" during the system shift. The message center will then display "4X4 AUTO" if 4A is selected or "4X4" if 4H is selected.

To shift from 4A to 4H, move the control from 4A to 4H at a stop or while driving at any speed. The message center will display "4x4".

To shift to/from 4L, bring the vehicle to a stop. Place the gearshift in N (Neutral), then move the control to the desired position. The message center will display "4X4 SHIFT IN PROGRESS" during the shift. The message center will then display "4X4" when the system mode is selected. If any of the



above shift conditions are not met, the shift will not occur and the message center will display the appropriate information.

12 GEARSHIFT/OVERDRIVE CONTROL Overdrive is the normal drive position for the best fuel economy. Only deactivate (O/D OFF) overdrive when: driving with a heavy load, towing a trailer up or down steep hills, or when additional engine braking is desired. To deactivate, press the switch located on the end of the gearshift lever.

Note: The transmission shift strategy will slightly delay transmission upshifts in cold weather to decrease the time required to warm up the engine and produce heat in the passenger compartment.

13 STEERING WHEEL CONTROLS (if equipped) For audio control operation, press MEDIA to select which media to play. Depending on the mode, press SEEK to select a preset station,

 


the next selection on a tape, or the next track on a disc. Use VOL to adjust volume. For climate control operation, press TEMP up or down to adjust temperature. Press the control with the fan icon up or down to adjust fan speed.

14 SPEED CONTROL To operate, the speed control must be ON and the vehicle speed must be greater than 30 mph (48 km/h). To set a speed, press SET +. To set a higher speed, press SET + again. To set a lower speed, press SET -. Pressing RES will return to a previously set speed. To turn the speed control off, press the OFF button, or depress the brake pedal to disengage.

15 POWER ADJUSTABLE FOOT PEDALS (if equipped) Press and hold the rocker control to adjust the accelerator and brake pedal toward you or away from you. Adjust the pedals only when the vehicle is stopped and the gearshift lever is in the P (Park) position.

ADDITIONAL FEATURES

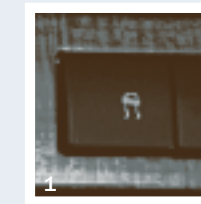

1 ADVANCETRAC® WITH RSC® (if equipped) The AdvanceTrac with Roll Stability Control™ (RSC) system provides stability enhancement features for certain driving situations when driver assistance is needed. It helps your vehicle maintain traction when driving on slippery and/or hilly road surfaces. If your vehicle should become stuck, try switching the system off by pressing and holding the button on the center console for more than five seconds.

2 KEYLESS ENTRY SYSTEM (if equipped) With this control you can lock or unlock all doors without using a key. First, enter your five-digit program code and then press the corresponding quick key:

Unlock all doors = 3-4
Lock all doors = press buttons 7-8 and 9-0 simultaneously

3 HEATED AND COOLED SEATS (if equipped) The driver and passenger heated and cooled seat buttons are located on the climate control. Press the heated seat button once for low heat, twice for medium heat and three times for high heat. Pressing a fourth time will turn off this feature.

Press the cooled seat button once for full cool, twice for medium cool and a third time for low cool. Pressing a fourth time will turn off this feature.

 


4 MESSAGE CENTER (if equipped) The message center displays important vehicle information through a constant monitor of vehicle systems (with the ignition in the ON position). The system will notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime. You may select display features on the message center by pressing the Info or Setup buttons. The Reset button may be used to reset select functions in the Info and Setup menus.

For complete details on the message center display features, please consult your Owner's Guide.

5 REVERSE SENSING SYSTEM This system sounds a tone to warn the driver of obstacles near the rear bumper when the reverse gear is selected. Obstacles can be detected within approximately 10 feet (3m) behind the rear bumper while the vehicle moves in reverse at parking speeds. At higher speeds (above 2.5 mph), the system will report objects up to 16 feet (5m). The extended rear park assist defaults to ON, but can be disabled using the message center functions when the ignition is ON, and the gearshift is in R (Reverse).

6 TIRE PRESSURE MONITORING SYSTEM (TPMS) (if equipped) Using radio-frequency pressure sensors, this

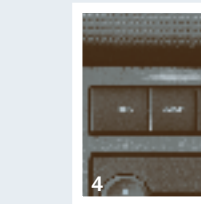

system monitors tire pressure on all road tires and provides the driver with a yellow warning light when air needs to be added. Message center equipped vehicles provide additional warning messages. The TPMS warning light will reset itself (turn off) after the tires are set to specification and the vehicle is driven above 20 mph (32 km/h) for two minutes.

Note: Outside temperature affects tire pressure. Please consult your Owner's Guide.

7 POWERFOLD MIRRORS (if equipped) Rotate the 4-way adjustment switch located on the driver's door, to the center position. Press the switch toward you to fold in the mirrors. Press again to fold them back to the original position. Fold the side mirrors in carefully when driving through a narrow space, like an automatic car wash.

If you fold in a mirror manually, the power fold mirrors will need to be reset. To reset, move the 4-way adjustment switch to the center position. Press the switch toward you to fold the mirrors in, and wait for approximately 8 seconds. You should hear a clicking sound indicating that the mirrors have been reset.

If you do not hear the clicking sound, press the switch to fold the mirrors back out, and repeat the reset procedure.