 


XANTÉ[®]
ColourLaser™ series

XANTÉ

**Quick
Reference
Guide**

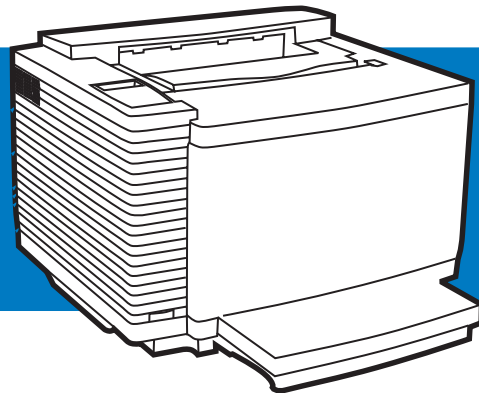

Trademarks

XANTÉ® is a registered trademark of XANTÉ CORPORATION.

Adobe®; Adobe® PageMaker®; Adobe® PostScript®, the PostScript®, and Adobe® logos are registered trademarks of Adobe Systems Incorporated. Adobe® Acrobat™ is a trademark of Adobe Systems Incorporated which may be registered in certain jurisdictions.

Macintosh® and Mac® are registered trademarks of Apple Computer, Inc.

Microsoft®, Windows®, and Windows NT® are registered trademarks of Microsoft Corporation.

QuarkXPress® and Quark® are registered trademarks of Quark, Inc.

Ethernet® is a registered trademark of Xerox Corporation.

Preps® is a registered trademark and ScenicSoft™ is a trademark of ScenicSoft, Inc.

All other brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

Copyright

This manual is Copyrighted © 2003 by XANTÉ CORPORATION. All Rights Reserved. Printed in the USA. This manual may not be copied in whole or in part, nor transferred to any other media or language without the express written permission of XANTÉ CORPORATION.

Manual Notice

XANTÉ CORPORATION reserves the right to make changes to this manual and to the equipment described herein without notice. Every effort has been made to ensure that this manual is free of inaccuracies and omissions. However, XANTÉ CORPORATION makes no warranty of any kind including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose with regard to this manual.

XANTÉ CORPORATION assumes no responsibility for, or liability for, errors contained in this manual or for incidental, special, or consequential damages arising out of the furnishing of this manual, or the use of this manual in operating the equipment, or in connection with the performance of the equipment when so operated.

Table of Contents

Trademarks	2	Adobe Acrobat Reader-PC	10	Installing the PostScript Driver	24
Getting Started	4	Adobe Acrobat Reader-Mac	10	Installation - Macintosh OS X	25
Removing the Printer	4	Installation - Windows 98/Me	11	OS X (version 10.1.5)	26
Installing Toner Cartridges	5	IP Address Configuration	11	Mac OS X Printer Configuration	27
Installing OPC Belt Cartridge	5	Local Printer-Windows 98/Me	13	Page Setup	27
Installing the Fuser Oil Bottle	6	Win95/98/Me LPR Tool	14	Printer Features	27
Installing the Cleaning Roller	6	Network Printer-Windows 98/Me	15	OS X (version 10.2.1)	28
Installing the Paper Cassette	6	Configuring IP, SubNet, and		Mac OS X Printer Configuration	29
Connecting to Printer Ports	7	Gateway Addresses	17	Page Setup	29
LocalTalk Connection (Macintosh)	8	PPD Configuration	18	Printer Features	30
Parallel Connection (PC)	8	Installation - Windows NT/2000/XP	19	Service and Support	31
Serial Connection (PC)	8	IP Address Configuration	19		
Ethernet Connection (PC and Mac)	9	Configuring IP, SubNet, and			
Connecting the Power Cable	9	Gateway Addresses	21		
Media Types	9	PPD Configuration	22		
Installing Adobe Acrobat Reader	10	Installation - Macintosh (7.5 or higher)	23		

Getting Started

Removing the Printer

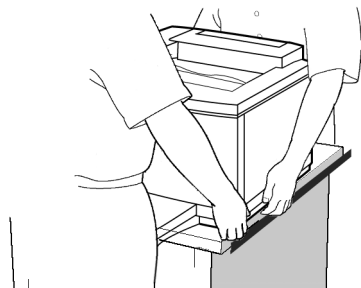 


Fig. 1 Removing the Printer

Always use two people to lift the printer. Place printer on a stable surface with adequate ventilation and operation clearance.

Do not install the printer where it will be:

- Subject to direct sunlight, air currents, magnetic fields, water, or high humidity
- Close to heaters
- Exposed to vibrations or high dust levels
- Close to an open flame
- Subject to extreme temperature and humidity variations.

Your printer package contain the following items:

- Printer
- 250 sheet cassette
- Power cord
- Envelope adapter
- Utilities and Manual CD-ROM
- Consumables (4 starter toner cartridges*, OPC belt cartridge, oil bottle, oil syringe, cleaning roller).

*Starter cartridges are rated at half-life.

Note: If you do not receive your full shipment or if anything is damaged, call XANTÉ Customer Service at 1-800-926-8393 (US and Canada) or your XANTÉ dealer.

Getting Started (continued)

Installing Toner Cartridges

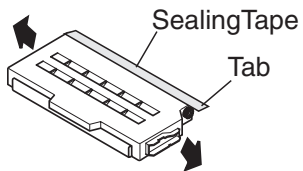 


Fig. 2 Shake toner cartridge.

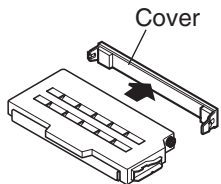 


Fig. 3 Remove orange protective cover.

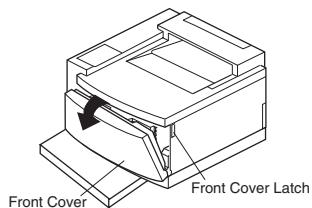 


Fig. 4 Open front cover.

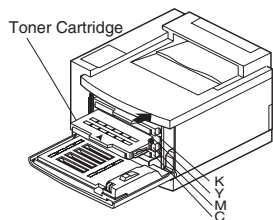 


Fig. 5 Align and insert each cartridge into its corresponding color slot.

Installing OPC Belt Cartridge

Note: Never touch the OPC belt's surface; only handle the cartridge by the top handle.

Touching the belt and exposing it to bright light (over two minutes) may cause permanent damage.

If the belt is over exposed to light, there is a chance you may be able to salvage it by placing it in a dark room for several hours.

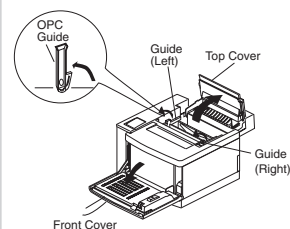 


Fig. 6 Pivot OPC guides up toward the printer's front.

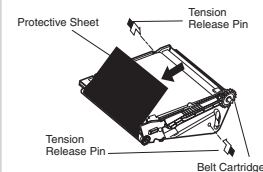 


Fig. 7 Pull 2 pins out from sides; remove sheet.

Getting Started (continued)

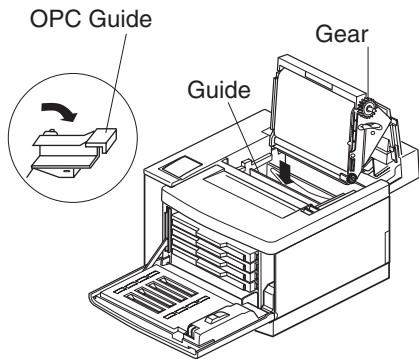 


Fig. 8 Align the OPC cartridge's side tabs with the printer's OPC guides. Then, lower cartridge into place and close guides.

Installing the Fuser Oil Bottle

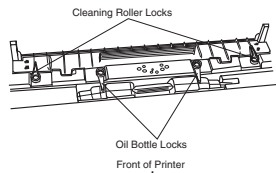 


Fig. 9 Open the two oil bottle locks by turning out to the sides.

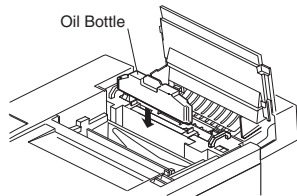 


Fig. 10 Insert bottle nozzle down; close locks.

Installing the Cleaning Roller

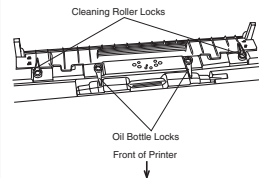 


Fig. 11 Open cleaning roller locks.

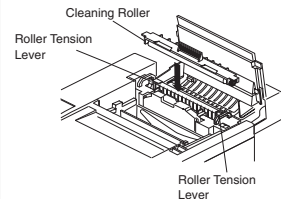 


Fig. 12 Align and insert the cleaning roller into place. Close cleaning roller locks.

Installing the Paper Cassette

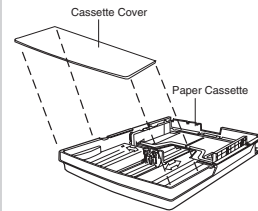 


Fig. 13 Remove cassette cover.

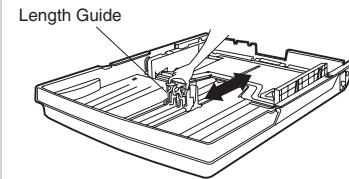 


Fig. 14 Adjust length guide.

Getting Started (continued)

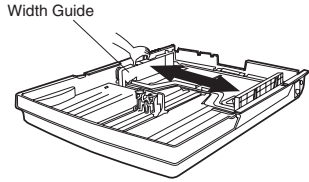 


Fig. 15 Adjust width guide.

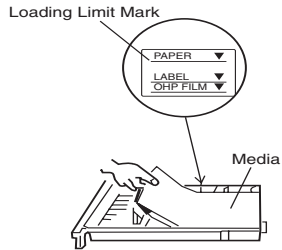 


Fig. 16 Load media print side up.

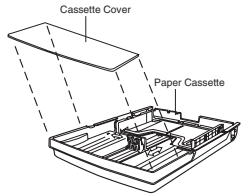 


Fig. 17 Replace the cassette cover.

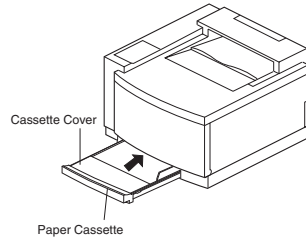 


Fig. 18 Place cassette back into the printer.

Connecting to Printer Ports

XANTÉ ColourLaser printers have standard LocalTalk, serial, parallel, and Ethernet ports (fig. 19).

These simultaneously active interfaces can receive jobs from different operating environments without switching hardware.

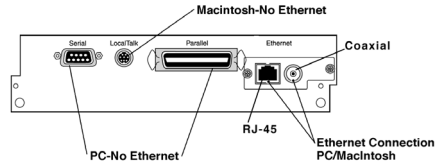


Fig. 19 Connect to appropriate interface.

Note: Consult your user's manual for more information regarding the selection of the different interfaces.

Getting Started (*continued*)

LocalTalk Connection (Macintosh)

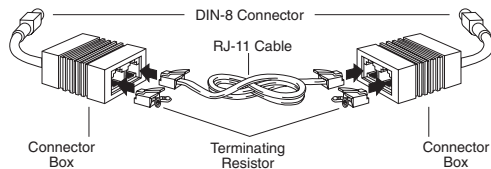 


Fig. 20 LocalTalk Connector Boxes, Resistors, and Cable

1. Turn off your computer.
2. Plug the DIN-8 connector on one LocalTalk connector box into the printer's 8-pin LocalTalk port.

3. Plug the DIN-8 connector on the second LocalTalk connector box into the Macintosh's printer port.
4. Connect the two LocalTalk connector boxes with the RJ-11 phone cable (standard phone cable).
5. Plug the terminating resistors into the open sockets in the connector boxes.

Note: iMacs and Power Mac G4s do not have LocalTalk ports. These computers can be connected using Crossover/patch cables and the Ethernet port or they can be connected to LocalTalk

networks using Ethernet to LocalTalk adapters. Check your user's manual for more information.

Parallel Connection (PC)

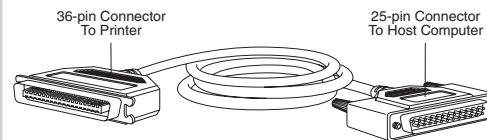


Fig. 21 Bidirectional Parallel Cable

1. Turn off your computer.
2. Plug the cable's 36-pin connector into the printer's parallel port and the 25-pin connector into the computer's parallel port.

Serial Connection (PC)

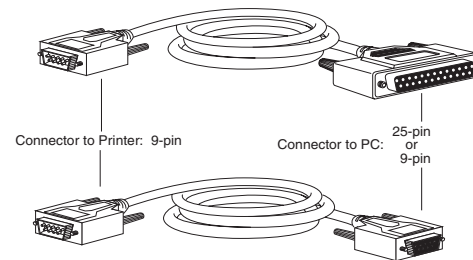


Fig. 22 Serial Cables

1. Turn off your computer.
2. Plug the serial cable's 9-pin male connector into the printer's serial port.

Getting Started (*continued*)

3. Plug the other connector (either a 25-pin or a 9-pin female connector) into the computer's serial port.

Ethernet Connection (PC and Mac)

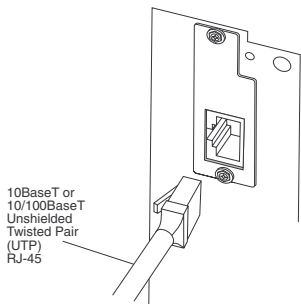 


Fig. 23 Connect to Ethernet port.

1. Turn off your computer.
2. Connect one end of the CAT 5 Ethernet cable to your printer's Ethernet port.
3. Connect the cable's other end to the appropriate port on your network.

Connecting the Power Cable

Warning! Be sure to plug the printer into a properly grounded AC outlet. *Do not* use an extension cord. Use a surge protected outlet to help prevent power source fluctuations from damaging your printer.

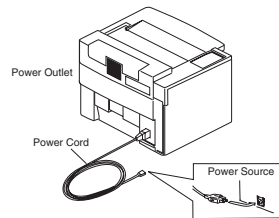


Fig. 24 Connect power cord to printer.

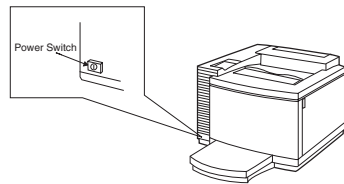 


Fig. 25 Press the power switch on.

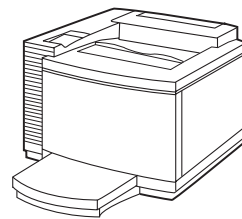 


Fig. 26 Start-up page prints (if enabled).

Media Types

Your XANTÉ printer supports plain paper, transparencies, laser-quality labels, thick paper stock, and envelopes; up to 16 to 24 lb. bond plain paper (60 - 90 g/m²); thick stock: 60 lb. cover or 90 lb. index (163 g/m²).

Installing Adobe Acrobat Reader

Adobe Acrobat Reader-PC

You will need to install Adobe Acrobat Reader to view or print your printer documentation.

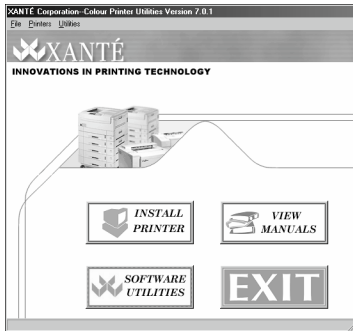


Fig. 27 Select Software Utilities: Adobe Acrobat Reader.

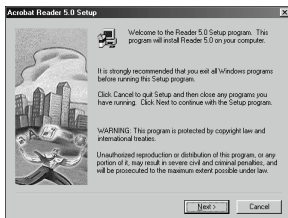 


Fig. 28 Acrobat Reader Setup; click Next

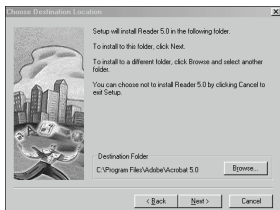


Fig. 29 Choose Destination Location.

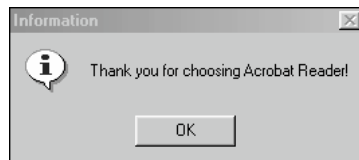


Fig. 30 Setup Complete; click OK.

Adobe Acrobat Reader-Mac

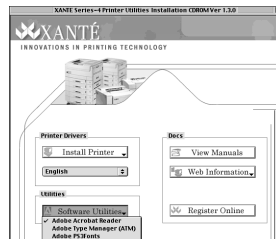 


Fig. 31 Select Acrobat Reader.

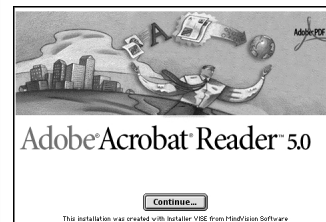 


Fig. 32 Click Continue.

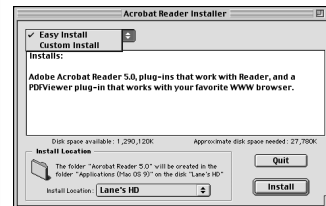


Fig. 33 Select Desired Installation.

Installing Adobe Acrobat Reader (*continued*)

Note: If you are online, a caution window appears which allows you to quit Netscape Navigator or Internet Explorer if they are running. In this case, click Quit Applications.



Fig. 34 Caution Window; click Quit Applications.

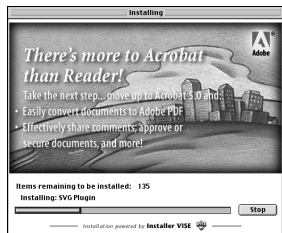


Fig. 35 Installation Progress Window Appears.

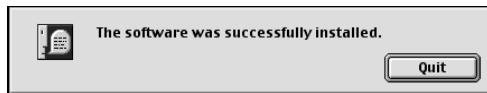


Fig. 36 Click Quit to End Acrobat Reader Installation.

Installation - Windows 98/Me

This section will take you step-by-step through the installation process.

IP Address Configuration

When using the IP Address interface, use the keys on the front panel to set the address as follows:

- **Reset** key increases the current number flashing by one.
- **Menu** key moves to the next number to the right of the current number flashing.

- **Test** key moves to the next number to the left of the current number flashing.
- **Enter** key accepts new address (if valid) and returns to I/F:IP Address menu. The menu will display a message if the address entered is invalid.

Note: You must turn off the printer and restart it for the new IP address to take effect.

Installation - Windows 98/Me (continued)

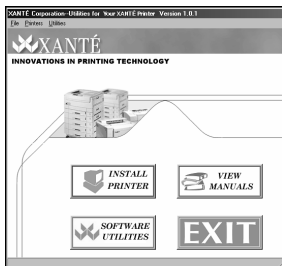 


Fig. 37 Click Install Printer.

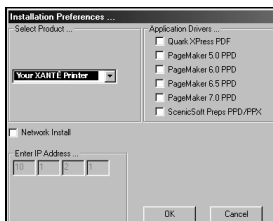


Fig. 38 Make Appropriate Selections, Click OK.

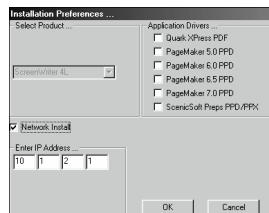 


Fig. 39 Enter IP Address (Network Install only).

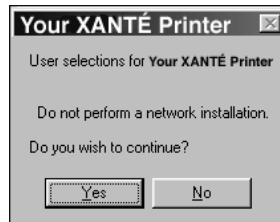


Fig. 40 Read Setup Information. Click Yes.

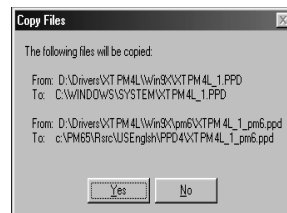 


Fig. 41 Read File Destination. Click Yes.

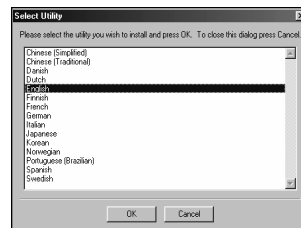 


Fig. 42 Choose Language. Click OK.

Note: After clicking OK, Windows launches the Adobe® PostScript® Printer Driver setup program. This may take a few moments.



Fig. 43 Read Adobe Window. Click Next.

Installation - Windows 98/Me (continued)

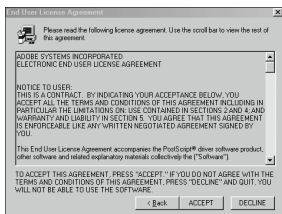


Fig. 44 Read License Agreement. Click Accept.

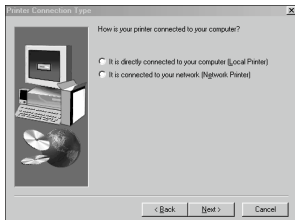 


Fig. 45 Choose Connection Type. Click Next.

Note: If your printer is directly connected to your computer, click “Local Printer” in figure 45; then, click Next to continue to figure 46. If your printer will be connected to your network, skip to the “Network Printer” section later in this chapter.

Local Printer-Windows 98/Me

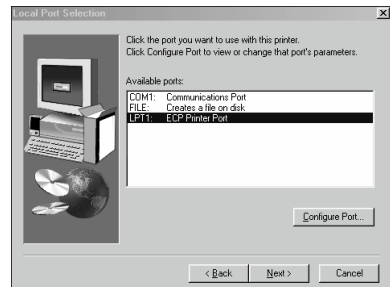 


Fig. 46 Select Appropriate Port. Click Next.

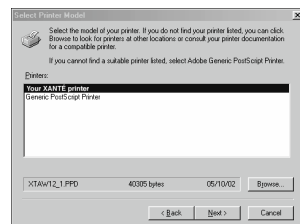 


Fig. 47 Select Printer Model. Click Next.

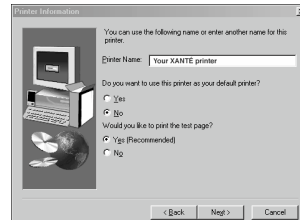 


Fig. 48 Enter Printer Name. Click Next.

Installation - Windows 98/Me (continued)

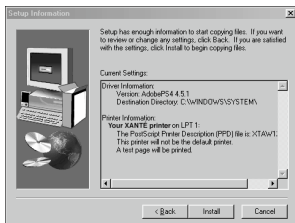 


Fig. 49 Read Current Settings. Click Install.

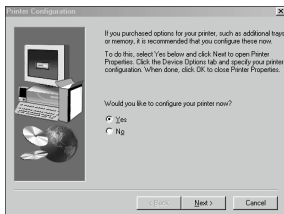 


Fig. 50 Configure Your Printer. Click Next.

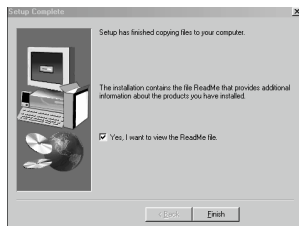 


Fig. 51 Setup Complete. Click Finish.

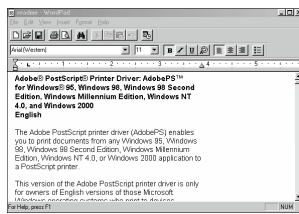 


Fig. 52 ReadMe file. Close Window.

Win95/98/Me LPR Tool

This allows you to communicate to your printer through the LPR port

Note: For Windows 98 and Me users, you must install this utility to set up your IP, SubNet, and Gateway addresses.

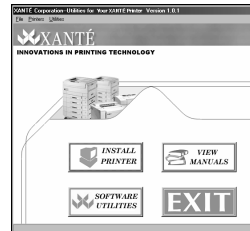 


Fig. 53 Select Software Utilities.

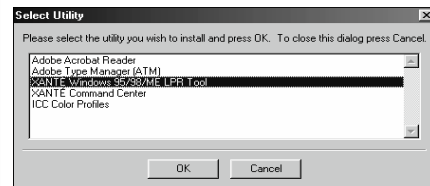 


Fig. 54 Highlight LPR Tool. Click OK.

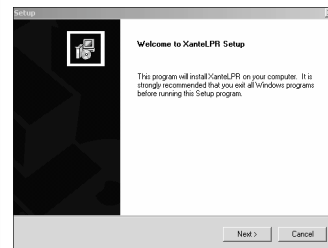 


Fig. 55 Read Setup Window. Click Next.

Installation - Windows 98/Me (continued)

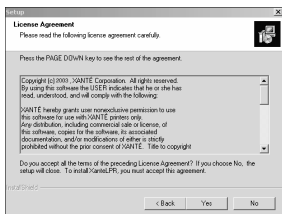 


Fig. 56 Read License Agreement. Click Yes.

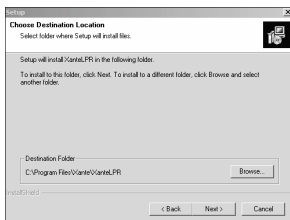 


Fig. 57 Select Location. Click Next.

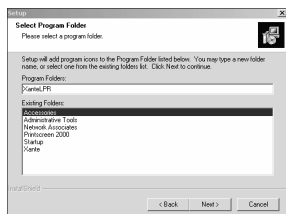 


Fig. 58 Select Folder(s). Click Next.

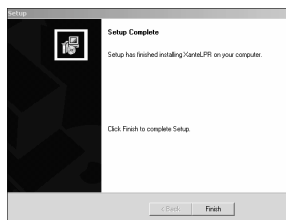 


Fig. 59 Setup Complete. Click Finish.

Note: After you click Finish (fig. 59), a ReadMe file window appears. Read it carefully and then close the window. The Restart Computer window appears (fig. 60).

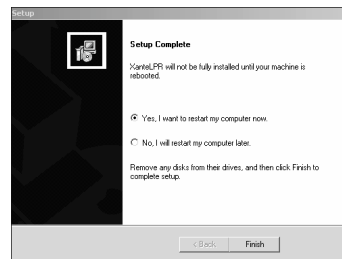 


Fig. 60 Restart Your Computer. Click Finish.

Network Printer-Windows 98/Me



Fig. 61 Type Network Path for your Printer. Click Next.

Installation - Windows 98/Me (continued)

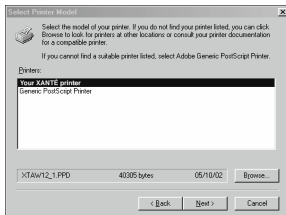


Fig. 62 Select Printer Model. Click Next.

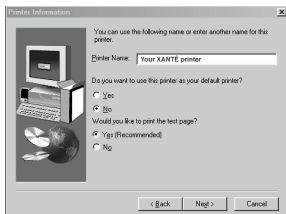 


Fig. 63 Name Your Printer. Click Next.

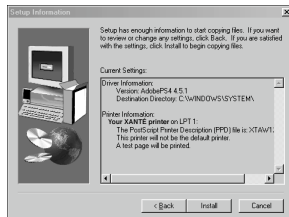 


Fig. 64 Read Current Settings. Click, Install.



Fig. 65 Configure Your Printer. Click Next.

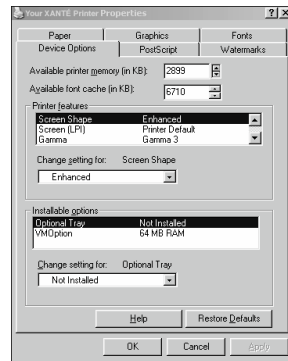 


Fig. 66 Select Device Options to Configure your Printer. Click Apply, then OK.

Note: Make changes for options installed on your printer by first highlighting the option. Then, select the setting under Change Setting.



Fig. 67 Setup Complete. Click Finish.

Installation - Windows 98/Me (*continued*)

Note: If you selected to read the ReadMe file, do so and then, close the window.

Configuring IP, SubNet, and Gateway Addresses

1. From the `ps_files` folder on the XANTÉ CD-ROM, copy `dhcpcff.ps` to your `c:\` drive.
2. Go to DOS (Command) Prompt.
3. Type `copy dhcpcff.ps lpt1`.
4. Power cycle the printer (turn off, then back on).

5. Using a word processing application, open `setipsub.ps` file from the `ps_files` folder. Edit the file so it contains the IP, Subnet, and Gateway address you obtained from your network administrator. Save the file to your `c:\` drive.
6. Go to DOS (Command) Prompt.
7. Type `copy setipsub.ps lpt1`.
8. Power cycle the printer again and verify that the start-up page contains your IP, Subnet, and Gateway addresses.

9. Go to DOS (Command) Prompt to ping the printer.

`c:\ping (IP Address)`

Note: If you *can* ping the printer, go on to step 10. If you *cannot* ping your printer, contact your Network Administrator.

10. Go to your Printer Properties (fig. 68) and select the Details Tab (fig. 69).

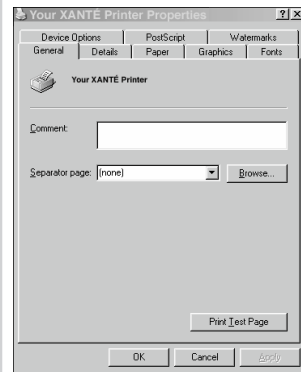 


Fig. 68 Printer Properties Window.

Installation - Windows 98/Me (*continued*)

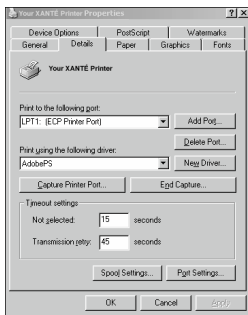 


Fig. 69 Select Details Tab.

11. Select Add Port from the Details Tab (fig. 69).
12. Select Other and highlight XanteLPR; then, click OK.

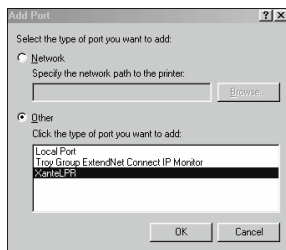 


Fig. 70 Highlight XanteLPR; click OK.

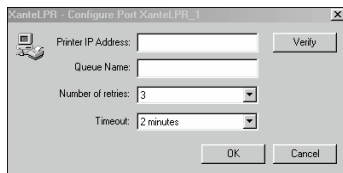


Fig. 71 Enter IP Address and Queue Name.

13. Enter your printer's IP address and Queue name; then, click OK (fig. 71).
14. Click Apply when the Printer Properties window reappears; then, click OK.

PPD Configuration

1. Select Start: Settings: Printer
2. Highlight your printer and click the right mouse button. Select Properties from the drop-down menu.
3. Click the Device Options tab (fig. 72).

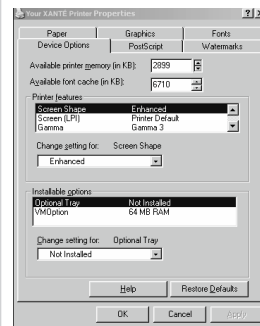 


Fig. 72 Device Options Window

4. Select Installed for each option your printer may have; then, click Apply.
5. Click OK.

Installation - Windows NT/2000/XP

This section is the installation instructions for Windows NT/2000/XP only.

IP Address Configuration

When using the IP Address interface, use the keys on the front panel to set the address as follows:

- **Reset** key increases the current number flashing by one.
- **Menu** key moves to the next number to the right of the current number flashing.

- **Test** key moves to the next number to the left of the current number flashing.
- **Enter** key accepts new address (if valid) and returns to I/F:IP Address menu. The menu will display a message if the address entered is invalid.

Note: You must turn off the printer and restart it for the new IP address to take effect.

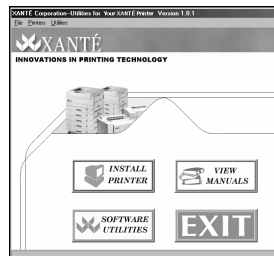


Fig. 73 Click Install Printer.

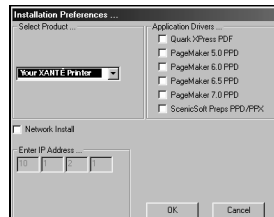


Fig. 74 Make Appropriate Selections. Click OK.

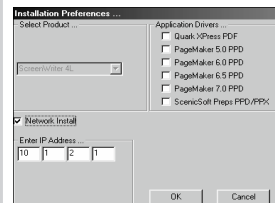 


Fig. 75 Enter IP Address (Network Installation only).

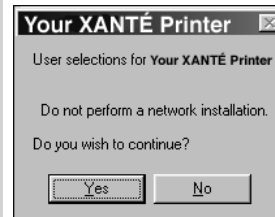


Fig. 76 Read Setup Information. Click Yes.

Installation - Windows NT/2000/XP (continued)

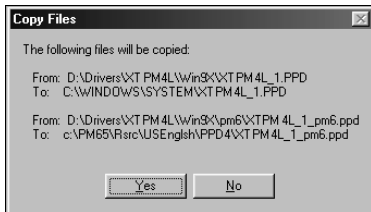 


Fig. 77 Read File Destination. Click Yes.

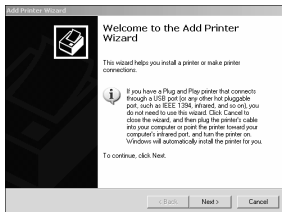 


Fig. 78 Read Welcome Window. Click Next.

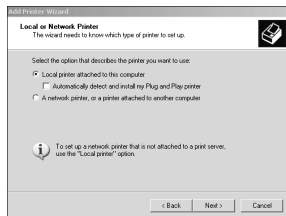 


Fig. 79 Select Local or Network. Click Next.

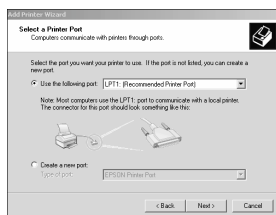 


Fig. 80 Select LPT1 Port. Click Next.

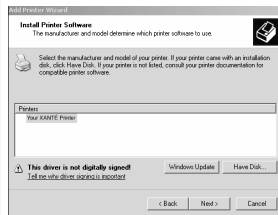 


Fig. 81 Select Printer. Click Next.



Fig. 82 Select Keep Existing Driver. Click Next.

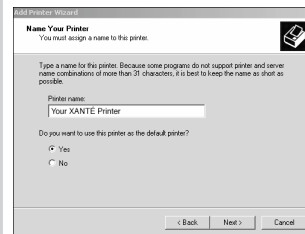 


Fig. 83 Set Your Default Printer.

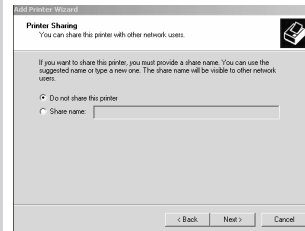


Fig. 54 Choose a Sharing Option. Click Next.

Installation - Windows NT/2000/XP (continued)

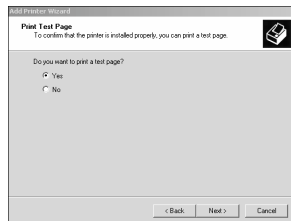


Fig. 85 Print Test Page. Click Next.



Fig. 86 Setup Complete. Click Finish.

Configuring IP, SubNet, and Gateway Addresses

1. From the `ps_files` folder on the XANTÉ CD-ROM, copy `dhcpoff.ps` to your `c:\` drive.
2. Go to DOS (Command) Prompt.
3. Type `copy dhcpoff.ps lpt1`.
4. Power cycle the printer (turn off, then back on).
5. Using a word processing application, open `setipsub.ps` file from the `ps_files` folder. Edit the file so it contains the IP, Subnet, and Gateway address you obtained from your

network administrator. Save the file to your `c:\` drive.

6. Go to DOS (Command) Prompt.
7. Type `copy setipsub.ps lpt1`.
8. Power cycle the printer again and verify that the start-up page contains your IP, Subnet, and Gateway addresses.
9. Go to DOS (Command) Prompt to ping the printer.
`c:\ping (IP Address)`

Note: If you *can* ping the printer, go on to step 10. If you *cannot* ping

your printer, contact your Network Administrator.

10. Go to your Printer Properties (fig. 87) and select the Port Tab (fig. 88).

Installation - Windows NT/2000/XP (continued)

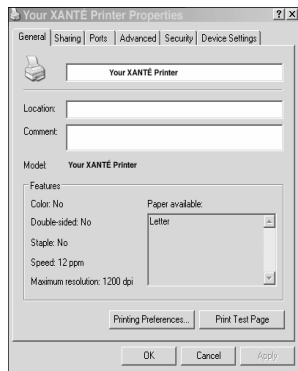


Fig. 87 Printer Properties Window.

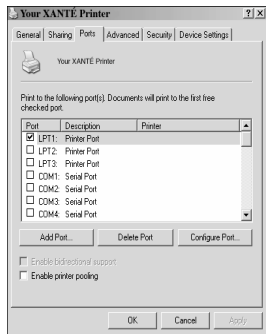 


Fig. 88 Select Ports Tab.

11. Select Add Port from the Ports Tab.
12. Highlight *Standard TCP/IP Port*; then, click New Port (fig. 89).

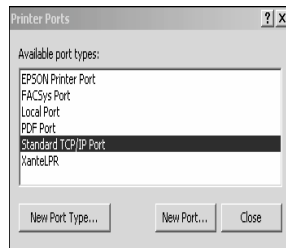


Fig. 89 Highlight *Standard TCP/IP Port*, click *New Port*.

13. Follow the on-screen directions. Then, enter your printer's name or IP address when prompted.
14. Click Finish when complete. Then close all remaining windows.

PPD Configuration

1. Select Start: Settings: Printers and Faxes.
2. Highlight your printer and click the right mouse button. Select Properties from the drop-down menu.
3. Click the Device Settings tab (fig. 90).

Installation - Windows NT/2000/XP (continued)

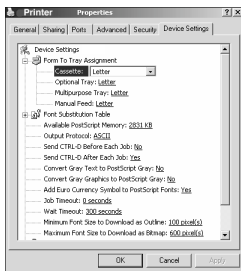 


Fig. 90 Device Settings Window

4. Select Installed for each option your printer may have; then, click Apply.
5. Click OK.

Installation - Macintosh (7.5 or higher)

If your Mac version is less than 8.1, some libraries required by setup are not available. If your system falls under this, select Pre MacOS 8.1 Setup from the CD-ROM.

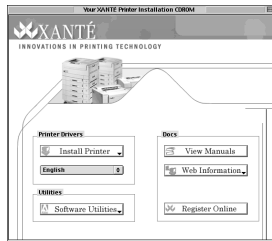 


Fig. 91 Select Install Printer.



Fig. 92 XANTÉ Utilities. Click Continue.

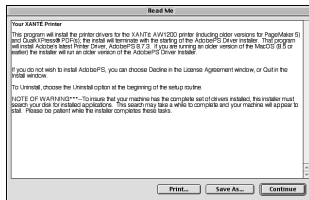


Fig. 93 Read the Read Me window. Click Continue.

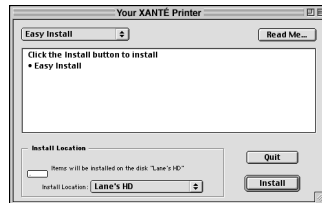 


Fig. 94 Select Easy Install. Click Install.

Note: A warning window indicates a search for particular software on your system is about to begin (fig. 95). If you have some or all the designated software, select the appropriate application(s); click OK.

Installation - Macintosh (*continued*)

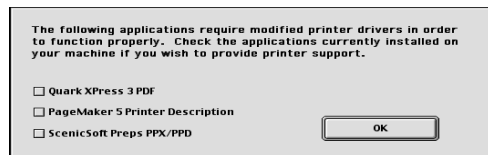


Fig. 95 Warning Window.

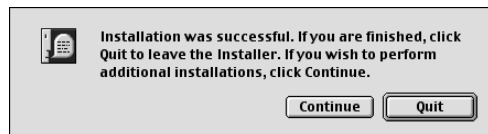


Fig. 96 Installation Complete; click Quit.

Note: If AdobePS doesn't open, simply double-click AdobePS Installer in the Printer Drivers: AdobePS 8.8: (appropriate language) folder on the CD.

Installing the PostScript Driver

You can install the Adobe PostScript Driver (Adobe PS) in two ways from the XANTÉ Utilities disk, via the Utilities menu or via the PostScript Driver link.

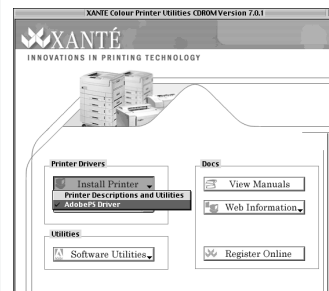 


Fig. 97 Select AdobePS Driver.



Fig. 98 AdobePS Window. Click Continue.

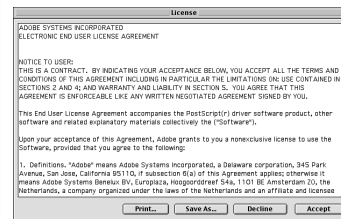


Fig. 99 Read License. Click Accept.

Installation - Macintosh (*continued*)

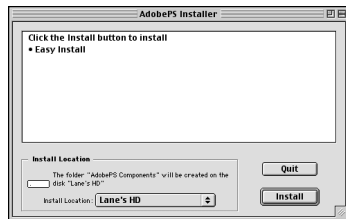


Fig. 100 Review Settings. Click Install.

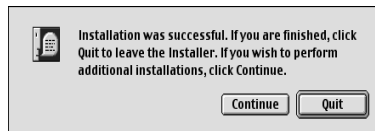


Fig. 101 Installation Complete. Click Quit.

When the Main Screen reappears, you can register your printer (if online).



Fig. 102 Complete Registration Form.

Note: After registering your printer, you may continue installing other parts of the Utilities by continuing on to the appropriate installation sections.

Installation - Macintosh OS X

You must have the latest Mac OS X version to properly install this printer.

Note: You must first verify that AppleTalk is enabled to continue OS X installation.

1. Select **Apple Menu: System Preferences: Network**.
2. Select Built-in Ethernet from the drop-down Show menu (fig. 103). Next, select the AppleTalk tab, select Make AppleTalk Active, and click Apply Now. Then, close the window.

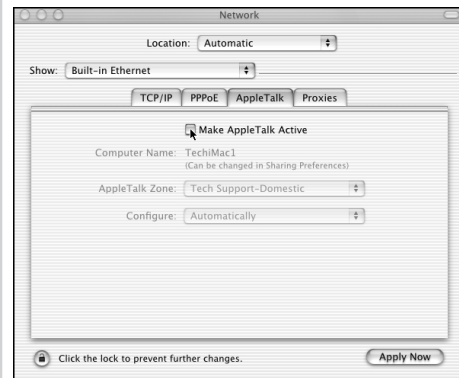


Fig. 103 Network Window

Installation - Macintosh OS X (*continued*)

OS X (version 10.1.5)

Note: You must double-click the OSX_setup icon. The installation window does not open automatically.



Fig. 104 Click Install Printer.



Fig. 105 Click Add Printer.

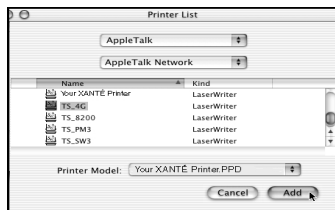


Fig. 106 Select AppleTalk, AppleTalk Network, your printer, and your printer's PPD; then, click Add.

Note: The install location for your printer's PPD is **Hard Drive: Library: Printers: PPDs: Contents: Resources: EN.LPROJ Folder**.

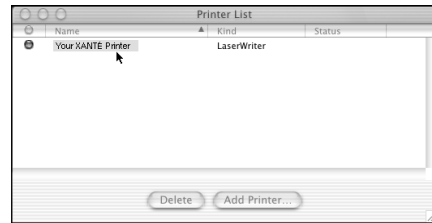


Fig. 107 Make sure your printer is listed.



Fig. 108 Locate Text Edit.

Note: Go to **File: Page Setup** to make sure your printer appears in the **Format For** drop-down menu. If it says **Generic**, call XANTÉ Technical Support at 800-926-8393 (US and Canada).

Installation - Macintosh OS X (*continued*)

Mac OS X Printer Configuration

You can configure your printer by selecting Page Setup and Printer Features.

1. Close the Print Center window to return to your desktop.
2. Follow this path to access the ReadMe file:
CD: OSX_Installer: XANTÉ Utilities: ColourLaser_OSX: readme.rtf.
3. Read the ReadMe file; then, click close or select File and go to Page Setup.

Page Setup

1. Select File from the top menu bar; then, select Page Setup.



Fig. 109 Page Setup Window

2. Select Format For: ColourLaser in the Page Attributes window (fig. 110).
3. Click OK once you have selected the desired paper size, orientation, and scale for your print job.

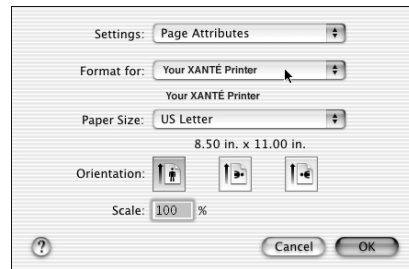 


Fig. 110 Page Attributes Window

Printer Features

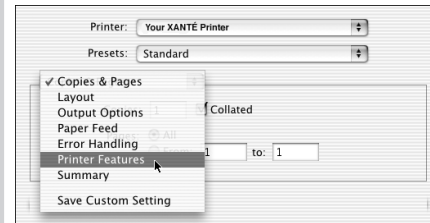


Fig. 111 Select File: Print; click Printer Features.

Installation - Macintosh OS X (*continued*)

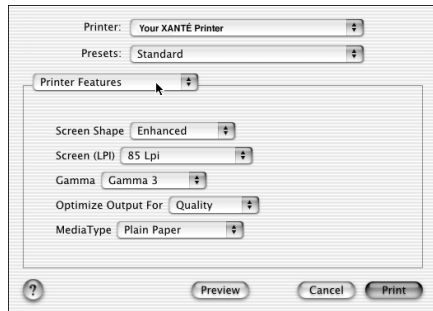 


Fig. 112 Select Appropriate Features; click Print.

OS X (version 10.2.1)

Note: You must double-click the OSX_setup icon. The installation window does not open automatically.



Fig. 113 Click Install Printer.

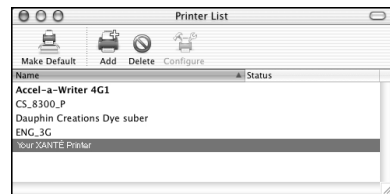 


Fig. 114 Click Add Printer.

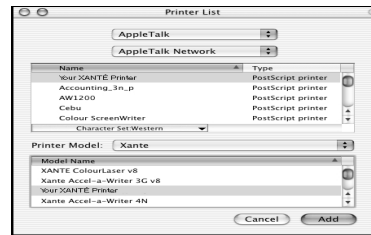


Fig. 115 Select AppleTalk, AppleTalk Network, your printer, and your printer's PPD; then, click Add.

Note: The install location for your printer's PPD is **Hard Drive: Library: Printers: PPDS: Contents: Resources: EN.LPROJ Folder**.

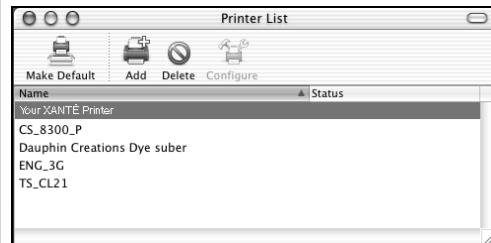


Fig. 116 Select Printer Menu: Show Options.

Installation - Macintosh OS X (continued)

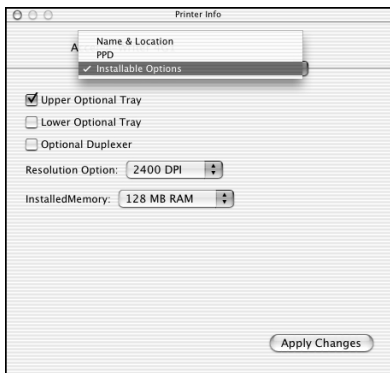 


Fig. 117 Select Installable Options to configure your printer's options, resolution, and memory. Then, click Apply Changes.



Fig. 118 Locate Text Edit.

Note: Go to **File: Page Setup** to make sure your printer appears in the Format For drop-down menu. If it says *Generic*, call XANTÉ Technical Support at 800-926-8393 (US and Canada).

Mac OS X Printer Configuration

You can configure your printer by selecting Page Setup and Printer Features.

1. Close the Print Center window to return to your desktop.
2. Follow this path to access the ReadMe file
CD: OSX_Installer: XANTÉ Utilities: ColourLaser_OSX: readme.rtf.
3. Read the ReadMe file; then, click close or select File and go to Page Setup.

Page Setup

1. Select File from the top menu bar; then, select Page Setup.

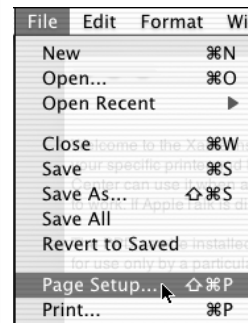 


Fig. 119 Page Setup Window

Installation - Macintosh OS X (*continued*)

2. Select Format For: ColourLaser in the Page Attributes window (fig. 120).
3. Click OK once you have selected the desired paper size, orientation, and scale for your print job.

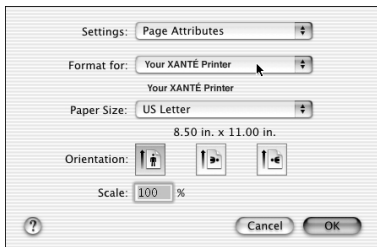 


Fig. 120 Page Attributes Window

Note: If the word *Generic* appears below the Format For drop-down menu, the installation process must be restarted. Please call XANTÉ Technical Support for assistance.

Printer Features

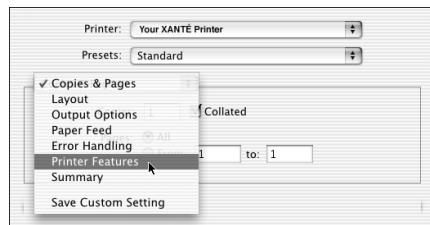 


Fig. 121 Select **File: Print**; click Printer Features.

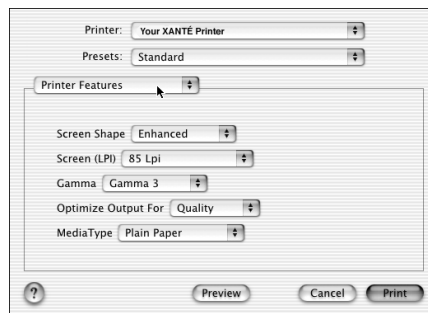 


Fig. 122 Select Appropriate Features; click **Print**.

Service and Support

- **Tech Support**
1-800-926-8393 (US and Canada)
Other areas, call your XANTÉ vendor.
- **Fax**
251-473-6503
- **Hours of Operation**
7 a.m.- 6 p.m. Mon.—Fri. (CST)
- **E-mail**
ts1@xante.com
europesupport@xante.com

For more information about the ColourLaser or other XANTÉ printers, please log onto our website:
www.xante.com/help



Please Record Your Printer's Serial Number Here
