PUB.DIM-663

Canon

Digital Video Camcorder



Français

Español

Camescope numérique Manuel d'instruction

Videocámara digital Manual de Instrucciones



Please read also the following instruction manual. Veuillez lire aussi le manual d'instruction suivant. Lea también el manual de instrucciones siguiente.

• Digital Video Software





WARNING!



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

COPYRIGHT WARNING:

Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.

Digital Video Camcorder, ZR400 A systems

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and use in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules. Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc. One Canon Plaza, Lake Success, NY 11042, U.S.A. Tel No. (516)328-5600

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Important Warning



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS


In these safety instructions the word "product" refers to the Canon Digital Video Camcorder ZR400 A and all its accessories.

- Read Instructions All the safety and operating instructions should be read before the product is operated.
- Retain Instructions The safety and operating instructions should be retained for future reference.
- Heed Warnings All warnings on the product and in the operating instructions should be adhered to.
- Follow Instructions All operating and maintenance instructions should be followed.
- Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
- Accessories Do not use accessories not recommended in this manual as they may be hazardous.
- Avoid magnetic or electric fields Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
- Water and Moisture Hazard of electric shock — Do not use this product near water or in rainy/moist situations.
- Placing or Moving Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



- 10. Power Sources The CA-570 Compact Power Adapter should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
- 11. Polarization The CA-570 Compact Power Adapter is equipped with a polarized 2-prong plug (a plug having one blade wider than the other). The 2-prong polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 12. Power Cord Protection Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cords exit the product.
- 13. Outdoor Antenna Grounding If an outside antenna is connected to the product, be sure the antenna is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI / NFPA No. 70—1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrode, and requirements for the grounding electrode. See figure 1.

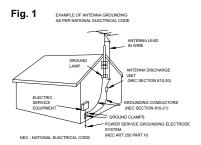

- 14.Lightning For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
- 15.Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 16.Objects and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
- 17.Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

- 18.Damage Requiring Service Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If any liquid has been spilled onto, or objects have fallen into, the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or the cabinet has been damaged.
 - f. When the product exhibits a distinct change in performance. This indicates a need for service.
- 19.Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 20.Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.

When replacement of power supply is required, please return it to the responsible nearest Canon Service Center and please replace it with the same type number CA-570.

The Adapter can be used with a power supply between 100 and 240 V AC. For areas where 120 V AC power is not used, you will need a special plug adapter. Contact your nearest Canon Service Center for further information.

Use only CSA/UL Certified power supply cord set, Polarized, Type SPT-2 or heavier, minimum No. 18 AWG copper, rated 125 or 250 V, minimum ,P A, minimum 6 ft (1.8 m), maximum 10 ft (3 m) long.

This Class B digital apparatus complies with Canadian ICES-003.


Using this Manual

Thank you for purchasing the Canon ZR400. Please read this manual carefully before you use the camcorder and retain it for future reference.

Change the display language before you begin (1173).

Symbols and References Used in This Manual

- Precautions related to the camcorder operation.
- O 🐼 : Additional topics that complement the basic operating procedures.
- O □□ : Reference page number.
- O Capital letters are used to refer to buttons on the camcorder or the wireless controller.
- O [] are used to refer to menu items displayed on the screen.
- O "Screen" refers to the LCD and the viewfinder screen.

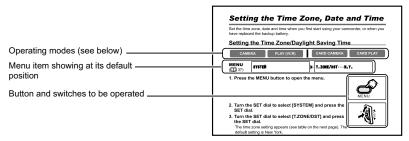

About the Operating Modes

The operating modes are determined by the position of the POWER switch and the TAPE/CARD switch.

Operating Mode	POWER Switch	TAPE/CARD Switch
CAMERA	CAMERA	ന്ന (TAPE)
PLAY (VCR)	PLAY (VCR)	তত (TAPE)
CARD CAMERA	CAMERA	(CARD)
CARD PLAY	PLAY (VCR)	C (CARD)

CAMERA

: Function can be used in this mode.

CAMERA

: Function cannot be used in this mode.

Trademark Acknowledgments

- ^M**D** is a trademark.
- S² is a trademark.
- Windows[®] is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Computer, Inc., registered in the United States and other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Introduction

Е

Table of contents

Introduction	
Using this Manual	5
Checking Supplied Accessories	8
Components Guide	9
Basic Functions	
Preparations	
Preparing the Power Supply	13
Loading/Unloading a Cassette	16
Installing the Backup Battery	17
Preparing the Camcorder	
Using the Wireless Controller	
Adjusting the LCD Screen	
Setting the Time Zone, Date and Time	
Recording	
Recording Movies on a Tape	
Zooming	
Tips for Making Better Videos	
Playback	
Playing Back a Tape	
Adjusting the Volume	
Playing Back on a TV Screen	35
Advanced Functions	
Menus and Settings	
Recording	
Using the Recording Programs	
Using the Night Modes	
Skin Detail Function	
Adjusting the AE Shift	
Adjusting the Focus Manually	
Setting the White Balance	
Setting the Shutter Speed	
Using the Self-Timer	57
Changing the Recording Mode (SP/LP)	
Audio Recording	
Using Digital Effects	
Widescreen TV Recording (16:9)	65
Playback	
Magnifying the Image	
Displaying the Data Code	
End Search	
Returning to a Pre-marked Position	70
Date Search	71
Other Functions	
Customizing the Camcorder	
Changing the Display Language	
Other Camcorder Settings	

Editing

Recording to a VCR or Digital Video Device	.76
Recording from Analog Video Devices (VCR, TV or Camcorder)	.78
Recording from Digital Video Devices (DV Dubbing)	.79
Converting Analog Signals into Digital Signals (Analog-Digital Converter)	.81
Audio Dubbing	.83
Transferring Video Recordings to a Computer	

Using a Memory Card

87
88
90
91
95
96
98
99
101
104

Direct Printing

Printing Still Images	111
Selecting the Print Settings	
Printing with Print Order Settings	

Transferring Images

Transferring Memory Card Images to a Computer	121
Direct Transfer Windows OS only	
Selecting Images for Transfer (Transfer Order)	

Additional Information

Screen Displays	125
List of Messages	128
Maintenance/Others	131
Troubleshooting	137
System Diagram	
Optional Accessories	142
Specifications	
ltem Codes	146
Index	

Introduction

Ε

Checking Supplied Accessories


CA-570 Compact Power Adapter (incl. power cord)	NB-2LH Battery Pack	Lithium Button Battery CR1616	WL-D85 Wireless Controller
		+	
Lithium Button Battery CR2025 for Wireless Controller	Lens Cap and Lens Cap Cord	STV-250N Stereo Video Cable	IFC-300PCU USB Cable
+	O.P		
DIGITAL VIDEO SOLUTION DISK	MMC-16M MultiMediaCard	WA-28 Wide Attachment	
\bigcirc	37		

The serial number of this product can be found at the battery attachment unit of the camcorder. Write down the number and other information here and retain this book as a permanent record of your purchase to aid identification in case of theft. Date of Purchase: Model Name: ZR400 A Purchased From: Serial No.:

Dealer Address: Dealer Phone No .:

(Hg) LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.


ZR400

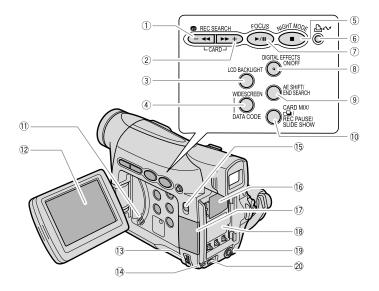

- ① REC SEARCH button (□ 28) / ⓒ (record review) button (□ 28) / ◀◀ (rewind) button (□ 32) / CARD – button (□ 101)
- ② REC SEARCH + button (□ 28) /
 ▶ (fast forward) button (□ 32) /
 CARD + button (□ 101)
- ③ LCD BACKLIGHT button (① 21)
- ④ WIDESCREEN button (① 65) / DATA CODE button (① 67)
- ⑤ NIGHT MODE button (□ 48) /
 (stop) button (□ 32)
- ⑥ ⓑ ⋈ (print/share) button (□ 112, 122)
- ⑦ FOCUS button (□ 51) /
 ▶/II(play/pause) button (□ 32)
 ◎ PLOTAL EFFECTO ON/OFFICIENT
- ⑧ DIGITAL EFFECTS ON/OFF button (□ 60)
- ④ AE SHIFT button (① 50) / END SEARCH button (① 69)


- 10 CARD MIX button (□ 105) / □ (stitch assist) button (□ 99) / REC PAUSE button (□ 78) / SLIDE SHOW button (□ 102)
- (1) Speaker (11 34)
- 12 LCD screen (11 21)
- 13 SET dial (11 37)
- CHARGE indicator (D 13) / Card access indicator (D 91)
- 15 Program selector (11 45)
 - EASY Easy recording
 - P Program AE
- 16 Backup battery compartment (11 17)
- 17 Memory card slot (11 87)
- (B) Battery attachment unit (C) 13) / Serial number
- 19 DC IN terminal (11 13)
- 20 MENU button (11 37)

Ε

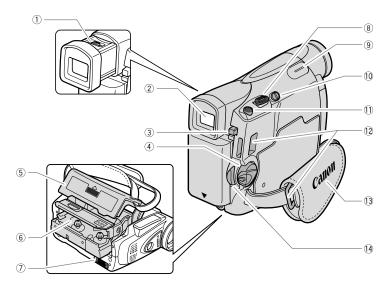


- 1) Dioptric adjustment lever (1) 18)
- ② Viewfinder (□ 18)
- ③ BATT. button (11 13)
- ④ Power switch (11 5)
- 5 Cassette compartment cover (16)
- ⑥ Cassette compartment (□ 16)
 ⑦ OPEN/EJECT ▲ switch (□ 16)
- ⑧ Zoom lever (□ 29)

9 Finger rest
10 TAPE/CARD switch (11 5)
💿 Using a tape
Using a memory card
① PHOTO button (① 91)
12 Strap mount (11 143)
(3) Grip belt (1) 18)
(4) Start/stop button (11) 25, 96)

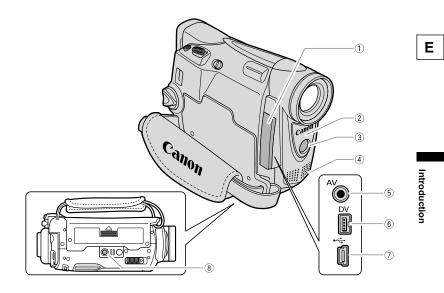

- 1) Terminal cover
- 2 Remote sensor (C 20)
- ③ Assist lamp (① 48)
- ④ Stereo microphone

5 AV terminal (11 35)
6 DV terminal (C 76)
⑦ USB terminal (🛄 111, 121)
(8) Tripod socket (11) 31)

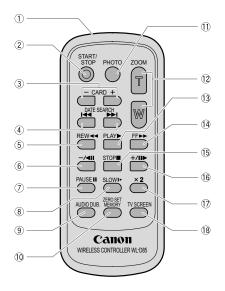


① Transmitter	
② START/STOP button (🛄 25, 96)	
③ CARD -/+ buttons (① 101)	
④ DATE SEARCH ◄◄/►► buttons (□ 71)	
⑤ REW ◀◀ button (□ 32)	-
⑥ –/ ◀ II button (♫ 33)	
⑦ PAUSE ■ button (□ 33)	
⑧ SLOW ▶ button (□ 33)	
(9) AUDIO DUB. button (11) 83)	

10 ZERO SET MEMORY button (11 70)
1) PHOTO button (🛄 91)
12 Zoom buttons (11 29)
13 PLAY ► button (□ 32)
¹ ④ FF ▶▶ button (□ 32)
15 STOP 📕 button (🛄 32)
16 +/∎► button (□ 33)
① x 2 button (🛄 33)
18 TV SCREEN button (125)

Preparing the Power Supply


Attaching the Battery Pack

- 1. Turn the POWER switch to OFF.
- 2. Attach the battery pack to the camcorder.
 - Remove the terminal cover of the battery pack.
 - Press lightly and slide it in the direction of the arrow until it clicks.

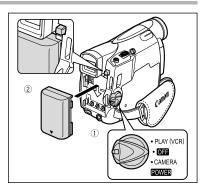

Charging the Battery Pack


- 1. Connect the power cord to the adapter.
- 2. Plug the power cord into a power outlet.
- 3. Connect the power adapter to the camcorder's DC IN terminal. The CHARGE indicator starts flashing. It glows steadily when charging is complete.
- 4. When charging is complete, disconnect the power adapter from the camcorder. Unplug the power cord from the power outlet and disconnect it from the adapter.
- 5. Remove the battery pack after use. Press the BATT. button to remove the battery.

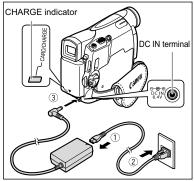

Using a Household Power Source

Connect to a household power source to use the camcorder without worrying about the battery power. You can keep the battery pack attached; the battery power will not be consumed.

- 1. Turn the POWER switch to OFF.
- 2. Connect the power cord to the power adapter.
- 3. Plug the power cord into a power outlet.
- 4. Connect the power adapter to the camcorder's DC IN terminal.

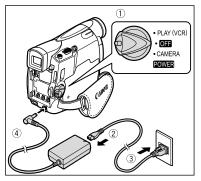

- O Turn off the camcorder before connecting or disconnecting the power adapter.
 O If the adapter is used close to a TV, it may cause picture interference. Move the adapter away from the TV or the antenna cable.
- O Do not connect any products that are not expressly recommended to the camcorder's DC IN terminal or to the power adapter.
- O You may hear some noise from the power adapter during use. This is not a malfunction.
- O Do not disconnect and reconnect the power cord while charging a battery pack. Charging may stop. The battery pack may not be charged correctly even if the CHARGE indicator glows steady. The battery pack may also not be charged correctly when a power outage occurs during charging. Remove the battery pack and attach it back to the camcorder.



O When the power adapter or battery pack is defective, the CHARGE indicator flashes rapidly (at about 2 flashes/second) and charging stops.

O The CHARGE indicator informs you about the charge status.
 0-50%: Flashes once every second
 More than 50%: Flashes twice every second
 100%: Glows steadily

O Charging, Recording and Playback Times

Below times are approximate and vary according to the charging, recording or playback conditions.

Battery Pack		NB-2LH	NB-2L	BP-2L12	BP-2L14			
Charging Time		130 min.	115 min.	205 min.	235 min.			
Max. Recording Time								
Viewfinder		115 min.	95 min.	200 min.	245 min.			
LCD	normal	85 min.	70 min.	150 min.	190 min.			
	bright	80 min.	65 min.	135 min.	175 min.			
Typical RecordingTime*								
Viewfinder		65 min.	55 min.	120 min.	150 min.			
LCD	normal	50 min.	40 min.	90 min.	110 min.			
	bright	45 min.	35 min.	80 min.	100 min.			
Playback Time		100 min.	80 min.	175 min.	220 min.			

* Approximate times for recording with repeated operations such as start/stop, zooming, power on/off. Actual time may be shorter.

O We recommend charging the battery pack in temperatures between 10 °C and 30 °C (50 °F and 86 °F). Outside the temperature range of 0 °C to 40 °C (32 °F to 104 °F), the CHARGE indicator flashes rapidly and charging stops.

O A lithium ion battery pack can be charged at any charge state. Unlike conventional battery packs, you do not need to completely use or discharge it before charging.

O We recommend that you prepare battery packs 2 to 3 times longer than you think you might need.

O To conserve battery power, turn off the camcorder instead of leaving it in record pause mode.

Ε

Loading/Unloading a Cassette


Use only videocassettes marked with the Min DV logo.

1. Slide the OPEN/EJECT switch and open the cassette compartment cover.

The cassette compartment opens automatically.

- 2. Load/unload the cassette.
 - Load the cassette with the window facing the grip belt.
 - Unload the cassette by pulling it straight out.
- 3. Press the PUSH mark on the cassette compartment until it clicks.
- 4. Wait for the cassette compartment to retract automatically and close the cassette compartment cover.

Tape protection tab

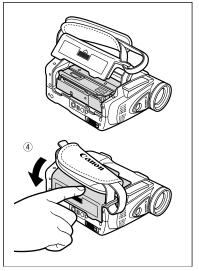



O Do not interfere with the cassette compartment while it is opening or closing automatically, or attempt to close the cover before the cassette compartment has fully retracted.

O Be careful not to get your fingers caught in the cassette compartment cover.

 


If the camcorder is connected to a power source, cassettes can be loaded/ unloaded even if the POWER switch is set to OFF.


Installing the Backup Battery

The backup battery (lithium button battery CR1616) allows the camcorder to retain date, time (\Box 22) and other camcorder settings while the power source is disconnected. Connect a power source to the camcorder when replacing the backup battery to retain the settings.

- 1. Open the backup battery cover.
- 2. Insert the backup battery with the + side facing outward.



3. Close the cover.

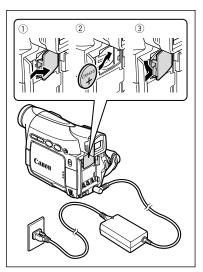




The backup battery has a life span of about a year. " \Leftrightarrow " flashes in red to inform you that it needs to be replaced.

Basic Functions Preparations

Preparing the Camcorder

Adjusting the Viewfinder (Dioptric Adjustment)


- 1. Turn on the camcorder and keep the LCD panel closed.
- 2. Pull out the viewfinder.
- 3. Adjust the dioptric adjustment lever.
- 4. Push the viewfinder back in.

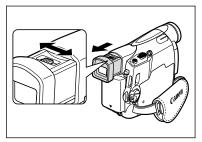

Attaching the Lens Cap

- 1. Attach the cord to the lens cap.
- 2. Pass the grip belt through the loop on the cord.


Press the buttons on the lens cap when attaching/removing it. Hook the lens cap on the grip belt while you are recording, and place it over the lens when you have finished.

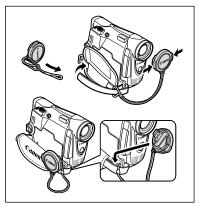

Fastening the Grip Belt

Hold the camcorder with your right hand and adjust the belt with your left.


Adjust the grip belt so that you can reach the zoom lever with your index finger, and the start/stop button with your thumb.

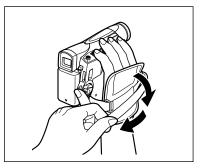

Mounting the Wide Attachment

The WA-28 Wide Attachment gives you a wide perspective for indoor shots or panoramic views (0.6x). The wide attachment is for use at maximum wide-angle.

Screw the wide attachment fully into the lens filter thread.

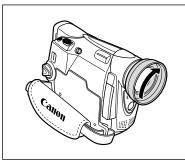


- O Do not look directly at the sun or other strong light sources through the wide attachment. It could damage your eyesight.
- O If you zoom to telephoto, the picture will not be in focus.
- O The wide attachment may obstruct the remote sensor (the range of the wireless controller narrows), or may cause a shadow to appear on the picture when recording with the assist lamp.
- O Filters cannot be used with the wide attachment.
- O If dust accumulates on the wide attachment or on the camcorder lens, clean both lenses gently with a blower brush.
- O Do not touch the lens to avoid smudges and fingerprints.
- O Do not store the wide attachment in a humid place as it may mold.

Е

Using the Wireless Controller


Point it at the camcorder's remote sensor when you press the buttons.

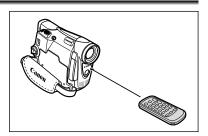

Inserting the Battery

The wireless controller operates with a lithium button battery CR2025.

- 1. Press the tab and pull out the battery holder.
- 2. Place the lithium button battery with the + side facing up.
- 3. Insert the battery holder.

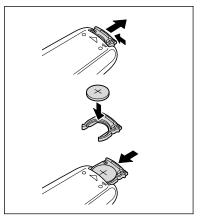




- O The wireless controller may not work properly when the remote sensor is subjected to strong light sources or direct sunlight.
- O If the wireless controller does not work, check if the remote sensor is set to [OFF(@)] (\Box 74).
- O When the camcorder cannot be operated with the wireless controller, or when it can only be operated in very close range, replace the battery.

Adjusting the LCD Screen

Rotating the LCD Screen


Open the LCD panel 90 degrees.

- You can rotate the panel by 90 degrees outward.
- You can rotate the panel by 180 degrees inward.

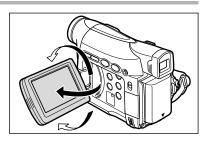

LCD Backlight

Ċ

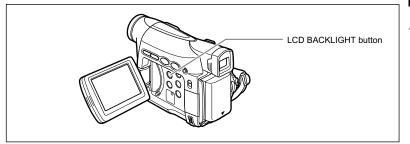

You can switch the brightness of the LCD screen between normal and bright by pressing the LCD BACKLIGHT button. This is useful for outdoor recordings.

Press the LCD BACKLIGHT button.

O This setting does not affect the brightness of the recording or the viewfinder screen.

- O When using a battery pack, the camcorder retains the setting even if you change the position of the POWER switch.
- O The battery usage time shortens when the LCD screen is set brighter (\square 15).

E

Setting the Time Zone, Date and Time

Set the time zone, date and time when you first start using your camcorder, or when you have replaced the backup battery.

Setting the Time Zone/Daylight Saving Time



1. Press the MENU button to open the menu.



- 2. Turn the SET dial to select [SYSTEM] and press the SET dial.
- 3. Turn the SET dial to select [T.ZONE/DST] and press the SET dial.

The time zone setting appears (see table on the next page). The default setting is New York.

4. Turn the SET dial to select the setting option that represents your time zone and press the SET dial.

To adjust for daylight saving time, select the time zone with the * next to the area.

Setting the Date and Time




5. Turn the SET dial to select [D/TIME SET] and press the SET dial.

The year display starts to flash.

- 6. Turn the SET dial to select the year, and press the SET dial.
 - The next part of the display starts flashing.
 - · Set the month, day, hours and minutes in the same way.

7. Press the MENU button to close the menu and to start the clock.

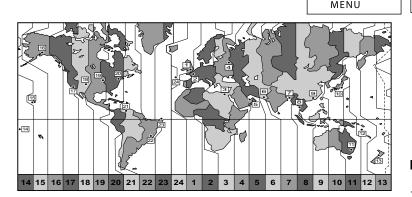


No.	Time zone	No.	Time zone
1	LONDON	13	WELLGTN (Wellington)
2	PARIS	14	SAMOA
3	CAIRO	15	HONOLU. (Honolulu)
4	MOSCOW	16	ANCHOR. (Anchorage)
5	DUBAI	17	L.A. (Los Angeles)
6	KARACHI	18	DENVER
7	DACCA	19	CHICAGO
8	BANGKOK	20	N.Y. (New York)
9	H. KONG (Hong Kong)	21	CARACAS
10	ТОКҮО	22	RIO (Rio de Janeiro)
11	SYDNEY	23	FERNAN. (Fernando de Noronha)
12	SOLOMON	24	AZORES



Once you have set time zone, date and time, you do not need to reset the clock each time you travel to another time zone. Just set the time zone to the one of your destination, and the camcorder automatically adjusts the clock.

Displaying Date and Time during Recording

 You can display the date and time in the lower left corner of the screen.



- 3. Turn the SET dial to select [D/T DISPLAY] and press the SET dial.
- 4. Turn the SET dial to select [ON].
- 5. Press the MENU button to close the menu.





Recording Movies on a Tape


Before You Begin Recording

Make a test recording first to check if the camcorder operates correctly. If necessary, clean the video heads (11 132).

Recording

- 1. Remove the lens cap.
- 2. Set the camcorder to CAMERA mode.


Set the POWER switch to CAMERA and the TAPE/CARD switch to <u>or</u>.

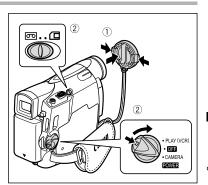

3. Open the LCD panel.

4. Press the start/stop button to begin recording.

Press the start/stop button again to pause recording.

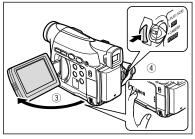

When You Have Finished Recording

- 1. Turn the POWER switch to OFF.
- 2. Close the LCD panel.
- 3. Replace the lens cap.
- 4. Unload the cassette.
- 5. Disconnect the power source.



Basic Functions Recording

Ε



 
○ About the LCD and viewfinder screen: The screens are produced with extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black or green dots. This has no effect on the recorded image and does not constitute a malfunction.

- The camcorder will shut off after 5 minutes when left in record pause mode to protect tape and video heads. "▲AUTO POWER OFF" appears 20 seconds before shutoff. To continue recording, turn the POWER switch to OFF and then back to CAMERA.
- O Wait until the tape counter stops completely before you start recording.
- O When you do not remove the cassette, you can record the next scene without producing any noise or blank sections between the recordings even if you turn the camcorder off.
- O Bright light may make it difficult to use the LCD screen. In such case, use the viewfinder instead.
- O When recording near loud sounds (such as fireworks, drums or concerts), sound may become distorted or may be recorded not in the actual sound level. This is not a malfunction.

Allowing the Subject to Monitor the LCD Screen

You can rotate the LCD panel so that the screen faces in the same direction as the lens. The viewfinder switches on allowing you to use the viewfinder while the subject can monitor the screen.

The image appears mirror reversed (LCD MIRROR ON). However, you can choose to display the image as it is being recorded (LCD MIRROR OFF).





1. Press the MENU button to open the menu.



- 3. Turn the SET dial to select [LCD MIRROR] and press the SET dial.



4. Turn the SET dial to select [OFF].


5. Press the MENU button to close the menu.





When [LCD MIRROR] is set to [ON], some screen displays appear mirrorreversed.

Screen Displays during Recording

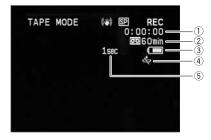

① Time Code

Indicates the recording time in hours, minutes and seconds.

② Remaining tape

Indicates the remaining time of the tape in minutes. " T moves during recording. " END" flashes when the tape reaches the end.

- When the time left is less than 15 seconds, the remaining tape time may not appear.
- Depending on the type of the tape, the indication may not be displayed correctly.

③ Remaining battery charge

The battery symbol indicates the charge status of the battery pack.

$\blacksquare + (\blacksquare + (\blacksquare + (\bigcirc)$

- "
 ⁽¹⁾ starts flashing in red when the battery pack is empty.
- When you attach an empty battery pack, the power may turn off without displaying " ".
- The actual battery charge may not be indicated accurately depending on the condition under which battery pack and camcorder are used.

④ When "🕁" flashes


"4" flashes in red when the lithium button battery is not installed, or when it needs replacing.

5 Recording reminder

The camcorder counts from 1 to 10 seconds when you start recording. This is helpful to avoid scenes that are too short.

Ε

Reviewing and Searching when Recording

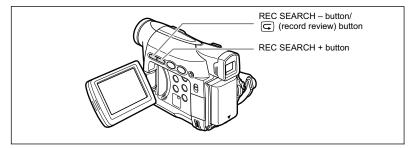

Record Review

•••••	• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •
CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY
In record namedo	this function allows you	to review the last few	accords of your

In record pause mode, this function allows you to review the last few seconds of your recording to check if it has been recorded properly.

Press and release the G (record review) button.

The camcorder rewinds the tape, plays back the last few seconds, and returns to record pause mode.



Record Search

CAMERA PLAY (VCR) CARD CAMERA CARD PLAY


In record pause mode, this function allows you to play back the tape (forward or reverse) to locate the point where you wish to begin recording.

Press and hold the REC SEARCH + button (forward) or – button (reverse).

- Release the button at the point you wish to begin recording.
- · The camcorder returns to record pause mode.



Zooming

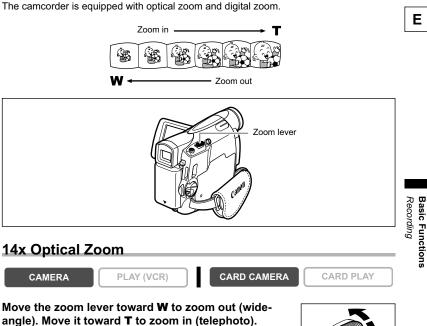

Press the zoom lever slightly for a slow zoom. Press harder for a faster zoom.





- O You can also use the **T** and **W** buttons on the wireless controller. However, you cannot control the zoom speed.
- O Keep at least 1 m (3.3 ft.) to the subject. At wide-angle, you can focus on a subject as close as 1 cm (0.39 in.).
- O The zoom speed is slightly faster in record pause mode.

56x/280x Digital Zoom

When the digital zoom is activated, the camcorder automatically switches between optical and digital zoom. With digital zoom, image resolution becomes lower the more you zoom in.

Digital zoom cannot be used in CARD CAMERA mode.



1. Press the MENU button to open the menu.



- 2. Turn the SET dial to select [CAMERA SETUP] and press the SET dial.
- 3. Turn the SET dial to select [D.ZOOM] and press the SET dial.
- 4. Turn the SET dial to select a setting option.
- 5. Press the MENU button to close the menu.





O Digital zoom cannot be used in the night modes.

 
O Digital zoom cannot be used when the multi-image screen is selected.
 O A zoom indicator appears for 4 seconds. It extends in light blue when the digital zoom is set to 56x, and extends further in dark blue when set to 280x.

Holding the Camcorder

For maximum stability, grip the camcorder in your right hand and keep your right elbow pressed against your body. If necessary, support the camcorder with your left hand. Be careful that your fingers do not touch the microphone or lens.

For More Stability

Lean against a wall





Lie on your elbow





Kneel on one knee







Lighting

When recording outdoors, we recommend recording with the sun at your back.





O When using a tripod, do not leave the viewfinder exposed to direct sunlight as it may melt (due to concentration of the light by the lens). 0

Do not use tripods with fastening screws longer than 5.5 mm (0.2 in.) as it may damage the camcorder.






Basic Functions Recording

Playing Back a Tape


If the playback picture is distorted, clean the video heads using a Canon Head Cleaning Cassette or a commercially available digital video head-cleaning cassette (\square 132).

1. Set the camcorder to PLAY (VCR) mode.

Set the POWER switch to PLAY (VCR) and the TAPE/CARD switch to oron.

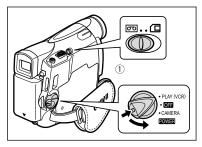

- 2. Open the LCD panel. You can also close the LCD panel with the screen facing outward.
- 3. Press the ◀◀ button to rewind the tape.
- 4. Press the ►/II button to begin playback.
- 5. Press the button to stop playback.

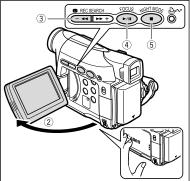




O To use the viewfinder, close the LCD panel.

O About the screen display: During playback, the time code gives the hours, minutes, seconds and frames. The remaining tape time may not appear when the time left is less than 15 seconds.

Special Playback Modes

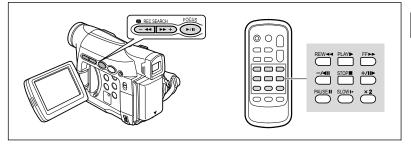

►/II (Playback Pause)

To pause playback, press the ►/II button during normal playback.

►► (Fast Forward Playback) / ◄◄ (Rewind Playback)

Plays back the tape at 9.5 times normal speed (forward or reverse). Press and hold the button during normal playback or fast forward.

-/ < II (Reverse Playback)

Press the button on the wireless controller during normal playback. Press the ▶ (play) button to return to normal playback.

+/II > (Frame Advance) / -/ < II (Frame Reverse)

Plays back frame-by-frame. Press the button on the wireless controller repeatedly during playback pause. Press and hold it to play back continuous frame advance/frame reverse.

SLOW I► (Slow Forward)/(Slow Reverse)

Plays back at about 1/3 normal speed. Press the button on the wireless controller during normal or reverse playback. Press the \blacktriangleright (play) button to return to normal playback.

x2 (Forward x2 Playback)/(Reverse x2 Playback)

Plays back at 2 times normal speed. Press the button on the wireless controller during normal or reverse playback. Press the \blacktriangleright (play) button to return to normal playback.



O There is no sound during special playback.

 $\ensuremath{\mathbf{O}}$ The picture may become distorted during some special playback modes.

O The camcorder stops the tape automatically after 5 minutes in playback pause mode to protect tape and video heads.

E

Adjusting the Volume

When you use the LCD screen for playback, the camcorder plays back the sound via built-in speaker. The speaker does not sound when you close the LCD panel.




Turn the SET dial up to increase the volume, and down to lower the volume.

- A volume bar appears for 2 seconds.
- You can turn off the volume completely by turning the SET dial down until [OFF] appears. Turn the SET dial up to increase the volume again.



TVs with Audio/Video Terminals

Refer also to the TV or VCR instruction manual.

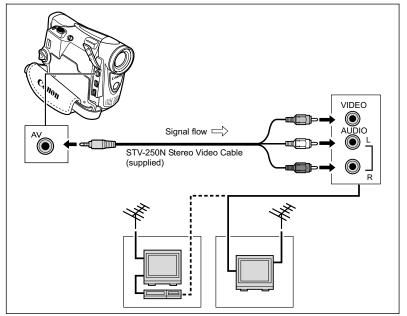

- 1. Turn off all devices before starting the connections.
- Connect the STV-250N Stereo Video Cable to the camcorder's AV terminal and the audio/video terminals on the TV/VCR.
 Connect the white plug to the white audio terminal L (left), the red plug to the red audio

Connect the white plug to the white audio terminal L (left), the red plug to the red audio terminal R (right) and the yellow plug to the yellow video terminal VIDEO.

3. If connecting to a TV, set the input selector to VIDEO. If connecting to a VCR, set the input selector to LINE.



O We recommend powering the camcorder from a household power source. O TVs with Video ID-1 system: Recordings made in the widescreen mode will be

automatically played back in widescreen mode.

E

Selecting the Audio Output Channel

You can select the output channels when playing back a tape with audio recorded on two channels.



- 1. Press the MENU button to open the menu.
- 2. Turn the SET dial to select [AUDIO SETUP] and press the SET dial.
- 3. Turn the SET dial to select [OUTPUT CH] and press the SET dial.
- 4. Turn the SET dial to select a setting option.
 - L/R: Stereo: L+R channels, Bilingual: Main+Sub.
 - L/L: Stereo: L channel, Bilingual: Main.
 - R/R: Stereo: R channel, Bilingual: Sub.
- 5. Press the MENU button to close the menu.



MEN




The setting resets to the L/R setting when you turn the camcorder off.

Advanced Functions

Е

Menus and Settings

Many of the camcorder's advanced functions are selected from menus that appear on the screen.

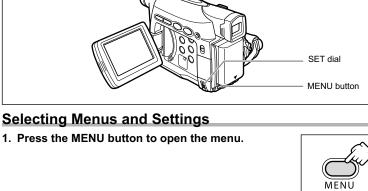

- 2. Turn the SET dial to select a submenu and press the SET dial.
- 3. Turn the SET dial to select a menu item and press the SET dial.
- 4. Turn the SET dial to select a setting option.

U

5. Press the MENU button to close the menu. When setting the white balance, shutter speed or language, press the SET dial first before pressing the MENU button.

> O Pressing the MENU button at any time closes the menu. O Items that are not available appear in purple.





Menu and Default Settings

Default settings are shown in boldface.

CAMERA MENU

CAMERA	PLAY (VCR)	CARD CAMERA CARD PLA	Y
Submenu	Menu Item	Setting Options	m
D.EFFECT SETUP	→ CARD MIX	1 2 1	105
	D.E.SELECT	ITT , FADER, EFFECT, MULTI-S	60
	FADER TYPE	FADE-T, WIPE, CORNER, JUMP, FLIP, PUZZLE, ZIGZAG, BEAM, TIDE	
	EFFECT TYPE	ART, BLACK&WHITE, SEPIA, MOSAIC, BALL, CUBE, WAVE, COLOR MASK, MIRROR	
	M.S.SPEED	MANUAL, FAST, MODERATE, SLOW	
	M.S.SPLIT	4, 9, 16	
CAMERA SETUP	SHUTTER	AUTO , 1/60, 1/100, 1/250, 1/500, 1/1000, 1/2000	55
	A.SL SHUTTER	ON, OFF	56
	D.ZOOM	OFF , 56x, 280x	30
	IMG STAB (()	ON, OFF	75
	WHITE BAL.	AUTO, SET 🖦, INDOOR 🐥, OUTDOOR 🔆	53
	NIGHT MODE	⊇NIGHT, ∑NIGHT+ , ≦S.NIGHT	48
	SELF TIMER	ON 创, OFF	57
	SKIN DETAIL	SOFT, NORMAL	49
	STILL I. REC	OFF, 🗇 FINE, 🗇 NORMAL	92
VCR SETUP	REC MODE	SP, LP	58
AUDIO SETUP	WIND SCREEN	AUTO, OFF	59
	AUDIO MODE	16bit, 12bit	59

Submenu	Menu Item	Setting Options	m
DISPLAY SETUP/	BRIGHTNESS		74
-	LCD MIRROR	ON, OFF	26
	TV SCREEN	ON, OFF	125
	D/T DISPLAY	ON, OFF	24
	LANGUAGE	See list of languages.	73
	DATE FORMAT		73
	DEMO MODE	ON, OFF	75
SYSTEM	WL.REMOTE	ON, OFF ()(宽)	74
	BEEP	ON, OFF	74
	T.ZONE/DST	See list of time zones.	22
	D/TIME SET		22
MY CAMERA	S-UP SOUND	OFF, DEFAULT , MY SOUND	72
	SHTR SOUND	_	
	OPER.SOUND		
	SELF-T SOUND		

Е

PLAY (VCR) MENU

CAMERA	PLAY (VCR)	CARD CAMERA CARD PL	.AY
Submenu	Menu Item	Setting Options	m
D.EFFECT SETUP	D.E.SELECT	OT , FADER, EFFECT, MULTI-S	60
	FADER TYPE	FADE-T, WIPE, CORNER, JUMP, FLIP, PUZZLE, ZIGZAG, BEAM, TIDE	
	EFFECT TYPE	ART, BLACK&WHITE, SEPIA, MOSAIC, BALL, CUBE, WAVE, COLOR MASK, MIRROR	
	M.S.SPEED	MANUAL, FAST, MODERATE, SLOW	
	M.S.SPLIT	4 , 9, 16	
VCR SETUP	REC MODE	SP, LP	58
	AV ➡ DV	ON, OFF	81
AUDIO SETUP	OUTPUT CH	L/R , L/L, R/R	36
	AUDIO DUB.	AUDIO IN, MIC. IN	83
	WIND SCREEN	AUTO, OFF	59
	AUDIO MODE	16bit, 12bit	59
	12bit AUDIO	STEREO1, STEREO2, MIX/FIXED, MIX/ VARI.	85
	MIX BALANCE		85
CARD SETUP	IMG QUALITY	SUPER FINE, FINE, NORMAL	88
	MOVIE SIZE	320x240 , 160x120	89
	FILE NOS.	RESET, CONTINUOUS	90
DISPLAY SETUP/	BRIGHTNESS		74
-	TV SCREEN	ON, OFF	125
	DISPLAYS	ON, OFF <playbk></playbk>	125
	6SEC.DATE	ON, OFF	68
	DATA CODE	DATE/TIME, CAMERA DATA, CAM.& D/T	67
	D/TIME SEL.	DATE, TIME, DATE & TIME	67
	LANGUAGE 🗐	See list of languages.	73
	DATE FORMAT		73

Submenu	Menu Item	Setting Options	m
SYSTEM	WL.REMOTE	ON, OFF (())	74
	BEEP	ON, OFF	74
	T.ZONE/DST	See list of time zones.	22
	D/TIME SET		22
MY CAMERA	S-UP SOUND	OFF, DEFAULT , MY SOUND	72
	SHTR SOUND		
	OPER.SOUND		
	SELF-T SOUND		

Е

CARD CAMERA MENU

CAMERA

PLAY (VCR)

CARD CAMERA

L

CARD PLAY

Submenu	Menu Item	Setting Options	
D.EFFECT SETUP	EFFECT	011, BLACK&WHITE	63
CAMERA SETUP	SHUTTER	AUTO, 1/60, 1/100, 1/250	55
	A.SL SHUTTER	ON, OFF	56
	WHITE BAL.	AUTO, SET 🞿, INDOOR 🚸, OUTDOOR 🔆	53
	FOCUS PRI.	ON, OFF	98
	NIGHT MODE	∎NIGHT, ⊠NIGHT+ , ⊠ S.NIGHT	48
	SELF TIMER	ON ઙ) , OFF	57
	SKIN DETAIL	SOFT, NORMAL	49
	REVIEW	OFF, 2sec , 4sec, 6sec, 8sec, 10sec	95
CARD SETUP	IMG QUALITY	SUPER FINE, FINE, NORMAL	88
	IMAGE SIZE	1152x864 , 640x480	88
	MOVIE SIZE	320x240 , 160x120	89
	FILE NOS.	RESET, CONTINUOUS	90
AUDIO SETUP	WIND SCREEN	AUTO, OFF	59
DISPLAY SETUP/	BRIGHTNESS		74
	LCD MIRROR	ON, OFF	26
	TV SCREEN	ON, OFF	125
	D/T DISPLAY	ON, OFF	24
	LANGUAGE 💬	See list of languages.	73
	DATE FORMAT		73
	DEMO MODE	ON, OFF	75
SYSTEM	WL.REMOTE	ON, OFF (())	74
	BEEP	ON, OFF	74
	T.ZONE/DST	See list of time zones.	22
	D/TIME SET		22

Submenu	Menu Item	Setting Options	m	
MY CAMERA	S-UP SOUND	OFF, DEFAULT , MY SOUND	72	
	SHTR SOUND			
	SITINGOUND			E
	OPER.SOUND			
	SELF-T SOUND			

CARD PLAY MENU

CAMERA	PLAY (VCR)	CARD CAMERA CARD PL	AY
Submenu	Menu Item	Setting Options	m
CARD OPERATIONS	凸 PRINT ORDERS ALL ERASE	NO, YES	120
(Single Image Display)	TRANS.ORDERS	NO, YES	124
	IMAGE ERASE	CANCEL, SINGLE, ALL	104
	FORMAT	CANCEL, EXECUTE	109
CARD OPERATIONS	⇒ On PROTECT		103
(Index Screen)			119
	⇒ 🖼 TRANSFER ORI	DER	124
DISPLAY SETUP/	BRIGHTNESS		74
	TV SCREEN	ON, OFF	125
	DISPLAYS	ON, OFF <playbk></playbk>	125
	D/TIME SEL.	DATE, TIME, DATE & TIME	67
	LANGUAGE	See list of languages.	73
	DATE FORMAT		73
SYSTEM	WL.REMOTE	ON, OFF ((C)	74
	BEEP	ON, OFF	74
	T.ZONE/DST	See list of time zones.	22
	D/TIME SET		22
MY CAMERA	CREATE START-UP IN	<i>I</i> AGE	110
	SEL.S-UP IMG	NO IMAGE, CANON LOGO, MY IMAGE	72
	S-UP SOUND	OFF, DEFAULT , MY SOUND	72
	SHTR SOUND		
	OPER.SOUND	1	
	SELF-T SOUND	1	
➡ 🕒 PRINT	Appears when connect	ing a printer with direct print function.	120

Using the Recording Programs

Easy Recording Program

The camcorder adjusts focus, exposure and other settings automatically, allowing you to just point and shoot.

Program AE Modes

Auto

The camcorder adjusts focus, exposure and other settings automatically. However, you have the option of adjusting the settings manually.

Sports

Use this mode to record sports scenes (such as tennis or golf) or moving objects (such as roller coasters).

Portrait

Use this mode to give accent to your subject by blurring the background or foreground. The blur effect increases the more you zoom to telephoto.

Spotlight

Use this mode to record spotlit scenes or fireworks.

Sand & Snow

Use this mode in bright places such as a sunny beach or ski resort. It prevents the subject from being underexposed.

Low Light

Use this mode to record in dimly lit places.
















Advanced Functions Recording

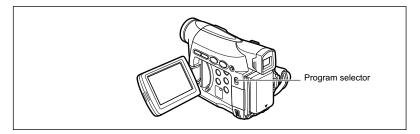

Availability of Functions in Each Mode:

Recording Program		Α	Ň	2	8	3	Q
Image Stabilizer	\times (on)		Ö				
Focus	\times (A)		0				
White Balance	\times (A)	0					
Wind screen	\times (A)	0					
Shutter Speed	\times (A)	○ ×(A)					
AE Shift	×		0		>	<	0
Digital Effects	×	0					
Card Mix	×	0					

 \bigcirc : Available \times : Not available A: Auto setting Shaded area: Can be used only in CAMERA mode.

Selecting the Easy Recording Program

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

Set the program selector to EASY.

" EASY" appears.



Selecting the Program AE Mode

CAMERA

PLAY (VCR)

CARD CAMERA

- 1. Set the program selector to \mathbb{P} .
- 2. Press the SET dial.

A list of the program AE modes appears.

3. Select a mode and press the SET dial.

The symbol of the mode appears on the upper left corner of the screen.



- O The setting resets to the Auto mode when you change the position of the program selector.
- O Do not change the mode during recording as the brightness of the image may change abruptly.
- O Sports/Portrait mode:

The picture may not appear smooth when played back.

- O Sand & Snow mode:
 - The subject may become overexposed in dark surroundings. Check the image on the screen.
 - The picture may not appear smooth when played back.
- O Low Light mode:
 - Moving subjects may leave a trailing afterimage.
 - Picture quality may not be as good as in other modes.
 - The camcorder may have difficulty to focus automatically.






CARD PLAY



E

Using the Night Modes

NIGHT	Allows you to record in dark places where lights cannot be used, without sacrificing color.
D'NIGHT+	The assist lamp lights up and stays on, allowing you to record in dark places without sacrificing color.
S.NIGHT	Allows you to record in very dark places without sacrificing color. The assist lamp lights up automatically responding to the surrounding brightness.

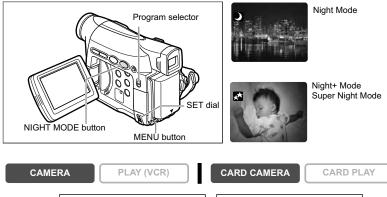

MENU (1) 37)



- 1. Set the program selector to \mathbb{P} .
- 2. Open the menu and select [CAMERA SETUP]. Select [NIGHT MODE], select a setting option and close the menu.

3. Press the NIGHT MODE button.

- The symbol of the selected mode appears on the screen.
- Pressing the NIGHT MODE button again resets the camcorder to the Auto mode.



 ${\bf O}$ Moving subjects may leave a trailing afterimage.

O Picture quality may not be as good as in other modes.

O White points may appear on the screen.

- O Autofocus may not work as well as in other modes. In such case, adjust the focus manually.
- O Digital zoom and multi-image screen cannot be used while a night mode is activated.
- O The program AE mode cannot be changed while a night mode is activated.

Skin Detail Function

When shooting close-ups of people, the camcorder automatically softens details to reduce the appearance of skin imperfections for a more complimentary appearance.



Open the menu and select [CAMERA SETUP]. Select [SKIN DETAIL], set it to [SOFT] and close the menu.



O Skin detail function cannot be used when the program selector is set to EASY.
 O [SKIN DETAIL] resets to [NORMAL] when you change the position of the POWER switch or the program selector.

O To obtain the best effect, use this function when recording a person in close-up. Note that areas similar to the skin color may lack in detail.

Е

Adjusting the AE Shift

You can adjust the AE (auto exposure) function to lighten or darken the image. This allows you to compensate for backlit or overexposed scenes. Available Levels: -2 to +2, in 0.25 intervals (excluding -1.75 and +1.75).



1. Set the program selector to P.



- **3. Press the AE SHIFT button.** "AE ±0" appears in light blue.




4. Turn the SET dial to adjust the AE shift level.

- Turn the SET dial up to lighten the image, and down to darken the image.
- If "MF" is displayed in light blue, AE shift cannot be adjusted. Press the AE SHIFT button again to display "AE ±0" in light blue.



The camcorder retains the setting even if you turn it off or change the program AE mode.

Adjusting the Focus Manually

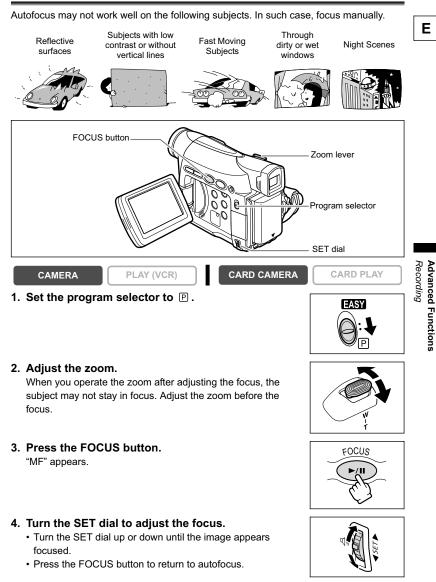

Ø

O The setting resets to autofocus when you switch the program selector to EASY. O Readjust the focus when you have turned off the camcorder.

Infinity Focus

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

Press the FOCUS button more than 2 seconds after step 2 in *Adjusting the Focus Manually*.


"MF∞" appears.



When you operate the zoom or turn the SET dial, " ∞ " disappears and the camcorder changes to manual focus.

You can use the preset modes to reproduce colors more accurately, or set a custom white balance to obtain the optimal setting.

AUTO	Auto white balance
SET	Use the custom white balance setting to make white subjects appear white under colored lighting.
INDOOR -办	Use this mode for recording under changing lighting condition, video lights or sodium lamps.
OUTDOOR 🔆	Use this mode for recording night scenes, fireworks, sunrise or sunset.

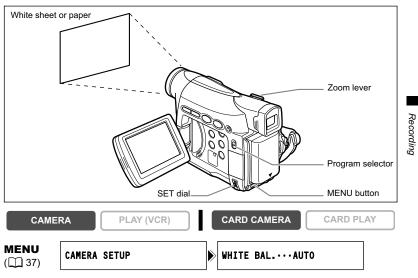

- 1. Set the program selector to P.
- 2. For custom white balance: Point the camcorder at a white object and zoom in until it fills the whole screen.

Keep the camcorder zoomed at the white object until step 3 is completed.

3. Open the menu and select [CAMERA SETUP]. Select [WHITE BAL.], select a setting option and close the menu. When you have selected [SET___]: "..." flashes and stops flashing when settings is complete.



- O Use the auto setting for normal outdoor scenes.
- O When the program selector is set to EASY, white balance is preset to [AUTO].
- O The camcorder retains the custom white balance setting even if you turn it off. However, it resets to [AUTO] when you change the position of the TAPE/CARD switch.
- O When you have set the custom white balance:
 - Depending on the light source, "....." may keep flashing. The result will still be better than with the auto setting.
 - Reset the white balance when the lighting condition changes.
 - Turn off the digital zoom.
- O Custom white balance may provide better results in the following cases:
 - Changing lighting conditions
 - Close-ups
 - Subjects in a single color (sky, sea or forest)
 - Under mercury lamps or certain types of fluorescent lights

Setting the Shutter Speed

You can adjust the shutter speed manually to make stable shots of fast moving subjects.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

Е

MENU (1) 37)

CAMERA SETUP

SHUTTER·····AUTO

- 1. Set the program selector to P.
- 2. Set the program AE mode to the A (Auto) mode.
- 3. Open the menu and select [CAMERA SETUP].
- 4. Select [SHUTTER].
- 5. Select the shutter speed and press the SET dial.

CAMERA Mode	CARD CAMERA Mode
AUTO	AUTO
1/60	1/60
1/100	1/100
1/250	1/250
1/500	
1/1000	
1/2000	

6. Close the menu.



O If the shutter speed is set to 1/500 or higher in CAMERA mode and you switch to CARD CAMERA mode, it automatically changes to 1/250.

- ${\rm O}$ Do not point the camcorder directly at the sun when the shutter speed is set to 1/1000 or higher.
- O The image may flicker when recording with high shutter speeds.
- O Recording under fluorescent lights (CAMERA mode): In Easy Recording, Auto mode or the night modes, the camcorder automatically detects the flicker of fluorescent lighting and adjusts the shutter speed accordingly. However, if the screen starts to flicker, select AUTO mode and set the shutter speed to 1/100.
- O The setting resets to the auto setting when you switch the program selector to EASY, or change the program AE mode.
- O Guidelines for Recording with High Shutter Speeds:
 - Outdoor sports such as golf or tennis: 1/2000
 - Moving objects such as cars or roller coasters: 1/1000, 1/500 or 1/250
 - Indoor sports such as basketball: 1/100

Auto Slow Shutter

In Easy Recording mode and when [SHUTTER] is set to [AUTO] in Auto mode, the camcorder uses shutter speeds down to 1/30 in CAMERA mode and 1/15 in CARD CAMERA mode. This allows you to record brightly in places with insufficient lighting. However, you can set the camcorder not to use a slow shutter speed.



Open the menu and select [CAMERA SETUP]. Select [A.SL SHUTTER], set it to [OFF] and close the menu.




O When set to [ON], moving subjects may leave a trailing afterimage.
 O The camcorder retains the setting separately in CAMERA and CARD CAMERA mode.

If ", "(camcorder shake warning) appears in CARD CAMERA mode, stabilize the camcorder, for example, by mounting it on a tripod or placing it on a table.

Using the Self-Timer

The self-timer can be used for recording movies and still images.

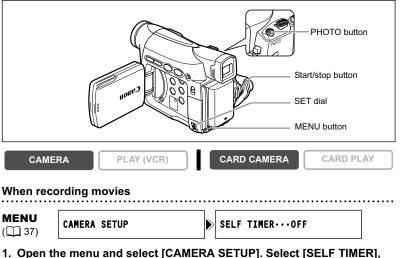

 Open the menu and select [CAMERA SETUP]. Select set it to [ON ⊗] and close the menu.

"ல்" appears.

2. Press the start/stop button.

- The camcorder starts recording after a 10-second countdown (2 seconds when using the wireless controller). The count down appears on the screen.
- To record a still image, press the PHOTO button (D 91).



O To cancel the self-timer, set [SELF TIMER] to [OFF]. Once the countdown has begun, you can also press the start/stop button (when recording movies) or the PHOTO button (when recording still image) to cancel the self-timer.

 $\ensuremath{\mathbf{O}}$ The self-timer will be canceled when you turn off the camcorder.

E

Changing the Recording Mode (SP/LP)

You can choose between SP (standard play) and LP (long play). LP extends the tape usage by 1.5 times.



To change to LP mode, open the menu and select [VCR SETUP]. Select [REC MODE], set it to [LP] and close the menu.



O Tapes recorded in LP mode cannot be used for audio dubbing.

O Depending on the nature and usage condition of the tape, picture and sound recorded in LP mode may be distorted. We recommend using the SP mode for important recordings.



O If you record in both SP and LP modes on the same tape, the playback picture may become distorted and the time code may not be written correctly.

O If you play back a tape that has been recorded in LP mode with another digital device on this camcorder, or vice versa, picture and sound may become distorted.

Changing the Audio Mode

You can record sound in two audio modes—16-bit and 12-bit. The 12-bit mode records sound on two channels (stereo 1), leaving 2 channels free (stereo 2) for adding new sound later. Select the 16-bit mode for higher sound quality.

 


Open the menu and select [AUDIO SETUP]. Select [AUDIO MODE], set it to [16bit] and close the menu.

"16bit" appears for approximately 4 seconds.

Wind Screen

The camcorder reduces wind noise automatically. However, you can turn off the wind screen when recording indoors, or when you want the microphone to be as sensitive as possible.



Open the menu and select [AUDIO SETUP]. Select [WIND SCREEN], set it to [OFF] and close the menu.


"WS DE " appears when you turn the wind screen off.

Е

Using Digital Effects

Faders (🕮 62)

Begin or end scenes with a fade to or from black.

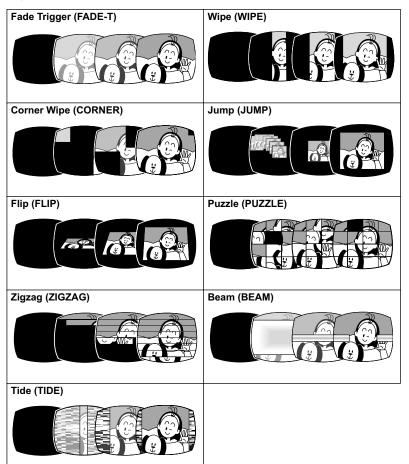


Effects (D 63)

Add flavor to your recordings.


Art (ART)	Black and White (BLACK&WHITE)	Sepia (SEPIA)	
Mosaic (MOSAIC)	Ball (BALL)	Cube (CUBE)	
	C C C C C C C C C C C C C C C C C C C		
Wave (WAVE)	Color Mask (COLOR MASK)	Mirror (MIRROR)	
			Recording

Multi-Image Screen (D 64)

 Captures moving subjects in 4, 9 or 16 sequences of still images and displays them at one time. Sound will be recorded normally.



9 Sequences

 

	16 Sequences
--	--------------

â	Â	Â	X
N.	۶¢		آست
Å	Ń	Å	2
Ì			N.

Fade out: During recording, press the DIGITAL EFFECTS ON/OFF button and pause recording by

pressing the start/stop button.

pressing the start/stop button.

The fader can be activated/deactivated by pressing the DIGITAL EFFECTS ON/OFF button

PLAY (VCR) mode:

4. Fade in: In playback pause mode, press the DIGITAL EFFECTS ON/OFF button and begin playback by pressing the \blacktriangleright /II button. Fade out: During playback, press the DIGITAL EFFECTS ON/OFF button and pause playback by pressing the \blacktriangleright/II button.

The fader can be activated/deactivated by pressing the DIGITAL EFFECTS ON/OFF button.

Availability of Digital Effects by Operating Modes:

	CAMERA				
	Movies	Still	PLAY (VCR)	CARD CAMERA	CARD PLAY
	INIOVIES	Images			
Faders	0	×	0	×	×
Effects	0	×	0	0*	×
Multi-image		×	0	×	×
screen			0	^	^

 \bigcirc : Available \times : Not available

* : Black and White only.

Selecting a Fader

In CAMERA mode, set the program selector to P.

The name of the selected fader flashes

CAMERA

close the menu.

CAMERA mode

PLAY (VCR) 1. Open the menu and select [D.EFFECT SETUP].

4. Fade in: In record pause mode, press the DIGITAL

EFFECTS ON/OFF button and begin recording by

2. Select [D.E.SELECT] and set it to [FADER]. 3. Select [FADER TYPE], select a setting option and

CARD CAMERA









Selecting an Effect

In CAMERA mode, set the program selector to P.

The name of the selected effect flashes.

DIGITAL EFFECTS ON/OFF button.

CAMERA

close the menu.

PLAY (VCR)

Open the menu and select [D.EFFECT SETUP].
 Select [D.E.SELECT] and set it to [EFFECT].
 Select [EFFECT TYPE], select a setting option and

CARD CAMERA

A] CAR

CARD PLAY

 




Selecting an Effect in CARD CAMERA Mode

4. Press the DIGITAL EFFECTS ON/OFF button.

The name of the selected effect stops flashing.The effect can be activated/deactivated by pressing the



2. Press the DIGITAL EFFECTS ON/OFF button.

- "BLK&WHT" stops flashing.
- The effect can be activated/deactivated by pressing the DIGITAL EFFECTS ON/OFF button.





Ċ

Using the Multi-Image Screen

You can operate the multi-image screen only in the following playback modes:

 When [M.S.SPEED] is set to [MANUAL]: Playback pause, slow forward/reverse plavback

 When [M.S.SPEED] is set to [FAST], [MODERATE] or [SLOW]: Playback pause In CAMERA mode, set the program selector to P.

1. Open the menu and select [D.EFFECT SETUP].

PLAY (VCR)

- 2. Select [D.E.SELECT] and set it to [MULTI-S].
- 3. Select [M.S.SPEED] and select the transition speed. Following transition speeds can be selected: fast (every 4 frames), moderate (every 6 frames*), slow (every 8 frames*). * In Low Light mode: moderate (every 8 frames), slow (every 12 frames).
- 4. Select [M.S.SPLIT], select the number of sequences and close the menu.

"MULTI-S" flashes.

CAMERA

5. Press the DIGITAL EFFECTS ON/OFF button.

- · MANUAL: Images will be captured each time you press the DIGITAL EFFECTS ON/OFF button. The blue frame indicating the next sequence disappears after the last image. Pressing the DIGITAL EFFECTS ON/OFF button for more than 1 second cancels the images one after another.
- FAST, MODERATE, SLOW: The set number of images will be captured at the set speed. To cancel the multi-image screen, press the DIGITAL EFFECTS ON/OFF button.

6. Press the start/stop button to begin recording.

The multi-image screen is recorded on the tape.

- O The image quality may be slightly lower with digital effects.
- O Digital effects cannot be used in the following cases:
 - When the program selector is set to EASY.
 - During DV dubbing.
- O Faders cannot be used when Card Mix is activated.

About the multi-image screen:

- O The multi-image screen cannot be used in the following cases:
 - In the night modes.
 - When the widescreen mode is selected.
 - When Card Mix is activated.
- O In PLAY (VCR) mode: Pressing any tape operation button (such as play or pause), or performing date search cancels the multi-image screen.







CARD CAMERA


CARD PLAY

O Turn off the digital effect when you do not use it.

O The camcorder retains the setting even if you turn it off or change the program AE mode.

Widescreen TV Recording (16:9)

The camcorder uses the full width of the CCD providing high-resolution 16:9 recording. When you turn off the image stabilizer, you will get a larger horizontal angle of view.

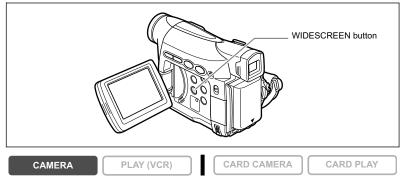

Press the WIDESCREEN button.

- "WIDE " appears.
- The LCD screen switches to the "letterbox" display. The picture on the viewfinder appears horizontally squeezed.




O The multi-image screen cannot be used when the widescreen mode is selected.
 O Simultaneous recording on a memory card cannot be used when the widescreen mode is selected.

- O If you play back a widescreen recording on a normal TV, the image appears horizontally squeezed.
- O If you connect the camcorder to a TV with Video ID-1 system, recordings made in the widescreen mode will be automatically played back in widescreen mode.

Magnifying the Image

The playback image can be magnified up to 5 times.

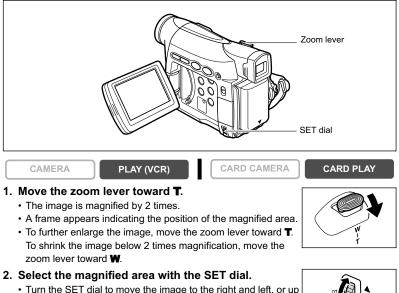

- Turn the SET dial to move the image to the right and left, or up and down. Pressing the SET dial switches between the directions.
- To cancel the magnification, move the zoom lever toward **W** until the frame disappears.






Movies played back from a memory card cannot be magnified.

Displaying the Data Code

The camcorder maintains a data code containing recording date and time and other camera data such as shutter speed and exposure (f-stop). When you play back a tape, you can display the data code and select the data code combination you wish to display.

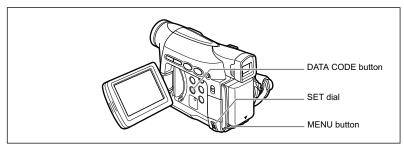

Selecting the Date/Time Display Combination

CAME	RA PLAY (VCR)	CARD CAMERA CARD PLAY				
MENU (1) 37)	DISPLAY SETUP/	D/TIME SELDATE & TIME				
Onen the many and salest [DISDLAV SETUD/@] Salest [D/TIME SEL]						

Open the menu and select [DISPLAY SETUP/
)]. Select [D/TIME SEL.], set it to [DATE] or [TIME] and close the menu.

Selecting the Data Code Display Combination

CAME	RA PL	AY (VCR)	CARD	CAMERA		CARD PLAY	
MENU () 37)	DISPLAY SETU	?/⊜	DATA	CODE····D	ATE/	TIME	

Displaying the Data Code

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

Press the DATA CODE button.



 ${\bf O}$ The data code will not display the next time you turn on the camcorder. ${\bf O}$ Only date and time appear in CARD PLAY mode.

Six-Second Auto Date

Date and time appear for 6 seconds when you begin playback, or to indicate that date or time zone has changed.

CAMER	PLAY (VCR)	CARD CAMERA	CARD PLAY
MENU ([]] 37)	DISPLAY SETUP/	6SEC.DATEOFF	

Open the menu and select [DISPLAY SETUP/m]. Select [6SEC.DATE], set it to [ON] and close the menu.


End Search

When you have played back a tape, you can use this function to locate the end of the last recorded scene.



In stop mode, press the END SEARCH button.


- "END SEARCH" appears.
- The camcorder rewinds/fast forwards the tape, plays back the last few seconds of the recording and stops the tape.
- Pressing the button again cancels the search.

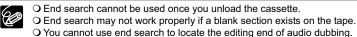

Returning to a Pre-marked Position

If you wish to return to a particular scene later, mark the point with the zero set memory and the tape will stop at that point when you rewind/fast forward the tape.

This function is operated with the wireless controller.

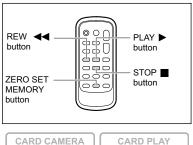

1. Press the ZERO SET MEMORY button at the point you wish to return to later.

PLAY (VCR)

• "0:00:00 M " appears.

CAMERA

- To cancel, press the ZERO SET MEMORY button again.
- 2. When you have finished playback, rewind the tape.
 - "◀◀ RTN" appears.
 - The tape stops automatically at "0:00:00".
 - The tape counter changes to time code.

The zero set memory may not function correctly when the time code has not been recorded consecutively.




Date Search

CAMERA

You can locate the change of the date/time zone with the date search function.

This function is operated with the wireless controller.

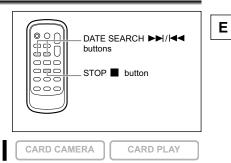

Press the ►► or I<< button to begin searching.

• Press more than once to search for further date changes (up to 10 times).

PLAY (VCR)

• Press the STOP ■ button to stop searching.




O A recording of longer than a minute per date/area is required.

O Date search may not function if the data code is not correctly displayed.

Customizing the Camcorder

You can personalize your camcorder by customizing the start-up image and the sound it makes for start-up, shutter, operation and self-timer (collectively called the My Camera settings).

Changing the My Camera Settings

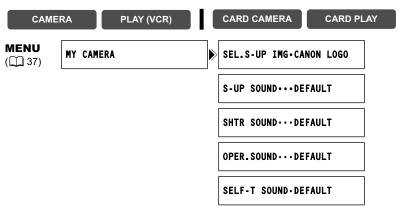

1. Open the menu and select [MY CAMERA].

2. Select the menu item you wish to change.

When selecting a start-up image, set the camcorder to CARD PLAY mode.

3. Select a setting option and close the menu.



O You can save your original images, or the images and sounds contained in the supplied software (ZoomBrowser EX for Windows or ImageBrowser for Macintosh) to the setting options [MY IMAGE] and [MY SOUND]. For details, refer to the *Digital Video Software Instruction Manual*.

O You can also create original start-up images (
110).

Changing the Display Language

The language used for screen display and menu items can be changed. The available set of languages varies depending on the region. Follow the procedure below to check which set of languages are provided with your camcorder.

Language Set A	Language Set B
(e.g. USA, Canada)	(e.g. Asia)
English, German, Spanish, French, Italian, Russian, Simplified Chinese, Japanese	English, Simplified Chinese, Traditional Chinese, Korean

CAME	RA	PLAY (VCR)	CARD CAMERA	CARD PL	AY
MENU ([]] 37)	DISPLA	Y SETUP/	LANGUAGE 🗐 ····E	NGLISH	

To change the display language, open the menu and select [DISPLAY SETUP/靈]. Select [LANGUAGE靈], select a language and close the menu.

O If you have mistakenly changed the language, follow the
menu item to change the setting.

• The displays "Menu" and "Sen" at the bottom of the screen refer to the button names on the camcorder and will not change when you change the language.

Changing the Date Format

You can select between three date formats. For example, [JAN. 1, 2005], [1. JAN. 2005] and [2005. 1. 1].



Open the menu and select [DISPLAY SETUP/
]. Select [DATE FORMAT], select a format and close the menu.

E

Other Camcorder Settings

Beep

You will hear a beep upon camcorder operations such as power on/off, start/stop, selftimer countdown, and unusual conditions of the camcorder.

If you turn off the beep, all camcorder sounds including the ones of the My Camera settings will be turned off.



To turn the beep off, open the menu and select [SYSTEM]. Select [BEEP], set it to [OFF] and close the menu.


Adjusting the Brightness of the LCD Screen

CAME	RA PLAY (VCR)	CARD CAMERA	CARD PLAY	
MENU (1) 37)	DISPLAY SETUP/	BRIGHTNESS···-	<u></u> +	

Open the menu and select [DISPLAY SETUP/
). Select [BRIGHTNESS], adjust the brightness level and close the menu.

Changing the brightness of the LCD screen does not affect that of the viewfinder or the recordings.

 Turning the Remote Sensor Off



Open the menu and select [SYSTEM]. Select [WL.REMOTE], set it to [OFF (()] and close the menu.

"ແຫຼ" appears.

 
Turning Off the Image Stabilizer

The image stabilizer compensates for camcorder shake even at full telephoto. It tries to compensate for horizontal movements; therefore, you may decide to turn it off when you mount the camcorder on a tripod.



Open the menu and select [CAMERA SETUP]. Select [IMG STAB ())], set it to [OFF] and close the menu.


"(()" disappears.



- O The image stabilizer is designed to compensate a normal degree of camcorder shake.
- ${\bf O}$ The image stabilizer might not be as effective when using the night modes.

Demonstration Mode

 The demonstration mode displays the camcorder's main features. It starts automatically when you leave the camcorder turned on without loading a recording media for more than 5 minutes. However, you can set the camcorder not to start the demonstration mode.



Open the menu and select [DISPLAY SETUP/
]. Select [DEMO MODE], set it to [OFF] and close the menu.



To cancel the demo mode once it has begun, press any button, turn off the camcorder or load a recording media.

E

Recording to a VCR or Digital Video Device

You can copy your recordings by connecting the camcorder to a VCR or a digital video device. If you connect a digital video device, you can copy recordings with virtually no generation loss in image and sound quality.


Connecting the Devices

1) Connecting a VCR

See Playing Back on a TV Screen (D 35).

② Connecting a Digital Video Device

Refer also to the instruction manual of the digital video device.

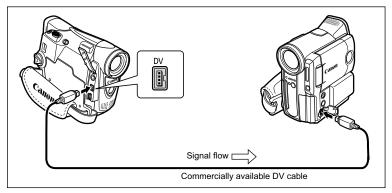

Recording

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Set the camcorder to PLAY (VCR) mode and load a recorded cassette.
- 2. Connected device: Load a blank cassette and set the device to record pause mode.
- 3. Locate the scene you wish to copy and pause playback shortly before the scene.
- 4. Play back the tape.
- 5. Connected device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.
- 6. Stop playback.



O When connecting a VCR, the quality of the edited tape will be slightly lower than that of the original.

O When connecting a digital video device:

- If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.
- Proper operation cannot be guaranteed for all digital video devices equipped with a DV terminal. If operation does not work, use the AV terminal.
- O We recommend powering the camcorder from a household power source.

Ε

Recording from Analog Video Devices (VCR, TV or Camcorder)

You can record videos or TV programs from a VCR or analog camcorder on the tape in the camcorder.





CARD CAMERA

CARD PLAY

CARD MIX/ □□ /

REC PAUSE/

- 1. Connect the camcorder to the analog video device. See Playing Back on a TV Screen (D 35).
- 2. Set the camcorder to PLAY (VCR) mode and load a blank cassette.
- 3. Connected device: Load the recorded cassette.
- 4. Press the REC PAUSE button. In record pause mode and during recording, you can check the picture on the screen.
- 5. Connected device: Play back the tape.
- Press the ►/II button when the scene you wish to record appears.

Recording starts.

7. Press the ■ button to stop recording.

- Press the ►/II button to pause recording.
- Press the ►/II button again to restart recording.
- 8. Connected device: Stop playback.



Depending on the signal sent from the connected device, dubbing may not work properly (e.g. signals that include copyright protective signals or anomalous signals such as ghost signals).



We recommend powering the camcorder from a household power source.



FOCUS

Recording from Digital Video Devices (DV Dubbing)

You can record from other digital video devices equipped with a DV terminal with virtually no loss in picture and sound quality.







CARD PLAY

CARD MIX/

REC PAUSE/

SLIDE SHOW

- **1. Connect the camcorder to the digital video device.** See Connecting a Digital Video Device (76).
- Set the camcorder to PLAY (VCR) mode and load a blank cassette. Make sure that [AV → DV] is set to [OFF] (□ 81).
- 3. Connected device: Load the recorded cassette.
- 4. Press the REC PAUSE button.

In record pause mode and during recording, you can check the picture on the screen.

- 5. Connected Device: Play back the tape.
- Press the ►/II button when the scene you wish to record appears.

Recording starts.

7. Press the **■** button to stop recording.

- Press the ►/II button to pause recording.
- Press the ▶/III button again to restart recording.
- 8. Connected Device: Stop playback.



O Blank sections may be recorded as anomalous picture.

- O If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.
- O You can only record signals from devices with the **D** logo recording in SD system in SP or LP format (note that signals from identically shaped terminals may be of different format).



We recommend powering the camcorder from a household power source.



FOCUS



Е

Copyright Signal


Certain software tapes are copyright protected. If you attempt to play back such tape, "COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED" appears and you will not be able to view the contents of the tape. If you attempt to record from such tape via the DV terminal, "COPYRIGHT PROTECTED DUBBING RESTRICTED" appears and you will not be able to record the contents of the tape.

Converting Analog Signals into Digital Signals (Analog-Digital Converter)

By connecting the camcorder to a VCR or 8mm video camcorder, you can convert analog video/audio signals to digital signals and output the digital signals via the DV terminal. The DV terminal serves as output terminal only.

Connecting the Devices

Turn off all devices before starting the connections. Unload the tape from the camcorder. Refer also to the instruction manual of the connected device.

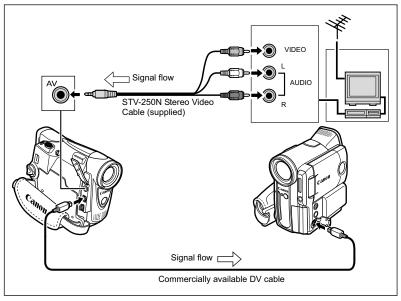

Turning On the Analog-Digital Converter

CAME	RA PLAY (VCR)	CARD CAMERA CARD PLAY	J
MENU ([]] 37)	VCR SETUP	$\blacktriangleright AV \rightarrow DV \cdots OFF$	

Open the menu and select [VCR SETUP]. Select [AV \Rightarrow DV], set it to [ON] and close the menu.

Editing

Е



• Depending on the signal sent from the connected device, the conversion from analog to digital signals might bet were very built. analog to digital signals might not work properly (e.g., signals that include copyright protective signals or anomalous signals such as ghost signals).

- \bigcirc For normal use, set [AV \Rightarrow DV] to [OFF]. If it is set to [ON], digital signals cannot be input via the camcorder's DV terminal.
- O Depending on the software and the specifications of your computer, you may not be able to transfer converted signals via the DV terminal.



We recommend powering the camcorder from a household power source.

Audio Dubbing


You can add sound from audio devices (AUDIO IN) or with the built-in microphone (MIC.IN).

This function is operated with the wireless controller.

Connecting

Connecting an Audio Device


Refer also to the instruction manual of the connected device.

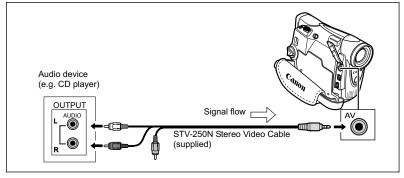

Dubbing

CAME	RA PLAY (VCR)	CARD CAMERA CARD PLAY	Editir
MENU ([]] 37)	AUDIO SETUP	AUDIO DUBAUDIO IN	Ð

 - 1. Set the camcorder to PLAY (VCR) mode and load a recorded cassette. Use a tape recorded in SP, 12-bit mode with this camcorder.
- 2. Open the menu and select [AUDIO SETUP]. Select [AUDIO DUB.], set it to [AUDIO IN] or [MIC.IN] and close the menu.
- 3. Locate the scene you wish to start audio dubbing.
- 4. Press the PAUSE II button on the wireless controller.




Ε

- Press the PAUSE II button on the wireless controller to begin dubbing.
 - Audio device: Begin playback.
 - Microphone: Speak into the microphone.
- Press the STOP button on the wireless controller to stop dubbing.

 Audio device: Stop playback.









- O Use only tapes recorded in SP mode 12-bit audio sound with this camcorder. Audio dubbing will stop if the tape has a blank section or a section recorded in LP mode or 16-bit mode.
- O You cannot use the DV terminal for audio dubbing.
- O If you add sound to a tape not recorded with this camcorder, sound quality may decrease.
- ${\rm O}$ Sound quality may decrease when you add sound to the same scene for more than 3 times.



- O When you connect an audio device, check the picture on the LCD screen and the sound via built-in speaker or audio device.
- O When you use the microphone, you can check the picture on a TV connected via the AV terminal and the sound via headphones connected to the TV.
- O Set the zero set memory at the end of the scene you wish to dub audio. The camcorder will automatically stop audio dubbing at that point.

Playing Back the Added Sound

You can select to play back Stereo 1 (original sound), Stereo 2 (added sound), or adjust the balance of both sounds.



- 1. Open the menu and select [AUDIO SETUP]. Select [12bit AUDIO], select a setting and close the menu.
 - STEREO1: Plays back the original sound.
 - STEREO2: Plays back the added sound.
 - MIX/FIXED: Plays back Stereo 1 and Stereo 2 in the same level.
 - MIX/VARI.: Plays back Stereo 1 and Stereo 2. The mix balance can be adjusted.
- 2. If you have selected [MIX/VARI.], adjust the mix level: Open the menu and select [AUDIO SETUP]. Select [MIX BALANCE], adjust the balance with the SET dial and close the menu.

Turn the SET dial down to increase the volume of Stereo 1 and up to increase the volume of Stereo 2.




The camcorder resets to [STEREO1] when you turn the camcorder off. However, the mix balance is memorized by the camcorder.

 
Е

Transferring Video Recordings to a Computer

Transferring Using a DV Cable

You can transfer recordings to a computer equipped with a IEEE1394 (DV) terminal or IEEE1394 capture board. Use the editing software supplied with your computer/capture board to transfer video recording from tape to computer. Refer to the instruction manual of the software. A driver is preinstalled on Windows operating systems later than Windows 98 Second Edition and Mac operating systems later than Mac OS 9, and will be installed automatically.

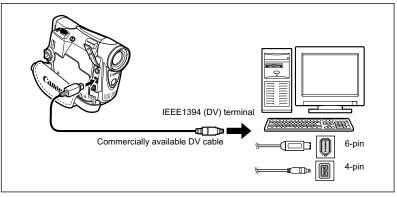



- O If the computer freezes while you have connected the camcorder, disconnect and reconnect the DV cable. If the problem persists, disconnect the interface cable, turn off camcorder and computer, turn camcorder and computer back on and reconnect them.
- O Make sure that camcorder and computer are not connected with a USB cable before connecting the camcorder to the computer using the DV cable. Otherwise, the computer may not operate properly.



 $\langle \mathbf{I}$

 
- O We recommend powering the camcorder from a household power source while it is connected to the computer.
- O Refer also to the instruction manual of the computer.
- O Users of Windows XP can download the DV Messenger software from below homepage. With DV Messenger, you can perform a videoconference using your camcorder. For details, refer to the DV Network Software Instruction Manual supplied with the software. www.canondv.com www.canon.ca www.canon-asia.com


Inserting and Removing a Memory Card

You can use MultiMediaCards or commercially available S SD Memory Cards with this camcorder. The SD Memory Card has a protect switch to prevent accidental erasure.

Inserting the Card

- 1. Turn off the camcorder.
- 2. Open the cover.
- 3. Insert the memory card straight all the way into the memory card slot.
- 4. Close the cover. Do not close the cover forcefully without having the card correctly inserted.



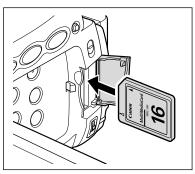


Removing the Card

Do not forcefully remove the memory card without first pushing it in.

1. Turn off the camcorder.

Make sure that the card access indicator is not flashing before you turn off the camcorder.

- 2. Open the cover.
- 3. Push the memory card to release it. Remove the memory card.
- 4. Close the cover.

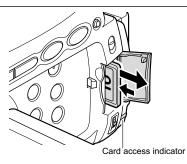



O This camcorder is compatible with MultiMediaCards or SD Memory Cards only. Do not use any other types of memory cards.

- O Proper operation cannot be guaranteed for all memory cards.
- O Turn off the camcorder before inserting or removing the memory card. Otherwise, it may result in data damage.
- O If you use memory cards other than the supplied one, make sure to format them with the camcorder (D 109).

 
Using a Memory Card

87

Ε

Changing the Still Image Quality

You can choose from Superfine, Fine and Normal.



Open the menu and select [CARD SETUP]. Select [IMG QUALITY], set it to [SUPER FINE] or [NORMAL] and close the menu.

Changing the Still Image Size

You can choose between 1152 x 864 pixels and 640 x 480 pixels.

CAME	RA PLAY (VCR)	CARD CAMERA	CARD PLAY
MENU ([]] 37)	CARD SETUP	MAGE SIZE···115	j2x864

Open the menu and select [CARD SETUP]. Select [IMAGE SIZE], set it to [640x480] and close the menu.



O Still images are recorded with JPEG (Joint Photographic Experts Group) compression.

O The number of still images that can be recorded on a memory card vary according to the recording condition. The estimated figures are as follows: 128 MB/512 MB: Using a SD Memory Card

Number of still images that can be recorded on a memory card:

			File Size per		
Image Size	Image Quality	Supplied Card	128 MB	512 MB	Image
1152 x 864	Super Fine	20	200	790	600 KB
	Fine	35	290	1160	410 KB
	Normal	65	540	2155	220 KB
640 x 480	Super Fine	85	695	2740	175 KB
	Fine	115	955	3770	120 KB
	Normal	185	1530	6035	65 KB

Changing the Movie Size

You can choose between 320 x 240 pixels and 160 x 120 pixels.

CAM	ERA PLAY (VCR)		CARD CAMERA	CARD PLAY
MENU (1) 37)	CARD SETUP		MOVIE SIZE320	<240
Open the	e menu and select [CARD S	SETU	JP]. Select [MOVIE	SIZE], set it to

Open the menu and select [CARD SETUP]. Select [MOVIE SIZE], set it t [160x120] and close the menu.



O Movies are recorded with Motion JPEG compression.

O The maximum recording time of movies that can be recorded on a memory card vary according to the recording condition. The estimated figures are as follows: 128 MB/512 MB: Using a SD Memory Card

Maximum recording time of a movie on a memory card:

Image Size		File Size		
inage Size	Supplied Card	128 MB	512 MB	per Second
320 x 240	10 sec. (1 min.*)	8 min.	32 min.	250 KB/sec.
160 x 120	30 sec. (2 min.*)	17 min.	67 min.	120 KB/sec.

* The recording times specified above are the total amount of recording times with the supplied MultiMediaCard.


Е

File Numbers

Images are automatically assigned file numbers from 0101 to 9900 and stored in folders containing up to 100 images. Folders are assigned numbers from 101 to 998.

You can choose to use consecutive file numbers (CONTINUOUS) or to reset the file number each time a different memory card is inserted (RESET). We recommend setting the file numbers to CONTINUOUS.


RESET	The file number will be reset each time a new memory card is inserted, starting with 101-0101. If the memory card already contains image files, the consecutive file number will be assigned.
CONTINUOUS	The camcorder memorizes the file number of the last image and assigns the consecutive file number to the next image, even when a new memory card is inserted. (If a higher file number already exists on the memory card, the consecutive number will be assigned.) There will be no duplication of file numbers. This is useful for organizing images on a computer.

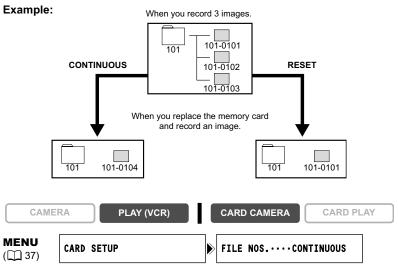

To change the setting, open the menu and select [CARD SETUP]. Select [FILE NOS.], set it to [RESET] and close the menu.

Recording Still Images on a Memory Card

You can record still images with the camcorder, from a tape in the camcorder or from devices connected via the DV terminal or AV terminal. You can also record a still image on the memory card while you record a movie on the tape.

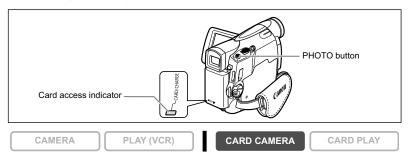

1. Set the camcorder to CARD CAMERA mode.

A white focusing frame appears in the center of the screen. The camcorder will focus on the subject in the center of the screen. To change the focusing point, see *Selecting the Focusing Point* (\square 98).

2. Press the PHOTO button halfway.

- and focusing frame turn green when focus is adjusted. The beep sounds twice. The picture may appear out of focus for a moment while the camcorder is focusing.
- · Exposure is locked.
- When you press the PHOTO button on the wireless controller, recording starts immediately.

3. Press the PHOTO button fully.

- • and focusing frame disappear and you hear a shutter sound.
- The card access indicator flashes and the card access display appears.
- The still image shown on the screen will be recorded on the memory card.
 - O Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the card access indicator is flashing. Doing so could result in data damage.
 - O When you are using a SD Memory Card, make sure that the protect switch is set to allow recording.



Using a Memory Card

Е



Connection to a computer or PictBridge compliant printer will not work when the memory card contains more than 1800 images. For best performance, we recommend not recording more than 100 images on the memory card when you plan to connect the camcorder to a computer or printer. When you are using a Macintosh computer, you may not be able to download image with ImageBrowser or with OS standard software when the memory card contains more than 1000 images. In such case, use a PC card reader for downloading the images.

- O When the subject is too bright (overexposed), use the optional FS-28U ND filter.
- O When the Focus-Priority mode is set to [ON]:

When you press the PHOTO button fully before \bullet and focusing frame turn green, it may take up to 2* seconds until focus is adjusted and the still image can be recorded to the memory card.

* Up to 4 seconds in the Low Light and the night modes.

If the subject is not suitable for autofocus, the focusing frame turns yellow and locks the focus. Adjust the focus manually with the SET dial.

 
O When the Focus-Priority mode is set to [OFF]: No focusing frame appears.

In step 2, • turns green, and focus and exposure are locked.

O The camcorder shuts off when you do not operate it for 5 minutes to save power. "A AUTO POWER OFF" appears 20 seconds before shutoff. To continue recording, turn the POWER switch to OFF and then back to CAMERA.

Recording a Still Image on a Memory Card While Recording Movies on a Tape

When you are recording a movie on a tape, you can record the same picture as a still image on the memory card. Select the image quality from normal or fine.



- 1. Open the menu and select [CAMERA SETUP]. Select [STILL I.REC], set it to [I FINE] or [I NORMAL] and close the menu.
- 2. While you are recording a movie, press the PHOTO button.



O The size of the still image will be 640 x 480.

- O The quality of the still image is slightly lower than a still image recorded in CARD CAMERA mode.
- O The still image cannot be recorded on a memory card when a fader, effect or the multi-image screen is activated.
- O The still image cannot be recorded on a memory card when the widescreen mode is selected.

Recording from a Tape in the Camcorder

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

E

- 1. Play back the tape.
- 2. Press the PHOTO button halfway when the scene you wish to record appears.
 - The camcorder pauses playback. The remaining image capacity and other information appear.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.

3. Press the PHOTO button fully.

- The card access indicator flashes.
- You can also record a still image by pressing the PHOTO button fully when the tape is in playback pause mode.

Recording from Other Video Devices

You can record images from devices connected via the AV terminal (analog line-in function), or via the DV terminal as still images on a memory card. For connecting instructions, refer to page 35 and 76.

CAMERA

CARD CAMERA

CARD PLAY

1. Set the camcorder to PLAY (VCR) mode.

• If a cassette is loaded, make sure that the tape is stopped.

PLAY (VCR)

- When recording via the AV terminal, make sure that "AV → DV" is displayed on the screen. When recording via the DV terminal, make sure that "AV → DV" is not displayed. Change the setting as necessary (□ 81).
- 2. Connected device: Load a recorded cassette and play back the tape.
- 3. Press the PHOTO button halfway when the scene you wish to record appears.
 - The still image, remaining image capacity and other information appear.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.

4. Press the PHOTO button fully.

The card access indicator flashes.



O When recording from a tape in the camcorder or other video devices:

- A still image recorded from an image in widescreen mode will be vertically compressed.
- The data code of the still image will reflect the date and time it has been recorded on the memory card.
- The size of the still image will be 640 x 480.
- O When connecting with a DV cable, make sure that no USB cable is connected to the camcorder.

Screen Displays during Still Image Recording



1 Still Image Quality

Indicates the image quality of the still image.

② Remaining Card Capacity for Still Images

- 🖾 flashing in red: No card
- in green: 6 or more images
- in yellow: 1 to 5 images
- in red: No more images
- The indication may not decrease even though a recording has been made, or may decrease by 2 images at once.
- All indicators are displayed in green when a memory card is played back.

"▶" Card Access Display

Indicates that the camcorder is writing on the memory card.

3 Image Size

Indicates the still image size.

Reviewing a Still Image Right after Recording

You can select to display a still image for 2, 4, 6, 8 or 10 seconds after it has been recorded.

CAME	RA	PLAY (VCR)	CARD CAMERA	CARD PLAY
MENU () 37)	CAMERA	SETUP	REVIEW•••••2se	PC

Open the menu and select [CAMERA SETUP]. Select [REVIEW], select a setting option and close the menu.



O A still image is displayed as long as you hold the PHOTO button after recording.
 O The FILE OPER. menu appears when you press the SET dial while you are reviewing a still image, or when you press the SET dial right after recording. In this menu, you can protect (□ 103) or erase (□ 104) the image.

Е

Recording Movies on a Memory Card

You can record Motion JPEG movies with the camcorder, from a tape in the camcorder or from devices connected via the DV terminal or the AV terminal. The sound of a movie recorded on a memory card will be monaural.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Press the start/stop button to begin recording.
- 2. Press the start/stop button to stop recording.





O Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the card access indicator is flashing. Doing so could result in data damage.

- O When you are using a SD Memory Card, make sure that the protect switch is set to allow recording.
- O Do not load/unload a cassette during recording.



• When you use a SD Memory Card, we recommend using a Canon SD Memory Card, or a SD Memory Card with a transfer rate of more than 2 MB/sec., right after you have formatted it with this camcorder. With memory cards not formatted with this camcorder, or when recording/erasing has been repeatedly performed, the writing speed may be lower and recording may stop.

- $\ensuremath{\mathbf{O}}$ You can select the focusing point when recording a movie on the memory card.
- O Users of Windows XP: When you plan to connect the camcorder to a computer, keep the length of one movie shorter than approx. 12 min. in 320 x 240 and 35 min. in 160 x 120.

Recording from a Tape in the Camcorder

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Play back the tape.
- 2. Press the start/stop button when the scene you wish to record appears.
- 3. Press the start/stop button to stop recording.

Recording from Other Video Devices

You can record movies from devices connected via the AV terminal (analog line-in function), or via the DV terminal on a memory card.

For connecting instructions, refer to page 35 and 76.

CARD CAMERA

CARD PLAY

E

1. Set the camcorder to PLAY (VCR) mode.

• If a cassette is loaded, make sure the tape is stopped.

PLAY (VCR)

- When recording via the AV terminal, make sure that "AV → DV" is displayed on the screen. When recording via the DV terminal, make sure that "AV → DV" is not displayed. Change the setting as necessary (□ 81).
- 2. Connected device: Load a recorded cassette and play back the tape.
- 3. Press the start/stop button when the scene you wish to record appears.
- 4. Press the start/stop button to stop recording.



CAMERA

When recording from a tape in the camcorder or other video devices:

- O A movie recorded from an image in widescreen mode will be vertically compressed.
- O The data code of the movie will reflect the date and time it has been recorded on the memory card.
- O Recording stops at blank sections or recordings in different audio mode (12bit/ 16bit).

Screen Displays during Movie Recording



①Card Access Display

"▶" appears and "□" moves to indicate that the camcorder is writing on the memory card.

2 Movie recording time

Indicates the recording time of the movie.

③ Image Size

Indicates the movie size.

④ Remaining Card Capacity for Movies

Indicates the remaining time in hours and minutes. At less than 1 minute, the remaining time will be displayed in 10 second-steps, at less than 10 seconds in 1 second-steps.

• The indication varies depending on the recording condition. The actual remaining time may be longer or shorter than indicated.

Selecting the Focusing Point

The subject you wish to record is not always in the center of the screen. In the Focus-Priority mode, you can choose from one of three focusing points to automatically put the subject you wish into sharp focus. The exposure will be adjusted automatically matching the selected focusing point.

When the program selector is set to EASY, the Focus-Priority becomes set to ON (only the center focusing point is available).

CAMERA

Ċ

PLAY (VCR)

CARD CAMERA

CARD PLAY

1. Set the program selector to P.

2. Turn the SET dial to display all focusing frames.

Three focusing frames appear on the screen, one of it in green.

3. Turn the SET dial to select the focusing point.

Turn the SET dial up to select the frame to the right, down to select the frame to the left.

O The focusing frame gives an indication of the focusing point. Depending on the size of the subject or the distance, the camcorder may focus outside the frame.

- O When you operate the zoom lever, the frames other than the selected one disappear.
- O The focusing point can be selected only when Focus-Priority is set to [ON] in CARD CAMERA mode.
- O The focusing point returns to the center if you turn off the camcorder, change from CARD CAMERA mode or move the program selector to EASY.
- In Sand & Snow and Spotlight mode, the exposure will be adjusted automatically regardless of the selected focusing point.
- O The focusing point cannot be selected in Stitch Assist mode.

Turning Off the Focus-Priority Mode


Turn off the Focus-Priority mode if you wish to put timing ahead of focus.



Open the menu and select [CAMERA SETUP]. Select [FOCUS PRI.], set it to [OFF] and close the menu.

Recording Panoramic Images (Stitch Assist Mode)

You can shoot a series of overlapping images and merge them into one large panoramic scene using the supplied software (PhotoStitch) on a computer.

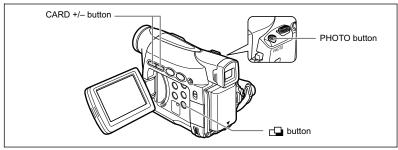

When Recording in Stitch Assist Mode:

PhotoStitch detects the overlapping portion of adjoining images and merges them. Try to include a distinctive item (landmark, etc.) in the overlapping portion.



1. Press the 🗗 button.



- 2. Select the direction with the CARD +/- button. CARD + button: clockwise. CARD - button: counterclockwise.
- HEC SEA HI LCARD J
- 3. Select the program AE mode and zoom on the subject.

Adjust focus and exposure manually as necessary. Once the sequence has started, you cannot change the program AE mode, exposure, zoom or focus.

4. Press the PHOTO button to record the first image. Direction and number of recorded images appear.



Using a Memory Card

5. Record the second image so that it overlaps a portion of the first image.

- Minor discrepancies in the overlapped area can be corrected with the software.
- You can retake an image by pressing the CARD +/- button to return to the previous image.
- A maximum of 26 images can be recorded.

6. Press the \Box button after the last image.

For details on how to merge these images, refer to the *Digital Video Software Instruction Manual.*






- O Compose each image so that it overlaps 30 to 50% of the adjoining image. Try to keep the vertical misalignment within 10%.
- O Do not include a moving subject in the overlapping portion.
- O Do not try to stitch images that include both distant and close subjects. They may appear warped or doubled up.

Using a Memory Card

Playing Back a Memory Card

You can display a single image, 6 at one time (index screen \square 102), or one after another (slide show \square 102). Use the Card Jump function to quickly locate an image without displaying them one by one (\square 102).

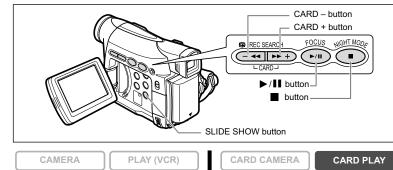

- 1. Set the camcorder to CARD PLAY mode.
- 2. Press the CARD +/- button to move between images.
- 3. To play back a movie, press the ►/II button.
 - The first scene appears as a still image when playback is complete.
 - Pressing the ►/II button during playback pauses the playback. Press the ►/II button again to restart playback.
 - Pressing the
 button displays the first scene of the movie.
 - Press the CARD +/– button (or the REW ◀◀/FF ►► button on the wireless controller) for 8x fast forward/fast rewind playback.
- $\langle ! \rangle$
- O Images not recorded with this camcorder, uploaded from a computer (except the sample images □ 108), edited on a computer and images whose file names have been changed may not be played back correctly.
- O Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the card access indicator is flashing. Doing so could result in data damage.







Slide Show

102

CAMERA

- PLAY (VCR)
- 1. Press the SLIDE SHOW button. Images are played back one after another.
- 2. Press the SLIDE SHOW button to stop the slide show.

PLAY (VCR)

Index Screen

CAMERA

- 1. Move the zoom lever toward W.
 - · Up to 6 images appear.
 - · With movies, the index screen can only be started when the first scene is displayed as a still image.
- 2. Turn the SET dial to select an image.
 - Move the "
 (g)" to the image you wish to view.
 - · You can switch between the index pages by pressing the CARD + or CARD – button
- 3. Move the zoom lever toward T.

The index screen is cancelled and the selected image is displayed.

Card Jump Function

You can locate images without displaying them one by one. The number in the upper right of the screen indicates the image number of the current image by the total number of images.

CAMERA

PLAY (VCR)

CARD CAMERA

Press and hold the CARD + or CARD – button.

- · When you release the button, the image of the displayed image number appears.
- · With movies, the card jump function can only be started when the first scene is displayed as a still image.









CARD PLAY





CARD CAMERA



CARD PLAY







CARD PLAY

Protecting Images

You can protect important images from accidental erasure when displaying a single image or index screen.



If a memory card is formatted, all still images and movies, even protected ones, will be erased permanently.



Movies can only be protected when the first scene is displayed as a still image.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

 
1. Select the image you wish to protect.

2. Press the SET dial to open the FILE OPER. menu.

In CARD CAMERA mode, the menu appears when you press the SET dial while you are reviewing a still image, or when you press the SET dial right after recording.

- 3. Select [On PROTECT].
 - "On " appears and now the image cannot be erased.
 - To cancel the protection, press the SET dial.
- 4. Select [RETURN] to close the menu.

Protecting during Index Screen Display



- 1. Move the zoom lever toward W.
 - · Up to 6 images appear.
 - · Select the image you wish to protect.
- 2. Open the menu and select [CARD OPERATIONS]. Select [→ O¬¬ PROTECT] and press the SET dial.
 - "On " appears on the image.
 - To cancel the protection, press the SET dial.
- 3. Close the menu.

Е

Erasing Images

You can erase images singly or all at once.



Be careful when erasing images. Erased images cannot be recovered.



O Protected images cannot be erased.

O Movies can only be erased when the first scene is displayed as a still image.

Erasing a Single Image

CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY

1. Select the image you wish to erase.

2. Press the SET dial to open the FILE OPER. menu.

In CARD CAMERA mode, the menu appears when you press the SET dial while you are reviewing a still image, or when you press the SET dial right after recording.

3. Select [IMAGE ERASE].

- "ERASE THIS IMAGE?", [NO] and [YES] appears.
- If an image is protected, [YES] appears in purple.

4. Select [YES].

The image is erased and the previous image appears.

5. Select [+ RETURN] to close the menu.

Erasing a Single Image/All Images

CAME	RA PLAY (VCR)	CARD CAMERA	CARD PLAY
MENU () 37)	CARD OPERATIONS	IMAGE ERASE	

1. Open the menu and select [CARD OPERATIONS].

2. Select [IMAGE ERASE].

3. Select [SINGLE] or [ALL].

- When erasing a single image: "ERASE THIS IMAGE?", [NO] and [YES] appears. If an image is protected, [YES] appears in purple.
- When erasing all images: "ERASE ALL IMAGES? [EXCEPT FOR **On** IMAGES]", [NO] and [YES] appears.

4. Select [YES] and close the menu.

- When erasing a single image: The image is erased and the previous image appears. To erase another image, select the image with the CARD +/– button and select [YES].
- When erasing all images: All still images or movies with exception of the protected ones are erased.

Combining Images (Card Mix)

 
You can produce effects not possible with just a tape with the Card Mix function. Choose one of the sample images provided on the supplied DIGITAL VIDEO SOLUTION DISK (such as picture frames, backgrounds and animations) and combine it with the live video recording.

Card Chroma Key (CARD CHROMA)

Combines frames with your recordings. The live video recording will appear in place of the blue area of the card mix image.

Mix level adjustment: blue area of the still image.







Card Luminance Key (CARD LUMI.)

Combines illustrations or title with your recordings. The live video recording will appear in place of the light area of the card mix image.

 
Mix level adjustment: light area of the still image.

Live video recording Card mix image

Camera Chroma Key (CAM. CHROMA)

Combines backgrounds with your recordings. Record your subject in front of a blue curtain, and the subject not blue will be superimposed on the card mix image.

Mix level adjustment: blue area of the live video recording.





Card Animation (C. ANIMATION)

Combines animations with your recordings. You can choose from 3 types of card animation effects.

- Corner: Animation appears on the upper left and the lower right corner of the screen.
- Straight: Animation appears on the top and bottom of the screen and moves to the right and left.
- Random: Animation moves randomly in the display.

 Mix level adjustment: blue area of the card animation image.



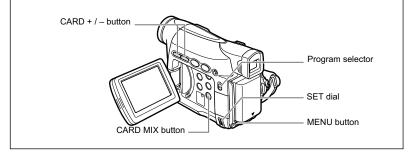

Selecting the Card Mix Effect

CAM	PLAY (VCR)	CARD CAMERA CARD PLAY
MENU ([]] 37)	D.EFFECT SETUP	► CARD MIX
	MIX TYPE·····CARD CHROM	A

1. Upload a sample image from the DIGITAL VIDEO SOLUTION DISK to the memory card in the camcorder.

Refer to Saving Still Images from Your Computer to the Memory Card in the Digital Video Software Instruction Manual.

- 2. Set the program selector to P.
- 3. Open the menu and select [D.EFFECT SETUP].
- 4. Select [→ CARD MIX]. The card mix menu appears.
- 5. Select the image you wish to combine with the CARD +/- button.

6. Select [MIX TYPE].

[CARD CHROMA], [CARD LUMI.], [CAM. CHROMA] and [C. ANIMATION] appears.

7. Select the mix type matching the sample image you have selected.

- The screen shows the combined image.
- When you have selected [C. ANIMATION], select [ANIMAT. TYPE] and select between [CORNER], [STRAIGHT] and [RANDOM].
- 8. To adjust the mix level, select [MIX LEVEL] and adjust it with the SET dial.
- 9. Close the menu.

"CARD MIX" flashes.

10.Press the CARD MIX button.

- "CARD MIX" stops flashing.
- The combined image appears.



O Card mix cannot be used when [STILL I. REC] is set to [FINE] or [NORMAL].

O Movies recorded on a memory card cannot be combined with camcorder recordings.

Sample Images

Below are some sample images provided on the supplied DIGITAL VIDEO SOLUTION DISK.

Card Chroma Key







 




Card Luminance Key












Camera Chroma Key

 

Card Animation





The sample images provided on the supplied DIGITAL VIDEO SOLUTION DISK are intended only for the personal use with this camcorder. Do not use these sample images for other purposes.

PhotoEssentials – Royalty Free Stock Photography

The PhotoEssentials suite of royalty-free images on CD-ROM features premium quality assignment photography and is ideally suited for use in advertising, brochures, reports, multimedia, websites, books, packaging and more.

For more information, please visit their website www.photoessentials.com

Formatting a Memory Card

Format new memory cards, or when you get the message "CARD ERROR". You can also format a memory card to erase all data recorded on it.



O Formatting a memory card erases all data, including protected images.

O Images erased by formatting cannot be recovered.

O If you use a memory card other than the supplied one, format it with the camcorder.

CAME	RA PLAY (VCR)		CARD CAMERA	CARD PLAY
MENU (1) 37)	CARD OPERATIONS	-	FORMAT	

- 1. Open the menu and select [CARD OPERATIONS].
- 2. Select [FORMAT].

[CANCEL] and [EXECUTE] appears.

- 3. Select [EXECUTE]. [ALL DATA WILL BE ERASED. FORMAT THIS CARD?], [NO] and [YES] appears.
- 4. Select [YES] and close the menu.
 - · Formatting starts.
 - Selecting [NO] brings you back to step 3.

Creating a Start-up Image

You can create a start-up image using a still image on the memory card.

CAME	RA PLAY (VCR)	CARD CAMERA CARD PLAY
MENU ([]] 37)	MY CAMERA	CREATE START-UP IMAGE

- 1. Select a still image with the CARD +/- buttons.
- 2. Open the menu and select [MY CAMERA].

3. Select [CREATE START-UP IMAGE].

[SET THIS AS START-UP IMAGE?], [YES] and [NO] appears.

4. Select [YES].

[OVERWRITE MY IMAGE?], [NO] and [YES] appears.

5. Select [YES].

The still image will be saved, and the image that was saved to [MY IMAGE] is erased.



Retain the original data of the still image you have set as the start-up image on your computer or removable disk.


Printing Still Images

You can print still images by connecting the camcorder to a printer with direct print function. You can also use the print order settings for direct printing (\Box 119). Following printers can be connected to your camcorder:

Canon Printers	PictBridge compliant SELPHY CP series printer*/Bubble Jet Printers (PIXMA series/SELPHY DS series)	PictBridge
	Bubble Jet Direct compatible Bubble Jet Printer	BUBBLE JET DIRECT
	CP-10/CP-100 CP Printer	DIRECT
PictBridge comp	bliant non-Canon Printer	PictBridge

*Includes the CP-330/CP-220/CP-300/CP-200.

Connecting the Printer to the Camcorder

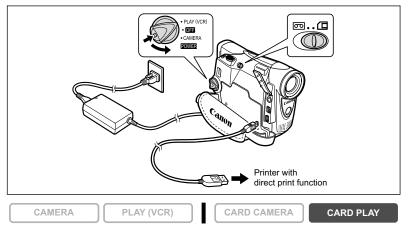

- Turn off the camcorder and insert a memory card that contains still images.
- 2. Turn on the printer.
- 3. Set the camcorder to CARD PLAY mode.
- 4. Connect the camcorder to the printer using the cable.
 - Respects and changes to result in the printer is properly connected to the camcorder. (Does not appear with movies, or still images that cannot be played back with the camcorder.)
 - The $rac{D}{\sim}$ (print/share) button lights up and the current print setting will be displayed for approx. 6 seconds.

Direct Printing

Ε



If scontinues to flash (for more than 1 minute) or if scont or scont appear, the camcorder is not correctly connected to the printer. In such case, disconnect the cable from camcorder and printer, turn off camcorder and printer, turn both back on and reconnect the camcorder to the printer.



O Refer to the instruction manual of each printer for information on which interface cable to use with the camcorder.

The Canon CP-Printers CP-10 and CP-100 are supplied with two direct interface cables. Use the cable with the USB logo on the connector (DIF-100).

- \mathbf{O} We recommend powering the camcorder from a household power source.
- $\ensuremath{\mathbf{O}}$ Refer also to the instruction manual of the respective printer.
- $\ensuremath{\mathbf{O}}$ The print setting menu may differ slightly depending on the connected printer.

Printing with the 🗅 🗠 (Print/Share) Button

You can print an image without changing the settings by simply pressing the $rac{}_{D} \sim$ (print/share) button.



PLAY (VCR)

CARD CAMERA

- CARD PLAY
- 1. Select the still image you wish to print with the CARD +/- button.
- 2. Press the $\square \sim$ (print/share) button.

 - If you wish to continue printing, select another still image with the CARD +/- button.

Printing after Selecting the Print Settings

You can select the number of copies and other settings for printing. The setting options vary depending on your printer model.



1. Press the SET dial.

PLAY (VCR)

 Depending on the printer, the message "BUSY." may appear before the camcorder displays the print setting menu.

CARD CAMERA

CARD PLAY



2. Select the print settings (D 114).

The print setting menu appears.

3. Turn the SET dial to select [PRINT] and press the SET dial.

- Printing starts. The print setting menu disappears when printing is complete.
- If you wish to continue printing, select another still image with the CARD +/- button.



O Observe the following precautions during printing, otherwise printing may not be performed correctly.

- Do not turn off the camcorder or the printer.
- Do not change the position of the TAPE/CARD switch.
- Do not detach the cable.
- Do not open the memory card cover or remove the memory card.
- O Images not recorded with this camcorder, uploaded from a computer, edited on a computer and images whose file names have been changed may not be printed correctly.
- O If the message "BUSY." does not disappear, disconnect the cable from camcorder and printer and reconnect the camcorder to the printer.



O Cancel Printing

Press the SET dial during printing. A confirmation dialog appears. Select [OK] and press the SET dial.

- Canon Printer: Printing stops even if it is incomplete and the paper is fed through.
- Canon CP-Printer CP-10/CP-100: A print in progress cannot be stopped.
 Printing stops when the current print is finished and the remaining prints are canceled.

O Printing Errors

If an error occurs during the printing process, an error message appears (D 129).

- Canon Printer: Resolve the error. When printing does not resume automatically, select [CONTINUE] and press the SET dial. If [CONTINUE] cannot be selected, select [STOP], press the SET dial and retry printing. Refer also to the printer manual for details.
- Canon CP-Printer CP-10/CP-100: Select [STOP] or [RESUME] and press the SET dial. (The [RESUME] setting may not appear with some error messages. In that case, select [STOP].) Refer also to the printer manual for details.
- If the error still persists and printing does not restart, follow below procedure:
 Disconnect the cable.
 - 1. Disconnect the cable.
 - 2. Turn the POWER switch of the camcorder to OFF and back to PLAY (VCR).
 - 3. Reconnect the cable.

O When you have finished printing:

- 1. Disconnect the cable from the camcorder and printer.
- 2. Turn off the camcorder.

E

Selecting the Print Settings

The procedure for selecting the number of copies is common to all printers. Other print setting procedures vary depending on your printer model. Check which icon appears in the upper left corner of the camcorder screen after connecting, and refer to the relevant pages accordingly.







Selecting the Number of Copies

A maximum of 99 copies can be selected for one still image.

1. In the print setting menu, turn the SET dial to select (COPIES) and press the SET dial.



2. Turn the SET dial to select the number of copies and press the SET dial.



Setting the Print Style

PAPER	PAPER SIZE	Available paper sizes vary depending on the printer model.
	PAPER TYPE	PHOTO, FAST PHOTO, DEFAULT
	PAGE LAYOUT	BORDERLESS, BORDERED, DEFAULT, 8-UP
⊘ (date	print)	ON, OFF, DEFAULT
(print effect)		ON, OFF, VIVID, NR, VIVID+NR, DEFAULT



- O Print setting options and [DEFAULT] settings vary depending on the printer model. For details, refer to the instruction manual of your printer.
- [BORDERED]: The image area remains relatively unchanged from the recorded image when it is printed. [BORDERLESS]/[8-UP]: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.
- ${\rm O}$ [8-UP] can be selected when using card size paper (5.3 x 8.6 cm) with CP Printers.
- O [VIVID], [VIVID+NR] and [NR] can be selected with Canon Bubble Jet Printers.
- O Date print cannot be selected with the CP Printers CP-200 and CP-300.
- O With CP Printers, make sure to select the paper size of the attached paper cassette.

- 1. In the print setting menu, turn the SET dial to select [PAPER] and press the SET dial.
- 2. Turn the SET dial to select the paper size and press the SET dial.

Select the paper size of the paper set in your printer.

3. Turn the SET dial to select the paper type and press the SET dial.

Select the paper type of the paper set in your printer.

4. Turn the SET dial to select a layout option and press the SET dial.

Including the Date in the Print

- 1. In the print setting menu, turn the SET dial to select \odot (date) and press the SET dial.
- 2. Turn the SET dial to select a date print option and press the SET dial.

Direct Printing











10x14.8cm 8.9x25.4cm 44



Setting the Print Effect (Image Optimize)

This function uses the camcorder's recording information to optimize the image data, yielding high quality prints.

1. In the print setting menu, turn the SET dial to select ☑ (print effect) and press the SET dial.



2. Turn the SET dial to select a setting and press the SET dial.



Setting the Print Style

		CARD #1*, CARD #2*, CARD #3*, LTR, A4 For details on paper type, refer to the Bubble Jet Printer	
		User Guide.	
BORDERS	BORDERLESS	Prints right to the edges of the page.	
	BORDERED	Prints with a border.	

* Recommended paper size



[BORDERED]: The image area remains relatively unchanged from the recorded image when it is printed. [BORDERLESS]: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.

1. In the print setting menu, turn the SET dial to select [STYLE] and press the SET dial.



2. Make sure that
□ (PAPER) is selected and press the SET dial.



- 3. Turn the SET dial to select the paper size and press the SET dial.
 - · Select the paper size of the paper set in your printer.
 - · Pressing the MENU button brings you back to the print settinas menu.
- 4. Turn the SET dial to select (BORDERS) and press the SET dial.
- 5. Turn the SET dial to select a borders option and press the SET dial.

Pressing the MENU button brings you back to the print settings menu

Setting the Print Style

IMAGE	STANDARD	Prints 1 still image per page.	
	MULTIPLE	Prints 8 copies of the same still image on one page.	
BORDERS	BORDERLESS	Prints right to the edges of the page.	
	BORDERED	Prints with a border.	

O [BORDERED]: The image area remains relatively unchanged from the recorded image when it is printed. [BORDERLESS]/[MULTIPLE]: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.

O [MULTIPLE] can only be selected when printing on card size paper.

- O [BORDERS] can only be selected when [IMAGE] is set to [STANDARD].
- 1. In the print setting menu, turn the SET dial to select [STYLE] and press the SET dial.



MENU .



BORDERS

BORDERLESS

102

.



E





Selecting the Image Style

press the SET dial.

Selecting the Borders

press the SET dial.

menu.

menu.

2. Make sure that 🖳 (IMAGE) is selected and press the SET dial.

3. Turn the SET dial to select the image style and

2. Turn the SET dial to select W. (BORDERS) and







- 3. Turn the SET dial to select a borders option and press the SET dial. Pressing the MENU button brings you back to the print settings



Printing with Print Order Settings

You can select still images for printing and set the number of copies. These print order settings are compatible with the Digital Print Order Format (DPOF) standards and can be used for printing on DPOF compatible printers (11 111). A maximum of 200 still images can be selected.

Selecting Still Images for Printing (Print Order)

 
Do not connect a USB or DV cable to the camcorder while setting the print orders.



- 1. Select the still image you wish to print.
- 2. Press the SET dial to open the FILE OPER. menu.
- 3. Select [PRINT ORDR].
- 4. Select the number of copies.
 - " 🖧 " appears on the image.
 - To cancel the print order, set the number of copies to 0.

5. Select [RETURN] to close the menu.

Selecting in Index Screen Display



- 1. Move the zoom lever toward W.
 - · Up to 6 images appear.
 - · Select the image you wish to print.
- 2. Open the menu and select [CARD OPERATIONS]. Select [→ PRINT ORDER].
- 3. Press the SET dial and set the number of copies with the SET dial.
 - " 🖧 " appears on the image.
 - To cancel the print order, set the number of copies to 0.
- 4. Close the menu.

E


Erasing All Print Orders

CAME	RA	PLAY (VCR)		CARD CAM	IERA	CARD PLAY
IENU)) 37)	CARD OP	ERATIONS			ORDERS AL	L ERASE
E. Select ["ERASE B. Select [ALL ⊉ PF ALL ⊉ PF YES]. lisappear.	and select [CAR ORDERS ALL E RINT ORDERS?", [N	RAS	E].	•	
Printing						
CAME	RA	PLAY (VCR)		CARD CAM	IERA	CARD PLAY
MENU () 37)	⇒ 🖧 PR	INT				
2. Open th • The pri • "SET ₽	ne menu nt setting r PRINT C	nter to the camco and select [→ \bigcirc] nenu appears. DRDER" appears, wh ct [→ \bigcirc PRINT] with	PRIN nen yo	T].	•	•
		PRINT] is selected print setting menu d		•		
be C Ca C Re Op pri pri Pri - V	fore step 3 Incel Print Estarting F Den the CA Int setting I Inted. Inting cann When you	ting/Printing Errors	selec SET o e follo er set	113) et [→ ⊉ PRII dial. The ren wing cases: tings.	NT]. Selec	t [RESUME] in th

Transferring Memory Card Images to a Computer

With the supplied USB cable and Digital Video Software, you can browse and archive images or arrange still images for printout. For details, refer to the *Digital Video Software Instruction Manual*.

Users of Windows OS can also transfer images to the computer by simply pressing the $\Delta \sim$ (print/share) button (\Box 122).

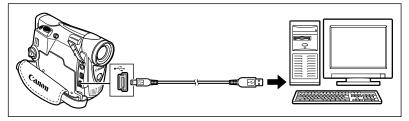

- O Do not disconnect the USB cable, open the memory card cover, remove the memory card, change the position of the TAPE/CARD switch or turn off the camcorder and computer while data is being transferred to the computer (while the camcorder's card access indicator is flashing). Doing so may damage the memory card's data.
 - O Operation may not work correctly depending on the software and the specifications/settings of your computer.
 - O The image files on your memory card and the image files saved on the hard disk drive of your computer are valuable, original data files. If you wish to use image files on your computer, make copies of them first, and use the copied file, retaining the original.
 - O Make sure that camcorder and computer are not connected with a DV cable before connecting the camcorder to the computer using the USB cable. Otherwise, the computer may not operate properly.



 ${\rm O}$ We recommend powering the camcorder from a household power source while it is connected to the computer.

O Refer also to the computer instruction manual.

O Users of Windows XP and Mac OS X:

Your camcorder is equipped with the standard Picture Transfer Protocol (PTP) allowing you to download still images (JPEG only) by simply connecting the camcorder to a computer via USB cable without installing the software from the DIGITAL VIDEO SOLUTION DISK.

Ε

Direct Transfer Windows OS only

ALL IMAGES	Transfers all images to the computer.	
NEW IMAGES	Transfers only those images that have not yet been transferred to the computer.	
TRANSFER ORDERS	Transfers images with transfer orders to the computer.	
SELECT &	Allows you to select an image and transfers the	
TRANSFER	selected image to the computer.	
WALLPAPER	Allows you to select a still image and transfers the selected image to the computer as wallpaper.	

You can transfer images to the computer with the $\square \bowtie$ (print/share) button.

Preparations

The first time you connect the camcorder to the computer, you need to install the software and set the auto-launch setting.

CAMERA





CARD PLAY

1. Install the supplied Digital Video Software.

See Installing the Software in the Digital Video Software Instruction Manual.

- 2. Set the camcorder to CARD PLAY mode.
- 3. Connect the camcorder to the computer using the USB cable. See Connecting the Camcorder to a Computer in the Digital Video Software Instruction Manual.
- 4. Set the auto-launch setting.
 - See Starting CameraWindow in the Digital Video Software Instruction Manual.
 - The direct transfer menu appears on the camcorder screen and the $\boxdot \sim$ button lights up.

From the second time on, you only need to connect the camcorder to the computer to transfer images.

Transferring All Images, New Images or Images with Transfer Orders

To transfer images with transfer order, you need to set the transfer orders (D 124).



2. Press the $\square \sim$ button.


- The images are transferred to the computer and displayed in the Main Window of ZoomBrowser EX.
- The camcorder displays the transfer menu when transfer is complete.
- To cancel transfer, turn the SET dial to select [CANCEL] and press the SET dial, or press the MENU button.

Transferring a Selected Image



- 4. Press the $\square \bowtie$ button.
 - The selected image is transferred to the computer and displayed in the Main Window of ZoomBrowser EX.
 - To continue transferring, select another image with the CARD+/- button.
 - Pressing the MENU button brings you back to the transfer menu.

Transferring a Still Image as Wallpaper

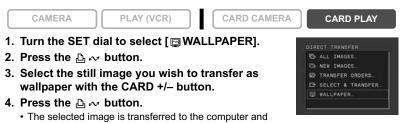

displayed on the desktop.Pressing the MENU button brings you back to the transfer menu.

○ You can press the SET dial in place of the IMAGES], [NEW IMAGES] or [TRANSFER ORDERS], a confirmation message appears. Turn the SET dial to select [OK] and press the SET dial.

- O When the protect switch of the SD Memory Card is activated during image transfer, the images will not be marked as "already transferred", and will be transferred again when you select [I NEW IMAGES] later.

Transferring Images

Е

Selecting Images for Transfer (Transfer Order)

You can select images for transfer to the computer. These transfer settings are compatible with the Digital Print Order Format (DPOF) standards. A maximum of 200 images can be selected.

Do not connect a USB or DV cable to the camcorder while setting the transfer orders.

CARD CAMERA

CARD PLAY

- 1. Select the image you wish to transfer.
- 2. Press the SET dial to open the FILE OPER. menu.

PLAY (VCR)

- 3. Select [TRANS.ORDER] and press the SET dial.
 - "
 " appears on the image.

CAMERA

- To cancel the transfer order, press the SET dial again.
- 4. Select [RETURN] to close the menu.

Selecting in Index Screen Display

CAME	RA PLAY (VCR)	CARD CAMERA	CARD PLAY
MENU ([]] 37)	CARD OPERATIONS	➡ ⊑⇒ TRANSFER	ORDER

1. Move the zoom lever toward **W**.

Up to 6 images appear.

- 2. Open the menu and select [CARD OPERATIONS]. Select [→ ⊡ TRANSFER ORDER].
- 3. Press the SET dial on the image you wish to transfer.
 - "⊡ " appears on the image.
 - To cancel the transfer order, press the SET dial again.
- 4. Close the menu.

Erasing All Transfer Orders

CAME	RA PLAY (VCR)	(CARD CAMERA CARD PLAY
MENU () 37)	CARD OPERATIONS	►	TRANS.ORDERS ALL ERASE
2. SELECT	e menu and select [CARD [[급· TRANS.ORDERS ALL ALL 급· TRANSFER ORDERS?	Eł	RASE].

- Select [YES].
 All "⊡," disappear.
- 4. Close the menu.

Screen Displays

Hiding the Displays on the LCD Screen

You can hide the displays on the LCD screen to have a clear screen for playback.



Open the menu and select [DISPLAY SETUP/B]. Select [DISPLAYS], set it to [OFF <PLAYBK>] and close the menu.

- · Warning messages still appear, and the data code appears if turned on.
- The displays appear while a playback image is magnified or a digital effect is activated.
- Tape operation displays appear for 2 seconds.
- · Displays cannot be hidden on the index screen.

Hiding/Showing the Displays on the TV Screen

When you connect a TV for recording, you can select to hide the camcorder displays on the TV screen. For playback, you can show the camcorder displays on the TV screen.



Open the menu and select [DISPLAY SETUP/B]. Select [TV SCREEN], set it to [OFF] and close the menu.

The displays disappear from the TV screen.




The displays appear on the TV screen.

Additional Information

E

Screen Displays during Recording/Playback

CAMERA Mode (see also 📖 27)

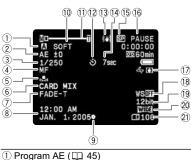

- ② AE Shift (11 50)
- ③ Shutter speed (□ 55)
- (4) Manual focus (11 51)
- (5) White balance (11 53)
- 6 Card mix (11 105)

PLAY (VCR) Mode

- ⑦ Digital effects (□ 60) (8) Date and time (11) 22) (9) AF/AE locked during still image recording (91) 10 Skin detail (11 49) ① Zoom (① 29) (12) Self-timer (11 57) (13 Image stabilizer (11 75) (4) Self-timer countdown (1) 57) (5 Recording mode (1) 58) 16 Tape operation 12 Condensation warning (11 132) (18 Wind screen (11 59) (19) Audio mode (111) 59) 2 Widescreen mode (1 65)
- (21) Remaining card capacity for still images (2 92)

1-	TAPE MO			it audio (① 85) search (① 69) /
<u>(</u> 2)-		END SEARCH	Date	e search (🛄 71) /
0		00	Aud	io dubbing (🛄 83)
			③ Data	a code (🛄 67)
(3)-	F1.8 1/250		④ Volu	ime level of speaker (🛄 34)
Ŭ		AM 2005		
5	REC	►► / << > Image: Fast forward play	back/	► / ◀: Playback pause
	PAUSE	rewind playback (🛄 33)		(🖽 33)
	STOP	x2▶/◀x2: x2 playback (□	33)	▶ / / ◄ : Date search (□ 71)
	EJECT	x1▶/◀x1:x1 playback (3	33)	RTN►►/◀◀RTN:
	►	I►/◄I: Slow playback (□ 3	3)	Zero set memory (🛄 70)
	FF 🕨	▶/ ◀ : Frame advance playb	ack/	
	A REW	frame reverse playback (🖽 33)	

CARD CAMERA Mode (see also 🖽 97)

 Image: Constraint of the sector of the se

\bigcirc	Focusing frame	(m g	8)

- 2 Stitch assist (D 99)
- ③Camcorder shake warning (① 56)

CARD PLAY Mode



1) Slide show (111 102)	
② Data code (1 67)	
③Lap time	

- ④ Length of the movie
- 5 Current image/total images
- 6 File number (11 90)
- 7 Protect mark (11 103)

List of Messages

Message	Explanation	
SET THE TIME ZONE, DATE AND TIME	You have not set the time zone, date and time. This message appears each time you turn the power on until you set the time zone, date and time.	22
CHANGE THE BATTERY PACK	Battery pack is exhausted. Replace or charge the battery pack.	13
THE TAPE IS SET FOR ERASURE PREVENTION	Cassette is protected. Replace the cassette or change the position of the protect switch.	135
REMOVE THE CASSETTE	Camcorder stopped operating to protect the tape. Unload and reload the cassette.	16
CHECK THE INPUT	DV cable or USB cable is not connected, or the connected digital device is turned off.	81
CONDENSATION HAS BEEN DETECTED	Condensation has been detected in the camcorder.	132
TAPE END	Tape reached the end. Rewind the tape or replace the cassette.	-
CHECK THE CASSETTE [REC MODE]	You attempted to perform audio dubbing on a tape recorded in a mode other than the SP mode.	83
CHECK THE CASSETTE [AUDIO MODE]	You attempted to perform audio dubbing on a tape recorded in 16- bit or 12-bit 4-channel sound.	83
CHECK THE CASSETTE [BLANK]	You attempted to perform audio dubbing on a tape with a blank section.	83
CHECK THE CASSETTE [WRONG FORMAT]	You attempted to perform audio dubbing on a tape recorded in HD format.	-
WRONG FORMAT PLAYBACK NOT POSSIBLE	You attempted to play back a tape recorded in HD format.	-
COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED	You attempted to play back a copyright protected tape.	80
COPYRIGHT PROTECTED DUBBING RESTRICTED	You attempted to dub a copyright protected tape. May also appear when an anomalous signal is received during analog line-in recording, or during analog-digital conversion of a copyright protected tape.	80

Memory Card Related Messages

Message	Explanation	
NO CARD	Memory card not is inserted into the camcorder.	87
THE CARD IS SET FOR ERASURE PREVENTION	SD Memory Card is set for erasure prevention. Replace the card or change the position of the protect switch.	87
NO IMAGES	No images are recorded on the memory card.	-
CARD ERROR	A memory card error occurred. The camcorder cannot record or play back the image. The error may be temporary. If the message disappears after 4 seconds and " []" flashes red, turn the camcorder off, remove the card and reinsert the card. If " []" changes to green, you can continue recording/playback.	-
CARD FULL	No remaining capacity on the memory card. Replace with another card or erase images.	-
NAMING ERROR	File or folder number has reached the maximum value.	90

Message	Explanation	m
UNIDENTIFIABLE IMAGE	Image is not recorded with JPEG compression, or with a compression not compatible with the camcorder, or the image file is corrupted.	-
CH TRANSFER ORDER ERROR	You attempted to set more than 200 transfer orders.	124
CANNOT TRANSFER!	You attempted to transfer a movie file as wallpaper.	123
THIS IMAGE CANNOT BE RECORDED	Some analog images cannot be recorded on the memory card depending on the signal.	-
THIS IMAGE CANNOT BE USED AS START-UP IMAGE	You attempted to use an image recorded with another camcorder, recorded with a compression not compatible with this camcorder, or that has been edited on a computer.	110
TOO MANY STILL IMAGES DISCONNECT USB CABLE	Disconnect the USB cable and decrease the number of still images on the memory card to less than 1800. If a dialog appeared on the computer screen, close it. Reconnect the USB cable.	-

Direct Print Related Messages

Following messages may appear on the camcorder screen. On printers equipped with an operation panel, an error number or message displays on the panel. Refer to the printer manual for the remedies corresponding to the error numbers or messages.

Message	Explanation
PAPER ERROR	There is a problem with the paper. Wrong paper size is inserted, or the ink cannot be used with the selected paper.
NO PAPER	Paper is not correctly inserted or there is no paper.
PAPER JAM	The paper jammed during printing.
PAPER HAS BEEN CHANGED	Paper size has been changed between print setting and start of printing.
MEDIA TYPE ERROR	You attempted to use a paper size/type that is not supported by the printer.
INCOMPATIBLE PAPER SIZE	You attempted to print on paper that cannot be used with the camcorder.
INK ERROR	There is a problem with the ink.
NO INK	The ink cartridge is not inserted or is out of ink.
LOW INK LEVEL	The ink cartridge needs to be replaced soon.
INK CASSETTE ERROR	There is a problem with the ink cassette.
PAPER AND INK DO NOT MATCH	The ink cannot be used with the selected paper type.
WASTE TANK FULL	Waste tank is full. Refer to the instruction manual of your printer.
FILE ERROR	You attempted to print an image that was recorded with another camcorder, with a different compression, or was edited on a computer.
CANNOT PRINT!	You attempted to print an image that was recorded with another camcorder, with a different compression, or was edited on a computer.
COULD NOT PRINT X IMAGES	You attempted to use the print order settings to print X images that were recorded with another camcorder, with a different compression or were edited on a computer.
	You attempted to print an image from the CARD PLAY menu [➡] PRINT] without having set the print order.
PRINT ORDER ERROR	You attempted to set more than 200 still images in the print order.

Additional Information

Ε

129

Message	Explanation
PRINTER ERROR	Cancel printing. Turn off the printer and turn it back on. Check the printer status.
PRINT ERROR	Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. Check the printer status. When you are printing using the $\Box \sim$ button, check the print settings.
HARDWARE ERROR	Cancel printing. Turn off the printer and turn it back on. Check the printer status.
RECHARGE THE PRINTER BATTERY	The printer battery is depleted.
COMMUNICATION ERROR	The printer is experiencing a data transmission error. Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. When you are printing using the $\Delta \omega$ button, check the print settings. Or, you attempted to print from a memory card that contains a large number of images. Reduce the number of images.
CHECK PRINT SETTINGS	The print setting cannot be used for printing with the 🗋 🛷 button.
PRINTER IN USE	The printer is in use. Check the printer status.
PRINTER WARMING UP	Printer is warming up. If the message does not disappear after a few seconds, check the printer status.
PAPER LEVER ERROR	Paper lever error occurred. Adjust the paper selection lever to the proper position.
PRINTER COVER OPEN	Close the printer cover securely.
NO PRINTHEAD	No print head is installed in the printer or print head is defect. Refer to the instruction manual of your printer.

Camcorder Handling Precautions

- O Do not carry the camcorder by the LCD panel or viewfinder.
- O Do not leave the camcorder in places subject to high temperatures, such as a sunheated car, and high humidity.
- O Do not use the camcorder near strong electric or magnetic fields such as above TVs, near plasma TVs or mobile phones.
- O Do not point the lens or viewfinder at strong light sources. Do not leave the camcorder pointed at a bright subject.
- O Do not use the camcorder in dusty or sandy places. Dust or sand getting inside the cassette or camcorder may cause damage. Dust and sand can also damage the lens. Attach the lens cap after use.
- O The camcorder is not waterproof. Water, mud or salt getting inside the cassette or camcorder may cause damage.
- O Be careful of heat generated by lighting equipment.
- O Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- O Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.
- O Avoid sudden changes in temperature. Moving the camcorder rapidly between hot and cold temperatures may cause condensation to form on its internal surfaces (
 132).

Storage

- If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C (86 °F).
- O After storage, check the functions of your camcorder to make sure that the camcorder is still working properly.

Cleaning

Camcorder Body and Lens

O Use a soft, dry cloth to clean the camcorder body and lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

LCD Screen

- O Clean the LCD screen using a commercially available cleaning cloth for glasses.
- O Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.
- O At cold temperatures, the screen may be darker than usual. This is not a malfunction. The screen returns to normal when the camcorder warms up.

Viewfinder

O Clean the viewfinder screen using a blower brush or a commercially available cleaning cloth for glasses.

Video Heads

- O When the playback picture becomes distorted, the video heads need to be cleaned.
- O To maintain the best picture quality, we recommend cleaning the video heads frequently with the Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available dry cleaning cassette.
- O Tapes already recorded with dirty video heads may not be played back correctly even when you clean the video heads.
- O Do not use wet type cleaning cassettes as this may damage the camcorder.





 
Condensation

Moving the camcorder rapidly between hot and cold temperature may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

Condensation may form in the following cases:

When the camcorder is moved from an air-conditioned room to warm, humid place

When the camcorder is moved from a cold place to a warm room



When the camcorder is left in a humid room



How to avoid condensation:



When a cold room is heated rapidly



O Unload the cassette, place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

Е

When condensation is detected:

- O The camcorder stops operating and the warning message "CONDENSATION HAS BEEN DETECTED" appears for approx. 4 seconds and "●" starts flashing.
- O If a cassette is loaded, the warning message "REMOVE THE CASSETTE" appears and "" starts flashing. Remove the cassette immediately and leave the cassette compartment open. Leaving the cassette in the camcorder may damage the tape.
- O A cassette cannot be loaded when condensation is detected.

Resuming use:

O It takes about 1 hour until the water droplets evaporate. After the condensation warning stops flashing, wait for 1 more hour before resuming use.

Battery Pack Handling Precautions

DANGER!

 
Treat the battery pack with care.

- · Keep it away from fire (or it might explode).
- Do not expose the battery pack to temperature higher than 60 °C (140 °F). Do not leave it near a heater or inside a car in hot weather.
- · Do not try to disassemble or modify it.
- · Do not drop or knock it.
- Do not get it wet.
- O Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
- O Attach the terminal cover whenever a battery pack is not in use. Contact to metallic objects may cause a short circuit and damage the battery pack.
- O Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.
- Since storing a charged battery pack for a long time (about 1 year) can shorten its lifecycle or affect performance, we recommend to discharge the battery pack fully and to store it in a dry place at temperatures no higher than 30 °C (86 °F). If you do not use the battery pack for long periods, charge and discharge it fully at least once a year. If you have more than 1 battery pack, perform these precautions at the same time for all battery packs.
- O Although the battery pack's operating temperature range is from 0 °C to 40 °C (32 °F to 104 °F), the optimal range is from 10 °C to 30 °C (50 °F to 86 °F). At cold temperatures, performance will temporarily decline. Warm it in your pocket before use.
- O Replace the battery pack if the usable time after full charge diminishes substantially at normal temperatures.

Additional Information

About the battery terminal cover

The battery terminal cover has a [___]-shaped hole. This is useful when you wish to differentiate between charged and uncharged battery packs. For example, with charged battery packs, attach the terminal cover so that the [___]-shaped hole shows the blue label.



Lithium Button Battery Handling Precautions

WARNING!

 The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100 °C (212 °F) or incinerate the battery.

CR1616:

- Replace the battery with a CR1616 made by Panasonic, Hitachi Maxell, Sony, Toshiba, Varta or Renata. Use of other batteries may present a risk of fire or explosion.
- CR2025:
- Replace the battery with a CR2025 made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell2025. Use of other batteries may present a risk of fire or explosion.
- O Do not pick up the battery using tweezers or other metal tools as this will cause a short circuit.
- O Wipe the battery with a clean dry cloth to ensure proper contact.
- O Keep the battery out of reach of children. If it is swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may damage stomach and intestines.
- O Do not disassemble, heat or immerse the battery in water to avoid the risk of explosion.

Cassette Handling Precautions

 
- O Rewind tapes after use. If the tape becomes slack and damaged, it may cause picture and sound distortion.
- O Return cassettes in the case and store them upright.
- O Do not leave the cassette in the camcorder after use.
- O Do not use spliced tapes or nonstandard cassettes as they may damage the camcorder.
- O Do not use tapes that have been jammed as video heads may become dirty.
- ${\bf O}$ Do not insert anything into the small holes of the cassette, or cover them with cellophane tape.
- O Handle cassettes with care. Do not drop or subject them to severe impact as this may damage the cassettes.
- O Rewind tapes from time to time if they are stored for a long time.

O With cassettes equipped with a memory function, metal plated terminals may become dirty with use. Clean the terminals with a cotton swab after about 10 times of loading/ unloading. The memory function is not supported by the camcorder.

Protecting Tapes from Accidental Erasure

To protect your recordings from accidental erasure, slide the tab on the cassette to the left. (This switch position is usually labeled SAVE or ERASE OFF.)

If you load a protected cassette in CAMERA mode, the message "THE TAPE IS SET FOR ERASURE PREVENTION" appears for approx. 4 seconds and " (200)" starts flashing. If



you wish to record on that cassette, slide the tab back to the right.

Memory Card Handling Precautions

- O Format new memory cards with the camcorder. Memory cards formatted with other devices such as a computer may not operate correctly.
- O We recommend saving backups of memory card images on your computer's hard drive or other external memory device. Image data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon Inc. makes no warranties for corrupted or lost data.
- O Do not turn off the camcorder, disconnect the power source, open the memory card cover or remove the memory card while the card access indicator is flashing.
- O Do not use memory cards in places subject to strong magnetic fields.
- O Do not leave memory cards in places subject to high humidity and high temperature.
- O Do not disassemble memory cards.
- O Do not bend, drop, or subject memory cards to shocks and do not expose them to water.
- O Moving a memory card rapidly between hot and cold temperatures may cause condensation to form on its external and internal surfaces. If condensation forms on the card, put it aside until the droplets have evaporated completely.
- O Do not touch or expose the terminals to dust or dirt.
- O Check the direction before inserting the memory card. Forcing a memory card backwards into the slot may damage the memory card or the camcorder.
- ${\bf O}$ Do not remove the label from the memory card, or affix other labels on the memory card.

Using the Camcorder Abroad

Power Sources

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult the Canon Service Center for information on plug adapters for overseas use.

Playback on a TV Screen

You can only play back your recordings on TVs with NTSC system. The NTSC system is used in the following countries/areas:

American Samoa, Antigua, Aruba, Bahamas, Barbados, Bermuda, Bolivia, Canada, Chile, Columbia, Costa Rica, Cuba, Ecuador, El Salvador, Guam, Guatemala, Greenland, Haiti, Honduras, Jamaica, Japan, Korea, Mexico, Micronesia, Myanmar, Nicaragua, Panama, Peru, Philippines, Puerto Rico, Saint Kitts and Nevis, Saint Lucia, Saint Vincent and the Grenadines, Surinam, Taiwan, Trinidad and Tobago, USA, Venezuela, Virgin Islands.

Troubleshooting

If you have a problem with your camcorder, refer to this checklist. Consult your dealer or a Canon Service Center if the problem persists.

Power Source

Problem	Cause	Solution	m
Camcorder will not turn on.	Battery pack is exhausted.	Replace or charge the battery pack.	13
	Battery pack is not correctly attached.	Attach the battery pack correctly.	13
The camcorder switches off by itself.	Battery pack is exhausted.	Replace or charge the battery pack.	13
	Power save function has been activated.	Turn on the camcorder.	25
Cassette compartment will not open.	Battery pack is exhausted.	Replace or charge the battery pack.	13
	Cassette compartment cover is not fully open.	Open the cassette compartment cover fully.	16
Cassette compartment stopped during loading/ unloading.	Battery pack is exhausted.	Replace or charge the battery pack.	13
	The camcorder malfunctions.	Consult a Canon Service Center.	-
LCD/viewfinder switches on and off.	Battery pack is exhausted.	Replace or charge the battery pack.	13
Battery pack will not charge.	Battery packs will not charge outside the temperature range of 0 °C and 40°C (32 °F and 104 °F).	Charge the battery pack in temperatures between 0 °C and 40 °C (32 °F and 104 °F).	-
	Battery packs become hot with use and may not charge.	Wait until the battery pack temperature is below 40 °C (104 °F) and retry charging.	-
	The battery pack is damaged.	Use a different battery pack.	-

Recording/Playback

Problem	Cause	Solution	m
Buttons will not work.	Camcorder is not turned on.	Turn on the camcorder.	25
	Cassette is not loaded.	Load a cassette.	16
" ig " flashes on the screen.	Cassette is not loaded.	Load a cassette.	16
" " itashes on the screen.	Battery pack is exhausted.	Replace or charge the battery pack.	13
" (in the screen.	Condensation is detected.	See reference page.	132
"REMOVE THE CASSETTE" appears on the screen.	Camcorder stopped operating to protect the tape.	Unload and reload the cassette.	16
The wireless controller will not work.	[WL.REMOTE] is set to [OFF ((確)]].	Set [WL.REMOTE] to [ON].	74
	The battery of the wireless controller is exhausted.	Replace the battery.	20

Recording

Problem	Cause	Solution	
Image will not appear on the screen.	Camcorder is not set to CAMERA mode.	Set the camcorder to CAMERA mode.	25
"SET THE TIME ZONE, DATE AND TIME" appears on	Time zone, date and time are not set.	Set the time zone, date and time.	22
the screen.	Backup battery is exhausted.	Replace the backup battery and reset the time zone, date and time.	17
	Battery pack is inserted the wrong way.	Insert the backup battery with the + side facing outward and set the time zone, date and time.	17
Pressing the start/stop button	Camcorder is turned off.	Turn on the power.	25
will not start recording.	Cassette is not loaded.	Load a cassette.	16
	Tape reached the end (" To END" flashes on the screen).	Rewind the tape or replace the cassette.	16
	Cassette is protected (" 🔯 " flashes on the screen).	Change the position of the protect switch.	135
	Camcorder is set to a mode other than the CAMERA mode.	Set the camcorder to CAMERA mode.	25
Camcorder will not focus.	Autofocus does not work on that subject.	Focus manually.	51
	Viewfinder is not adjusted.	Adjust the viewfinder with the dioptric adjustment lever.	18
	Lens is dirty.	Clean the lens.	13′
A vertical light bar appears on the screen.	Bright light in a dark scene may cause a vertical light bar (smear) to appear. This is not a malfunction.		-
Viewfinder picture is blurred.	Viewfinder is not adjusted.	Adjust the viewfinder with the dioptric adjustment lever.	18
Sound is distorted or recorded in a lower volume than the actual volume.	When recording near loud sound (such as fireworks, drums or concerts), sound may become distorted or may not be recorded in the actual sound level. This is not a malfunction.		-

Playback

Problem	Cause	Solution	
Pressing the playback button does not start playback.	Camcorder is turned off, or is not set to PLAY (VCR) mode.	Set the camcorder to PLAY (VCR) mode.	32
	The TAPE/CARD switch is set to CARD.	Set the TAPE/CARD switch to TAPE.	32
	Cassette is not loaded.	Load a cassette.	16
	Tape reached the end (" C END " flashes on the screen).	Rewind the tape.	32
Image will not appear on the TV screen.	[AV ➡ DV] is set to [ON].	Set [AV ➡ DV] to [OFF].	81
Tape is running, but image will not appear on the TV screen.	TV/VIDEO selector on the TV is not set to VIDEO.	Set the selector to VIDEO.	35
	Video heads are dirty.	Clean the video heads.	132
	You attempted to play back or dub copyright protected tape.	Stop playback/dubbing.	-
No sound from the built-in speaker.	Speaker volume is turned off.	Adjust the volume with the SET dial.	34


Editing

Problem	Cause	Solution	Β
Dubbing via the camcorder's	[AV ➡ DV] is set to [ON].	Set [AV DV] to [OFF].	81
DV terminal does not work.	Wrong signal format.	Dubbing may work via the AV terminal. Refer also to the instruction manual of the connected device.	-

Memory Card Operation

Problem	Cause	Solution	m
Memory card cannot be inserted.	Memory card was not facing the correct direction.	Turn the memory card over and reinsert it.	87
Memory card cannot be recorded.	Memory card is full.	Replace the memory card or erase images.	87
	Memory card is not formatted.	Format the memory card.	109
	Memory card is not inserted.	Insert a memory card.	87
	File number reached maximum value.	Set [FILE NUMBERS] to [RESET] and insert a new memory card.	90
	SD Memory Card is protected.	Change the position of the protect switch.	87
Memory card cannot be played back.	Camcorder is not set to CARD PLAY mode.	Set the camcorder to CARD PLAY mode.	101
	Memory card is not inserted.	Insert a memory card.	87
Image cannot be erased.	Image is protected.	Cancel the protection.	103
	SD memory card is protected.	Change the position of the protect switch.	87
" () flashes red.	Card error occurred.	Turn off the camcorder. Remove and reinsert the memory card. Format the memory card if flashing persists.	109

System Diagram (Availability differs from area to area)

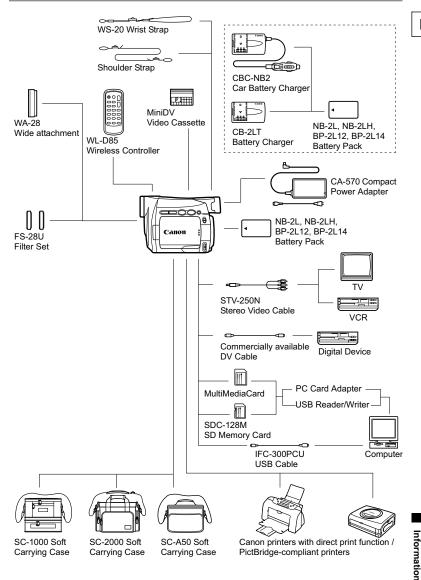

Additional

Optional Accessories

 
Call or visit your local retailer/dealer for genuine Canon video accessories. You can also obtain genuine accessories for your Canon camcorder by calling: 1-800-828-4040, Canon U.S.A. Information Center.

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.


Battery Packs

When you need extra battery packs, select from the following: NB-2L, NB-2LH, BP-2L12, BP-2L14.



CB-2LT Battery Charger

 Use the battery charger for charging the battery packs. It plugs directly into a power outlet without a cable.



Battery Pack	Charging Time
NB-2LH	90 min.
NB-2L	80 min.
BP-2L12	150 min.
BP-2L14	170 min.

Charging time varies according to the charging condition.

CBC-NB2 Car Battery Charger

Use the car battery charger to charge battery packs on the move. The car battery cable plugs into your car's cigarette lighter and runs off a 12-24 V DC negative ground battery.

FS-28U Filter Set

Neutral density and MC protector filters help you to control difficult lighting conditions.



WS-20 Wrist Strap


Use this for extra additional protection for active shooting.



Shoulder Strap

You can attach a shoulder strap for more security and portability.

Pass the ends through the strap mount and adjust the length of the strap.

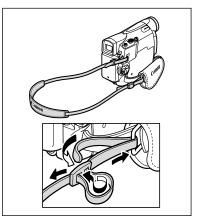


SC-1000/SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.

SC-A50 Soft Carrying Case

 This lightweight bag keeps the camcorder within easy reach without weighing you down or getting in the way.





This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Additional Information

Е

ZR400

System	
Video Recording System	2 rotary heads, helical scanning DV system (consumer digital VCR SD system), digital component recording
Audio Recording System	PCM digital sound: 16 bit (48 kHz/2 ch); 12 bit (32 kHz/4 ch)
Television System	EIA standard (525 lines, 60 fields) NTSC color signal
Image Sensor	1/4.5-inch CCD, approx. 1,330,000 pixels Effective pixels: tape: 4:3: approx. 690,000 pixels 16:9 (image stabilizer on): 650,000 pixels 16:9 (image stabilizer off): 750,000 pixels card approx. 1,000,000 pixels
Tape Format	Videocassettes bearing the "MiniDV" mark.
Tape Speed	SP: 18.81 mm/s (0.74 ips), LP: 12.56 mm/s (0.49 ips)
Maximum Recording Time (80 min. cassette)	SP: 80 min., LP: 120 min.
Fast Forward/Rewind Time	Approx. 2 min. 20 sec. (with a 60 min. cassette)
LCD Screen	2.4-inch. TFT color, approx. 112,000 pixels
Viewfinder	0.33-inch. TFT color, approx. 113,000 pixels
Microphone	Stereo electret condenser microphone
Lens	f=3.7-51.8 mm, f/1.8-3.2, 14x power zoom 35mm equivalent: Tape: 4:3 recording: 53.4-748 mm 16:9 (image stabilizer on): 52.1-729 mm 16:9 (image stabilizer off): 48.5-679 mm Card: 44.5-623 mm
Lens Configuration	10 elements in 8 groups
Filter Diameter	28 mm
AF System	TTL autofocus, manual focusing possible
Minimum Focusing Distance	1 m (3.3 ft.); 1 cm (0.39 in.) on maximum wide angle
White Balance	Auto white balance, pre-set white balance (indoor, outdoor) or custom white balance
Minimum Illumination	1.8 lx (using the Night mode)
Recommended Illumination	More than 100 lx
Image Stabilization	Electronic
Memory Card	
Recording Media	MultiMediaCard, SD Memory Card
Number of Recording Pixels	Still image: 1152 x 864, 640 x 480 pixels Movie: 320 x 240, 160 x 120 pixels, 15 frames/sec.
File Format	Design rule for Camera File System (DCF), Exif 2.2* compliant, DPOF compliant
communication between camcor	2 (also called "Exif Print"). Exif Print is a standard for enhancing the rders and printers. By connecting to an Exif Print-compliant printer, the ime of shooting is used and optimized, yielding extremely high quality prints.
Image Compression Method	Still image: JPEG (compression: Super Fine, Fine, Normal) Movie: Video data: Motion JPEG, audio data: WAVE (monaural)
Input/Output Terminals	
AV Terminal	Ø3.5 mm minijack Video: 1 Vp-p/75 ohms unbalanced

	Video:	1 Vp-p/75 ohms unbalanced
	Audio output:	-10 dBV (47 kohm load)/3 kohms or less
	Audio input:	-10 dBV/40 kohms or more
DV Terminal	Special 4-pin con	nector (IEEE 1394 compliant)
USB Terminal	mini-B	

Power/Others

Power supply (rated)	7.4 V DC
Power consumption (AF on)	2.6W (using viewfinder), 3.5W (using LCD screen in normal brightness)
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions (W x H x D)	51 x 93 x 130 mm (2.0 x 3.7 x 5.1 in.) excluding protrusions
Weight (camcorder body only)	430 g (15.2 oz.)

CA-570 Compact Power Adapter

Power supply	100 – 240 V AC, 50/60 Hz
Power consumption	17W
Rated output	8.4 V DC, 1.5 A
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions	52 x 90 x 29 mm (2.1 x 3.5 x 1.1 in.)
Weight	135 g (4.8 oz.)

NB-2LH Battery Pack

Battery type	Rechargeable Lithium Ion Battery
Rated voltage	7.4 V DC
Operating temperature	0 – 40 °C (32 – 104 °F)
Battery capacity	720 mAh
Dimensions	33.3 x 16.2 x 45.2 mm (1.3 x 0.64 x 1.8 in.)
Weight	43 g (1.5 oz.)

MMC-16M MultiMediaCard

Capacity	16 MB
Interface	MultiMediaCard standard
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions	32 x 24 x 1.4 mm (1.3 x 0.94 x 0.06 in.)
Weight	1.5 g (0.05 oz.)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Item Codes

Provided Accessories

Lens Cap CA-570 Compact Power Adapter NB-2LH Battery Pack STV-250N Stereo Video Cable WL-D85 Wireless Controller IFC-300PCU USB Cable WA-28 Wide Attachment

Optional Accessories

BP-2L12 Battery Pack BP-2L14 Battery Pack NB-2L Battery Pack CB-2LT Battery Charger CBC-NB2 Car Battery Charger FS-28U Filter Set WS-20 Wrist Strap SC-2000 Soft Carrying Case SC-1000 Soft Carrying Case SC-A50 Soft Carrying Case DVM-CL DV Cleaning Cassette D52-0300-000 8468A002AA 9612A001AA 3067A002AA (D82-0590-201) D83-0712-000 6906A001AA D55-0270-000

7871A002AA 9582A002AA 7302A001AA 7303A001AA 7873A002AA 7952A001AA 3118A002AA (D81-0190-202) 9389A001AA 3083A002AA (D81-1200-201) D81-1302-201 3134A002AA (D36-0032-201)

Index

12bit audio	5
16:9 widescreen	5
6-second auto date	8

Α

AL 1 1 11 1	40	~
Abroad, using the camcorder	13	6
Accessories	14	2
AE Shift	. 5	0
Analog line-in	. 7	8
Analog-digital converter	. 8	1
Assist lamp	. 4	8
Audio dubbing	. 8	3
Audio mode	. 5	9
Auto	. 4	5
Autofocus	. 5	1
AV terminal	. 3	5
AV-DV	. 8	1

В

Backlight 2	1
Backup battery 1	7
Battery charger 14	2
Battery pack 1	3
Beep	4
Brightness	4

C

Card jump	02
Card mix	05
Computer 86, 1	21
Condensation 1	32
Connections - TV, VCR	35
Copyright signals	80

D

Data code 67
Date and time 22
Date format
Date search
Demo mode
Digital effects 60
Digital zoom 30
Direct print function 111
Direct transfer
DV dubbing 79
DV terminal

Ε

Easy recording										. 4	5
Effects										. 6	1
End search										. 6	9
Erasing images										10	4

F

Faders60
Fast forward
File numbers90
Focusing
Focusing point98
Focus-Priority98
Formatting109

G Grip

Grip belt										•														18	3
-----------	--	--	--	--	--	--	--	--	--	---	--	--	--	--	--	--	--	--	--	--	--	--	--	----	---

I

mage quality	. 88
mage stabilizer	. 75
ndex screen	102
nfinity focus	. 52

L

Language7	3
LCD Backlight 2	21
LCD mirror mode2	26
LCD screen	21
Lens cap	8
Low light mode4	-5
LP mode5	8

Μ

Maintenance
Manual focus51
Memory card
Menus
Movie size
Multi-image screen61
MultiMediaCard87
My Camera settings72

Ν

Night mode .															48
Night+ mode		•	•			•	•	•	•	•	•	•		•	48

Additional Information

Ε

0

Operating Mode											5	
Output channel .										З	86	

Ρ

Playback - Memory card 101
Playback - Tape
Playback pause
Portrait mode
Power adapter 13
Print order 119
Program AE 45
Protect

R

Record review	28
Record search	28
Recording movies (memory card)	96
Recording movies (tape)	25
Recording programs	
Recording still images (memory card) .	91
Remote sensor	74
Review	95
Rewind	32

S

Sample images 108
Sand & Snow mode 45
Screen displays 125
SD Memory Card 87
Self-timer 57
Shoulder strap 143
Shutter speed 55
Skin detail
Slide show 102
SP mode 58
Speaker
Sports mode 45
Spotlight mode 45
Still image quality 88
Still image size 88
Stitch Assist mode
Super Night mode 48

Т

Tape protection								1	35
Time code									27
Time zone									22

Transfer order	 								124
Tripod	 								. 31
Troubleshooting	 								137
TV Screen	 		•			•			125

U

USB terminal	 111, 1	21

V

Video heads1	32
Videocassettes	16
Viewfinder	18

W

White balance	53
Widescreen	65
Wind screen	59
Wireless controller	20

Ζ

Zero set memory									70
Zooming									29

CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY FOR THE UNITED STATES

The warranty set forward below is given by Canon U.S.A., Inc. with respect to equipment purchased in the United States. The limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase.

Canon consumer digital video equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase, except for a defective Video Head, which will be exchanged for a period of three months from the date of purchase.

Labor: For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by our factory service centers or designated service facilities located in the United States.

When returning equipment under this warranty, you must pre-pay the shipping charges, and you must enclose the Bill of Sale or other proof of purchase with a complete explanation of the problem. During your ONE-YEAR warranty period, repairs will be made and the equipment return-shipped to you free of charge. After your warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the equipment return-shipped to you.

Non-Canon brand peripheral equipment and software which may be distributed with Canon DV camcorders are sold "AS IS" without warranty of any kind by CUSA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such non-Canon brand items is given by the manufacturer or producer thereof.

CUSA shall have no responsibility under this limited warranty for use of Canon DV Camcorders in conjunction with incompatible peripheral equipment and incompatible software.

In order to obtain warranty service, contact the authorized Canon retail dealer from whom you purchased the DV Camcorder or call the CANON INFORMATION CENTER AT 1-800-828-4040). You will be directed to the nearest service facility for your product.

This Limited Warranty covers all defects encountered in normal use of the equipment and does not apply in the following cases:

- A) Loss or damage to the equipment due to abuse, mishandling, accident, improper maintenance, or failure to follow operating instructions;
- B) If the equipment is defective as a result of leaking batteries, sand, dirt or water damage;
- C) If defects or damages are caused by the use of unauthorized parts or by service other than our authorized agent;
- D) If the equipment is used for commercial or industrial use.

This Limited Warranty does not cover cabinet (exterior finish), video cassette tape, head cleanings, nor does it apply to equipment purchased outside the United States. This warranty does not cover units sold to rental firms, military operations, hotels, schools, hospitals or for other commercial, industrial, or institutional applications. These uses are covered only by such specific warranty as Canon may issue with such sales.

This Limited Warranty does not apply to accessories or consumables for the DV Camcorder, which are sold "AS IS", without warranty of any kind by CUSA.

Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card is most important in order to be sure you are contacted right away should there be a safety inspection, modification or product recall under applicable laws or regulations.

NO IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THIS EQUIPMENT AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS EQUIPMENT SHALL BIND THE UNDERSIGNED. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU). CUSA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE. MISUSE OR INABILITY TO USE THE DV CAMCORDER, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CUSA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, NOR SHALL RECOVERY OF ANY KIND AGAINST CUSA BE GREATER THAN THE PURCHASE PRICE OF THE DV CAMCORDER SOLD BY CUSA AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE THE DV CAMCORDER NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CUSA. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU). THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS EQUIPMENT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. CANON U.S.A., INC.

149



CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY

The limited warranty set forth below is given by Canon Canada Inc. ("Canon Canada") with respect to Canon digital video equipment purchased in Canada. This limited warranty is only effective upon presentation of a bill of sale or other proof of purchase for this Canon digital video equipment to a Canon Service Facility when repairs are required.

Canon consumer video digital equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or, at Canon Canada's option, comparable rebuilt parts for a period of one year from the date of original purchase, except Video Heads which will be exchanged for a period of 3 months from the date of purchase.

Labour: For a period of one year from the date of original purchase, labour will be provided free of charge by our Canon Service Facilities in Canada.

This limited warranty covers all defects except where:

- (a) The loss or damage to the product results from:
 - accident, natural disaster, mishandling, abuse, neglect, unauthorized product modification or failure to follow instructions contained in the instruction manual;
 - the use of accessories, attachments, products, supplies, parts or devices with this Canon product that do not conform to Canon specifications or that cause abnormally frequent service problems;
 - iii) repairs or services performed by any party other than a Canon Service Facility;
 - iv) defective batteries or any exposure to water, sand or dirt;
 - v) shipping (claim must be presented to the shipper);
- (b) Any serial number on the video equipment is altered or removed.
- (c) The digital video equipment is used for commercial, professional or industrial purposes.

This limited warranty does not cover the cabinet (exterior finish) of the digital video equipment, video cassette tapes, head cleanings, nor does it apply to digital video equipment purchased outside Canada.

TO OBTAIN WARRANTY SERVICE

Ship your Canon digital video equipment in its original carton, box or equivalent, properly packed, fully insured with shipping charges prepaid, together with a copy of your bill of sale or other proof of purchase and a description of the problem to any of the Canon Service Facilities in Canada.

LIMITATIONS

Except as otherwise required by applicable legislation, this warranty is in lieu of all other warranties, conditions, guarantees or representations, express or implied, statutory or otherwise, relative to this Canon product, including implied warranties or conditions of merchantability or fitness for a particular purpose.

Canon Canada assumes no liability for special, consequential or incidental damages or loss that may arise, whether on account of negligence or otherwise, from the use, misuse or inability to use this Canon product (including loss of profit, revenue, video tapes or enjoyment) or from failure to conform to any express or implied warranties, conditions, guarantees or representations. Any recovery under this limited warranty shall not exceed the purchase price of the product. Canon Canada does not assume or authorize any other person to assume for Canon Canada any other liability with respect to this Canon product.

This warranty does not extend to any person other than the original purchaser of this Canon product or the person for whom it was purchased as a gift and states your exclusive remedy.

NOTICE TO CONSUMER

If you plan to take important videos or if the product has not been used for some time, please check all functions with the instruction book before using it.

Canon

CANON INC.

U.S.A.	CANON U.S.A., INC. NEW JERSEY OFFICE 100 Jamesburg Road, Jamesburg, NJ 08831 USA CANON U.S.A., INC. CHICAGO OFFICE 100 Park Blvd., Itasca, IL 60143 USA CANON U.S.A., INC. LOS ANGELES OFFICE 15955 Alton Parkway, Irvine, CA 92618 USA CANON U.S.A., INC. HONOLULU OFFICE 210 Ward Avenue, Suite 200, Honolulu, HI 96814 USA
	If you have any questions, call the Canon U.S.A. Information Center toll-free at 1-800-828-4040 (U.S.A. only).
CANADA	CANON CANADA INC. NATIONAL HEADQUARTERS 6390 Dixie Road, Mississauga, Ontario L5T 1P7 CANON CANADA INC. CALGARY 2828, 16th Street, N.E. Calgary, Alberta T2E 7K7 CANON CANADA INC. MONTREAL 5990 Côte de Liesse, Quebec H4T 1V7
	If you have any questions, call the Canon Canada Information Center toll-free at 1-800-828-4040 (CANADA only).
	Si vous avez des questions, veuillez téléphoner sand frais au Canada 1-800-828-4040 (CANADA seulement).
MEXICO	CANON MEXICANA, S. DE R.L. DE C.V. Periferico Sur No. 4124 Col. Ex-Rancho de Anzaldo C.P. 01900 México, D.F., México
	CANON U.S.A., INC. NEW JERSEY OFFICE 100 Jamesburg Road, Jamesburg, NJ 08831 USA
CENTRAL Y SURAMÉRICA	CANON LATIN AMERICA, INC. 703 Waterford Way Suite 400 Miami, FL 33126 USA
ASIA	CANON HONGKONG COMPANY LTD. 19/F, The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong



Printed on 100% reused paper. Document réalisé avec du papier recyclé à 100%. El papel aqui utilizado es 100% reciclado.