

NOTE: Some parts are made to detach if excessive force is applied and are designed to be reattached if separation occurs. Adult supervision may be necessary for younger children.

### CHANGING TO MECH

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

**MECH MODE**

Pilot fits in cockpit.

TO LAUNCH MISSILE:  
1. Insert missile.  
2. Press button to launch.

Reverse order of instructions to convert back into vehicle.



Some poses may require hand support.  
Product and colors may vary.  
© 2007 Lucasfilm Ltd. & © or TM where indicated. All Rights Reserved.  
® and/or TM & © 2007 Hasbro. All Rights Reserved.  
TM & © denote U.S. Trademarks.



Not suitable for children under 3 years because of small parts – choking hazard.

P/N 6732500000

VISIT [starwars.hasbro.com](http://starwars.hasbro.com)