 


# QUICK USE GUIDE


DVDR 560H

## 1 CONNECT THE DVD RECORDER

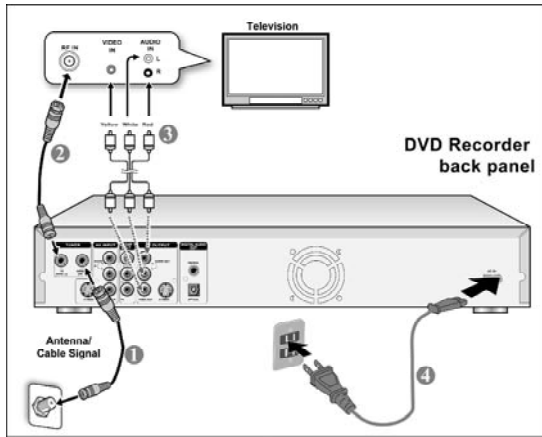


- 1 Connect the antenna cable from the wall antenna outlet to the **ANTENNA IN** terminal on the back of the DVD recorder.
- 2 Use another antenna cable to connect the DVD recorder's **TV OUT** terminal to the antenna in terminal at the back of your TV set.
- 3 Use AUDIO/VIDEO cables (red/white/yellow) to connect the DVD recorder's **AV OUT** terminals to the **AV IN** terminals at the back of your TV set.
- 4 Connect the power cable from the DVD recorder's **AC IN** terminal to the power outlet.

 
## 2 PREPARE THE REMOTE CONTROL

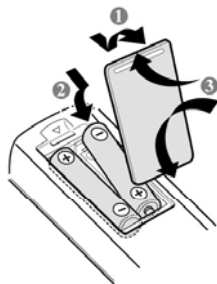


## 3 START INSTALLATION

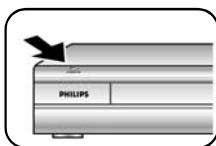 

 - 1 Press **[STANDBY-ON]** to switch on the DVD recorder.

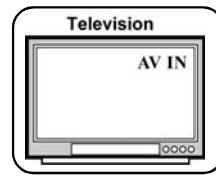

 - 2 Switch on the TV set and select the correct video input.

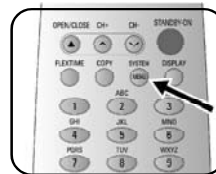

- 3 Press the **[SYSTEM MENU]** button to adjust your preference setting of this DVD recorder.



- 4 Press **[▲]** **[▼]** to select an item in the menu. Press **[▶]** to access the selected item's options. Press **[OK]** to confirm your selection.



- 5 Language menu appears. **OSD language:** select on-screen display language.



- 6 System menu appears.  
**Video output:** sets video output  
**TV Type:** sets the TV type  
**Date:** set the system date using the numbered buttons.  
**Time:** set the system time using the numbered buttons.



- 7 TV tuner menu appears.  
**TV channel search:** Go to "Utilities" and then "start scan." Press **[OK]** to start automatic TV channel scan to search and store available channels.

- 8 When completed, press **[SYSTEM MENU]** to exit the menu.

**The DVD Recorder is ready for use!**

**NO PICTURES!** Check if Video Input of the TV set is switched to "AV" and press **[CHANNEL ▲ ▼]** button to select the right channel.

**NO SOUND!** Check if the audio L/R jacks on the recorder are connected to the TV set, stereo system or receiver.

...cont.


## 4 START PLAYBACK WITH GUIDE MENU

### Playable

#### Disc Formats

The unit can play DVD-R/RW, DVD+R/RW and CD-R/RW recorded with the contents listed below on:

 
Playable contents	DVD-R/RW	DVD+R/RW	CD-R/RW
	DVD-Video	DVD-Video	Video CD
	DVD+VR	DVD+VR	Super Video CD
	JPEG	JPEG	Audio CD
	MP3	MP3	JPEG
			MP3



#### Recordable Disc Formats


Disc format recorded contents	DVD+R/RW
	DVD+VR

The formats of contents which can be recorded on to the compatible disc formats are:

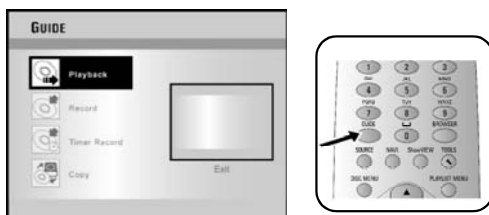- 1 Insert a disc if you're playing back from a disc.
- 2 Press the **[GUIDE]** button for the GUIDE menu, press **[▲]** **[▼]** to go to "Playback" and press **[OK]**.
- 3 Press **[▲]** **[▼]** to select DVD or HDD and press **[OK]**.
- 4 Press **[▲]** **[▼]** to select the file type for playback and press **[OK]**.
- 5 Press **[▲]** **[▼]** **[◀]** **[▶]** to select the file and press **[OK]** to start playback from.
- 6 Press **[▶▶ F.F.]** for fast-forward scanning.
- 7 Press **[◀◀ REW]** for fast-reverse scanning.
- 8 Press **[▶▶ NEXT]** or **[◀◀ PREVIOUS]** to advance or return to the next or previous chapter/track.
- 9 Press **[|| PAUSE/STEP]** to pause playback.  
When playback is paused, press **[|| PAUSE/STEP]** again to start "frame by frame mode."
- 10 Press **[STOP]** to stop playback.

## 5 START RECORDING WITH GUIDE MENU

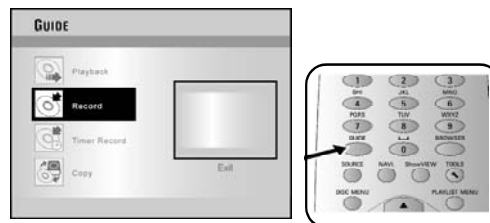 

- 1 Insert a recordable DVD+R/+RW disc with the label facing up or assure the HDD has enough available recording space.
- 2 Press the **[GUIDE]** button for the GUIDE menu, press **[▲]** **[▼]** to go to "Record" and press **[OK]**.
- 3 Press **[▲]** **[▼]** to select signal input and press **[OK]**.  
If TV is selected, press **[▲]** **[▼]** for channel selection.
- 4 Press **[▲]** **[▼]** to select DVD or HDD and press **[OK]**.
- 5 Press **[▲]** **[▼]** to set recording mode and press **[OK]**.
- 6 Press **[OK]** to start recording.
- 7 Press **[STOP]** to stop recording.

Recording Mode		
Quality	Rec. Time (DVD)	Rec. Time (HDD)
M1	1 Hour	33 Hours
M2	2 Hour	66 Hours
M2x	2.5 Hours	83 Hours
M3	3 Hours	99 Hours
M4	4 Hours	132 Hours
M6	6 Hours	198 Hours

To play the DVD+R disc on other DVD players after recording, you must finalize the disc first:

- 1 Press the **[Disk Tools]** button.
- 2 Press **[▲]** **[▼]** to select "Finalize (Make Compatible)" and press **[OK]**.
- 3 Press **[OK]** to start finalizing the disc.

Once the DVD+R disc is finalized, no further recordings and editings can be made to the disc. You can not un-finalize a finalized disc.

**D**etailed playback and recording features and additional functions are described in the accompanying user's manual.

Need Help?

Please visit: [www.p4c.philips.com](http://www.p4c.philips.com)

P/N: 7819901304