



KONICA MINOLTA

7222/7228/7235


Network Setup and Scanner Operations



KONICA MINOLTA

User's Guide
Network Setup and
Scanner Operations

7222
7228
7235

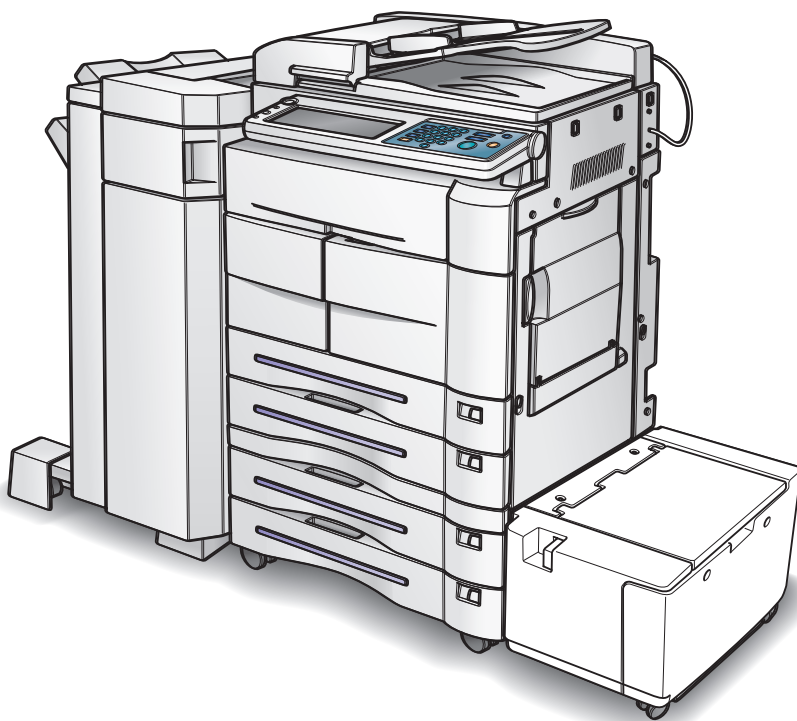

Thank you very much for purchasing the Konica Minolta Digital Electronic Photo Copier.

This User's Guide includes the instructions necessary for utilizing the full range of functions, as well as safety precautions. Please take the time to read it carefully.

To ensure optimum printing performance, please store this manual in the space provided at the rear section of the machine for easy reference.

Please read this manual before performing any printing operations or using the equipment in any way.

ACKNOWLEDGEMENTS:

Microsoft, MS and MS-DOS are registered trademarks of Microsoft Corporation in the United States.

IBM is a registered trademark of International Business Machines, Inc. in the United States.

Windows™ is a trademark of Microsoft Corporation.

HP and PCL are registered trademarks of Hewlett-Packard Company.

Agfa Microtype font is a registered trademark of Agfa Corporation.

PEERLESS is a registered trademark of PEERLESS SYSTEMS CORPORATION.

Apple, Macintosh and Mac are registered trademarks or trademarks of Apple Computer, Inc.

Adobe, Adobe Logo, Acrobat, Acrobat Logo, PostScript and PostScript Logo are registered trademarks or trademarks of Adobe Systems, Inc.

Other company names and product names used in this manual are the registered trademarks or trademarks of their respective companies.

COPYRIGHT

© 2004 by Konica Minolta Business Technologies, Inc. All Rights Reserved.

EXEMPTION

- No part of this manual may be used or duplicated without permission.
- Konica Minolta Business Technologies, Inc. is not liable for any incidents caused by using the printing system and this manual.
- The information printed in this User's Guide is subject to change without prior notice.

CONTENTS

Configuration of Manuals	v
About this Manual	vi
Conventions Used in this Manual	vi
Using of this Manual	vii
Folder Structure on the CD-ROM	viii
I Outline	1
Chapter 1 Summary of Network Functions	3
1-1. Network/Scanner Function Outline	4
Connection with the Network	4
Network Setting Method	4
1-2. Scanner Functions	5
1-3. Scan Data Output	6
Scan to E-Mail	6
Scan to FTP	7
Send to a Shared Folder (Scan to PC (SMB))	8
Chapter 2 Before Use	9
2-1. Control Panel Descriptions	10
2-2. LCD Screen	11
LCD Screen Operation Methods	11
Job List Screen	12
Chapter 3 Inputting Text	15
3-1. Inputting Text	16
Data Input Screen	16
II Network Setup - Administrators only	19
Chapter 4 Setting from the Control Panel	21
4-1. Network Setup List	22
4-2. Method for Setting Network from Control Panel	23
IP Address Settings	26
4-3. TCP/IP Setup	27
4-4. NetWare Setup	33
4-5. AppleTalk Setup	41
4-6. IPP Setup	44
Printer Related Information	50
4-7. FTP Setup	54

4-8.	E-Mail (SMTP) Setup	57
4-9.	E-Mail (POP) Setup	63
4-10.	E-Mail Extended Config	69
4-11.	Device Setup	72
4-12.	List Print	75
4-13.	PC(SMB) Setup	76
4-14.	LDAP Setup	77
Chapter 5 Web Utility		89
5-1.	Accessing Web Utility	90
5-2.	Network Information	91
	Protocol Information	91
	Network Information	91
5-3.	TCP/IP Configuration	92
	Enabling TCP/IP	93
	Changing IP Settings	93
	Changing DHCP Settings	94
	Changing DNS Settings	95
5-4.	NetWare Configuration	96
	Enabling NetWare	97
	Changing NetWare Settings	97
5-5.	AppleTalk Configuration	100
	Enabling AppleTalk	100
	Changing AppleTalk Settings	101
5-6.	IPP Configuration	102
	Enabling IPP	103
	Changing IPP Configuration Settings	104
5-7.	FTP Configuration	105
	Changing FTP Setting	106
5-8.	E-mail Send (SMTP) Configuration	107
	Enabling E-mail Send (SMTP)	108
	Changing E-mail Send (SMTP) Setting	108
5-9.	E-mail Receive (POP) Configuration	110
	Changing E-mail Receive (POP) Setting	111
5-10.	E-Mail Extended Configuration	112
5-11.	PC(SMB) Configuration	113
5-12.	LDAP Configuration	114
5-13.	E-Mail Notification Configuration	116
5-14.	Device Configuration	118
	Changing Device Setting	119
5-15.	Reset	120
	Resetting the Network Function	121
	Restoring the Factory Defaults	121

III Scanner	123
Chapter 6 Using the Scanner Functions	125
6-1. Selecting the Destination	126
Scan to E-Mail	127
Scan to FTP	140
Send to a Shared Folder (Scan to PC (SMB))	146
6-2. Registering Destinations	151
6-3. Setting Scanner Functions	164
Scanning Mode Usage	164
6-4. Scanning Documents	165
Application Function Settings	171
Chapter 7 When There is Trouble with the Scanner	181
7-1. Troubleshooting	182
7-2. Network Error List	183
IV Scanner Key Operator - Administrators only ..	187
Chapter 8 Key Operator Settings	189
8-1. Key Operator Mode	190
Usage Objectives for Key Operator Mode	190
Switching the Key Operator Mode	190
8-2. Scanner Initial Settings	193
8-3. List Print	206
V Appendix	207
Chapter 9 Appendix	209
9-1. Product Specifications	210
Scanner Functions	210
Network Functions	211
LED Status	212
9-2. Konica Minolta Scan Distributor	213
Setting Konica Minolta Scan Distributor	213
9-3. Index According to Item	215
9-4. Purpose Oriented Index	218

● Configuration of Manuals

The following User's Guides are available for this machine.

User's Guide (Copier)

This manual explains the operation of copy functions.

Please refer to this manual for instructions on the basic operations of the copy functions, including precautions on installation and handling, how to switch the power ON/OFF, paper supply, troubleshooting paper jams and so forth.

User's Guide (Network Setup and Scanner Operations) <this manual>

This manual explains the setup methods for the standard network functions and the operation of the scanner function.

Refer to this manual for instructions on how to use the network functions as well as Scan to E-Mail, Scan to FTP or Scan to PC (SMB) instructions.

User's Guide (Security Operations)

This manual explains the security function.

Refer to this manual to see how to use the Enhanced Security function and operation of the copier required to use this function.

User's Guide (Document Folder)

This manual explains the operation of the document folder.

Refer to this manual for instructions on how to use the document folder when the optional Hard Disk (HD-103 Type-A) is connected.

User's Guide (Internet Fax/Facsimile)

This manual explains the operation of Internet Fax/Facsimile.

Refer to this manual for instructions on how to use the Internet FAX when the optional Hard Disk (HD-103 Type-A) is connected, or instructions on how to use the Facsimile when the Fax Kit is connected.

User Software CD

The following two operation manuals are included on the User Software CD.

- Web Utilities Manual
- Address Book Manual

● About this Manual

This is the manual for the Network/Scanner functions of this Copier.

This manual assumes that the user is familiar with basic computer and copy machine operations. For detailed operations of Windows and Macintosh machines, please refer to the copier User's Guide.

Manual Composition

This manual is composed of the following five (5) volumes.

I Outline

This volume summarizes the machine's network/scanning functions and explains control panel operations.

II Network Setup - Administrators only

This volume explains how to proceed with network settings.

III Scanner

This volume explains how to use the network/scanner functions.

IV Scanner Key Operator - Administrators only

This volume explains the key operator settings that apply to this machine's scanner functions.

V Appendix

The appendices explain the product specifications, and include a list of built-in fonts, factory defaults, etc.

● Conventions Used in this Manual

Notation of each product

The following abbreviations are used in this manual:

- Konica Minolta
Digital Electronic Photo Copier : Copier
- Internal Network Controller : network controller
- HD-103 Type A Hard Disk Option : Optional Hard Disk
- Microsoft Windows 95 : Windows 95
- Microsoft Windows 98 : Windows 98
- Microsoft Windows Me : Windows Me
- Microsoft Windows NT 4.0 : Windows NT 4.0
- Microsoft Windows 2000 : Windows 2000
- Microsoft Windows XP : Windows XP
- Above OSs : Windows 95/98/Me
Windows NT 4.0/2000/XP
Windows 95/98/Me/NT 4.0/2000/XP

Using of this Manual


6-1. Selecting the Destination

The printer functions are set by displaying the printer settings screen.



- When the Adobe PostScript driver is selected, the document size cannot be set.


- 1 Touch the  (SCAN/SERVER) button on the control panel.
- 2 Touch the [E-Mail] key on the LCD screen.

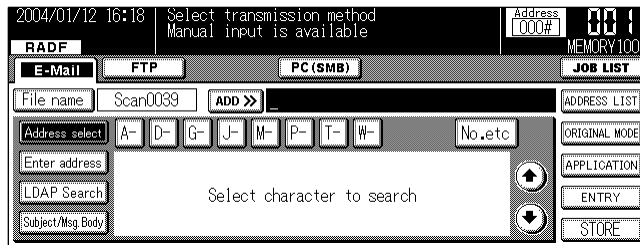

Important

- Always set irregular size paper in the copier's bypass tray.

- 3 Select [File] - [Import] - [Scan].

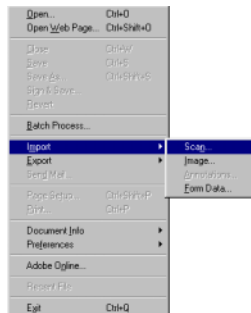

- 4 For [Drives:], select the CD-ROM drive. For folder, double-click the [English]Printer[Win9x_Me] folder.



- If there are any files that cannot be deleted, logon again.

This is the item title.

Displays restrictions of combined functions.

The screen displayed when an operation is executed.

This covers important information.

This displays buttons on the control panel.

This displays the keys on the LCD screen.

The names of windows, dialog boxes, and icons displayed on the computer screen are written in brackets [].


This covers items requiring attention or warnings and cautions.

Folder structure is written from the upper level to lower level.

● Folder Structure on the CD-ROM


The folders included on the accompanying CD-ROM are structured as shown below. This illustration will be helpful for locating specific folders or files.

- In this manual, folder names and file names are not preceded by the root directory.
- You may use the files in the English folder.

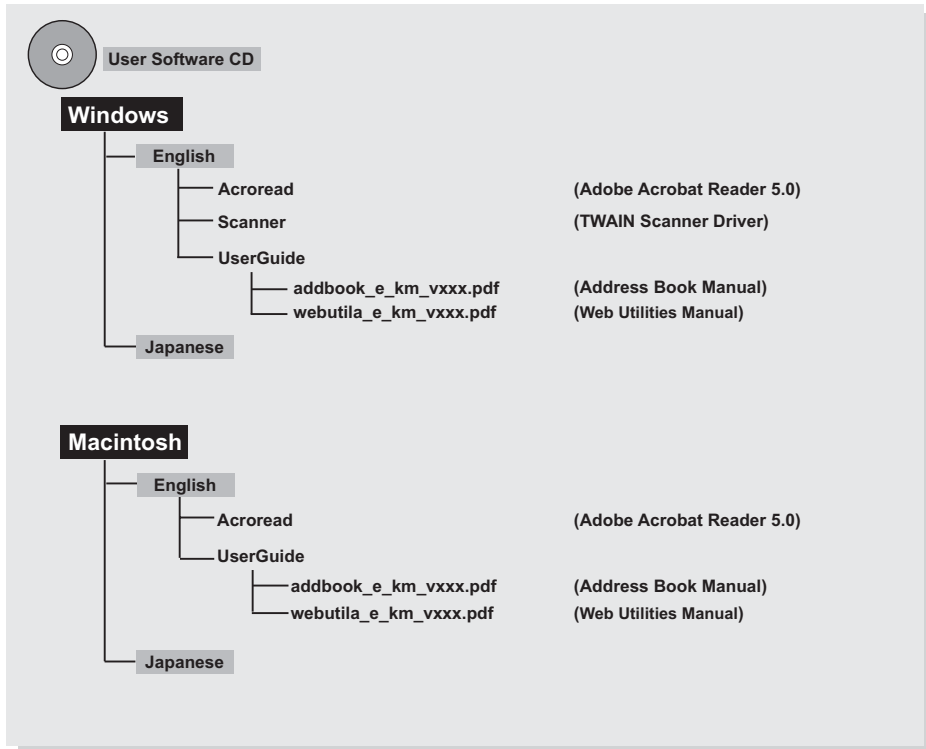

I Outline

This section summarizes the machine's network scanning functions and explains control panel operations.

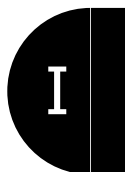

Chapter 1 Summary of Network Functions ..	3
Chapter 2 Before Use	9
Chapter 3 Inputting Text	15

Chapter 1 Summary of Network Functions


This chapter summarizes the copier network functions.

1-1. Network/Scanner Function Outline	4
1-2. Scanner Functions	5
1-3. Scan Data Output	6

1-1. Network/Scanner Function Outline

Connection with the Network

Please connect the UTP cable (Category 5 recommended) connected to the network to the Ethernet connector (RJ-45) of the machine.

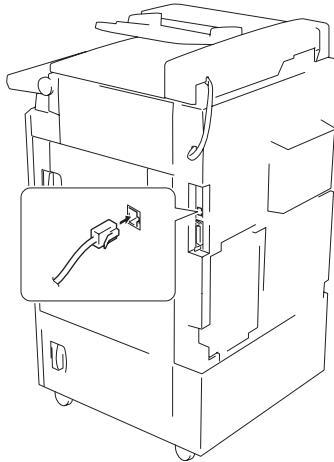

The settings required for connecting to the network depend on the environment of the network the machine is connected to, the OS of the computers making up the network, etc. Make the settings required to match the environment into which this system is being introduced.

Network Setting Method

There are two methods for specifying the machine's network settings.

■ Setting from the copier control panel

Load the setting screen from the copier's control panel and set the network functions.

MEMO

- For the method setting the network functions from the copier's control panel, refer to [Chapter 4 Setting from the Control Panel] ([Reference](#) ●●> Page 21).

■ Setting using the Web Utilities


This sets the network controller from a computer connected to the network using the Web Utilities.

MEMO

- For details on the Web Utilities, refer to [Chapter 5 Web Utility] ([Reference](#) ●●> Page 89).

1-2. Scanner Functions

Data (scanned data) scanned from the RADF or from the glass bed of the copier from which the original is scanned can be sent as an E-Mail attached file over the Internet (Scan to E-Mail). The data can be uploaded to the file server (Scan to FTP) or can be sent directly to a shared folder of PC as a file (Scan to PC (SMB)). The machine will store the complete file and send out the data in packets. For details on how to save to the copier's hard disk (Scan to Box), refer to the User's Guide (Document Folder).

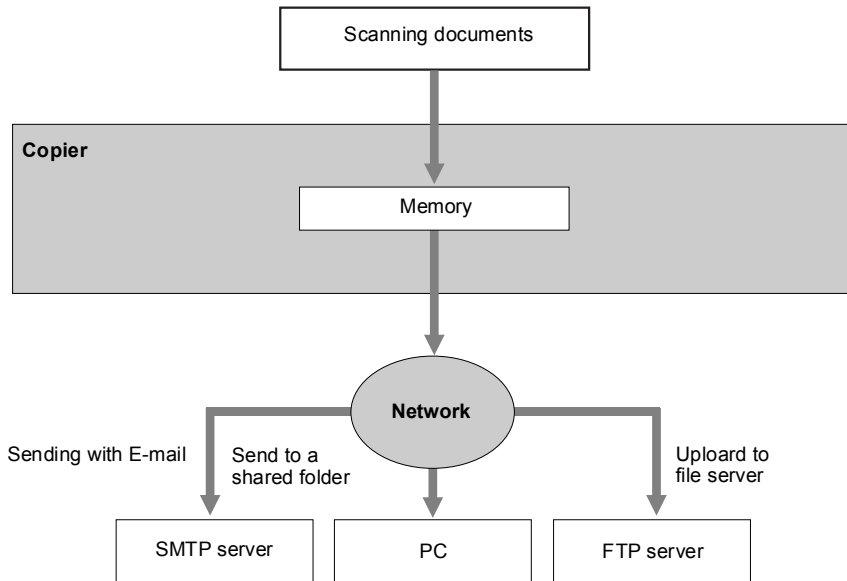

Before scanning documents, a destination for sending the scanned data needs to be selected from either of the sending options: (1) [E-Mail], (2) [FTP], or (3) [PC(SMB)]. Also, [Quality], [Magnification Ratio], [Resolution], [Continuous pages], [Erase outside of document] and other functions can be specified at the same time.



Important

- Do not send confidential documents from the copier in instances where there is apprehension that the scanned data could be stolen or illegally accessed.
- Depending the condition of the network/server, after the scanned data is sent from the copier, the scanned data may incur damaged. Always make sure to check that the scanned data has not been damaged.
- When using the scanner functions, connect with the computer via Ethernet. The scanner functions cannot be used from the parallel port.
- The copier must have the appropriate IP Address assigned and the TCP/IP network is enabled. For mode details on the network settings, ask the network administrator.

1-3. Scan Data Output


Scanned data can be selected and sent from three destinations, [Scan to E-Mail], [Scan to FTP] and [Scan to PC(SMB)].

This section explains these three types of destinations.

Scan to E-Mail

Scanned data can be sent to a specified E-Mail address. Input the address and file name on the copier's LCD screen and send as an E-Mail attached file.


For more information, refer to [6-1. Selecting the Destination] (Reference ●●● Page 126).

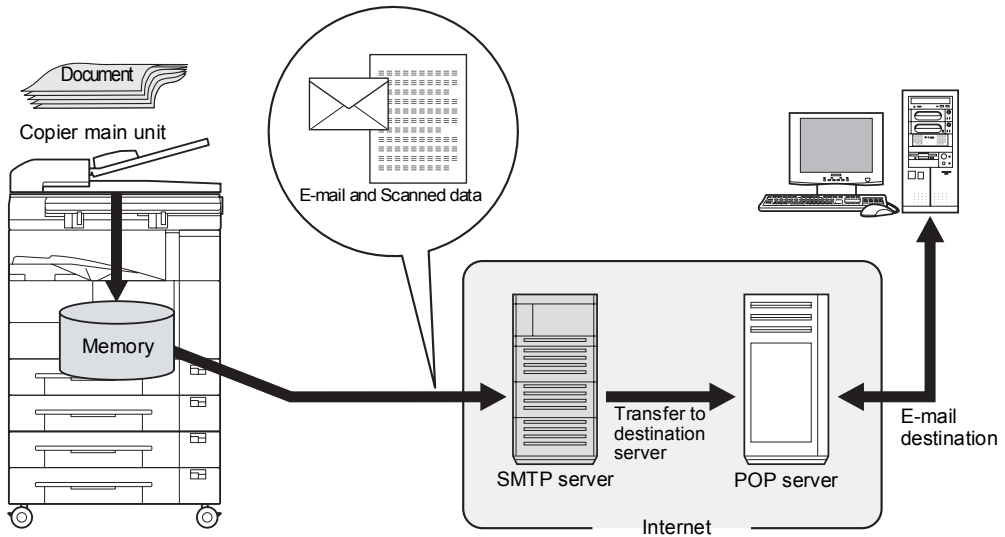

Scan to FTP

Scanned data can be uploaded to the specified FTP server. Input the FTP server address, login password, etc. on the copier's LCD screen.


For more information, refer to [6-1. Selecting the Destination] (Reference ●●● Page 126).

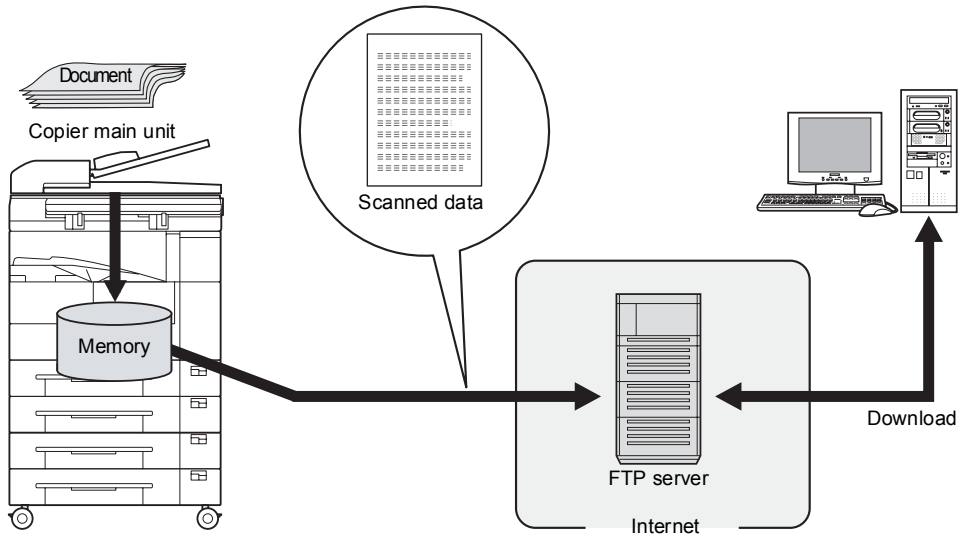

Send to a Shared Folder (Scan to PC (SMB))

Scanned data can be sent to a specified folder in a PC. Input the name and login password of the target PC from the copier's LCD screen.

For more information, refer to [6-1. Selecting the Destination] ([Reference](#) ●●● Page 126).

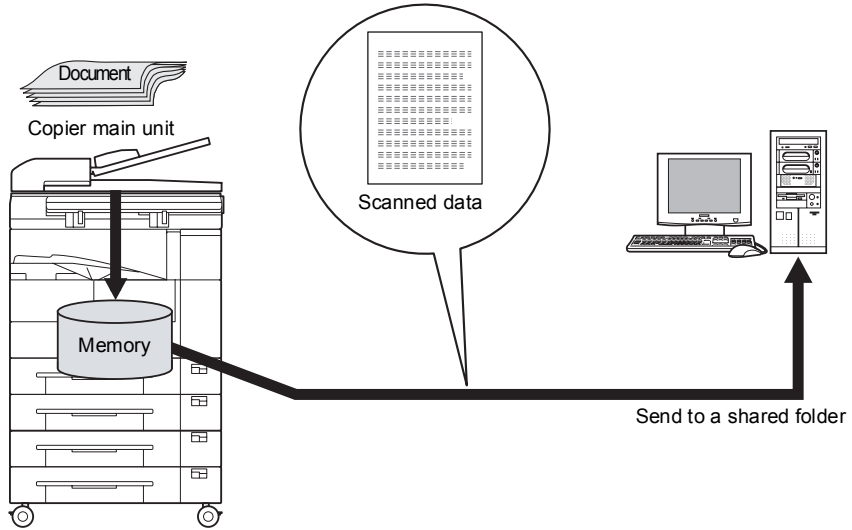


Chapter 2 Before Use

This chapter explains the names of the buttons on the copier's control panel and their functions, the contents of the LCD screen display, and the operations.

2-1. Control Panel Descriptions	10
2-2. LCD Screen	11

2-1. Control Panel Descriptions

The buttons on the control panel and the keys displayed on the LCD screen are used to make scanned settings. This section explains the names and functions of the buttons used for setting operations. For information on buttons not explained here, refer to the copier User's Guide.

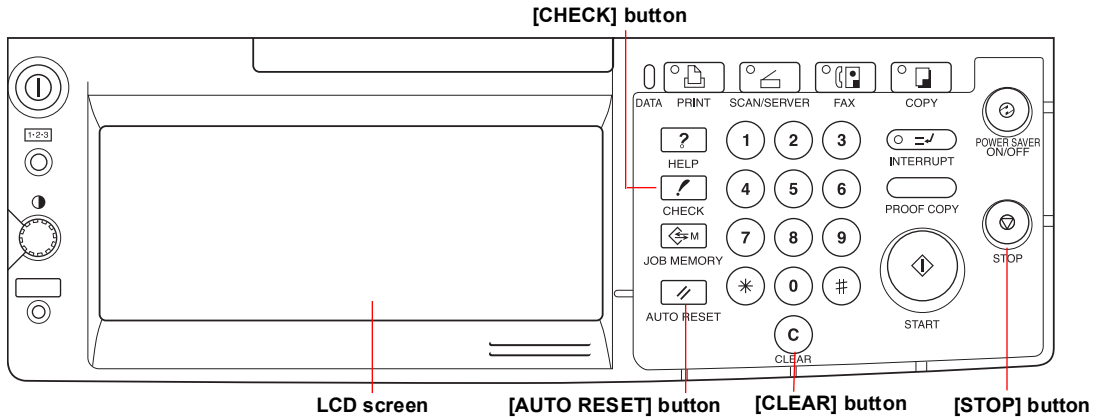

■ LCD screen

The LCD screen displays the print controller status, menus used for settings, selection items, and other such information. To make settings, touch the keys displayed on the screen.

■ (SCAN/SERVER) button

This switches between scanner/printer mode.

■ (START) button

This resumes the paused print processing or starts scanning.

■ (STOP) button

This stops scan processing.

■ (CLEAR) button

Clear the numeric characters which are entered on the control panel.

■ (CHECK) button

This displays the settings check screen.

■ (AUTO RESET) button

This resets settings to their defaults.

■ Data LED

This flashes green when the copier is receiving data and stays lit when data is accumulated in the copier.

■ Scanner/Printer LED

This lights up green for scanner/printer mode.

MEMO

- The LED lights up red when a warning or error message is displayed.

In this case, check the error information on the LCD screen and solve the error. For troubleshooting information, refer to the copier User's Guide.

2-2. LCD Screen



LCD Screen Operation Methods

Select items by touching the appropriate key displayed on the LCD screen.

 
Buttons common to all setting screens


When you touch [OK], the results of the operation are applied.

When you touch [CANCEL], the results of the operation are cancelled.

When you touch [] or [], the screen display is switched.


Basic screen

With the copier started, if you touch the  (SCAN/SERVER) button on the control panel, the [Scanner mode basic] screen is displayed on the LCD screen.

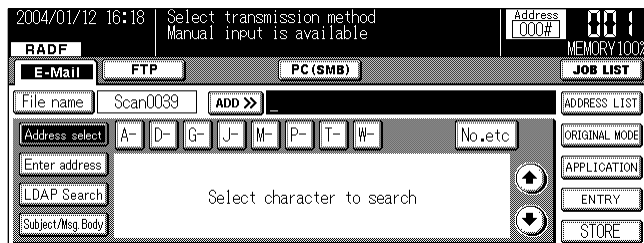

Job List Screen

When you touch the [JOB LIST] key on the [Scanner mode basic] screen, the [JOB LIST] screen is displayed on the LCD screen and the status of the current print job or fax job can be checked.

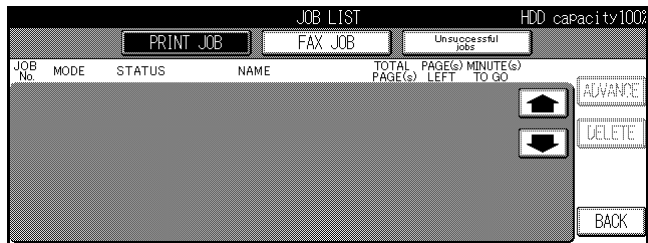

Touch the [PRINT JOB] or [FAX JOB] key to switch to the print job or fax job status display.

If there are no scheduled jobs, the column is blank.

When the copier power is turned off, these contents are erased.

Job List Contents

■ JOB No.

The job number (001 to 999) is displayed.

■ MODE

This displays the job processing mode (copier/printer/scanner).

■ STATUS

This displays the status of each job.

- Error : An error occurred.
- Outputting : The data is being copied/printed/scanned.
- No paper : There is no paper in the tray (copy/print mode).
- Stopped : Stopped, interrupted, waiting jam processing (each mode).
- Scanning : The document is being scanned.
- Waiting output : The job has been scheduled and is waiting for copy/print/scan output.
- Converting : The data is being converted.
- Processing : An E-mail message for "Scan to E-Mail" is being created.

■ NAME

Displays the JOB Name.

■ TOTAL PAGE(s)

This displays the number of output pages (1 to 999) set for the job.

■ PAGE(s) LEFT

This displays the number of pages left to be output (1 to 9999).

Number of pages left to be output = Number of pages (per copy) x Number of copies set

MEMO

- If the number of pages left to be output is greater than 9999, [*9999] is displayed.

■ MINUTE(s) TO GO

This displays the time remaining until job completion in minutes (1 to 999).

MEMO

- The displayed time is an approximation. The actual time may be somewhat longer or shorter than the time displayed.
- If the time remaining is greater than 999 minutes, [*999] is displayed.
- If the time remaining is less than 1 minute, [<1] is displayed.

Changing Job Order

- 1 Touch the [**▲**], [**▼**] key to select the job to be processed first.
- 2 Touch the [ADVANCE] key.
→ The selected job is displayed inverted and is moved to next after the job currently being output.

Job Deletion

- 1 Touch the [**▲**], [**▼**] key to select the job to delete.
- 2 Touch the [DELETE] key.
→ The selected job is deleted from the copier's memory.

Unsuccessful Job List

Touch the [Unsuccessful jobs] key to display a list of jobs that have yet to be completed. If there are any incomplete scanning jobs or printing jobs they will be displayed here. This data will be erased once the main power is turned off to the machine.



Unsuccessful Job List Data

- MODE
E-mail, FTP, Box, PC(SMB)
- File Name
- Factor
Cancelled, Auto Delete, etc.

When [Error N**] is displayed in this menu, please refer to Troubleshooting, Chapter 7.

MEMO

Chapter 3 Inputting Text

This chapter explains how to input text for names and descriptions.

3-1. Inputting Text	16
----------------------------------	-----------

3-1. Inputting Text

This section explains the operation method for inputting text, used for operations such as registering name and entering E-mail addresses.

Data Input Screen


Normal Input Screen

There are three kinds of Normal Input screen as below.


MEMO

- Touch the [↑] or [↓] key to switch to the input character type screen.
- Touch the [Normal] key on the keyboard input screen to switch to QWERTY input mode.


■ Uppercase letter input screen

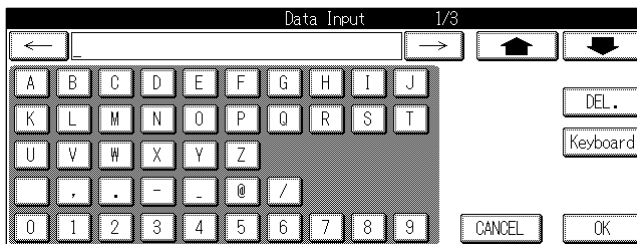

■ Lowercase letter input screen

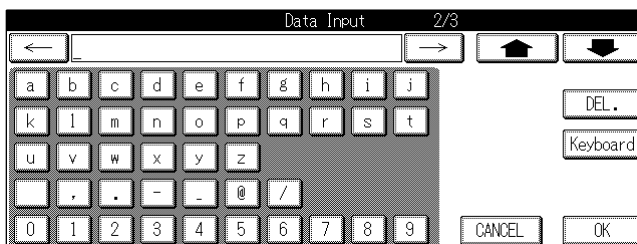

■ Number and symbol input screen

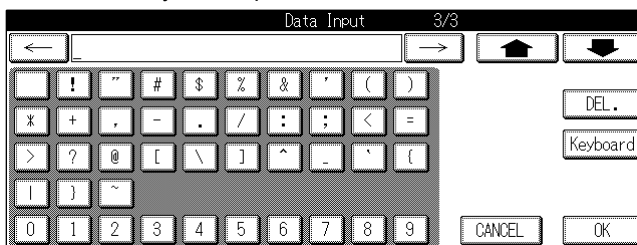

MEMO

- When you touch the [DEL.] key on the LCD screen, the input characters are deleted one at a time.


Keyboard Input Screen

There are two kinds of Keyboard screen as below.


MEMO

- Touch the [Keyboard] key on the normal input screen to switch to QWERTY input mode.

■ Lowercase letter input screen

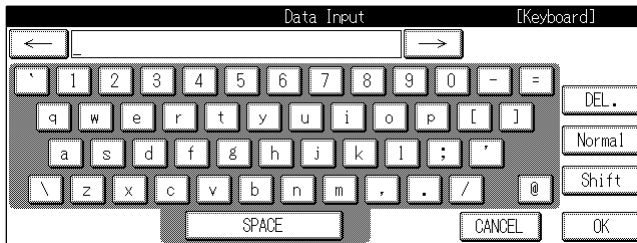

■ Uppercase letter input screen

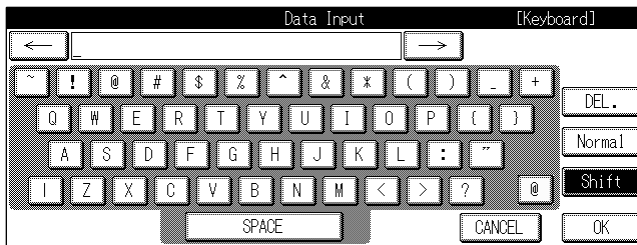

MEMO

- Touch the [Shift] key also to switch to the input character type screen.
- Touch the [Normal] key while in QWERTY input mode to revert to the previous input mode.

Inputting Text

- 1** Select a type of the [Data Input] screen.
- 2** Touch the letter keys on the LCD screen to input the letters.
- 3** Repeat the step 1 and 2.
- 4** Touch the [OK] on the LCD screen.

MEMO

- When you touch the [DEL.] key on the LCD screen, the input characters are deleted one at a time.

II Network Setup - Administrators only

This section explains how to proceed with network settings.

Chapter 4 Setting from the Control Panel ..	21
Chapter 5 Web Utility	89



MEMO

Chapter 4 Setting from the Control Panel













This chapter explains the method for making the network settings from the Copier's control panel.

4-1. Network Setup List.....	22
4-2. Method for Setting Network from Control Panel	23
4-3. TCP/IP Setup.....	27
4-4. NetWare Setup.....	33
4-5. AppleTalk Setup	41
4-6. IPP Setup	44
4-7. FTP Setup	54
4-8. E-Mail (SMTP) Setup	57
4-9. E-Mail (POP) Setup.....	63
4-10. E-Mail Extended Config	69
4-11. Device Setup.....	72
4-12. List Print.....	75
4-13. PC(SMB) Setup.....	76
4-14. LDAP Setup	77

4-1. Network Setup List

This explains the settings required when connecting the copier to the network.

Set each setting item to match the environment of the network to which the copier is connected. When changing the setting for each item, ask the network administrator.

- TCP/IP Setup ( >>> Page 27
This sets the items required for communicating with TCP/IP.
- NetWare Setup ( >>> Page 33)
This sets the items required for communicating with NetWare.
- AppleTalk Setup ( >>> Page 41)
This sets the items required for communicating with AppleTalk.
- IPP Setup ( >>> Page 44)
This sets the items required for IPP Printing.
- FTP Setup ( >>> Page 54)
This sets the items for sending scanned images from the Copier to the FTP server.
- E-Mail (SMTP) Setup ( >>> Page 57)
This sets the items required for sending scanned images from the Copier as E-mail attachments.
- E-Mail (POP) Setup ( >>> Page 63)
This sets the items required to use the POP server.
- E-Mail Extended Config ( >>> Page 69)
This is used to set the Reception/Disposition notifications for E-mail when the Internet fax is used.
- Device Setup ( >>> Page 72)
This sets the interface items.
- List Print ( >>> Page 75)
This prints out the setup list.
- PC(SMB) Setup ( >>> Page 76)
Sets the items required for sending scanned data to a shared folder of PC.
- LDAP Setup ( >>> Page 77)
Sets the items required for accessing the LDAP server to acquire a mail address for [Scan to E-Mail].


4-2. Method for Setting Network from Control Panel


This explains how to set the network connection using the control panel and LCD screen.



Important


- After the network settings have been changed, a message "To valid the data, please turn OFF main SW and ON" may appear on the touch panel. If this message is displayed, be sure to switch the main power for the copier OFF and wait at least 10 seconds, then turn it back ON.

1 Press the  (COPY) button on the control panel.

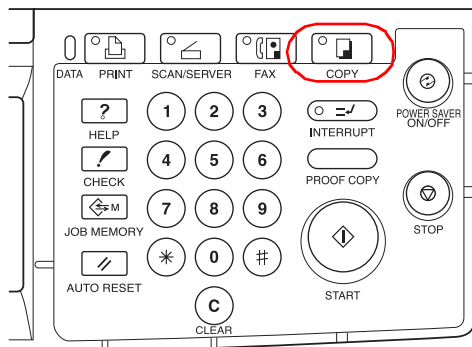


→ The [Copy basic mode] screen is displayed on the LCD screen.

2 Press the  (HELP) button on the control panel, then press the [Key Ope mode] key.

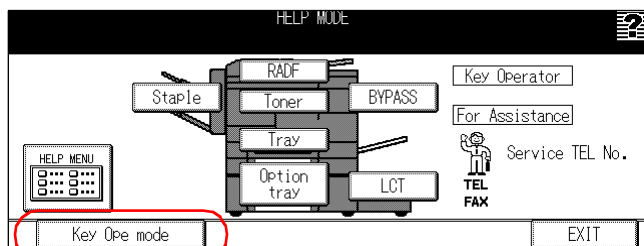

→ The [HELP MODE] screen is displayed on the LCD screen.

- 3** If a password is set, the key operator's password input screen is displayed. Touch the [Password] key and input the password in the [Data Input] screen. Then, touch the [OK] key or input the password (up to 8 digits) using the ten-keys.

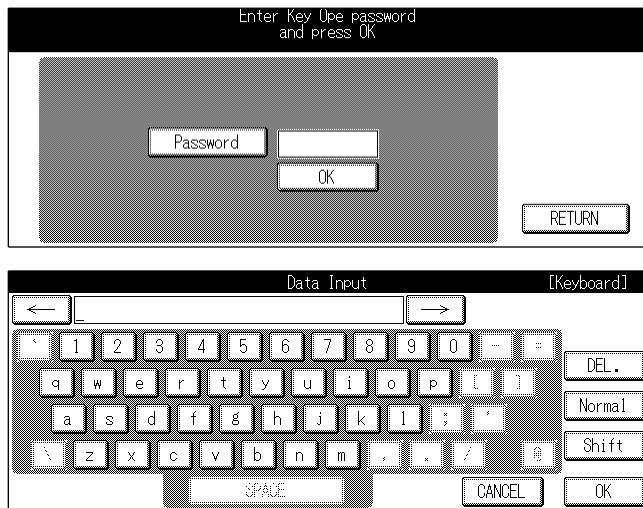


- 4** Touch the [OK] key on the [Password Input] screen.

MEMO

- The Key operator password is set by your service representative. If the key operator password has been set, the key operator should keep the password safe on his/her own responsibility.
- For the Key operator password, please ask your service representative.
- If the [Enhanced Security] is used, the password should be 8 digits.

- 5** Touch the [OK] key.



→ The [Key operator mode] screen is displayed on the LCD screen.

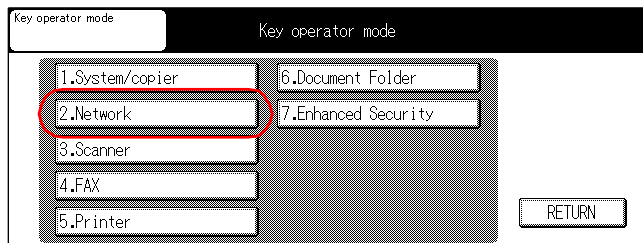







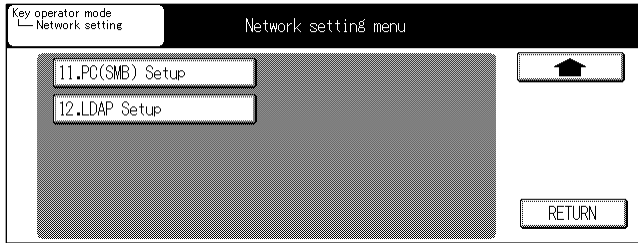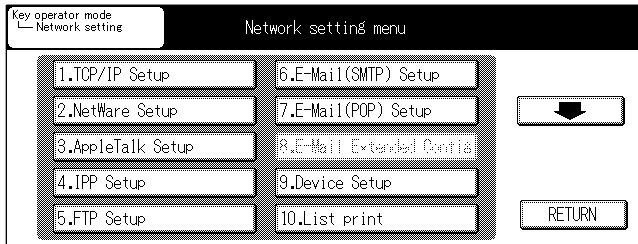





MEMO

- This screen may not be displayed, depending on which options are set for [4.FAX], [5.Printer] and [6.Document Folder].

6 Touch the [2.Network] key.



The following settings are made on the [Network setting] screen.

- TCP/IP Setup  Page 27
- NetWare Setup  Page 33
- AppleTalk Setup  Page 41
- IPP Setup  Page 44
- FTP Setup  Page 54
- E-Mail (SMTP) Setup  Page 57
- E-Mail (POP) Setup  Page 63
- E-Mail Extended Config  Page 69
- Device Setup  Page 72
- List Print  Page 75
- PC (SMB) Setup  Page 76
- LDAP Setup  Page 77

MEMO

- [8. E-Mail Extended Config] is enabled only when the optional hard disk is connected.

7 Select the item to set by touching it.

8 Set each item and when setting of all the items is complete, touch the [OK] key.

→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

IP Address Settings

There are two methods for setting the IP address etc. for the network controller.

■ Assigning the IP address automatically with the DHCP server

When managing IP addresses with a DHCP server on the network, there is no need to set a unique IP address for the network controller. The IP address can be assigned automatically from the DHCP server.

■ Setting a unique IP address for the network controller

When setting individual IP addresses for equipment connected to the network, the IP address assigned to the network controller is manually input. In this case, it is also necessary to set the sub-net mask and other information with manual input.


MEMO

- For details on management methods for network IP addresses etc., check with your network administrator.
- For details on making network settings manually, check with the network administrator.
- When making network settings manually, in addition to the method explained here using the control panel, you can also use a web utility. For details, refer to the Web Utilities User's Guide.


4-3. TCP/IP Setup

The information required for using the print controller in the TCP/IP environment is set.

1 Touch the [1.TCP/IP Setup] key on [Network setting] screen.

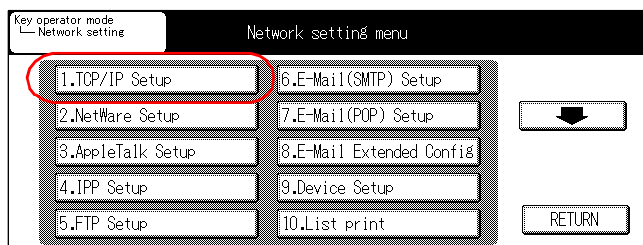

→ The [TCP/IP Setup] screen is displayed.

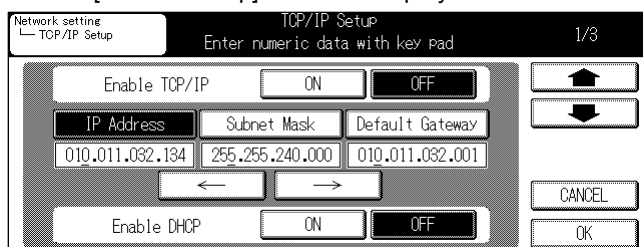

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).

Use [TCP/IP] screen to access the following:

- [TCP/IP] screen 1/3
 - Enable TCP/IP [Reference](#) >>> Page 28
 - IP Address [Reference](#) >>> Page 28
 - Subnet Mask [Reference](#) >>> Page 28
 - Default Gateway [Reference](#) >>> Page 29
 - Enable DHCP [Reference](#) >>> Page 29
- [TCP/IP] screen 2/3
 - Preferred DNS Server [Reference](#) >>> Page 30
 - Other DNS Server [Reference](#) >>> Page 30
 - RAW Port Number [Reference](#) >>> Page 31
- [TCP/IP] screen 3/3
 - DNS Host Name [Reference](#) >>> Page 32
 - DNS Domain Name [Reference](#) >>> Page 32

MEMO

- Use [] and [] to switch the screen.


2 Touch [OK] key.

→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

1 Access the [TCP/IP Setup] screen (1/3) from the [Network setting] screen.

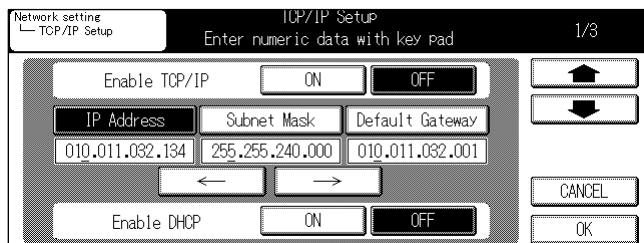

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).
- Use [] and [] to switch the screen.

Enable TCP/IP

This sets whether to enable TCP/IP.

- 1 To disable TCP/IP settings, touch the [OFF] key on the LCD Screen. To enable them touch the [ON] key.

IP Address

The IP Address is registered on the Network Controller.

- 1 Touch the [IP Address] key.
- 2 Use the keys on the control panel to input the IP Address.
Specify four sets of three digit numbers, separated by the periods as the IP Address.
When you touch [] or [] the cursor moves to the left and right.

MEMO

- When using a DHCP server for IP Address management, the IP Address acquired with DHCP is displayed.

Subnet Mask

This inputs the subnet mask for the machine's network.

- 1 Touch the [Subnet Mask] key.
- 2 Use the keys on the control panel to input the subnet mask.
Specify four sets of three digit numbers, separated by the periods as the subnet mask.
When you touch [] or [] the cursor moves to the left and right.

MEMO

- When using a DHCP server for subnet mask management, the subnet mask acquired with DHCP is displayed.

Default Gateway

This inputs the gateway for the machine's network.

1 Touch the [Default Gateway] key.

2 Use the keys on the control panel to input the default gateway address.

Specify four sets of three digit numbers, separated by the periods as the default gateway address.

When you touch [←] or [→] the cursor moves to the left and right.

MEMO

- When using a DHCP server for default gateway address management, the default gateway address acquired with DHCP is displayed.

Enable DHCP

This sets whether or not to automatically acquire IP Addresses and other such information from a DHCP (Dynamic Host Configuration Protocol) server.

1 Touch the [ON] or [OFF] key on the [Enable DHCP Setting].


[ON] :When acquiring information from a DHCP server

[OFF] :When not acquiring information from a DHCP Server

MEMO

- The factory default setting is [ON].

1 Use [**↑**] or [**↓**] to access [TCP/IP Setup] screen (2/3) from screen (1/3).

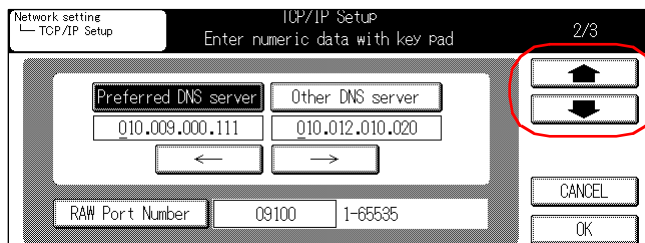

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Preferred DNS Server

Sets the address for the preferred DNS Server

- 1 Touch the [Preferred DNS server] key.
- 2 Use the keys on the control panel to input the DNS Address.
Specify four sets of three digit numbers, separated by the periods as the preferred DNS server.
When you touch [**←**] or [**→**] the cursor moves to the left and right.

Other DNS Server

Sets the address for the other DNS Server

- 1 Touch the [Other DNS server] key.
Specify four sets of three digit numbers, separated by the periods as the alternate DNS server.
When you touch [**←**] or [**→**] the cursor moves to the left and right.
- 2 Use the keys on the control panel to input the DNS Address.

RAW Port Number

Allows you to assign a Port Code.




Important

- Changing the Port Code in an improper manner can result in damage to the network. Do not change the Port Code unless it is necessary to do so.

- 1** Touch the [RAW Port Number] key.
- 2** Using the keys on the control panel, input a Port Code number between 1-65535.

1 Use the [↑] or [↓] to access [TCP/IP Setup] screen (3/3) from the screen (2/3).

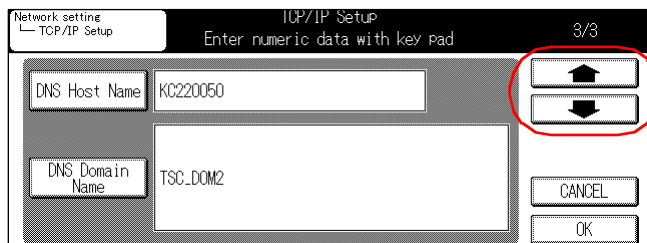

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).

DNS Host Name

This sets the DNS Host name.

- 1** Touch the [DNS Host Name] key.
- 2** Using the data input screen, input the DNS Host name.

DNS Domain Name

This sets the DNS Domain name.

- 1** Touch the [DNS Domain Name] key.
- 2** Using the data input screen, input the DNS Domain name.


MEMO

- For details on character input, refer to [3-1.Inputting Text] ([Reference](#) >>> Page 16).


4-4. NetWare Setup

The information required for using the print controller in the NetWare network environment is set.

1 Touch the [2.NetWare Setup] key on [Network setting] screen.

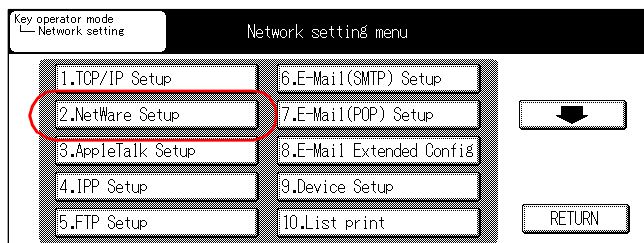

→ The [NetWare Setup] screen is displayed.

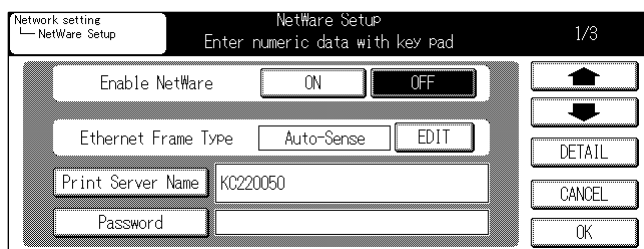



MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ●● Page 23).

Use [NetWare Setup] screen to access the following:

- [NetWare Setup] screen 1/3
 - Enable NetWare [Reference](#) ●● Page 35
 - Ethernet Frame Type [Reference](#) ●● Page 35
 - Print Server Name [Reference](#) ●● Page 35
 - Print Server Password [Reference](#) ●● Page 36
- [NetWare Setup] screen 2/3
 - File Server [Reference](#) ●● Page 37
 - NDS Context [Reference](#) ●● Page 37
 - NDS Tree [Reference](#) ●● Page 38
- [NetWare Setup] screen 3/3
 - Operating Mode [Reference](#) ●● Page 39
 - Printer Number [Reference](#) ●● Page 39
- [NetWare Setup : Detail] screen
 - Print Queue Scan Rate [Reference](#) ●● Page 40
 - Disable Bindery [Reference](#) ●● Page 40

MEMO

- Use [>] and [] to switch the screen.
- For details on NetWare settings, refer to the NetWare User's Guide.

2 Touch [OK] key.

→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

NetWare setup (Part 1 of 3)

1 Access to [NetWare Setup] screen (1/3) from [Network setting] screen.
MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).
- Use [] and [] to switch the screen.

Enable NetWare

This sets whether or not to enable the machine's NetWare capabilities in the network environment.

1 To disable NetWare settings, touch the [OFF] key. To enable them touch the [ON] key.

[ON] :Used in the NetWare environment

[OFF] :Not used in the NetWare environment

Ethernet Frame Type

This sets the frame type used by the machine.

1 Touch the [EDIT] key on the [Ethernet Frame Type] screen.

[EDIT] :Choose from below

[Auto-Sense]→[802.2]→[802.3]→[Ethernet II]→[802.2 SNMP]→[Auto-Sense]

MEMO

- The factory default setting is [Auto-Sense].

2 Touch [OK] key.**Print Server Name**

This sets the Print Server name assigned to the Network Controller.

1 Touch the [Print Server Name] key.**2 Using the [Data Input] screen, input the Print Server name.****3 Touch [OK] key.**

→ The screen will return to [NetWare Setup].


Print Server Password

This sets the password necessary for the Print Server to login to the File Server.

- 1** Touch the [Password] key.
- 2** Using the [Data Input] screen, input the password.
- 3** Touch [OK] key.
→ The screen will return to [NetWare Setup].

NetWare setup (Part 2 of 3)

1 Use [↑] or [↓] to access to [NetWare Setup] screen (2/3) from screen (1/3).

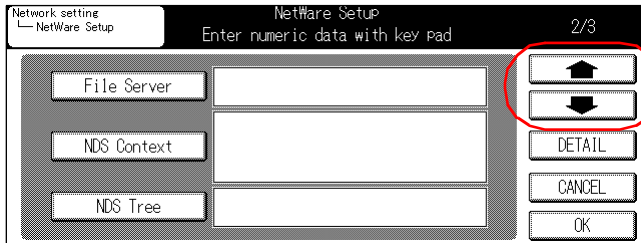

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).

File Server Name

This sets the File Server name that the Print Server will log in with.

- 1** Touch the [File Server] key.
- 2** Using the [Data Input] screen, input the file sever name.
- 3** Touch [OK] key.
→ The screen will return to [NetWare Setup].

NDS Context Name

This sets the NDS (Novell Directory Service) Name.

- 1** Touch the [NDS Context] key.
- 2** Using the [Data Input] screen, input the NDS Context name.
- 3** Touch [OK] key.
→ The screen will return to [NetWare Setup].


NDS Tree

This sets the NDS Tree Name.

- 1** Touch the [NDS Tree] key.
- 2** Using the [Data Input] screen, input the NDS Tree name.
- 3** Touch [OK] key.
→ The screen will return to [NetWare Setup].

NetWare setup (Part 3 of 3)

1 Use the [↑] or [↓] to access [NetWare Setup] screen (3/3) from screen (2/3).

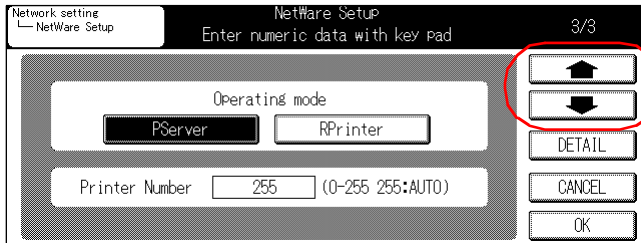**MEMO**

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Operating Mode

This sets up the Operation Mode.

1 Touch the [PServer] or [RPrinter] key.

[PServer] :Select when using the PServer mode.

[RPrinter] :Select when using the RPrinter mode.

Printer Number

This sets the Printer Number.

1 Using the control panel, enter the Printer Number between 0 and 255.

Perform the detailed setup for NetWare

1 Touch the [DETAIL] key on the [NetWare Setup] screen.

→ [NetWare Setup :Detail] Screen will be displayed.

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ▶▶ Page 23).

Print Queue Scan Rate

This sets the time interval for searching the Print Queue.

1 Using the control panel, enter the time internal between 1 and 65535.

Disable Bindery

This sets whether or not to enable bindery service for NetWare 4.x or later.

1 Touch the [YES] or [NO] keys on the [Disable Bindery] menu.

- [YES] :Disables Bindery Service
- [NO] :Enables Bindery Service

2 Touch [OK] key.

→ The screen will return to [NetWare Setup].


MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.


4-5. AppleTalk Setup

Set the information required for using the machine in the AppleTalk network environment.

1 Touch the [3.AppleTalk Setup] key on [Network setting] screen.

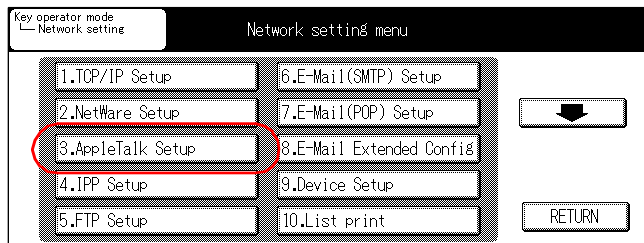

→ The [AppleTalk Setup] screen is displayed.

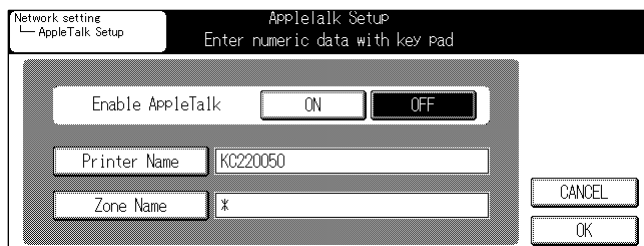

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ●●● Page 23).

Use [AppleTalk Setup] screen to access the following:

- Enable AppleTalk [Reference](#) ●●● Page 42
- Printer Name [Reference](#) ●●● Page 42
- Zone Name [Reference](#) ●●● Page 43

2 Touch [OK] key.


→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

AppleTalk setup

1 Access the [AppleTalk Setup] screen from [Network setting] screen.

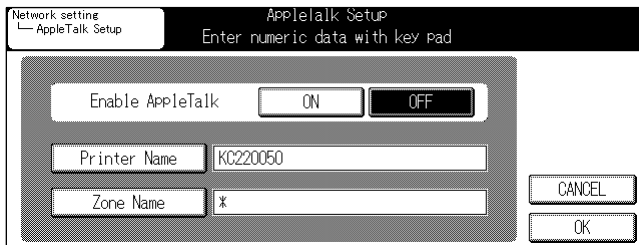

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ●●● Page 23).

Enable AppleTalk

This sets whether or not to enable AppleTalk.

1 On the [AppleTalk Setup] screen, touch either the [ON] or [OFF] key.

[ON] :Enables AppleTalk

[OFF] :Disables AppleTalk

MEMO

- The factory default setting is [ON].

Printer Name

This sets the Machine's name to be displayed on the AppleTalk network.

1 Touch the [Printer Name] key.

2 Using the data input screen, input the Print Name.

3 Touch [OK] key.

MEMO

- The Printer Name should not exceed 32 characters.
- For details on character input, refer to [3-1.Inputting Text] ([Reference](#) ●●● Page 16).

Zone Name

This specifies the zone that the print controller is connected to.

- 1 Touch the [Zone Name] key.
- 2 Using the data input screen, input the Print Name.
- 3 Touch [OK] key.


MEMO

- The Zone Name should not exceed 32 characters.
- For details on character input, refer to [3-1.Inputting Text] ([Reference](#) ▶▶▶ Page 16).
- If there is no zone (when using a network with no shielded router), leave this column blank.


4-6. IPP Setup

This sets the IPP features.

1 Touch the [4.IPP Setup] key on the [Network setting] screen.

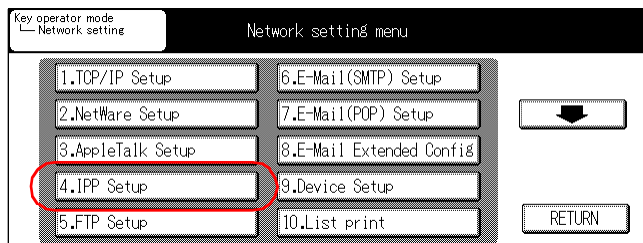

→ The [IPP Setup] screen will be displayed.

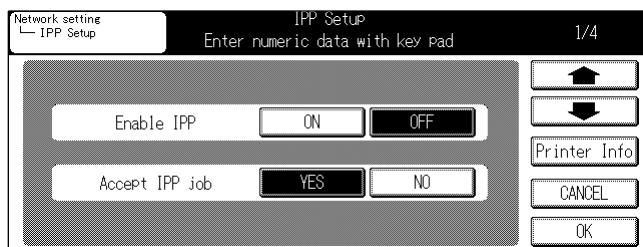

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ▶▶ Page 23).

Use [IPP Setup] screen to access the following:

- [IPP Setup] screen 1/4
 - Enable IPP [Reference](#) ▶▶ Page 46
 - Accept IPP Job [Reference](#) ▶▶ Page 46
- [IPP Setup] screen 2/4
 - Message from Operator [Reference](#) ▶▶ Page 47
 - Job Size [Reference](#) ▶▶ Page 47
- [IPP Setup] screen 3/4
 - Operation Supported [Reference](#) ▶▶ Page 48
- [IPP Setup] screen 4/4
 - Supported Document Format [Reference](#) ▶▶ Page 49
- [IPP Setup] Printer information screen
 - Printer Related Information [Reference](#) ▶▶ Page 53

MEMO

- Use [] and [] to switch the screen.

2 Touch [OK] key.


→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

IPP setup (Part 1 of 4)

1 Access to [IPP Setup] screen (1/4) from [Network setting] screen.

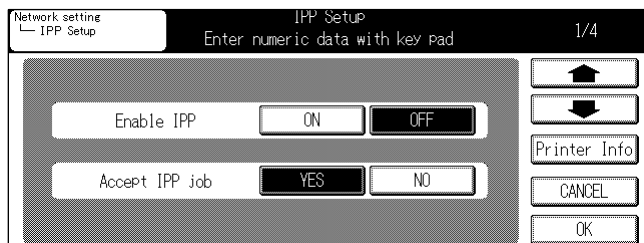

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).
- Use [] and [] to switch the screen.

Enable IPP

This setting activates and deactivates IPP.

1 Touch either the [ON] or [OFF] key on the [Enable IPP] screen.

[ON] :Enables IPP

[OFF] :Disables IPP

Accept IPP Job

1 Touch either the [YES] or [NO] key on the [Accept IPP job] screen.

[YES] :Sets the machine to accept IPP job


[NO] :Sets the machine to decline IPP job

MEMO

- The factory default setting is [YES].

IPP setup (Part 2 of 4)

1 Use [**▲**] or [**▼**] to access to [IPP Setup] screen (2/4) from screen (1/4).

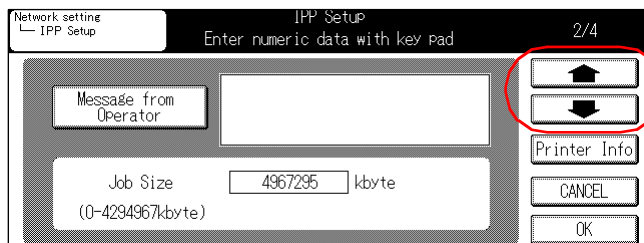**MEMO**

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Message from Operator

This sets the operator message.

- 1 Touch the [Message from Operator] key.
- 2 Using the [Data Input] screen, input the message.
- 3 Touch the [OK] key.

Job Size

This sets the job size.


- 1 Using the control panel, enter a value between 0 and 4294967.

MEMO

- The factory default setting is [4294967].

IPP setup (Part 3 of 4)

1 Use [**▲**] or [**▼**] to access to [IPP Setup] screen (3/4) from screen (2/4).

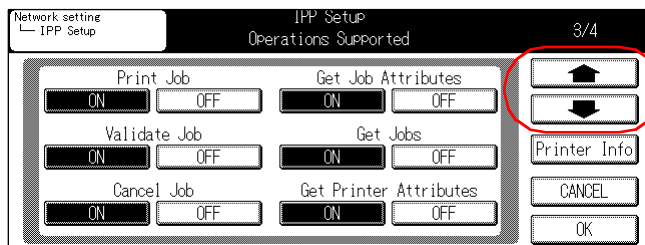

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).

Operation Support Information


This sets operation support information.

1 Activate/Deactivate each task by touching the [ON] or [OFF] key.

Print Job
Validate Job
Cancel Job
Get Job Attributes
Get Jobs
Get Printer Attributes

IPP setup (Part 4 of 4)

1 Use [**▲**] or [**▼**] to access to [IPP Setup] screen (4/4) from screen (3/4).

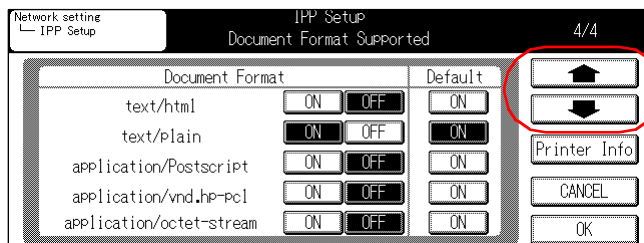**MEMO**

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).

Supported Document Format

This sets the types of documents supported.

1 [Default] selection menu

Touch the [ON] key under the [Default] category for the document formats to be supported by default.

MEMO

- Selecting [ON] in the [Default] selection menu will automatically set the format [ON] in the [Document Format] menu.

2 [Document Format] menu


This selects which document formats are to be supported outside of default settings.

[ON] :Supports the format


[OFF] :Does not support the format

Printer Related Information

1 Touch [Printer Info] on the [IPP Setup] screen.

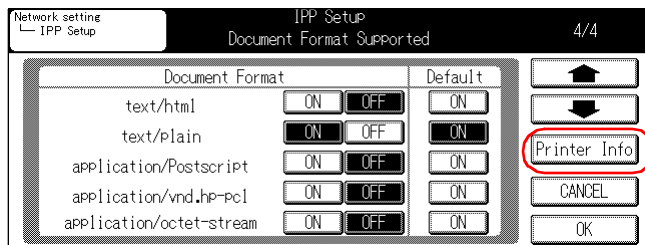

→ The [Printer Information] screen will be displayed.

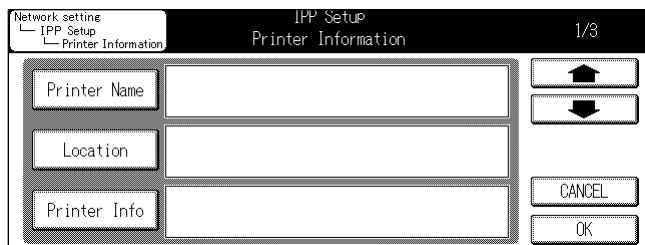

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ▶▶ Page 23).

Use this screen to access the following:

Printer Name	Reference ▶▶ Page 51
Location	Reference ▶▶ Page 51
Printer Info	Reference ▶▶ Page 51
More Printer Information	Reference ▶▶ Page 52
Printer Driver Installer	Reference ▶▶ Page 52
Printer Model	Reference ▶▶ Page 52
Printer Manufacture	Reference ▶▶ Page 53

MEMO

- Use [] and [] to switch the screen.

2 Touch [OK] key.

→ The screen will return to [IPP Setup] screen.

MEMO

- Touching [CANCEL] will return you to the [IPP Setup] screen without any of the changes taking effect.

Printer Information (Part 1 of 3)

1 Access to [Printer Information] screen (1/3) from [IPP Setup] screen.

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).
- Use [] and [] to switch the screen.

Printer Name

- 1 Touch the [Printer Name] key.
- 2 Use the [Data Input] screen to enter the printer name.
- 3 Touch the [OK] key.

Location


- 1 Touch the [Location] key.
- 2 Use the [Data Input] screen to enter the printer location.
- 3 Touch the [OK] key.

Printer Information

- 1 Touch the [Printer Info] key.
- 2 Use the [Data Input] screen to enter the printer information.
- 3 Touch the [OK] key.

Printer Information (Part 2 of 3)

1 Use [**▲**] or [**▼**] to access to [Printer Information] screen (2/3) from screen (1/3).

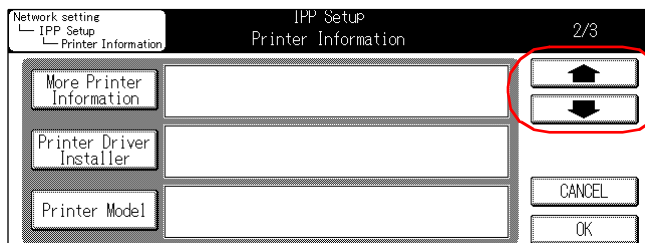

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ●▶ Page 23).

More Printer Information

- 1** Touch the [More Printer Information] key.
- 2** Use the [Data Input] screen to enter the printer details.
- 3** Touch the [OK] key.

Printer Driver Installer


- 1** Touch the [Printer Driver Installer] key.
- 2** Use the [Data Input] screen to enter the location of the printer driver.
- 3** Touch the [OK] key.

Printer Model

- 1** Touch the [Printer Model] key.
- 2** Use [Data Input] screen to enter the printer model information.
- 3** Touch the [OK] key.

Printer Information (Part 3 of 3)

1 Use [**↑**] or [**↓**] to access to [Printer Information] screen (3/3) from screen (2/3).

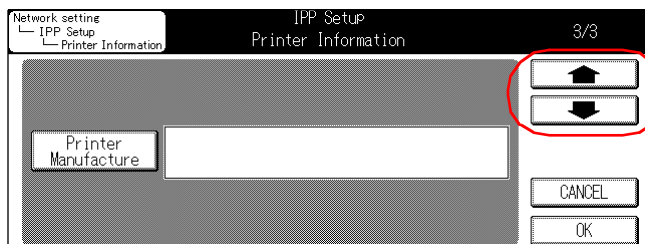**MEMO**

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ●●● Page 23).


Printer Manufacturer

- 1** Touch the [Printer Manufacturer] key.
- 2** Use the [Data Input] screen to enter the printer manufacturer information.
- 3** Touch the [OK] key.


4-7. FTP Setup

Makes settings required for uploaded scanned data to an FTP server.

1 Touch the [5.FTP Setup] key on [Network setting] screen on the LCD screen.

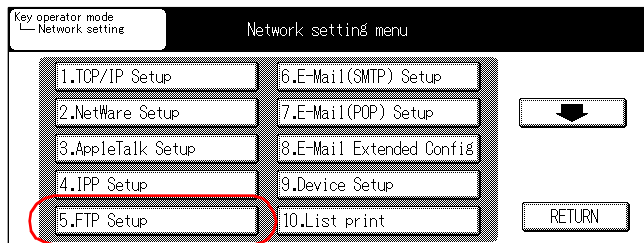

→ The [FTP Setup] screen is displayed.

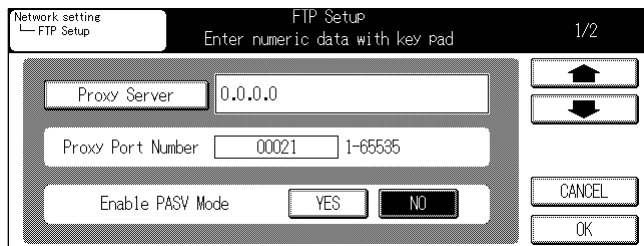

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ▶▶ Page 23).
- For details on the scanner function, refer to [Chapter 5 Web Utility] ([Reference](#) ▶▶ Page 89).

The following settings are made on this screen.

- [FTP Setup] screen 1/2
 - Proxy Server [Reference](#) ▶▶ Page 55
 - Proxy Port Number [Reference](#) ▶▶ Page 55
 - Enable PASV Mode [Reference](#) ▶▶ Page 55
- [FTP Setup] screen 2/2
 - FTP Client Port No. [Reference](#) ▶▶ Page 56
 - Connection Timeout [Reference](#) ▶▶ Page 56

MEMO

- Use [] and [] to switch the screen.

2 Touch [OK] key.

→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

FTP Setup (Part 1 of 2)

1 Access to [FTP Setup] screen (1/2) from [Network setting] screen.
MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).
- Use [] and [] to switch the screen.

Proxy Server

This sets the Proxy Server for use with communications with the FTP Server.

- 1 Touch the [Proxy Server] key.
- 2 Using [Data Input] screen, enter the Proxy Server number.

MEMO

- Set the proxy server number when communications need to be performed using the proxy server.
The format for the supported proxy server is "USER user@hostname."

Proxy Port Number

This specifies a Proxy Port number.


- 1 Using the control panel, enter the Proxy Server Port number between 1 and 65535.

Enable PASV Mode

This sets whether to enable or disable PASV Mode.

- 1 Touch either the [YES] or [NO] key on the [Enable PASV Mode] menu.
[YES] :To enable PASV mode
[NO] :To disable PASV mode

1 Use [**↑**] or [**↓**] to access to [FTP Setup] screen (2/2) from screen (1/2).

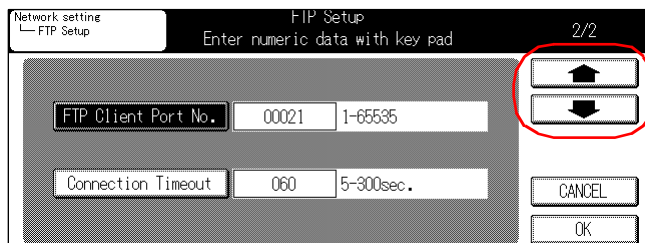

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

FTP Client Port Number

This specifies a port number to use for communicating with the FTP server.



- Changing the Port Code in an improper manner can result in damage to the network. Do not change the Port Code unless it is necessary to do so.

1 Touch the [FTP Client Port No.] key.

2 Using the control panel, enter a number between 1 and 65535.

MEMO

- The factory default setting is [21].

Connection Timeout

This function automatically stops the upload if communications bog down during data uploading to the FTP server and a certain period of time elapses.

[Connction Timeout] sets this time value.

1 Touch the [Connection Timeout] key.

2 Using the control panel, enter the number of seconds for timeout between 5 and 300.


MEMO

- The factory default setting is [60] seconds.


4-8. E-Mail (SMTP) Setup

This sets the information for the SMTP (Simple Mail Transfer Protocol) necessary for sending images as E-mail attachments with the scanner functions. The POP before SMTP feature (which confirms SMTP before sending) can also be set from this menu.

1 Touch the [6.E-Mail (SMTP) Setup] key on [Network setting] screen.

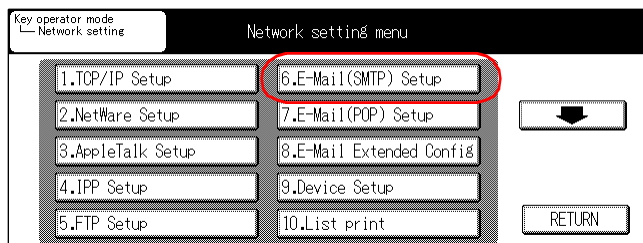

→ The [E-Mail (SMTP) Setup] screen is displayed.

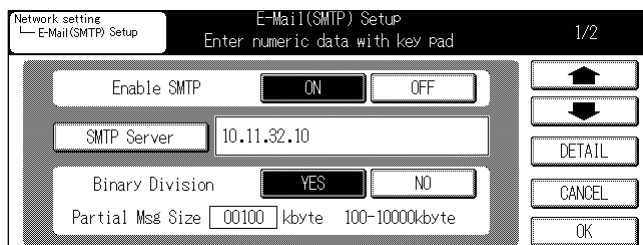

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) (▶▶ Page 23).

Use this screen to access the following:

- [E-Mail (SMTP) Setup] screen 1/2
 - Enable SMTP [Reference](#) (▶▶ Page 58)
 - SMTP Server [Reference](#) (▶▶ Page 58)
 - Binary Division [Reference](#) (▶▶ Page 59)
- [E-Mail (SMTP) Setup] screen 2/2
 - Connection Timeout [Reference](#) (▶▶ Page 60)
 - Maximum Msg Size [Reference](#) (▶▶ Page 60)
- [E-Mail (SMTP) Setup : Detail] screen
 - SMTP Port Number [Reference](#) (▶▶ Page 61)
 - POP before SMTP [Reference](#) (▶▶ Page 62)

MEMO

- Use [] and [] to switch screens.


2 Touch [OK] key.

→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

1 Access to [E-Mail (SMTP) Setup] screen (1/2) from [Network Setting] screen.

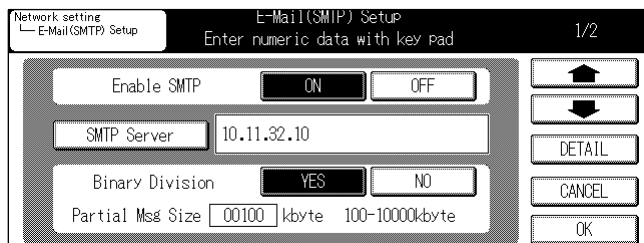

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).
- Use [] and [] to switch screens.

Enable SMTP

This sets whether or not to enable the machine's E-Mail capabilities.

1 Touch either the [ON] or [OFF] key on the [Enable SMTP] menu.

[ON] :Enables the E-Mail capability

[OFF] :Disables the E-Mail capability

SMTP Server

This sets the name of the SMTP server used for sending E-mail.

1 Touch the [SMTP Server] key.

2 Using the [Data Input] screen, input the name or IP address of the SMTP server used for sending E-mail.



- Unless the DNS settings are made correctly, the system will not operate correctly even if the SMTP server name is entered.

MEMO

- The SMTP server name is a combination of up to 239 symbols and alphanumerics.
- For details on character input refer to [3-1.Inputting Text] ([Reference](#)) >>> Page 16).

Binary Division

This sets the partial message size for sending messages with binary division.

1 Touch either the [YES] or [NO] button on the Binary Division Menu.

[YES] :To enable binary division.


[NO] :To disable binary division.

2 When selecting [YES] on this menu, enter a binary division size between 100 and 10000 kbytes by using the control panel.

MEMO

- Divided mail messages are combined using the mail software on the receiving side.

1 Use [**↑**] or [**↓**] to access to [E-Mail (SMTP) Setup] screen (2/2) from screen (1/2).

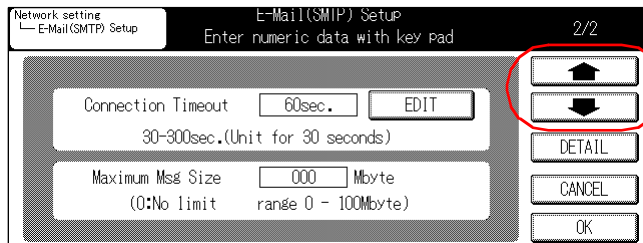

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Connection Timeout

This function automatically stops the sending if communications bog down during data uploading to the SMTP server and a certain period of time elapses.

[SMTP Timeout] sets this time value.

1 Touch the [EDIT] key on the [Connection Timeout] menu.

Each touch of the key will extend the timeout setting by 30 seconds, with a maximum value of 300 seconds.

Maximum Message Size

This sets the maximum capacity that the SMTP server can receive for one E-mail.

1 Touch the [000] digit key on the [Maximum Msg Size] menu.

Using the control panel, enter value between 0 and 100MB.

MEMO

- The factory set default setting is [0] (unlimited).
- A message which exceeds the maximum message-size setting cannot be sent. Mail messages that have not been sent are placed on the unsent mail list.

E-Mail (SMTP) Detail Setup

1 Touch the [DETAIL] key on [E-Mail (SMTP) Setup] screen.

→ [E-Mail (SMTP) Setup : Detail] screen is displayed.

SMTP Port Number

This specifies a port number to use for communications with the SMTP server.



- Changing the Port Code in an improper manner can result in damage to the network. Do not change the Port Code unless it is necessary to do so.

1 Touch the [SMTP Port Number] key.**2** Using the control panel, enter a number between 1 and 65535.

POP before SMTP

This setting enables or disables SMTP confirmation before transmitting.

1 Touch either the [YES] or [NO] key in the [POP before SMTP] menu.

[YES] :Enables SMTP confirmation

[NO] :Disables SMTP confirmation

2 When [YES] is selected, touch the [Setup Time] key.

3 Using the control panel, enter a time value in seconds between 0 and 60.

2 Touch [OK] key.

→ The Screen will return to [E-Mail (SMTP) Setup] screen.


MEMO

- Touching [CANCEL] will return you to the [E-Mail (SMTP) Setup] screen without any of the changes taking effect.


4-9. E-Mail (POP) Setup

This sets the POP (Post Office Protocol) information necessary for receiving E-mail.

1 Touch the [7.E-Mail (POP) Setup] key on the [Network setting] screen.

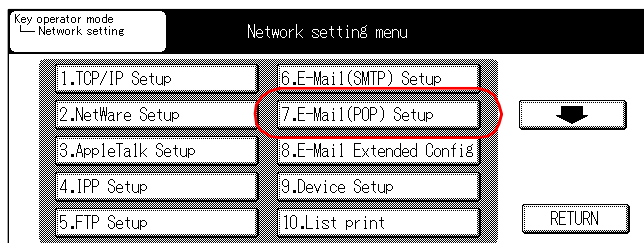

→ [E-Mail (POP) Setup] screen will be displayed.

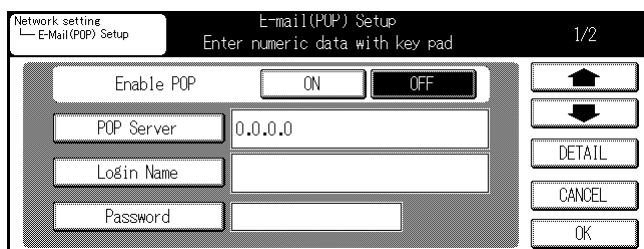

MEMO

- For details on the procedure for displaying the [Network Setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) ▶▶ Page 23).

Use this screen to access the following:

- [E-Mail (POP) Setup] screen 1/2
 - Enable POP [Reference](#) ▶▶ Page 64
 - POP Server [Reference](#) ▶▶ Page 64
 - Login Name [Reference](#) ▶▶ Page 64
 - Password [Reference](#) ▶▶ Page 65
- [E-Mail (POP) Setup] screen 2/2
 - Polling Interval [Reference](#) ▶▶ Page 66
 - Interval Time [Reference](#) ▶▶ Page 66
- [E-Mail (POP) Setup : Detail] screen
 - POP Port Number [Reference](#) ▶▶ Page 67
 - Connection Time Out [Reference](#) ▶▶ Page 68

MEMO

- Use [] and [] to switch the screen.

2 Touch [OK] key.


→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

E-Mail (POP) Setup (Part 1 of 2)

1 Access to [E-Mail (POP) Setup] screen from [Network setting] screen.

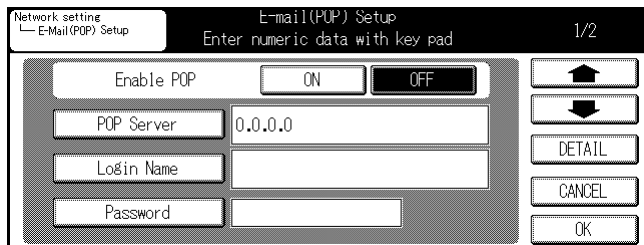

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).
- Use [] and [] to switch the screen.

Enable POP

This setting enables the E-Mail reception.

1 Touch either the [ON] or [OFF] key on the [Enable POP] screen.

[ON] : Enables the E-mail capability

[OFF] : Disables the E-mail capability

MEMO

- The [ON] and [OFF] keys might not be displayed in some version.

POP Server

This sets the name of the POP server used for receiving E-mail.

1 Touch the [POP Server] key.

2 Using the [Data Input] screen, input the name or IP address of the POP server used for receiving E-mail.

3 Touch [OK] key.

MEMO

- The SMTP server name is a combination of up to 239 symbols and alphanumerics.
- For details on character input refer to [3-1.Inputting Text] ([Reference](#)) >>> Page 16).

Login Name

This sets the login name used for connecting to the POP server.

1 Touch the [Login Name] key.

2 Using the [Data Input] screen, input the desired login name.

3 Touch [OK] key.


Password

This sets the password used for connecting to the POP server.

- 1** Touch the [Password] key.
- 2** Using the [Data Input] screen, input the password.
- 3** Touch [OK] key.

E-Mail (POP) Setup (Part 2 of 2)

1 Use [**↑**] or [**↓**] to access to [E-Mail (POP) Setup] screen (2/2) from screen (1/2).

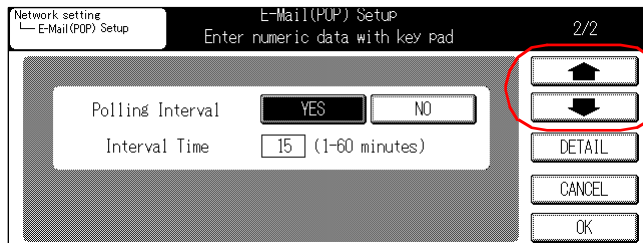

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Polling Interval

This function automatically checks for new messages on the POP server at regular intervals.

1 Touch either the [YES] or [NO] key in the [Polling Interval] menu.

[YES] :Enables automatic polling

[NO] :Disables automatic polling

2 When choosing [YES], use the control panel to enter a number, in minutes, between 1 and 60.

MEMO

- The factory default setting is [15] minutes.

E-Mail (POP) Detail Setup

1 Touch the [DETAIL] key on [E-Mail (POP) Setup] screen.

Network setting
E-mail (POP) Setup
Enter numeric data with key pad 1/2

Enable POP

POP Server

Login Name

Password

→ [E-Mail (POP) Setup : Detail] screen is displayed

Network setting
E-mail (POP) Setup
Detail
Enter numeric data with key pad

POP Port Number 1-65535

Connection Timeout

30-300sec.(Unit for 30 seconds)

POP Port Number

This specifies a port number to use for communications with the POP server.



- Changing the Port Code in an improper manner can result in damage to the network. Do not change the Port Code unless it is necessary to do so.

1 Using the control panel, enter a number between 1 and 65535.

POP Connection Timeout

This function automatically stops the upload if communications bog down during data reception to the POP server and a certain period of time elapses.

[POP Timeout] sets this time value.

1 Touch the [EDIT] key on the [Connection Timeout] menu.

Each touch of the key will extend the timeout setting by 30 seconds, with a maximum value of 300 seconds.

2 Touch [OK] key.

→ The screen will return to [E-Mail (POP) Setup] screen.

MEMO

- Touching [CANCEL] will return you to the [E-Mail (POP) Setup] screen without any of the changes taking effect.

4-10. E-Mail Extended Config

This sets functions related to reception and disposition notifications for E-mail when the Internet fax is in use.

Limitation

- E-Mail Extended Config is enabled only when the optional hard disk is installed. E-Mail Extended Config cannot be used when the optional hard disk is not installed.

1 Touch the [8. E-Mail Extended Config] key on the [Network Setting] screen.

Key operator mode
Network setting

Network setting menu

1. TCP/IP Setup	6. E-Mail (SMTP) Setup
2. NetWare Setup	7. E-Mail (POP) Setup
3. AppleTalk Setup	8. E-Mail Extended Config
4. IPP Setup	9. Device Setup
5. FTP Setup	10. List print

RETURN

→ [E-Mail Extended Config] screen will be displayed.

Network setting
E-Mail Extended Config

Enter numeric data with key pad

DSN Request	YES	NO
MDN Request	YES	NO
Response Timeout for MDN/DSN	24	Hour
	(1-99hours)	0:Disable
MDN Response	YES	NO

CANCEL
OK

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) ●● Page 23).

Use this screen to access the following:

DSN Request	Reference ●● Page 70
MDN Request	Reference ●● Page 71
Response Timeout for MDN/DSN	Reference ●● Page 71
MDN Response	Reference ●● Page 71

2 When setting of all the required items has been completed, touch the [OK] key on the control panel.


→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

This sets the extended E-mail functions.

1 Access to [E-Mail Extended Config] screen from [Network Setting] screen.

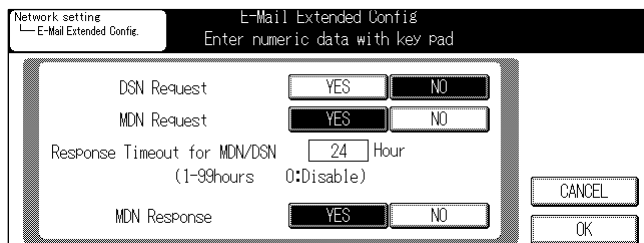

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

DSN Request

This sets whether or not to request the receiving mail server for sending DSN (Delivery Status Notifications) to the sender when an E-mail message is delivered to the receiving mail server.

1 Touch the [YES] or [NO] keys on the [DSN Request] menu.

[YES] : Requests DSN.

[NO] : Does not request DSN.

MEMO

- The factory default setting is [NO].

Limitation

- Even if DSN is requested, the DSN response mail cannot be received by the sender if the receiving mail server does not support the DSN function or the server has disabled the response function.
-
-

MDN Request

This enables setting whether or not to request the receiver for sending MDN (Message Disposition Notifications) to the sender when the receiver opens the received E-mail message.

1 Touch the [YES] or [NO] keys on the [MDN Request] menu.

[YES] : Requests MDN.

[NO] : Does not request MDM

MEMO

- The factory default setting is [YES].

Limitation

- Even if a MDN is requested, the MDN response mail cannot be received by the sender if receiver does not support the MDN function or receiver has disabled the response function.

Response Timeout for MDN/DSN

This enables setting time for waiting for a response when a transmission result is requested.

1 Input the time between 0 to 99 hours using the ten-key on the control panel.

Limitation

- In cases when no response is received after the Response Timeout for MDN/DSN has elapsed, nothing is registered in the communication status report even when a response is received later.

MEMO

- The factory default setting is [24] hours.
- For the output method for the communication status report, refer to the "User's Guide (Internet Fax/Facsimile)".

MDN Response

This enables setting whether or not to send a reception result response E-mail when a MDN transmission is requested by the sender.

1 Touch the [YES] or [NO] keys on the [MDN Response] menu.

[YES] : Sends E-mail for reception result response.

[NO] : Does not send E-mail for reception result response.


MEMO

- The factory default setting is [Yes].

4-11. Device Setup

This sets device information.

1 Touch the [9.Device Setup] key on the [Network setting] screen.

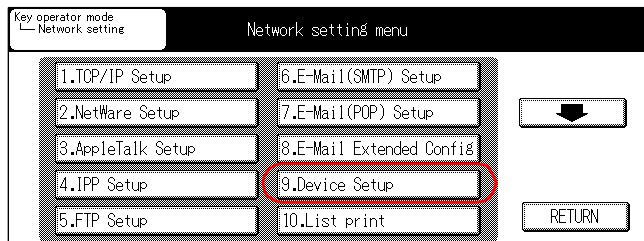

→ [Device Setup] screen is displayed.



MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ▶▶ Page 23).

Use this screen to access the following:

- [Device Setup] screen 1/2
 - MAC Address [Reference](#) ▶▶ Page 73
 - Network Speed [Reference](#) ▶▶ Page 73
- [Device Setup] screen 2/2
 - Parallel Receiving (IEEE1284) [Reference](#) ▶▶ Page 74
 - USB [Reference](#) ▶▶ Page 74
 - Network Receiving [Reference](#) ▶▶ Page 74

MEMO

- Use [] and [] to switch the screen.

2 Touch [OK] key.

→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

Device Setup (Part 1 of 2)

1 Access to [Device Setup] screen from [Network setting] screen.**MEMO**

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).
- Use [] and [] to switch the screen.

MAC Address

This confirm the MAC Address.

Network Speed

This sets the network speed.

1 Touch the [EDIT] key on the [Network Speed] menu.

[EDIT] : Choose from below
 [Auto]→[10Mbps FullDuplex]→[100Mbps FullDuplex]→[100Mbps HalfDuplex]


MEMO

- The factory set default setting is [AUTO].

Device Setup (Part 2 of 2)

This sets the timeout for the local interface.

- 1** Use [**▲**] or [**▼**] to access [Device Setup] screen (2/2) from screen (1/2).

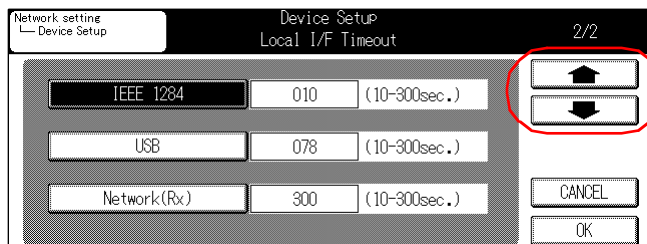

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Parallel Receiving (IEEE 1284)

- 1 Touch the [IEEE 1284] key.
- 2 Using the control panel, enter a value in seconds between 10 and 300.

USB

- 1 Touch the [USB] key.
- 2 Using the control panel, enter a value, in seconds, between 10 and 300.


Network Receiving

- 1 Touch the [Network (Rx)] key.
- 2 Using the control panel, enter a value in seconds between 10 and 300.

4-12. List Print

This prints out the Network setting list.

1 Touch the [10.List print] key on the [Network setting] screen.

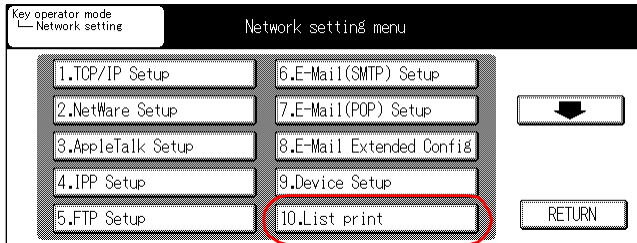

→ The [List print] screen will be displayed.



MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ●●● Page 23).

2 Touch the [PRINT] key to print out Network setup list.


3 Touch [RETURN] key.

→ The screen will return to the [Network setting] screen.


4-13. PC(SMB) Setup

This enables a function for sending data to a PC's shared folder using the scanner function.

1 Touch the [11.PC(SMB) Setup] key on the [Network Setting] screen.

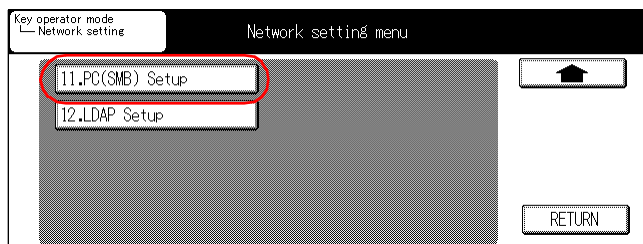

→ The [PC(SMB) Setup] screen will be displayed.

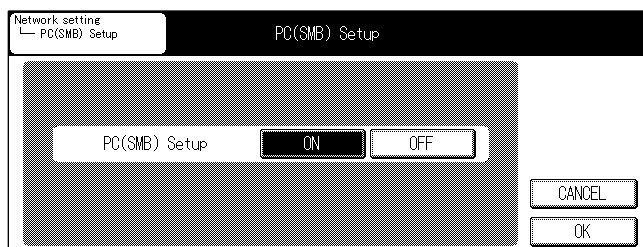

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) ●●● Page 23).

2 Touch either the [ON] or [OFF] key on the [PC(SMB) Setup] screen.

[ON] : Enables the [Scan to PC(SMB)] function

[OFF] : Disables the [Scan to PC(SMB)] function

3 Touch [OK] key.

→ The display returns to the [Network setting] screen.

MEMO

- Touching [CANCEL] will return you to the [Network setting] screen without any of the changes taking effect.

4-14. LDAP Setup


This sets the information required for accessing the LDAP server to acquire E-mail addresses for [Scan to E-Mail].




Important

- If the LDAP Setup is not set up correctly, it could cause network problems. This setup process must be performed only by the server's administrator.

1 Touch the [12.LDAP Setup] key on the [Network Setting] screen.

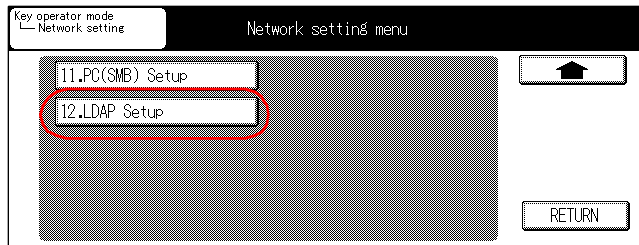

→ The [LDAP Setup] screen will be displayed.

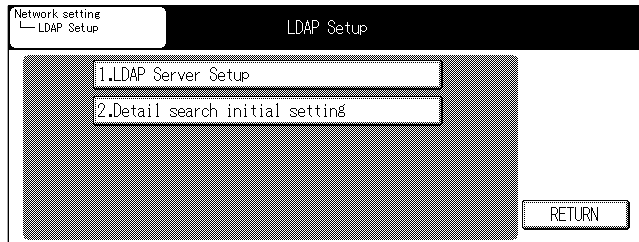










MEMO

- For details on the procedure for displaying the [Network Setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference] >>> Page 23).
- For details on the setup procedure of LDAP, refer to the instruction manual of the LDAP server to be used.

Use [LDAP Setup] screen to access the following:

- [LDAP Server Setup] screen 1/4
 - Enable LDAP [Reference] >>> Page 79
 - Maximum Hit Number [Reference] >>> Page 79
 - Search Timeout [Reference] >>> Page 79
 - Connect Chk [Reference] >>> Page 80
- [LDAP Server Setup] screen 2/4
 - Server address [Reference] >>> Page 81
 - Search Root [Reference] >>> Page 81

- [LDAP Server Setup] screen 3/4
 - Enable SSL  Page 82
 - Port No.  Page 82
 - Authentication Type  Page 83
 - User authentication  Page 83
- [LDAP Server Setup] screen 4/4
 - User Name  Page 84
 - Password  Page 84
 - Domain name  Page 85
- [Detail search initial setting] screen
 - Attribute  Page 86
 - Condition  Page 87


MEMO

- Use [] and [] to switch the screen.

2 When setting of all the items has been completed, touch the [RETURN] key.

→ The display returns to the [Network setting] screen.

LDAP Server Setup (Part 1 of 4)

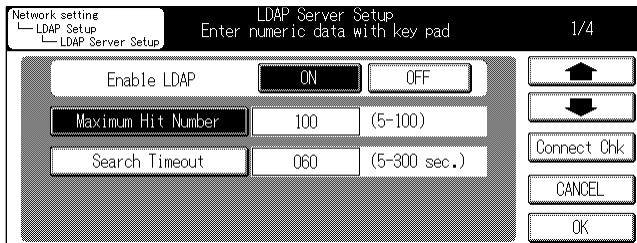1 Access to [LDAP Server Setup] screen (1/4) from [Network Setting] screen.**MEMO**

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).
- Use [] and [] to switch the screen.

Enable LDAP

This sets whether or not to use the mail address search function for [Scan to E-Mail] by LDAP.

1 Touch either the [ON] or [OFF] key on the [Enable LDAP] menu.

[ON] : Enables the mail address search function with the LDAP.

[OFF] : Disables the mail address search function with the LDAP.

Maximum Hit Number

Sets the maximum number of items to be displayed after search. When the number of searched items exceeds the maximum number of search items, the items in excess of the maximum search number will not be displayed.

1 Touch the [Maximum Hit Number] key.**2** Using the control panel, enter a number between 5 and 100.**Search Timeout**

Sets the maximum standby time during search processing. If this time is exceeded, the search will be interrupted.


1 Touch the [Search Timeout] key.**2** Using the control panel, enter a number between 5 and 300.

Connect Chk

Connects to the LDAP server to check that the settings for LDAP Setup are correct.

- 1 Touch the [Connect Chk] key.
- 2 Check the message on the touch panel.

MEMO

- Connect Chk can be executed on all [LDAP Server Setup] screens (1/4~4/4).
- If an error message is displayed on the touch panel, refer to [7-2. Network Error List] ( page 183).

LDAP Server Setup (Part 2 of 4)

1 Use [**↑**] or [**↓**] to access to [LDAP Server Setup] screen (2/4) from screen (1/4).

**MEMO**

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Server address

Sets the address of the LDAP server.

- 1 Touch the [Server address] key.
- 2 Using [Data Input] screen, enter the LDAP server name or IP address.
- 3 Touch the [OK] key on the [Data Input] screen.

Search Root

Inputs the directory path for the LDAP server to be searched.

- 1 Touch the [Search Root] key.
- 2 Input the search route on the [Data Input] screen.




- If the Search Root is not specified correctly, the search function will not function normally.
 - Input example 1 : When searching the [Users] container on the [cso.konicaminolta.jp] server:
cn=Users, dc=cso, dc=konicaminolta, dc=jp,
 - Input example 2 : When searching the OU which is titled [Mail] on the [cso.konicaminolta.jp]server:
ou=Mail, dc=cso, dc=konicaminolta, dc=jp,

- 3 Touch the [OK] key on the [Data Input] screen.

LDAP Server Setup (Part 3 of 4)

1 Use [**↑**] and [**↓**] to access to [LDAP Server Setup] screen (3/4) from screen (2/4).

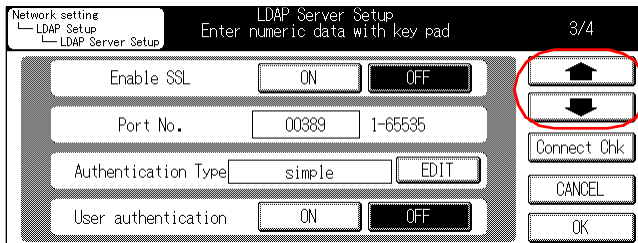

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#)) >>> Page 23).

Enable SSL

Sets whether or not to use SSL (Secure Socket Layer) when connecting to the LDAP server.

1 Touch either the [ON] or [OFF] key in the [Enable SSL] menu.

[ON] : Enables SSL

[OFF] : Disables SSL

Port No.

Sets the port number for the LDAP server.



- If the Port No. is changed improperly, it could cause network problems. Do not change the port number unless it is necessary for a particular reason.

1 Using the control panel, enter a number between 1 and 65535.

MEMO

- The port number is changed automatically according to the settings for the [Enable SSL].
When [ON] is selected : 636
When [OFF] is selected : 389

Authentication Type

Sets the authentication type when logging on the LDAP server.

1 Touch the [EDIT] key on the [Authentication Type] menu.

Each time touching the [EDIT] key, the selected item toggles in the following order:

anonymous→simple→DIGEST_MD5/CRAM_MD5→GSS-SPNEGO

- anonymous : An authentication type which does not require a user name and password
- simple : A simplified authentication type which requires a user name and password
- DIGEST_MD5/CRAM_MD5: An authentication type which can be used by the general LDAP server
- GSS-SPNEGO : An authentication type which can be used by the active directory of Windows (Kerberos authentication)

Limitation

- If the items on the following page are not set correctly by Authentication Type, [Connect Chk] cannot be performed.
 - [Simple] and [DIGEST_MD5/CRAM_MD5] : [User Name]
 - [GSS-SPNEGO] : [User Name], [Domain Name]

MEMO

- The factory default setting is [anonymous].
- Set Authentication Type according to the Authentication Type used for the LDAP server. For details, refer to the instruction manual of the LDAP server to be used.

User authentication

Allows the server to be accessed freely by the user set according to the instructions on the following page or by performing user authentication each time the server is accessed.

1 Touch either the [ON] or [OFF] key in the [User authentication] menu.

[ON] : Performs user authentication each time the server is accessed

[OFF] : Permits access to the server by the user set as instructed on the following pages

Limitation

- If the items on the following page are not set correctly by the combination of Authentication Type and User authentication, you cannot touch [OK].
 - When [Simple] and [DIGEST_MD5/CRAM_MD5] are selected and user authentication is [OFF] : [User Name]
 - When [GSS-SPNEGO] is selected and user authentication is [OFF] : [User Name], [Domain Name]
 - When [GSS-SPNEGO] is selected and user authentication is [ON] : [Domain Name]

MEMO

- When [anonymous] is selected for [Authentication Type], [OFF] will be automatically selected.

LDAP Server Setup (Part 4 of 4)

1 Use [**↑**] and [**↓**] to access to [LDAP Server Setup] screen (4/4) from screen (3/4).

Network setting
LDAP Setup
LDAP Server Setup

LDAP Server Setup
Enter numeric data with key pad
4/4

User Name: LDAP

Password: *****

Domain name:

Navigation buttons: [Up Arrow], [Down Arrow], [Connect Chk], [CANCEL], [OK]



Important

- When [OFF] is selected for [User authentication] on the previous page, be sure to set this item.
- When [ON] is selected for [User authentication] on the previous page, the settings for this item are not saved. If the settings for this item have already been made, selecting [ON] deletes the user name and password.

MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] ([Reference](#) >>> Page 23).

User Name

Sets the User Name to access the LDAP server.

MEMO

- Only half-width alphanumeric characters can be used for User Name.

- 1** Touch the [User Name] key.
- 2** Enter the user name on the [Data Input] screen.
- 3** Touch the [OK] key on the [Data Input] screen.

Password

Sets the Password for accessing the LDAP server.

- 1** Touch the [Password] key.
- 2** Enter the password on the [Data Input] screen.
- 3** Touch the [OK] key on the [Data Input] screen.

Domain name

Set the Domain name for accessing the LDAP server as required.

MEMO

- Usually entering the Domain name is not required.
- When [GSS-SPNEGO] is specified for authentication type, input the domain name of the Active Directory.


- 1** Touch the [Domain name] key.
- 2** Enter the domain name on the [Data Input] screen.
- 3** Touch the [OK] key on the [Data Input] screen.

Perform default settings for detailed search items.

MEMO

- The default settings selected here can be changed by the user when using the LDAP search function.

1 Access to [Detail search initial setting] screen from [Network setting] screen.

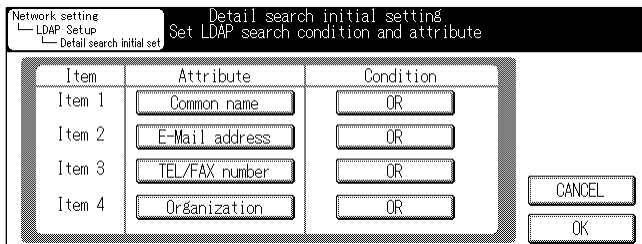


MEMO

- For details on the procedure for displaying the [Network setting] screen, refer to [4-2.Method for Setting Network from Control Panel] (Reference >>> Page 23).

Attribute

Selects the default settings for the search attribute for detailed searches.

1 Touch the item name in the [Attribute] field for [Item 1] - [Item 4] on the touch panel.

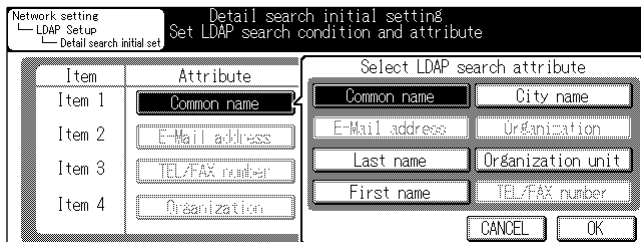

→The search attribute selection screen is displayed.


2 Touch the option to be used as the search attribute on the touch panel.

3 Touch the [OK] key on the search attribute selection screen.

Condition

Select the default settings for the condition when performing a detailed search.

1 Touch [Condition] for [Item 1] - [Item 4] on the touch panel.

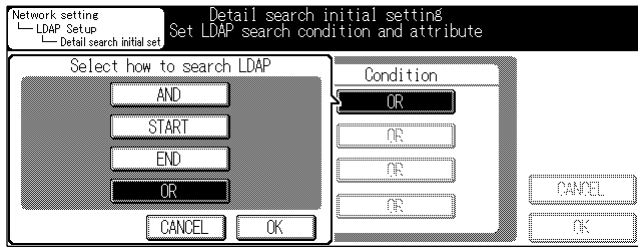

→The condition selection screen is displayed.

2 Touch the items used for the condition on the touch panel.

3 Touch the [OK] key on the condition selection screen.

Factory defaults for detailed search initial setting are set as follows:

Item	Attribute	Condition
Item 1	Common name	OR
Item 2	E-Mail address	OR
Item 3	TEL/FAX number	OR
Item 4	Organization	OR

MEMO

Chapter 5 Web Utility

The Web Utility utilizes a web browser to access features identical to Key Operator Mode.

5-1. Accessing Web Utility	90
5-2. Network Information	91
5-3. TCP/IP Configuration	92
5-4. NetWare Configuration	96
5-5. AppleTalk Configuration	100
5-6. IPP Configuration.....	102
5-7. FTP Configuration.....	105
5-8. E-mail Send (SMTP) Configuration.....	107
5-9. E-mail Receive (POP) Configuration	110
5-10. E-Mail Extended Configuration.....	112
5-11. PC(SMB) Configuration	113
5-12. LDAP Configuration.....	114
5-13. E-Mail Notification Configuration	116
5-14. Device Configuration	118
5-15. Reset	120

5-1. Accessing Web Utility

This section explains how to access the Web Utility.

1 Launch your Web Browser.

2 Enter the IP Address of the copier you wish to access.



For detailed information, please refer to the Web Utility Manual on the User Software CD.

MEMO

- The IP address is normally allocated by the system administrator. Please ask the system administrator for detailed information.
- The Web Utility may be inaccessible when proxy is set on the Web browser. Please ask the system administrator for detailed information.

5-2. Network Information

To access the Network Status page, follow these steps:

- 1** Open the Network Setup page.
- 2** From the top menu, select Network Status. The Network Status page opens.

Protocols Status	
TCP/IP	Enable
NetWare	Disable
AppleTalk	Enable
IPP	Disable
SMTP	Enable
POP	Disable
PC(SMB)	Enable
LDAP	Enable

Network Information	
MAC Address	00:50:AA:22:07:17
Network Speed	Auto(100Mbps Half Duplex)

This page displays the Protocol Information and the Network Information.

Protocol Information

Will be able to confirm whether each of the following protocols are enabled or disabled.

- TCP/IP
- NetWare
- Apple Talk
- IPP
- SMTP
- POP
- PC(SMB)
- LDAP

Network Information

Will display the following information.

- Mac Address
- Network Speed

Settings can not be changed on this page.

5-3. TCP/IP Configuration

From the TCP/IP Configuration page, the administrator can enable TCP/IP. The administrator may also alter IP, DHCP and DNS settings. All these functions are password protected.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password".

To access the TCP/IP Configuration page, follow these steps:

1 Open the Network Setup page.

2 From the top menu, select TCP/IP Configuration. The TCP/IP Configuration page opens.

Procedures for altering the respective fields below.

TCP/IP Configuration

Enable TCP/IP

IP Address: 10 . 11 . 32 . 134

Subnet Mask: 255 . 255 . 240 . 0

Default Gateway: 10 . 11 . 32 . 1

RAW Port Number: 9100

Enable DHCP:

Preferred DNS Server: 0 . 0 . 0 . 0

Alternate DNS Server: 0 . 0 . 0 . 0

DNS Host Name: KCC20717

DNS Domain Name: TSC_DOM2

A password is required to perform this function.

Apply Clear

Enabling TCP/IP

Should you wish to enable TCP/IP, follow these steps:

- 1 Open the TCP/IP Configuration page.**
- 2 Click the Enable TCP/IP check box.**
 - MEMO**
 - Should you wish to disable TCP/IP, deselect the option box.
- 3 At the bottom of the page, type in the system password in the provided field.**
- 4 Click [Apply].**

Changing IP Settings

The following IP Settings may be changed as noted:

- **IP Address**

If the IP Address of the NIC does not appear on screen, get that address from the System Administrator and enter it here. The default setting is set to 0.0.0.0, which indicates that no IP address has been set up.
- **Subnet Mask**

If the IP Address of the NIC does not appear on screen, get that address from the System Administrator and enter it here. The default setting is set to 0.0.0.0, which indicates that no IP address has been set up.
- **Default Gateway**

If necessary, enter a gateway IP address. This is not a required field.
- **RAW Port Number**

Change this parameter as required. You may enter a number between 1 and 65535.
The default is 9100.

Should you wish to alter any of these IP settings, follow these steps:

- 1 Open the TCP/IP Configuration page.**
- 2 In the IP Settings section, select the field you wish to change.**
- 3 Enter the new settings.**

- 4** At the bottom of the page, type in the system password in the provided field.
- 5** Click [Apply].

Changing DHCP Settings

The following DHCP Settings may be changed, as noted:

- Enable DHCP
This sets whether or not to automatically acquire IP Addresses and other such information from a DHCP sever.

To change the DHCP settings, follow these steps:

- 1** Open the TCP/IP Configuration page.
- 2** In the DHCP Settings section, select the field you wish by clicking the check box.
- 3** At the bottom of the page, type in the system password in the provided field.
- 4** Click [Apply].

Changing DNS Settings

- Preferred DNS Server

Enter in the IP Address for the preferred DNS server when necessary. Check with the system administrator for the address.

The default value of [0.0.0.0] will appear when no IP Address is specified.

- DNS Host Name

- DNS Domain Name

Enter the name of the Network Domain that the machine is connected to.

To alter any of the DNS settings, follow these steps:

- 1** Open the TCP/IP Configuration page.
- 2** In the DNS section, select the field you wish to change.
- 3** Enter the new settings.
- 4** At the bottom of the page, type in the system password in the provided field.
- 5** Click [Apply].

**Important**

- Changes do not take effect until you restart the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.

5-4. NetWare Configuration

From this page an administrator can configure NetWare. All these functions are password-protected.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password"

To access the NetWare Configuration page, follow these steps:

- 1** Open the Network Setup page.
- 2** From the top menu, select NetWare Configuration. The NetWare Configuration screen is displayed.

The screenshot shows the NetWare Configuration web utility interface. At the top, it says "NetWare Configuration" and "Enable NetWare" with a checkbox. Below this are several configuration fields:

- Ethernet Frame Type: Auto-Sense (dropdown menu)
- Print Server Name: K0220717 (text input)
- Print Server Password: (password input)
- Retype Print Server Password: (password input)
- File Server: (text input)
- NDS Context: (text input)
- NDS Tree: (text input)
- Print Queue Scan Rate: 1 sec. (1-65535) (text input)
- Disable Bindery: (checkbox)
- Printer Number: 256 (0-255, 255=Auto) (text input)
- Operating Mode: PServer (dropdown menu)

At the bottom, there is a grey bar with the text "A password is required to perform this function." and a password input field. Below the bar are "Apply" and "Clear" buttons.

Enabling NetWare

When this box is checked, Novell NetWare (IPX/SPX) is enabled as the protocol for print servers. For print servers on which NetWare is not a primary protocol, be sure to uncheck this box to disable NetWare.

To enable NetWare, follow these steps:

- 1** Open the NetWare Configuration page.
- 2** Click the Enable NetWare check box.
MEMO
 - Should you wish to disable NetWare, deselect the option box.
- 3** At the bottom of the page, type in the system password in the provided field.
- 4** Click [Apply].

Changing NetWare Settings

To alter any of the NetWare settings, follow these steps:

- 1** Open the NetWare Configuration page.
- 2** In the NetWare Settings section, select the field you wish to change.
- 3** Enter the new settings (see the specific instructions that follow for each field).
- 4** At the bottom of the page, type in the system password in the provided field.
- 5** Click [Apply].

The following NetWare Settings may be changed, as described:

- Ethernet Frame Type

This option allows you to select a frame type appropriate to the network in use. Either click on the radio button corresponding to the frame type in use or click on Auto-Sense. If you select Auto Sense, the proper frame type is automatically selected.

■ Print Server Name

Each Novell print server has its own assigned name. A default name in the form of KC***** (last 6 letters of the MAC address), is used. If you want to use a name other than the default name or if you want to change the currently assigned name, you may type a new print server name into this field. The maximum length of this name is 63 characters, typed in half size. If you change the print server name, it is imperative that you also enter the identical new name on PCONSOLE as well. If you do not do this, your newly entered name will be ineffective.

■ Print Server Password/Retype Print Server Password

The network administrator assigns passwords to Novell print servers. When passwords are assigned with PCONSOLE or NWADMIN, those passwords should also be set up on the print servers. In Bindery mode, only upper case passwords can be used. When typing a password into this field, it must be identical to the password assigned through PCONSOLE or NWADMIN. The typed password is stored in the print server setup memory. For instructions that explain how to assign passwords using PCONSOLE, refer to the Novell manual.

Enter a password in the Print Server Password field. This password is common to all file servers assigned to the print server. Re-enter the same password into the Password Retype field for confirmation. Click the Accept Settings button. This will not work unless you have entered the same password in both fields.

■ File Server

Type a primary file server name in this field to designate the specific file server your print server will access.

■ NDS Context

If you are using Novell NetWare 4.x Directory Services, type a preferred NDS context here. The preferred NDS context needs to be a complete context name.

Do not type a period (".") in the front of the context pass. You do not need to type a container name (print server name) since it is noted in the name field above.

Examples of contexts with type are as follows:

Complete Context

```
o=standard.ou=organization_1
```

Simple Context

```
standard.organization_1
```

For further details about NDS Context, check with the system administrator.

■ NDS Tree

If you are using Novell NetWare 4.x Directory Services, type a preferred NDS tree in this field. If you do not know the preferred NDS tree, type WHOAMI from the MS-DOS command line, then touch Enter for confirmation.

■ Print Queue Scan Rate

This option allows you to select a queue scan rate so you may adjust the intervals at which the print server (network interface card) polls the networks when searching for new print queues. You may enter a number between 1 and 255 (seconds).

■ Disable Bindery

Bindery Services of Novell NetWare 4.x or greater are disabled when this box is checked and enabled when this box is not checked. When Bindery is disabled, print servers connected to the Bindery file server are not supported.

■ Printer Number

A code can be set between 1 and 255. Setting the Printer Number to 255 will allow the system to automatically set the number. The default setting is 255.

■ Operating Mode

Choose between [PServer] or [RPrinter] for the operating mode. The default setting is [PServer].

5-5. AppleTalk Configuration


From this page an administrator can configure AppleTalk. All these functions are password protected.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password"

To access the AppleTalk Configuration page, follow these steps:

- 1** Open the Network Setup page.
- 2** From the top menu, select AppleTalk Configuration. The AppleTalk Configuration page opens.

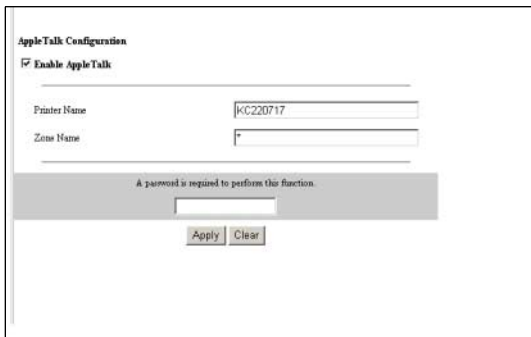

AppleTalk Configuration

Enable AppleTalk

Printer Name: K220717

Zone Name:

A password is required to perform this function.

Apply Clear

Enabling AppleTalk

This check box toggles the network interface card between disabled and enabled.

To enable AppleTalk, follow these steps:

- 1** Open the AppleTalk Configuration page.
- 2** Click the Enable AppleTalk check box.
 - MEMO
 - Should you wish to disable AppleTalk, deselect the option box.
- 3** At the bottom of the page, type in the system password in the provided field.
- 4** Click [Apply].

Changing AppleTalk Settings

The following AppleTalk Settings may also be changed:

■ Printer Name

This is the printer (network interface card) name used on the AppleTalk network. The default name is KC***** (last 6 letters of the MAC address).



- You may not use the following symbols in the printer name: (,), *, @, -, =, :

■ Zone Name

The zone in which the network interface card resides is displayed here. Leave this blank if no zone is created as when using networks that have no seed routers. Printing will not start unless the zone name is designated correctly.

To alter any of the AppleTalk settings, follow these steps:

- 1** Open the AppleTalk Configuration page.
- 2** In the AppleTalk Settings section, select the field you wish to change.
- 3** Enter the new settings.
- 4** At the bottom of the page, type in the system password in the provided field.
- 5** Click [Apply].



- Changes do not take effect until you start the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.

5-6. IPP Configuration

From this page an administrator can set IPP configuration parameters. All these functions are password protected.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password"

To access the IPP Configuration page, follow these steps:

1 Open the Network Setup page.

2 From the top menu, select IPP Configuration. The IPP Configuration page opens.

The screenshot shows the 'IPP Configuration' web utility page. At the top, there is a title 'IPP Configuration' and a checkbox labeled 'Enable IPP' which is currently unchecked. Below this, there are several sections of configuration options:

- Accept IPP Job:** A checkbox that is checked.
- Printer Name, Location, Information, Mops Printer Information, Driver Installer, Model, Manufacturer:** Each of these is followed by an empty text input field.
- Operations Supported:** A group of six checkboxes: 'Print Job', 'Cancel Job', 'Get Jobs', 'Validate Job', 'Get Job Attributes', and 'Get Printer Attributes'. All six are checked.
- Document Format Supported:** A group of five checkboxes: 'text/html', 'text/plain', 'application/postscript', 'application/vnd.hp-pcl', and 'application/octet-stream'. 'text/plain' is checked.
- Document Format:** A dropdown menu currently showing 'text/plain'.
- Message from Operator:** A text input field with a small arrow icon on the right.
- Job k-octets Supported:** Two input fields, the first containing '4294967' and the second containing 'Kbytes(0-4294967)'. There is a horizontal line below these fields.

At the bottom of the page, there is a grey bar with the text 'A password is required to perform this function.' followed by a password input field and two buttons: 'Apply' and 'Clear'.

Enabling IPP

Should you wish to enable IPP, follow these steps:

1 Open the IPP Configuration page.

2 Click the Enable IPP check box.

MEMO

- Should you wish to disable IPP, deselect the option box.

3 At the bottom of the page, type in the system password in the provided field.

4 Click [Apply].

Changing IPP Configuration Settings

The following IPP Configuration Settings may be changed:

- Accept IPP Job
- Printer Name
- Printer Location
- Printer Information
- More Printer Information
- Printer Driver Installer
- Printer Model
- Printer Manufacture
- Operations Supported
 - Print Job
 - Cancel Job
 - Get Jobs
 - Validate Job
 - Get Job Attributes
 - Get Printer Attributes
- Document Format Supported
 - text/html
 - text/plain
 - application/postscript
 - application/vnd.hp-pcl
 - application/octet-stream
- Document Format
- Message from Operator
- Job k-octets Supported

To alter any of the IP Configuration settings, follow these steps:

- 1** Open the IPP Configuration page.
- 2** In the IPP Configuration Settings section, select the field you wish to change.
- 3** You can change the following settings.
- 4** At the bottom of the page, type in the system password in the provided field.
 - MEMO**
 - The default password for Web Utilities is the same as the Key Operator Password.
- 5** Click [Apply].

5-7. FTP Configuration

The [FTP Configuration] screen is used to configure FTP settings. Password input is necessary to configure settings.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password"

To access the FTP Configuration page, follow these steps:

1 Open the Network Setup Page.

2 From the top menu, select FTP Configuration page. The FTP Configuration page opens.

The screenshot shows the 'FTP Configuration' page with the following fields and values:

Field	Value
Proxy Server Address	0.0.0.0
Proxy Server Port Number	21
Enable PASV Mode	<input type="checkbox"/>
FTP Client Port Number	21
FTP Server Connection Timeout	60 sec. (5-300)

Below the fields, a grey bar contains the text: "A password is required to perform this function." followed by a password input field and "Apply" and "Clear" buttons.

Changing FTP Setting

The following FTP settings may be changed as noted.

- Proxy Server Address
- Proxy Server Port Number
- Enable PASV Mode
- FTP Client Port Number
- FTP Server Connection Timeout

To alter any of these FTP settings, follow these steps:

- 1** Open the FTP configuration page.
- 2** In the FTP Settings section, select the field you wish to change.
- 3** Enter the new settings.
- 4** At the bottom of the page, type in the system password in the provided field.
- 5** Click [Apply].



- Changes do not take effect until you start the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.
-
-

5-8. E-mail Send (SMTP) Configuration

The [E-mail Send (SMTP) Configuration] menu is used to configure settings for sending E-mail. Password input is necessary to configure settings.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password"

To access the E-mail Send (SMTP) Configuration page, follow these steps:

- 1** Open the Network Setup Page.
- 2** From the top menu, select E-mail Send (SMTP) Configuration. The E-mail Send (SMTP) Configuration page opens.

E-mail Send (SMTP) Configuration

Enable SMTP

SMTP Server Address: 10.11.32.10

SMTP Server Port Number: 25

SMTP Server Connection Timeout: 60 sec (30-300)

Protocol Type: SMTP

Binary Division: ON

Partial Message Size: 100 KByte(100-10,000)

Maximum Message Size: 0 MByte(0-100)

POP before SMTP: OFF

Setup Time: 1 sec (0-60)

Key Operator E-mail Address: fry2@egg.bmb.konica.co.jp

Machine E-mail Address: 7145A@tscdom2.com

A password is required to perform this function.

Apply Clear

Enabling E-mail Send (SMTP)

To enable E-mail Send (SMTP), follow these steps:

- 1 Open the E-mail Send (SMTP) page.**
- 2 Click the Enable SMTP box.**
 - MEMO**
 - Should you wish to disable SMTP, deselect the option box.
- 3 At the bottom of the page, type in the system password in the provided field.**
- 4 Click [Apply].**

Changing E-mail Send (SMTP) Setting

The following E-mail Send (SMTP) settings may be changed as noted.

- SMTP Server Address
- SMTP Server Port Number
- SMTP Server Connection Timeout
- Protocol Type
- Binary Division
- Partial Message Size
- Maximum Message Size
- POP before SMTP
- Setup Time
- Key Operator E-mail Address
- Machine E-mail Address

To alter any of these E-mail Send (SMTP) settings, follow these steps:

- 1 Open the E-mail Send (SMTP) configuration page.**
- 2 In the E-mail Send (SMTP) Settings section, select the field you wish to change.**

3 Enter the new settings.

4 At the bottom of the page, type in the system password in the provided field.

5 Click [Apply].



Important

-
-
- Changes do not take effect until you start the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.
-
-

5-9. E-mail Receive (POP) Configuration

The [E-mail Receive (POP) Configuration] menu is used to configure settings for receiving E-mail. Password input is necessary to configure settings.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password"

To access the E-mail Receive (POP) Configuration page, follow these steps:

- 1** Open the Network Setup Page.
- 2** From the top menu, select E-mail Receive (POP) Configuration page. The E-mail Receive (POP) Configuration page opens.

E-mail Receive (POP) Configuration

Enable POP

POP Server Address: 10.11.32.10

POP Server Port Number: 110

Login Name: 7145A

Password: *****

POP Server Connection Timeout: 60 sec. (30-300)

Interval Time: Enable 1 min. (1-60)

A password is required to perform this function.

Apply Clear

Changing E-mail Receive (POP) Setting

The following E-mail Receive (POP) settings may be changed as noted.

- Enable POP
- POP Server Address
- POP Server Port Number
- Login Name
- Password
- POP Server Connection Timeout
- Interval Time

To alter any of these E-mail Receive (POP) settings, follow these steps:

- 1** Open the E-mail Receive (POP) configuration page.
- 2** In the E-mail Receive (POP) Settings section, select the field you wish to change.
- 3** Enter the new settings.
- 4** At the bottom of the page, type in the system password in the provided field.
- 5** Click [Apply].



Important

- Changes do not take effect until you start the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.

5-10. E-Mail Extended Configuration


This enables setting items related to reception and disposition notifications on the [E-Mail Extended Configuration] page when the Internet fax is in use. Password input is necessary to configure settings.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password".

To access the E-Mail Extended Configuration page, follow these steps:

- 1** Open the Network Setup page.
- 2** From the top menu, select the E-Mail Extended Configuration page. The E-Mail Extended Configuration page opens.

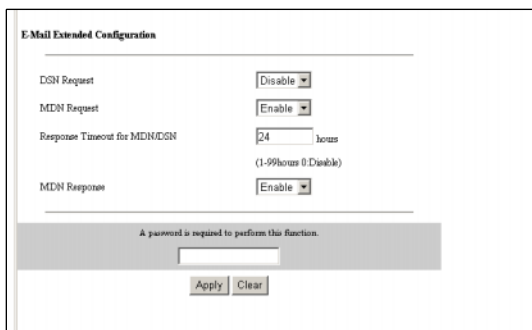

- 3** Enter the following items.

- DSN Request
- MDN Request
- Response Timeout for MDN/DSN
- MDN Response

- 4** Input the password and click the [Apply] button.

This password is a key operator password.

Clicking [Clear] aborts all settings input up to this point.



- After the settings have been changed, reset the system.

MEMO

- For details on the procedure for resetting, refer to [5-15. Reset] ([Reference](#) ●●● Page 120).

5-11. PC(SMB) Configuration


This enables a function for sending scanned data to PC's shared folder using the scanner function. Password input is necessary to configure settings.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password".

To access the PC(SMB) Configuration page, follow these steps:

- 1** Open the Network Setup page.
- 2** From the top menu, select PC(SMB) Configuration page. The PC(SMB) Configuration page opens.

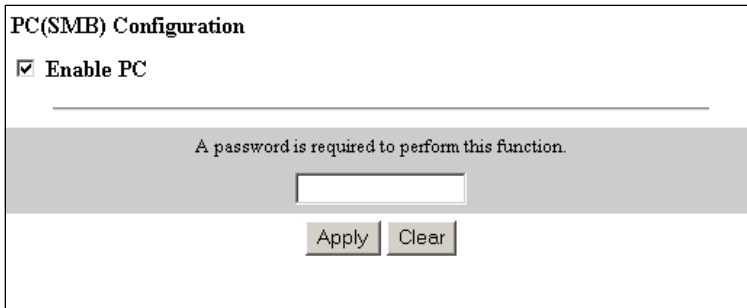

PC(SMB) Configuration

Enable PC

A password is required to perform this function.

Apply Clear

- 3** Click the checkbox when using PC(SMB) with the scanner.
- 4** Input the password and click the [Apply] button.

This password is a key operator password.

Clicking [Clear] aborts all settings input up to this point.



Important

- Changes do not take effect until you start the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.
-
-

5-12. LDAP Configuration

This sets the information required for accessing the LDAP server to acquire mail addresses for [Scan to E-Mail]. Password input is necessary to configure settings.



Important

- If the LDAP configuration is not set up correctly, network problems could occur. This setup process must be performed only by the server administrator.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password".

To access the LDAP Configuration page, follow these steps:

- 1** Open the Network Setup page.
- 2** From the top menu, select LDAP Configuration page. The LDAP Configuration page opens.

The screenshot shows the 'LDAP Configuration' page with the following fields and values:

- Enable LDAP
- LDAP Server Address: 10.11.32.10
- LDAP Server Port Number: 389
- Enable SSL:
- Search Root: cn=users,dc=tscdom2,dc=bmb,dc=kor
- Connection Timeout: 60 Sec (5-300)
- Maximum Hit Number: 100 (5-100)
- Authentication Type: Simple
- Dynamic Authentication: Disable
- User Name: Nisizawa Eiichiro E
- Password: [REDACTED]
- Domain Name: [REDACTED]

A password is required to perform this function.

Buttons: Check LDAP Setting, Apply, Clear

3 Enter the following items.

- Enable LDAP
- LDAP Server Address
- LDAP Server Port Number
- Enable SSL
- Search Root
- Connection Timeout
- Maximum Hit Number
- Authentication Type
- Dynamic Authentication
- User Name
- Password
- Domain Name

4 Input the password and click the [Apply] button.

This password is a key operator password.

Clicking [Clear] aborts all settings input up to this point.

5 Input the password and click the [Check LDAP Setting] button.

This password is a key operator password.

When the settings are entered correctly, a message confirming a successful connection is displayed.

When the connection has failed, check the settings for each item and re-enter the data.



Important

- Changes do not take effect until you start the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.

5-13. E-Mail Notification Configuration

This sets a function for notifying the machine status, errors, etc., by E-Mail. Password input is necessary to configure settings.

MEMO

- For details on the E-Mail notice function, refer to the copier User's Guide.
- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password".

To access the E-Mail Notification Configuration page, follow these steps:

1 Open the Network Setup Page.

2 From the top menu, select E-Mail Notification Configuration page. The E-Mail Notification Configuration page opens.

E-Mail Notification Configuration

Enable E-Mail Notification

E-Mail Notification Address

No Paper

Toner Stop

Paper Jam

Operator Attention

PM Required

Fatal Error

Stapler Empty

Dispose of waste full

A password is required to perform this function.

Apply Clear

3 Enter the following items.

- Enable E-Mail Notification
- E-Mail Notification Address
- No Paper
- Toner Stop
- Paper Jam
- Operator Attention
- PM Required
- Fatal Error
- Stapler Empty
- Dispose of waste full

4 Input the password and click the [Apply] button.


This password is a key operator password.

Clicking [Clear] aborts all settings input up to this point.



- After the settings have been changed, reset the system.

MEMO

- For details on the procedure for resetting, refer to [5-15. Reset] ( Page 120).

5-14. Device Configuration

The [Device Configuration] screen is used to configure device settings. Password input is necessary to configure settings.


MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password".

To access the Device Configuration page, follow these steps:

1 Open the Network Setup Page.

2 From the top menu, select Device Configuration page. The Device Configuration page opens.

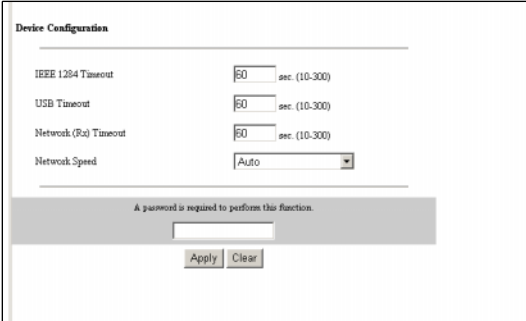

The screenshot shows the 'Device Configuration' page with the following settings:

Setting	Value	Unit/Range
IEEE 1284 Timeout	60	sec. (10-300)
USB Timeout	60	sec. (10-300)
Network (Fco) Timeout	60	sec. (10-300)
Network Speed	Auto	

Below the settings, a message states: "A password is required to perform this function." followed by a password input field and "Apply" and "Clear" buttons.

Changing Device Setting

The following Device settings may be changed as noted.

- IEEE1284 Timeout
- USB Timeout
- Network (Rx) Timeout
- Network Speed

To alter any of these Device settings, follow these steps:

- 1** Open the Device configuration page.
- 2** In the Device Settings section, select the field you wish to change.
- 3** Enter the new settings.
- 4** At the bottom of the page, type in the system password in the provided field.
- 5** Click [Apply].



Important

- Changes do not take effect until you start the copier. Be sure to wait at least 10 seconds after turning off the main power switch before you turn the copier back on.

5-15. Reset


From this page an administrator can Reset the NIC Firmware or Restore the factory defaults to the device. These functions are password-protected.

MEMO

- In order to alter any of the fields that follow, a password is required. The default password for Web Utilities is "key operator password".

To access the Reset page, follow these steps:

- 1** Open the Network Setup page.
- 2** From the top menu, select the Reset option. The Reset page opens.

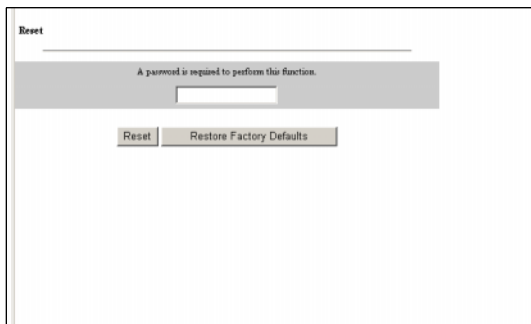

Resetting the Network Function

Re-boot only the network function to enable the newly set parameter values.

MEMO

- This function will not reset the copier or controller. Should you wish to reset the copier or controller, turn off the main power supply, wait at least ten seconds, then reboot the power.

To reset the Network function, follow these steps:

- 1** Open the Reset page.
- 2** At the bottom of the page, type in the system password in the provided field.
- 3** Click the Reset option box. The following dialog box will appear:
The Unit is now being reset. Allow 2 minutes before reconnecting.
- 4** Wait two minutes, then reconnect.

Restoring the Factory Defaults

This feature allows you to switch all settings on the network function back to their factory default (initial) settings. Use this feature when operating a copier in a new environment to clear all settings values. Note that the serial number and the MAC address of the network function will not be cleared.

Should you wish to restore Web Server's factory default settings, follow these steps:

- 1** Open the Reset page.
- 2** At the bottom of the page, type in the system password in the provided field.
- 3** Click the Restore Factory Defaults option box.

III Scanner

This section explains operating methods for scanning with the copier.

Chapter 6 Using the Scanner Functions...	125
Chapter 7 When There is Trouble with the Scanner	181



MEMO

Chapter 6 Using the Scanner Functions

This chapter explains how to use the scanner functions.


- 6-1. Selecting the Destination 126**
- 6-2. Registering Destinations 151**
- 6-3. Setting Scanner Functions 164**
- 6-4. Scanning Documents 165**

6-1. Selecting the Destination


Select the destination for scanned data as [E-Mail] , [FTP] or [PC(SMB)].

Operate from [Scanner mode basic] screen.

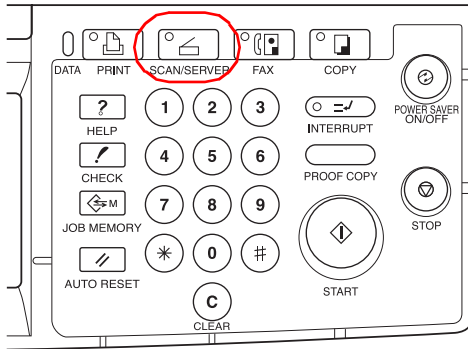


1 Touch the  (SCAN/SERVER) button on the control panel.

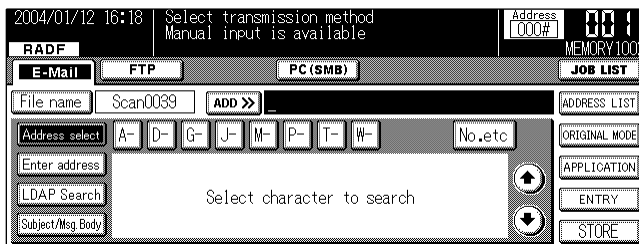

→ The [Scanner mode basic] screen is displayed on the LCD screen.



For subsequent operations, refer to the following.

- Scan to E-Mail  Page 127
 - Up to 100 destinations can be input manually.
 - When selecting destinations from those already registered, up to 400 can be selected.
 - When specifying from input manually and selecting from those already registered, up to 500 can be sent at the same time.
- Scan to FTP  Page 140
 - You can designate an FTP server to which to scan data.
- Send to a shared folder (Scan to PC(SMB))  Page 146
 - Data cannot be sent to more than one PC at a time.

MEMO




- [E-Mail] , [FTP] and [PC(SMB)] , can be set at the same time.
-

Scan to E-Mail

The scanned data is sent to the specified E-mail address. Input the address and name on the screen and send as an E-mail attached file.

Multiple destinations can be selected.

There are three ways to select a destination: inputting the destination manually, selecting the destination from previously registered destinations or searching the destination from the data registered on the LDAP server.


- Inputting the destination manually ( Page 127)
- Selecting the destination from the destinations already registered ( Page 130)
- Selecting from the LDAP server ( Page 132)

Limitation

- Up to 100 destinations can be input, including destinations input manually and destinations selected from the LDAP server.
- When selecting destinations from those already registered, up to 400 can be selected.
- When destinations are selected using all three methods (manually inputting the destinations, selecting them from the LDAP server or selecting them from the previously registered destinations), data can be sent to a maximum of 500 destinations at a time.


Inputting the destination manually

- 1 Touch the [E-Mail] key on [Scanner mode basic] screen.
→ [E-Mail] is displayed inverted. The [E-Mail] screen is displayed.
- 2 Touch the [File name] key.

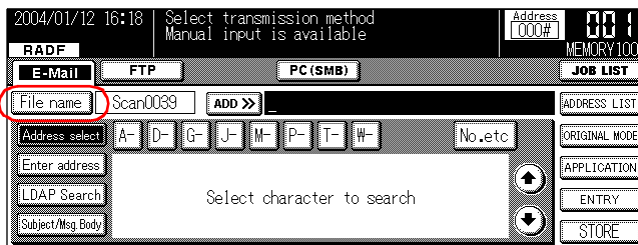

→ The [Data Input] screen is displayed.

3 Input the file name for the scan data.

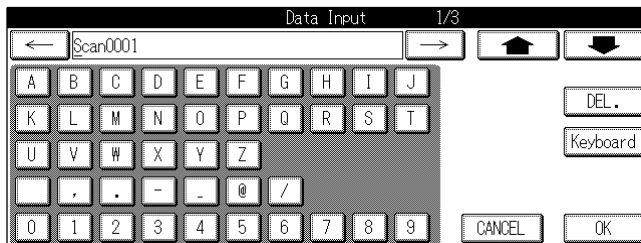


MEMO

- The default file name is Scan****.
On the actual display, the asterisk (****) will be replaced by the total number of scans (0001-9999) performed since the machine has been turned on.
- Up to 26 alphanumeric characters can be input for the file name.
For details on character input, refer to [3-1. Inputting Text] (Reference) Page 16).
- The filename extension [.tif] or [.pdf] is added automatically to the filename.

4 Touch the [OK] key.


→ The display returns to the [Scanner mode basic] screen.

5 Touch the [Enter address] key.

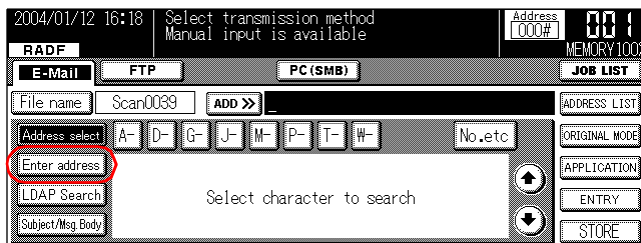


→ The [Data Input] screen is displayed.

6 Touch the character keys to input the E-mail address.

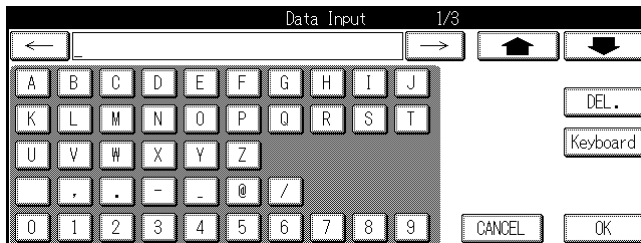

MEMO

- Up to 60 alphanumeric characters can be input for the file E-mail address.
For details on character input, refer to [3-1. Inputting Text] (Reference) Page 16).

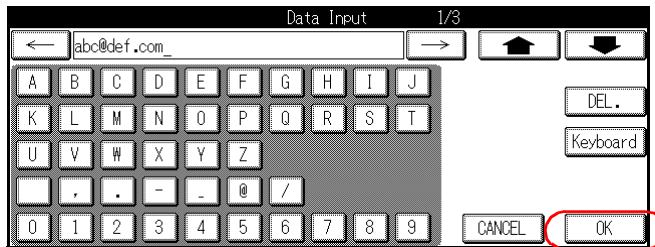7 Touch the [OK] key.

→ The display returns to the [E-Mail] screen.

To add a destination, touch the [ADD>>] and repeat the procedures outlined in steps 5 to 7 above.

MEMO

- When destinations are manually input, up to 100 destinations can be set, including destinations selected from the LDAP server.


For more information, refer to [Subject and Body] ( Page 137).

Selecting the destination from destinations already registered

MEMO


- For details on registering a box, refer to [6-2. Registering Destinations] ([Reference](#) ●●● Page 151).

1 Touch the [E-Mail] key on [Scanner mode basic] screen.

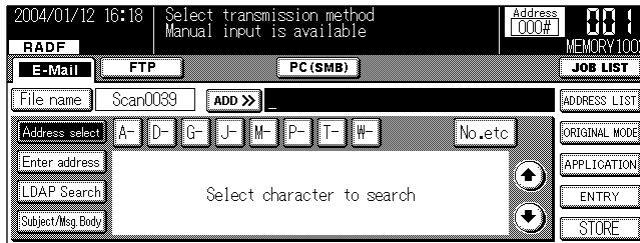


→ [E-Mail] is displayed inverted. The [E-Mail] screen is displayed.

2 Touch the [File name] key.

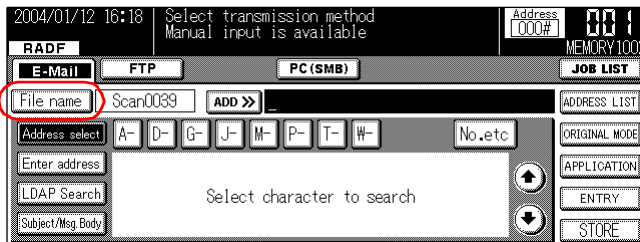

→ The [Data Input] screen is displayed.

3 Input the file name for the scan data.

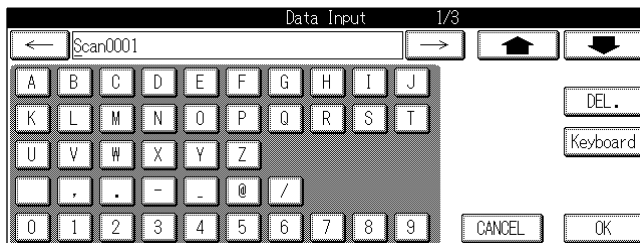

MEMO

- Up to 26 alphanumeric characters can be input for the file name.
For details on character input, refer to [3-1. Inputting Text] ([Reference](#) ●●● Page 16).
- The filename extension [.tif] or [.pdf] is added automatically to the filename.

4 Touch the [OK] key.

→ The display returns to the [Scanner mode basic] screen.

5 Select the group registered from [A-] - [No. etc].

2004/01/12 16:18 Select transmission method
Manual input is available

Address 000# MEMORY 100%

RADF

E-Mail FTP PC(SMB) JOB LIST

File name Scan0039 ADD >>

Address select A- D- G- J- M- P- T- W- No.etc

Enter address

LDAP Search Select character to search

Subject/Msg Body

ADDRESS LIST ORIGINAL MODE APPLICATION ENTRY STORE

→ The registration is displayed in the selected group.

6 Select the destination from the destination list.

Touch the [] or [] key to switch the screen.

2004/01/12 16:18 Select transmission method
Manual input is available

Address 000# MEMORY 100%

RADF

E-Mail FTP PC(SMB) JOB LIST

File name Scan0039 ADD >>

Address select A- D- G- J- M- P- T- W- No.etc

Enter address 000 KMBT 001 KMBT1 002 KMBT2

LDAP Search 003 KMBT3 004 KMBT4 005 KMBT6

Subject/Msg Body 006 KMBT7 100 7145A 101 7145B

ADDRESS LIST ORIGINAL MODE APPLICATION ENTRY STORE

→ The selected destination is displayed inverted.

2004/01/12 16:18 Select transmission method
Manual input is available

Address 000# MEMORY 100%

RADF

E-Mail FTP PC(SMB) JOB LIST

File name Scan0039 ADD >> E000 : KMBT

Address select A- D- G- J- M- P- T- W- No.etc

Enter address 000 KMBT 001 KMBT1 002 KMBT2

LDAP Search 003 KMBT3 004 KMBT4 005 KMBT6

Subject/Msg Body 006 KMBT7 100 7145A 101 7145B

ADDRESS LIST ORIGINAL MODE APPLICATION ENTRY STORE


MEMO

- Up to 400 destinations can be selected at the same time.

For more information, refer to [Subject and Body]([Reference](#)) >>> Page 137).


Selecting from the LDAP server

1 Touch the [E-Mail] key on [Scanner mode basic] screen.

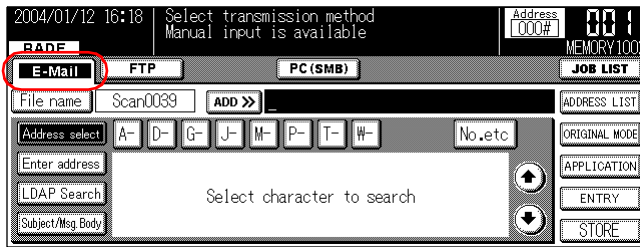


→ [E-Mail] is displayed inverted. The [E-Mail] screen is displayed.

2 Set the file name for scanned data. Touch the [File name] key.

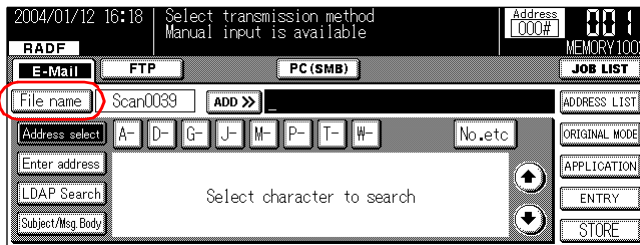

→ The [Data Input] screen is displayed.

3 Input the file name for the scan data.

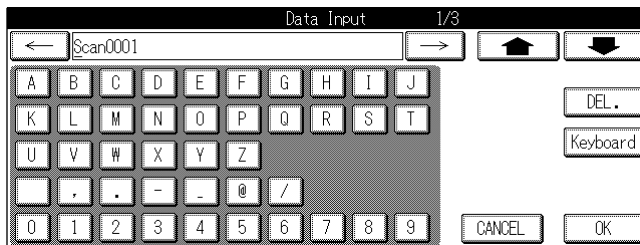

MEMO


- Up to 26 alphanumeric characters can be input for the file name.
For details on character input, refer to [3-1. Inputting Text] (Reference ●●● Page 16).
- The filename extension [.tif] or [.pdf] is added automatically to the filename.

4 Touch the [OK] key.

→ The display returns to the [Scanner mode basic] screen.


5 Touch [LDAP Search] key.

When [ON] is selected for [User authentication] in the key operator mode, the user authentication screen is displayed.

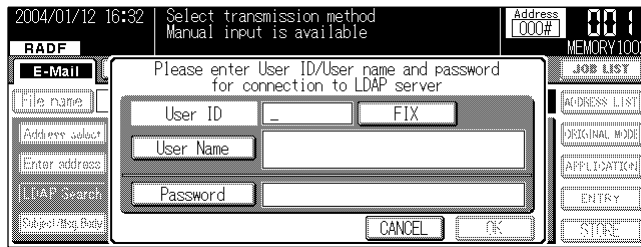

→ Go to Step 6.

When [OFF] is selected for [User authentication] in the key operator mode, if a successful attempt to access the LDAP server has been made, the [LDAP search (simple)] screen is displayed.

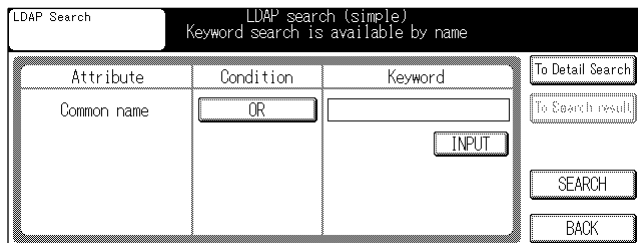

→ Go to Step 9.

MEMO

- For setting [User authentication], confirm with the copier's administrator.


6 Enter the User ID for the user account (E.K.C.) using the ten-keys on the control panel and press [FIX] or touch [User Name] key and input the user name on the [Data Input] screen.

MEMO

- Confirm the User ID and User Name with the system administrator or network administrator.
- Only half-width alphanumeric characters can be used for user names.


7 Touch [Password] key and enter the password on the [Data Input] screen.

8 Touch the [OK] key.

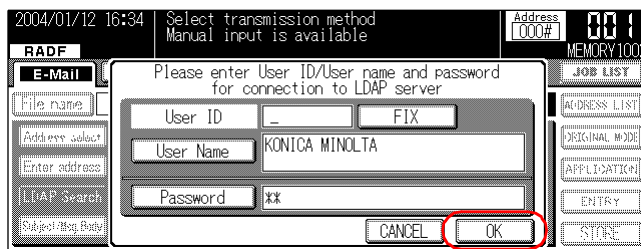

→ When the LDAP server is successfully accessed, the [LDAP search (simple)] screen is displayed.

9 Touch [Condition] key.

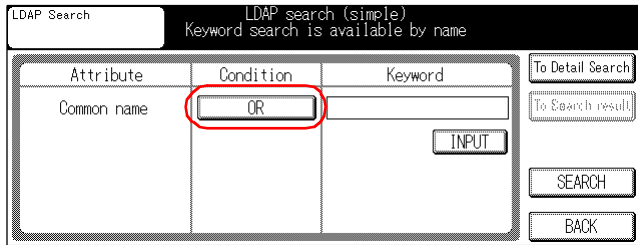


→ The popup menu for setting condition is displayed.

MEMO


- By touching [To Detail Search] key, detailed search using the four types of [Attribute] can be performed.
- Up to four attributes can be selected from eight types of attributes on the [LDAP search (detail)] screen to perform a search.
- Only the [Common name] can be used as the filter on the [LDAP search (simple)] screen.

10 Select the options you wish to use from the condition on the touch panel and touch the [OK] key.

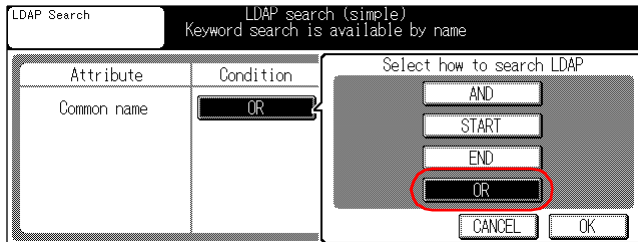


→ The popup menu for setting condition is closed.

11 Touch [Input] in the [Keyword] field on the touch panel.

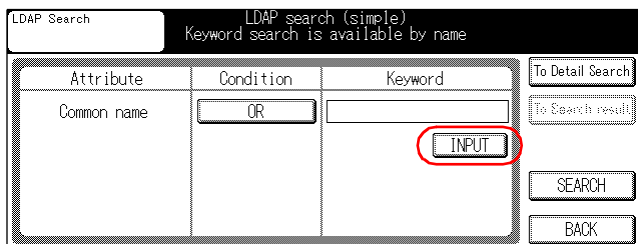

→ The [Data Input] screen is displayed.

12 Touch the characters on the touch panel to enter the keyword for a search.

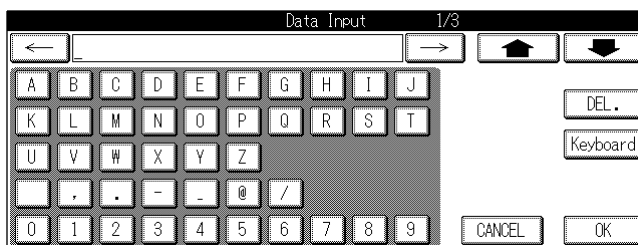

MEMO

- Up to 40 characters can be input for the keyword for a search using alphanumerics or symbols.

13 Touch the [OK] key.

→ The [LDAP search (simple)] screen is displayed.

14 Touch the [SEARCH] key.

→ A search is performed and the [LDAP search address list] screen is displayed.

MEMO

- When errors have occurred during a search, the popup menu is displayed. Touch the [BACK] button on the error display screen to return to the [LDAP search (simple/detail)] screen.

15 Select the transmission destination from the search results list.

Touch the [001~] - [081~] or [↑] [↓] key to switch the display.

→ Selected transmission destination is highlighted.

Limitation

- Up to 100 search results are displayed. Search results in excess of 100 cannot be either displayed or selected.

In such instances, increase the search condition using detailed search and search again.


MEMO

- Up to 100 destinations can be input, including manual input destinations and selections by the LDAP server.

Touching [E-Mail address Display] key on the touch panel at this point displays the E-Mail address. Touching [ALL CLEAR] key clears all the transmission destinations that have been selected. By touching [Detail] key, the details of the selected transmission destinations can be checked.



16 When registering a destination displayed on the search result list, touch the [Address Entry] key.

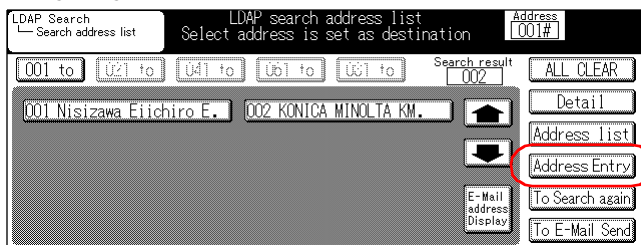

→ The [E-Mail Register] screen is displayed.

MEMO

- For how to register transmission destinations, refer to [6-2. Registering Destinations] (Reference) ●● Page 151).

17 Touch the [BACK] or [ENTRY] key to return to the [LDAP search address list] screen.

18 To continue searching, touch [To search again] key and repeat steps 9 to 16 above.


19 When all destinations for transmission have been selected, touch the [To E-Mail Send] key to return to the [Scanner mode basic] screen.

For more information, refer to [Subject and Body] (Reference) ●● Page 137).

Subject and Body

The [Subject] and [Body] selected by the [Default Setting] on the [Registration/Edit] screen are displayed for the subject and body defaults. Refer to [Registration/Edit] for the setting method ([Reference](#) ●●● Page 156, 157). For [From Address], the [Administrator's Mail Address] is selected as the default.

1 Touch [Subject/Msg. Body].

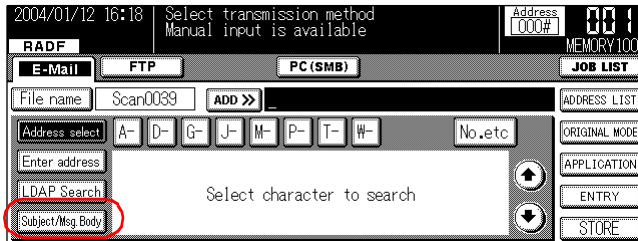


→ The [Subject/body input] screen is displayed.

MEMO


- The subject and text body selected by default are displayed for [Subject] and [Body].

2 Touch the [Subject] key.

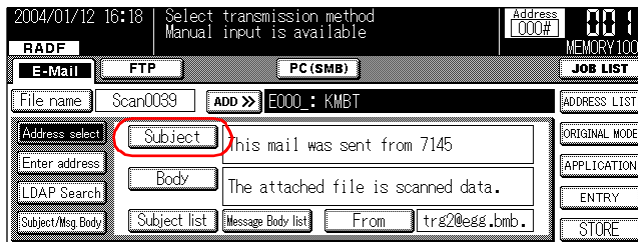

→ The [Data Input] screen is displayed.

3 Touch the character keys to input the subject.

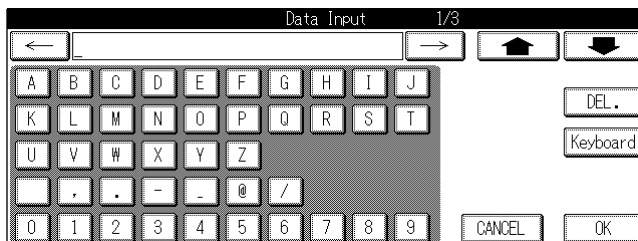


MEMO

- Up to 63 alphanumeric characters can be input for the subject.
For details on character input, refer to [3-1. Inputting Text] ([Reference](#) ●●● Page 16).
- If you register a subject, the subject can be used from the [Subject list] screen.
For details on registering a subject, refer to [6-2. Registering Destinations] ([Reference](#) ●●● Page 151).

4 Touch the [OK] key.


→ The display returns to the [Subject/body input] screen.

5 Touch the [Body] key.

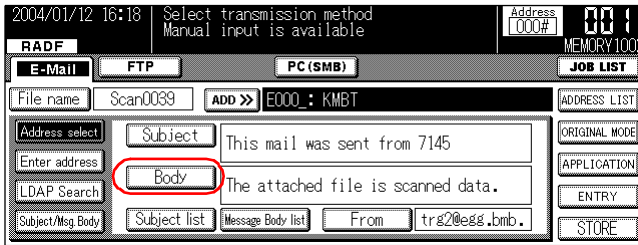

→ The [Data Input] screen is displayed.

6 Touch the character keys to input the body of the E-mail.

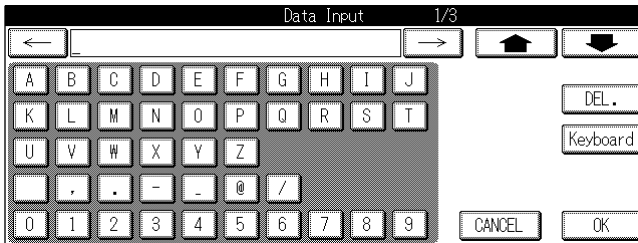


MEMO

- Up to 254 alphanumeric characters can be input for the body.
For details on character input, refer to [3-1. Inputting Text] (Reference) ●●● Page 16).
- If you register a body, the body can be used from the [Message body] screen.
For details on registering the body, refer to [6-2. Registering Destinations] (Reference) ●●● Page 151).

7 Touch the [OK] key.

→ The display returns to the [Subject/Msg./body input] screen.

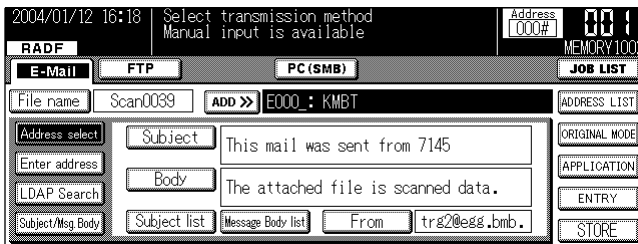


→ The display returns to the [E-mail input] screen.

8 Touch the [From] key.

→ The [From Address] screen is displayed.



- **Key operator E-Mail**
Set the E-mail address of key operator as the sender's address.
- **User mail address**
Enter the user ID with the ten-key on the control panel.

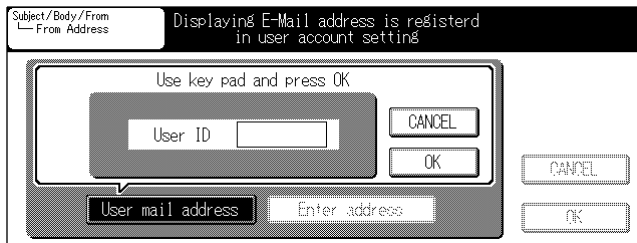

E-mail address registered to an user's account is set to the sender's address.


- **Enter address**
Enter an E-mail address at [Data Input] screen.

9 Touch [OK] key.

→ The display returns to the [Subject/body input] screen.

MEMO



- When you touch the [CANCEL] key on the LCD screen, the destination is not set and the display returns to the [Subject/body input] screen.

For more information, refer to [6-3. Setting Scanner Functions] ( Page 164).

Scan to FTP

Scanned data can be uploaded to the specified FTP server. Input the FTP server address, login password, etc.

There are two methods for inputting the destination: Inputting manually and selecting from the destinations already registered.

- Input the destination manually ( Page 140)
- Select the destination from the destinations already registered ( Page 144)

Limitation

- It is not possible to select multiple destinations at the same time.

Inputting the destination manually

This inputs the information for the destination FTP server manually.


1 Touch the [FTP] key on [Scanner mode basic] screen.

→ [FTP] is displayed inverted. The [FTP select] screen is displayed.

2 Touch the [File name] key.

→ The [Data Input] screen is displayed.

3 Input the file name for the scan data.

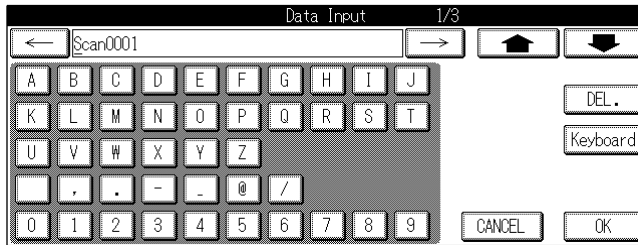


MEMO

- The default file name is Scan****.
On the actual display, the asterisk (****) will be replaced by the total number of scans (0001-9999) performed since the machine has been turned on.
- Up to 26 alphanumerics can be input for the file name.
For details on character input, refer to [3-1. Inputting Text] (Reference) Page 16).
- The filename extension [.tif] or [.pdf] is added automatically to the filename.

4 Touch the [OK] key.

→ The display returns to the [Scanner mode basic] screen.

5 Touch the [Enter address] key.

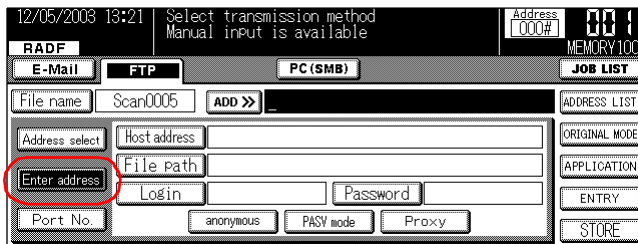

→ The [FTP registration/edit] screen is displayed.

6 Touch the [Host address] key, then input the IP address of the FTP server to send the data to or the URL.

MEMO

- Up to 63 alphanumerics and symbols can be input as the [Host address].

7 Touch the [OK] key.

→ The display returns to the [FTP registration/edit] screen.

8 Touch the [File path] key and input the FTP server file storage location.

MEMO

- Up to 127 alphanumerics and symbols can be input as the [File path].

9 Touch the [OK] key.

→ The display returns to the [FTP registration/edit] screen.

10 Touch the [Login] key and input the account necessary for logging on to the FTP server.

MEMO

- Up to 47 alphanumeric and symbols can be input as the [Login].
- Touch the [anonymous] key for logging onto an FTP server that does not require an account.

11 Touch the [OK] key.

→ The display returns to the [FTP registration/edit] screen.

12 Touch the [Password] key and input the Password necessary for logging on to the FTP server.



- When [anonymous] is selected for the [Login], input the sender's E-mail address as the [Password]. Password cannot be omitted.

MEMO

- Up to 31 alphanumeric can be input for the file name.
For details on character input, refer to [3-1. Inputting Text] (Reference ●●● Page 16).

13 Touch the [OK] key.

→ The display returns to the [FTP registration/edit] screen.

14 If necessary, touch [PASV mode] or [Proxy] key for settings.


MEMO

- For details regarding [PASV mode] and [Proxy], please ask your administrator.

15 Touch the [Port No.] key.

This specifies the Port No. used by the FTP server.

There is normally no need to change this.

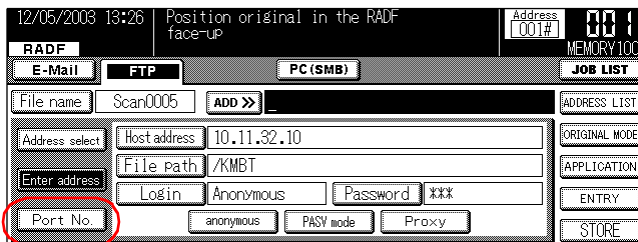

→ The [Port No. input] screen is displayed.

16 Input the User ID with [0] - [9] or using the Control panel.

The screenshot shows the scanner's control panel interface. At the top, it displays the date and time (12/05/2003 13:27), the position (original in the RADF face-up), and the address (001#). Below this, there are several menu options: E-Mail, FTP, PC(SMB), and JOB LIST. The PC(SMB) menu is currently selected. Underneath, there is a 'File name' field containing 'Scan0005' and an 'ADD >>' button. To the right of this is an 'ADDRESS LIST' button. Below the file name field, there is an 'Address select' button and a 'Port No.' field containing '1-65535'. To the right of the port number field is a numeric keypad with buttons for digits 1 through 9 and 0. Below the port number field is a 'CLEAR' button. To the right of the numeric keypad is a 'STORE' button. Other buttons visible on the right side include 'ORIGINAL MODE' and 'APPLICATION'.




Important

- Changing the port number improperly can create obstructions on the network. Do not change the port number without instructions from the network administrator.

MEMO

- The [Port No.] can be up to five characters.
- "21" and "00021" will be counted as a same value.

For more information, refer to [6-3. Setting Scanner Functions] ( Page 164).

Selecting the destination from the destinations already registered


MEMO

- For details on registering destination, refer to [6-2. Registering Destinations] ([Reference](#) ●●● Page 151).

1 Touch the [FTP] key on [Scanner mode basic] screen.


→ [FTP] is displayed inverted.

2 Touch the [File name] key.

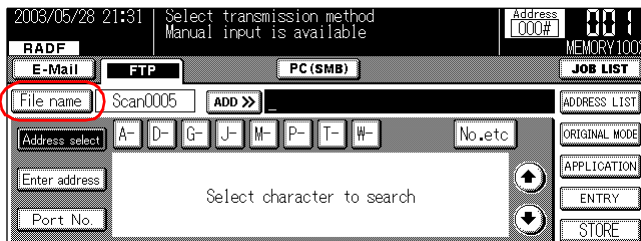

→ The [Data Input] screen is displayed.

3 Input the filename for the scan data.

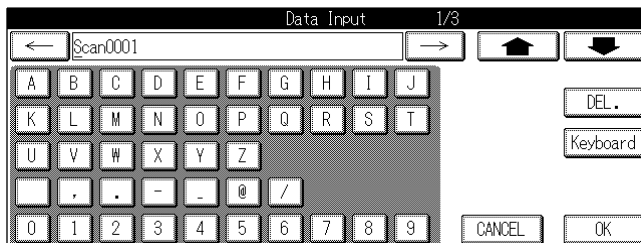


MEMO

- Up to 26 alphanumeric characters can be input for the file name.
For details on character input, refer to [3-1. Inputting Text] ([Reference](#) ●●● Page 16).
- The filename extension [.tif] or [.pdf] is added automatically to the filename.

4 Touch the [OK] key.

→ The display returns to the [Scanner mode basic] screen.


5 Select the group registered from [A-] - [No. etc].

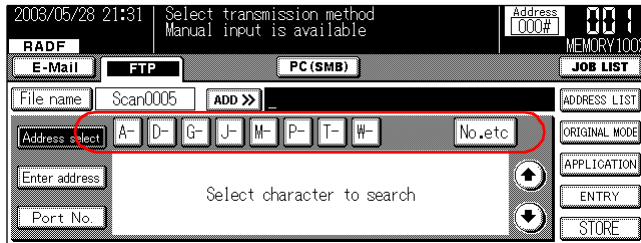

→ The registration is displayed registered in the selected group.

6 Select the destination from the destination list.

Touch the [↑] or [↓] key on the LCD screen to switch the screen.

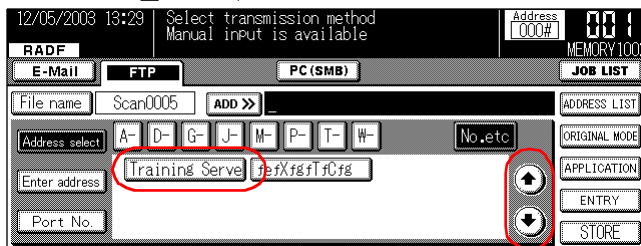

→ The selected destination is displayed inverted.

Limitation

- It is not possible to select multiple destinations at the same time.

For more information, refer to [6-3. Setting Scanner Functions] (Reference ●●● Page 164).

Send to a Shared Folder (Scan to PC (SMB))

This function sends scanned data to a specified shared folder of a PC. Enter the address, login password, etc., of the destination PC using the copier's touch panel.

There are two methods of selecting a destinations: manually inputting a destination and selecting a destination from previously registered destinations.


- Inputting the destination manually ( Page 140)
- Selecting the destination from the destinations already registered ( Page 144)



- It is not possible to select multiple destinations at the same time.
- When a shared folder is not set for the PC to transmit or the access rights for the shared folder have not been set for "Write (full control)", transmission cannot be performed. For setting shared folders, refer to the Windows operation manual.
- Transmission by Unix/Linux to the Samba server cannot be performed.
- The PC may not operate normally depending on the Windows domain environment. In such instances, change the setting of the PC to "work group" for transmission.


Inputting the destination manually

- 1 Touch the [PC(SMB)] key on [Scanner mode basic] screen.

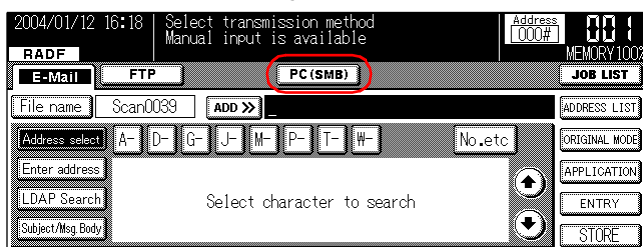


→ The [PC(SMB) select] screen is displayed.

- 2 Set the file name of scanned data. Touch the [File name] key.

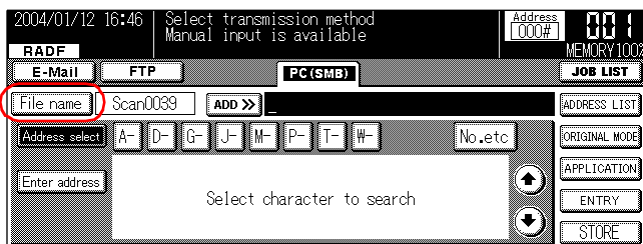

→ The [Data Input] screen is displayed.

3 Input the file name for the scan data.

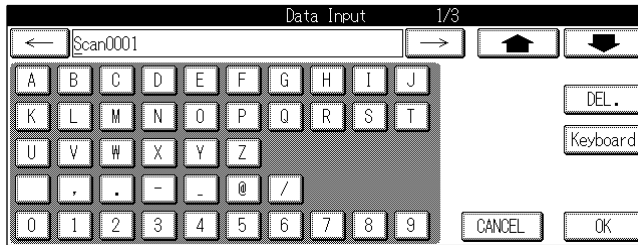


MEMO

- The default file name is Scan****.
On the actual display, the asterisk (****) will be replaced by the total number of scans (0001-9999) performed since the machine has been turned on.
- Up to 26 half-width characters (13 full-width characters) can be input as a file name.
For details on character input, refer to [3-1. Inputting Text] (Reference ●●● Page 16).
- The filename extension [.tif] or [.pdf] is added automatically to the filename.

4 Touch the [OK] key.

→ The display returns to the [Scanner mode basic] screen.

5 Touch the [Enter address] key.

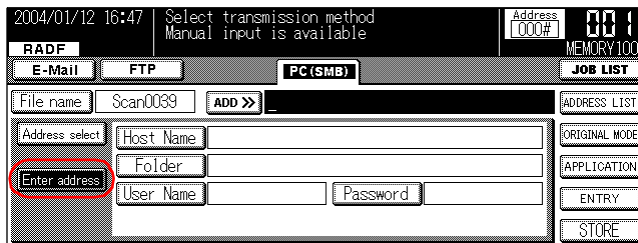

→ The [PC(SMB) Input] screen is displayed.

6 Touch the [Host Name] key.

→ The [Data Input] screen is displayed.

7 Input the name of PC to which data is to be sent.

MEMO

- Up to 15 characters can be entered for [Host Name] using alphanumerics or symbols.
- Input [Host Name] for the computer name using Windows.

8 Touch the [OK] key.

→ The [PC(SMB) Input] screen is displayed.

9 Touch the [Folder] key.

→ The [Data Input] screen is displayed.

10 Input the location of the shared folder.



Important

- When the location of a shared folder is not specified correctly, scanned data cannot be sent.
Input example: When sending data to [PushScan] in the [Data] folder of the PC:
/Data/PushScan

MEMO

- Up to 254 characters can be entered for [Folder] using alphanumerics or symbols.

11 Touch the [OK] key.

→ The [PC(SMB) Input] screen is displayed.

12 Touch the [User Name] key.

→ The [Data Input] screen is displayed.

13 Input the user name of a user having access rights to a shared folder on the PC to which data is sent.

MEMO

- Up to 63 characters can be entered for [User Name] using alphanumerics or symbols.

14 Touch the [OK] key.

→ The [PC(SMB) Input] screen is displayed.

15 Touch the [Password] key.

→ The [Data Input] screen is displayed.


16 Input the password of a user having access rights to a shared folder for the PC to which data is sent as required.

MEMO

- Up to 63 characters can be input for [Password] using alphanumerics or symbols. Entered password is displayed by asterisks(*).

17 Touch the [OK] key.

→ The [PC(SMB) Input] screen is displayed.


For more information, refer to [6-3. Setting Scanner Functions] ( Page 164).

Selecting the destination from the destinations already registered

MEMO


- For details on registering destination, refer to [6-2. Registering Destinations] ([Reference](#)) (Page 151).

1 Touch the [PC(SMB)] key on [Scanner mode basic] screen.

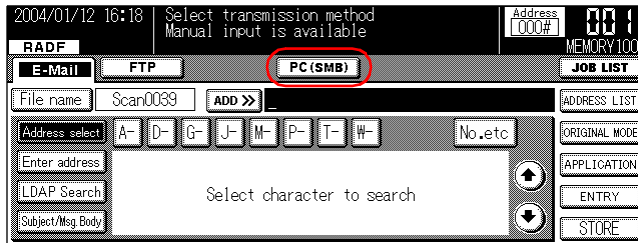


→ The [PC(SMB) select] screen is displayed.

2 Set the file name for scanned data. Touch the [File name] key.

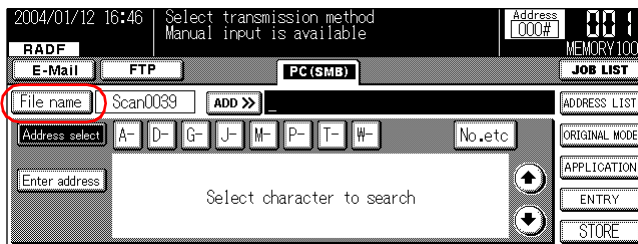

→ The [Data Input] screen is displayed.

3 Input the filename for the scan data.

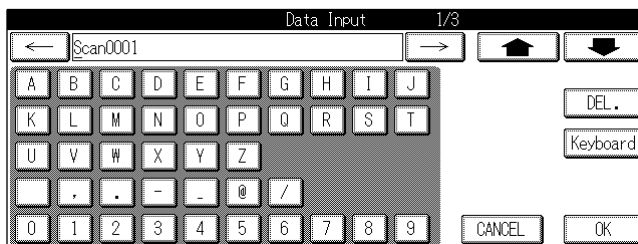

MEMO

- The default file name is Scan****.
On the actual display, the asterisk (****) will be replaced by the total number of scans (0001-9999) performed since the machine has been turned on.
- Up to 26 half-width characters (13 full-width characters) can be input as a file name.
For details on character input, refer to [3-1. Inputting Text] ([Reference](#)) (Page 16).
- The filename extension [.tif] or [.pdf] is added automatically to the filename.

4 Touch the [OK] key.


→ The display returns to the [Scanner mode basic] screen.

5 Select the group registered from [A-] - [No. etc].

→ The registration is displayed registered in the selected group.

6 Select the destination from the destination list.

Touch the [↑] or [↓] key on the LCD screen to switch the screen.

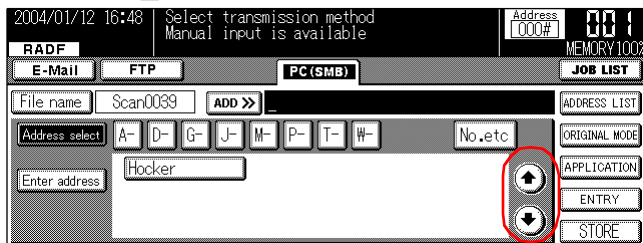

→ The selected destination is displayed inverted.



- It is not possible to select multiple destinations at the same time.
-
-

For more information, refer to [6-3. Setting Scanner Functions] ( Page 164).

6-2. Registering Destinations


Registering destinations for scanned data

1 Operate from the [Scanner mode basic] screen.

MEMO


- For details, refer to [6-1. Selecting the Destination] (Reference) >>> Page 126).

2 Touch the [ENTRY] key.

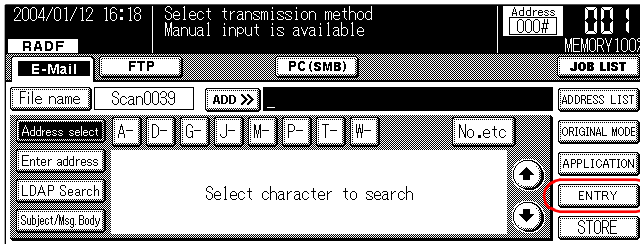

→ The [Registration/Edit Menu] screen is displayed.

3 Select the registration item.

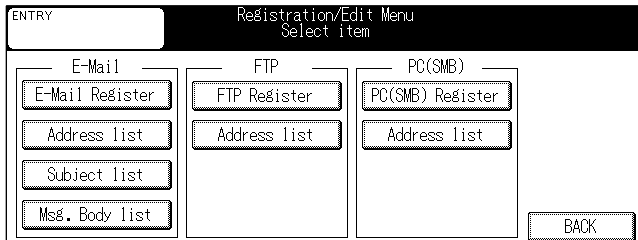

MEMO

- If the hard disk option is connected, box related items are displayed, while PC (SMB) related items are displayed on page 2. Switch the screen by using the [↑] or [↓] keys on the touch panel.

E-Mail

- [E-Mail Register]
Registering a new E-mail address.
→The [E-Mail registration/edit] screen is displayed. (Reference) >>> Page 152)
- [Address list]
The registered E-mail destinations are displayed in a list for editing and deleting.
→The [E-Mail list] screen is displayed. (Reference) >>> Page 155)
- [Subject list]
Registering a new E-Mail subject.
→The [Subject list] screen is displayed. (Reference) >>> Page 156)

- [Msg. Body list]
Registering a new E-mail body.
→The [Message Body list] screen displayed. (Reference) ●●● Page 157)

FTP

- [FTP Register]
Registering a new FTP destination server.
→The [FTP registration/edit] screen is displayed. (Reference) ●●● Page 158)
- [Address list]
The registered FTP destinations are displayed in a list for editing and deleting.
→The [FTP list] screen is displayed. (Reference) ●●● Page 160)

PC(SMB)

- [PC(SMB) Register]
Newly registers PC(SMB) as a destination.
→The[PC(SMB) registration/edit] screen is displayed. (Reference) ●●● Page 161)
- [Address list]
Displays the list of PC (SMB) for destinations which have been registered for editing and deleting.
→The [PC(SMB) list] screen is displayed. (Reference) ●●● Page 163)

E-Mail registration/edit screen

MEMO

- 400 E-Mail addresses can be registered.
- E-Mail addresses are used commonly with the Internet fax function.

ENTRY
E-Mail regi/edit

E-Mail registration/edit

No. 002 (000-399)

E-Mail Address

Name

Character to search A- D- G- J- M- P- T- W- No.etc.

ENTRY

BACK


1 Input the registration number from 000 to 399 with the copier's ten-key.

MEMO

- If you input the wrong number, touch the [No.] key or press the [STOP] button or the [CLEAR] button on the control panel to erase the input number.

2 Touch the [E-Mail Address] key.

→ The [Data Input] screen is displayed.

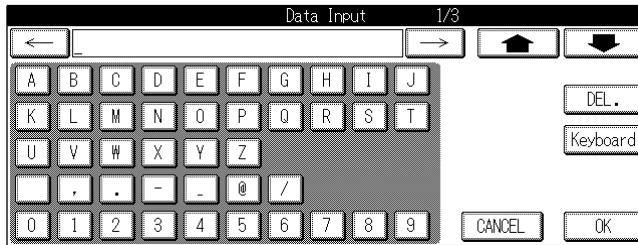3 Use the character keys to input the address.**MEMO**


- Up to 60 alphanumeric characters and symbols can be input as the [E-Mail address].
For details on character input, refer to [3-1. Inputting Text] ([Reference](#)) ●●● Page 16).

4 Touch the [OK] key.

→ The display returns to the [E-Mail registration/edit] screen.

5 Touch the [Name] key.

→ The [Data Input] screen is displayed.

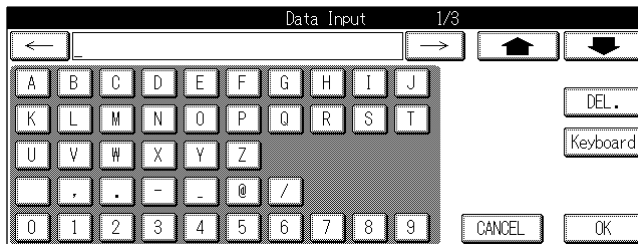6 Use the character keys to input the registration name.**MEMO**

- The [Name] can be up to 24 characters.
For details on character input, refer to [3-1. Inputting Text] ([Reference](#)) ●●● Page 16).

7 Touch the [OK] key.

→ The display returns to the [E-Mail registration/edit] screen.

8 Select [A-] - [No. etc] to set the registration group.

When you register a group, it is displayed in the groups registered with the [E-Mail] screen.

→ The selected group is displayed in the [Character to search] column.

9 Touch the [ENTRY] key.

The screenshot shows a screen titled "E-Mail registration/edit". At the top left, there is a small box with "ENTRY" and "E-Mail regi./edit". Below this, there are several input fields: "No." with the value "002 (000-399)", "E-Mail Address" with "WWW@ABC.COM", and "Name" with "KMBT". Below these fields is a row of buttons labeled "Character to search" with options "A-", "D-", "G-", "J-", "M-", "P-", "T-", "W-", and a "No.etc" field. At the bottom right, there is a "BACK" button. The "ENTRY" button is highlighted with a red circle.

→ The [No.], [E-Mail Address], [Name] and [Character to search] are registered.
To continue registering, repeat Steps 1-9.

MEMO

- If the [No.], [E-Mail Address], [Name] or [Character to search] is not input, [ENTRY] is not enabled.

10 Touch the [BACK] key.

→ The [Registration/edit menu] screen is displayed.

E-Mail list screen

- 1** Use the [↑], [↓] and [↕], [↓] keys and select the address.



→ The selected address is displayed inverted.

MEMO

- The address is selected with [↑][↓].
- Switch the page with [↕][↓].

- 2** Touch [EDIT] or [ERASE] key.

→ When you touch the [EDIT] key, the [E-Mail registration/edit] screen is displayed.
When [ERASE] is touched, the selected address is deleted.

- 3** Touch the [BACK] key.

→ The [Registration/Edit Menu] screen is displayed.

E-Mail subject list screen

MEMO

- Up to 10 E-mail subjects can be registered.
- E-mail subject is commonly used with the Internet fax function.

1 Use the [↑][↓] and [▲][▼] keys to select the subject.



→ The selected subject is displayed inverted.

MEMO

- The subject is selected with [↑][↓].
- Switch the page with [▲][▼].


2 Touch the [Default] on the control panel to select the subject to be displayed as the default.

→ “*” is displayed next to the subject selected as the default.

3 Touch the [EDIT] or [ERASE] key.

→ When you touch the [EDIT] key, the [Data Input] screen is displayed. When the [ERASE] key is touched, the selected subject is deleted.

4 Use the character keys to input the subject.

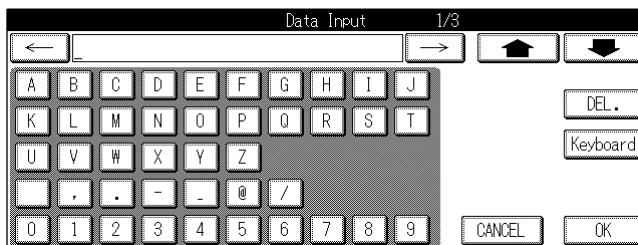

MEMO

- Up to 63 alphanumeric characters and symbols may be input for the [Subject].
For details on character input, refer to [3-1. Inputting Text] ([Reference](#)) ●●● Page 16).

5 Touch the [OK] key.

→ The display returns to the [Subject list] screen.

6 Touch the [BACK] key.

→ The [Registration/Edit Menu] screen is displayed.

E-Mail message body list screen

MEMO

- Up to 10 E-Mail message bodies can be registered.
- E-Mail message body is used commonly with the Internet fax function.

1 Use the [↑][↓] and [▲][▼] keys to select the body.



→ The selected body is displayed inverted.

MEMO

- The body is selected with [↑][↓].
- Switch the page with [▲][▼].


2 Touch the [Default] on the control panel to select the body to be displayed as the default.

→ “*” is displayed next to the body selected as the default.

3 Touch the [EDIT] or [ERASE] key.

→ When you touch the [EDIT] key, the [Data Input] screen is displayed. When [ERASE] key is touched, the selected body is deleted.

4 Use the character keys to input the body.

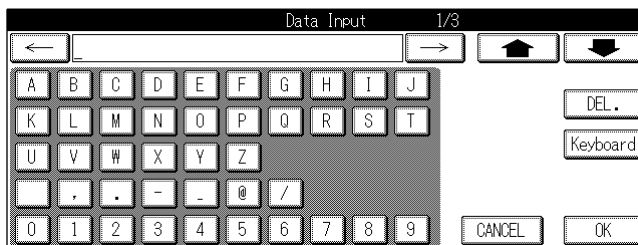

MEMO

- Up to 254 alphanumeric characters and symbols can be input as the [Body].
For details on character input, refer to [3-1. Inputting Text] ([Reference](#)) ●●● Page 16).

5 Touch the [OK] key.

→ The display returns to the [Message body list] screen.

6 Touch the [BACK] key.

→ The [Registration/Edit Menu] screen is displayed.

FTP registration/edit screen

MEMO

- Up to 50 FTP names can be registered.

- 1 Touch the **[Name]** key and specify the name of the profile for the FTP server to send to.
This inputs the destination name displayed in the destination list.

MEMO

- The [Name] can be up to 24 characters.
For details on character input, refer to [3-1. Inputting Text] ([Reference](#)) >>> Page 16).

- 2 Touch the **[OK]** key.
→ The display returns to the [FTP registration/edit] screen.
- 3 Touch the **[Host address]** key, then input the IP address of the FTP server to send the data to.

MEMO

- Up to 63 alphanumeric characters and symbols can be input as the [Host address].

- 4 Touch the **[OK]** key.
→ The display returns to the [FTP registration/edit] screen.

- 5 Touch the **[File path]** key and input the FTP server file storage location.

MEMO

- Up to 127 alphanumeric characters and symbols can be input as the [File path].

- 6 Touch the **[OK]** key.
→ The display returns to the [FTP registration/edit] screen.

- 7 Touch the **[Login]** key and input the account necessary for logging on to the FTP server.

MEMO

- Up to 47 alphanumeric characters and symbols can be input as the [Login].
- Touch the [anonymous] key for logging onto an FTP server that does not require an account.

- 8 Touch the **[OK]** key.
→ The display returns to the [FTP registration/edit] screen.

9 Touch the [Password] key and input the password necessary for logging on to the FTP server.



- When [anonymous] is selected for the [Login], input the sender's address as the [Password]. Password input cannot be omitted.

MEMO

- Up to 31 alphanumeric characters and symbols can be input as the [Password]. Password is displayed with "*".

10 Touch the [OK] key.

→ The display returns to the [FTP registration/edit] screen.

11 If necessary, touch [PASV mode] or [Proxy] key for settings.

MEMO

- For details regarding [PASV mode] and [Proxy], please ask your administrator.

12 Touch the [Port No.] key.

This specifies the Port No. used by the FTP server.

There is normally no need to change this.

→ The [Port No. input] screen is displayed.

13 Input the port number with the [0] - [9] key.



Important

- Changing the port number improperly can create obstructions on the network. Do not change the port number without instructions from the network administrator.

MEMO

- The [Port No.] can be up to five characters.
- "21" and "00021" will be counted as a same value.


14 Touch the [OK] key.

→ The display returns to the [FTP registration/edit] screen.

15 Touch the [A-] - [No. etc] key to set the registration group.

When you register a group, it is displayed in the groups registered with the [FTP select] screen.
 → The selected group is displayed in the [Character to Search] column.

16 Touch the [ENTRY] key.

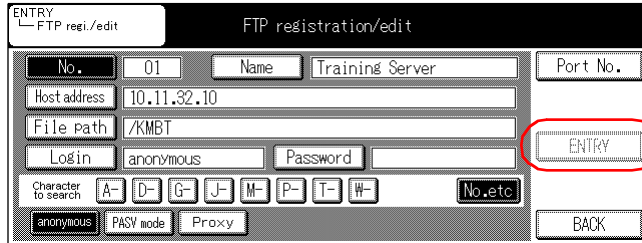

→ The [Name], [Host address], [File path], [Login], [Password], [Character to search] and [Port No.] are registered.

To continue registering, repeat Steps 1-16.

MEMO

- If the [Host address], [File path], [Login], [Password], or [Character to Search] is not input, [ENTRY] is not enabled.

17 Touch the [BACK] key.

→ The [Registration/Edit Menu] screen is displayed.

FTP list screen

1 Use the [↑] [↓] and [↕], [↩] key and select the FTP profile name.



→ The selected profile name is displayed inverted.

MEMO

- The profile name is selected with [↑] [↓].
- Switch the page with [↕] [↩].

2 Touch the [EDIT] or [ERASE] key.

→ When you touch the [EDIT] key, the [FTP registration/edit] screen is displayed. When [ERASE] is touched, the selected FTP profile name is deleted.

3 Touch the [BACK] key.

→ The [Registration/Edit Menu] screen is displayed.

PC(SMB) registration/edit

MEMO

- Up to 256 profile names for PC (SMB) can be registered.

The screenshot shows a software interface for PC(SMB) registration/edit. At the top, it says 'ENTRY' and 'PC(SMB) regi./edit'. Below that, there's a title bar 'PC(SMB) registration/edit'. The main area contains several input fields: 'No.' with the value '003', 'Name' (empty), 'Host Name' (empty), 'Folder' (empty), 'User Name' (empty), and 'Password' (empty). To the right of these fields is an 'ENTRY' button. Below the input fields is a 'Character to search' section with buttons for 'A-', 'D-', 'G-', 'J-', 'M-', 'P-', 'T-', 'W-', and a 'No.etc' button. At the bottom right, there is a 'BACK' button.

1 Touch the [Name] key.

→ The [Data Input] screen is displayed.

2 Enter [Name] for the destination.

→ Input the name of the destination to be displayed on the destination list.

MEMO

- The [Name] can be up to 24 characters.

For details on character input, refer to [3-1. Inputting Text] (Reference ●●● Page 16).

3 Touch the [OK] key.

→ The display returns to the [PC(SMB) registration/edit] screen.

4 Touch the [Host Name] key.

→ The [Data Input] screen is displayed.

5 Enter the name of the PC to which data is sent.

MEMO

- Up to 15 characters can be input for [Host Name] using alphanumerics or symbols.
- Input [Host Name] for the computer name using Windows.

6 Touch the [OK] key.

→ The display returns to the [PC(SMB) registration/edit] screen.

7 Touch the [Folder] key.

→ The [Data Input] screen is displayed.

8 Input the location of a shared folder.



Important

- When the location of a shared folder is not specified correctly, scanned data cannot be sent.
Input example: When sending files to the [PushScan] folder in the [Data] folder on the PC:
/Data/PushScan

MEMO

- Up to 254 characters can be input for [Folder] using alphanumerics or symbols.

9 Touch the [OK] key.

→ The display returns to the [PC(SMB) registration/edit] screen.

10 Touch the [User Name] key.

→ The [Data Input] screen is displayed.

11 Input the user name for a user having access rights to a shared folder of the PC to which files are sent.

MEMO

- Up to 63 characters can be input using alphanumerics or symbols.

12 Touch the [OK] key.

→ The display returns to the [PC(SMB) registration/edit] screen.

13 Touch the [Password] key.

→ The [Data Input] screen is displayed.

14 Input the password for a user name of a user having access rights to a shared folder on the PC to which files are sent as required.

MEMO

- Up to 63 characters can be input for [Password] using alphanumerics or symbols. The password is displayed by asterisks(*).

15 Touch the [OK] key.

→ The display returns to the [PC(SMB) registration/edit] screen.

16 Select [A-] - [No. etc] to set the registration group.

When you register a group, it is displayed in the groups registered with the [PC(SMB) select] screen.

→ The selected group is displayed in the [Character to search] column.

17 Touch the [ENTRY] key.

→ The [Name], [Host Name], [Folder], [User Name], [Password] and [Character to search] are registered.

To continue registering, repeat Steps 1-17.

MEMO

- When [Host Name], [Folder], [User Name] and [Character to search] have not been entered, [ENTRY] is not enabled.

18 Touch the [BACK] key.

→ The [Registration/Edit Menu] screen is displayed.

PC(SMB) address list screen**1 Use the [↑][↓] and [▲][▼] keys to select the PC(SMB) profile name.**

→ The selected profile name is displayed inverted.

MEMO

- The name is selected with [↑][↓].
- Switch the page with [▲][▼].

2 Touch the [EDIT] or [ERASE] key.


→ When you touch the [EDIT] key, the [PC(SMB) registration/edit] screen is displayed. When [ERASE] key is touched, the selected profile name is deleted.

3 Touch the [BACK] key.

→ The [Registration/Edit Menu] screen is displayed.

6-3. Setting Scanner Functions

This section explains the basic functions required for scanning documents with the copier. The settings are made with the [Scanner mode basic] screen on the LCD screen.

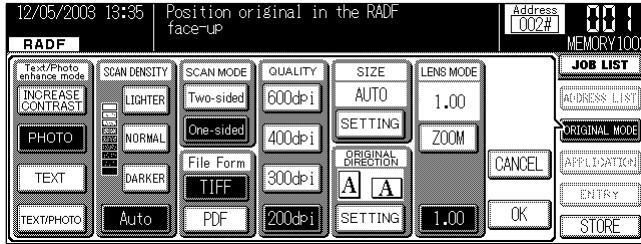

Scanning Mode Usage

When scanning a document, you can select the Real mode which sends the scan data to the internet immediately after one scan operation or the Memory mode which stores the scan data from multiple scans into the copier's memory, then sends it all in one batch.

When scanning documents using the RADF, use the Real mode. When scanning a book or other multi-page document on the platen glass, use the Memory mode.


For details, refer to [6-4. Scanning Documents] (Reference) (Page 165).

6-4. Scanning Documents


This explains the scanning procedure.

Operate from the [Scanner mode basic] screen on the LCD screen.

1 Touch the [ORIGINAL MODE] key.

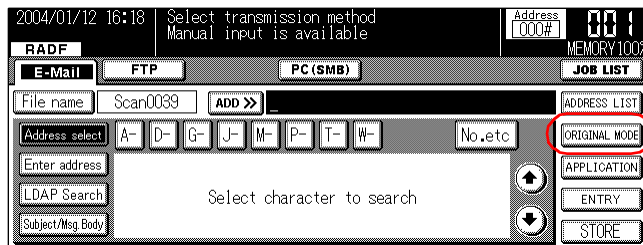

→ The [Original mode] screen is displayed.

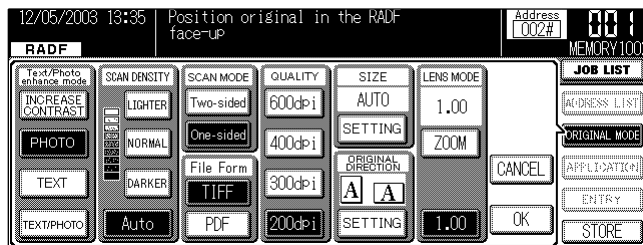

Text/Photo Enhance Mode

Select the [Text/Photo enhance mode] setting appropriate to the contents of the document. You can select from the following four settings.

- INCREASE CONTRAST
This applies contrast to documents written lightly and provides sharp images.
- PHOTO
This extends tones and provides an image close to that of a halftone reproduction.
- TEXT
This applies contrast to text to increase resolution.
- TEXT/PHOTO
This discriminates automatically between text and photographs and reproduces the quality of the document accurately.

Scan Density

Select the scanning density from [LIGHTER] to [NORM] to [DARKER].

MEMO

- When setting the density automatically, touch the [Auto] key.

Scan Mode

Select either [Two-sided] or [One-sided] for the document to be scanned with the [SCAN MODE].

File Format

Select either [TIFF] or [PDF] as the file format for the scan data.

Scan Quality

Select the scan quality from [600dpi], [400dpi], [300dpi] and [200dpi].

Below are the approximate number of pages of A4-size documents that can be scanned at one time with the standard memory (8 MB).

Resolution	Document	TIFF Pages	PDF Pages
600dpi	Text only*1	approx. 24	approx. 16
	With images*2	approx. 8	approx. 6
400dpi	Text only*1	approx. 44	approx. 29
	With images*2	approx. 18	approx. 12
300dpi	Text only*1	approx. 67	approx. 44
	With images*2	approx. 33	approx. 22
200dpi	Text only*1	approx. 119	approx. 79
	With images*2	approx. 64	approx. 40

*1 When ITU-T fax chart No. 4 used

*2 When ITU-T fax chart No. 1 used

MEMO

- If the volume of the scanned data exceeds the capacity of the memory, the job will be registered as an error.
- This limitation only applies if the optional hard disk is not installed. When the hard disk is installed, please refer to the specifications page for further information on limitations.



Important

- If an error occurs and the memory is full or the memory overflows, send via binary division.


Scan Size

1 Touch the [SETTING] key in the [SIZE] menu.

→ The [Select Document Size] screen is displayed.

2 Select the size of the document to scan with the scan size keys or [AUTO] key.

When you select the [AUTO] key, the scan size is automatically recognized by the copier.

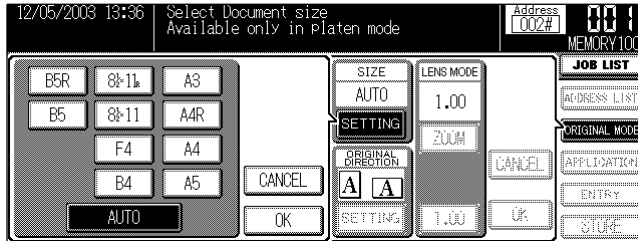

The scan sizes that can be selected are as follows.

A3
 A4R
 A4
 A5
 8¹/₂x11_R
 8¹/₂x11
 F4
 B4
 B5R
 B5

Limitation

- When scanning using the RADF, the scan size cannot be selected.

3 Touch the [OK] key.

→ The display returns to the [Original mode] screen.

Original Direction

- 1 Touch the [SETTING] key in the [ORIGINAL DIRECTION] menu.
→ The [Original Direction] screen will appear.
- 2 Choose the orientation of the document to be scanned.
- 3 Touch the [OK] key.
The screen will return to the [Original mode] screen.

 
Lens Mode

- 1 Touch the [ZOOM] key.
→ The [Select Magnification] screen is displayed.
- 2 The scanning magnification ratio is selected with the magnification ratio keys or [▲] or [▼].








The magnification ratios that can be selected are as follows.

- Fixed magnification ratios
 - A4-A3, A5-A4
 - A4-B4
 - B4-A3
 - A4-B5
 - B4-A4
 - A3-A4, A4-A5
- Zoom

Touch the  key, then specify the zoom ratio with [▲] [▼] or the copier's ten-key.

  ■ Independent X and Y magnification ratios

Touch the  or  key, then specify the zoom ratio with   or the copier's ten-key.

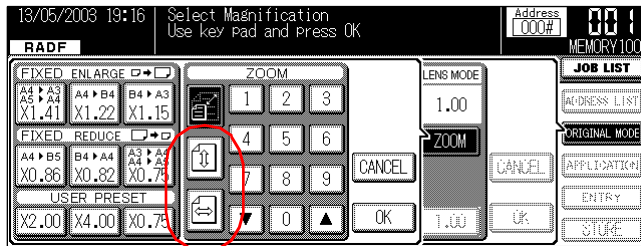

■ Same size (1.00)

Touch the [1.00] key.

3 Touch the [OK] key.

→ The display returns to the [Original mode] screen.


2 Set the document on the copier RADF or the platen glass.

When scanning in real mode, proceed to Step 4.


MEMO

- For detailed settings, refer to [Application Function Settings] ([Reference](#) ●●● Page 171).
- After setting the application functions, always return the LCD screen to the [Scanner mode basic] screen.

3 When scanning in memory mode, touch the [STORE] key.

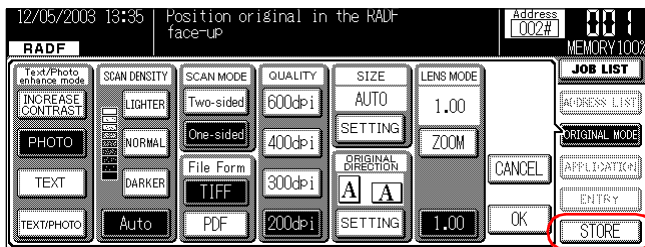

→ The memory mode is set.

From now on, when you touch the  (START) key, the document will be scanned.

When scanning of all the documents is complete, touch the [STORE] to proceed to Step 4.

4 Press the (START) button on the control panel.

→ Real mode

All the documents on the RADF are scanned.

When scanning of all the documents is complete, the scan data is uploaded to the internet or to the hard disk from the copier's memory.

→ Memory mode

Memory mode is ended and the scan data is uploaded from the copier's memory to the internet or to the hard disk.

MEMO

- The direction of the image in the data imported in with an application depends on the direction in which the document is set on the copier.
- The document sizes that can be scanned and document setting method are the same as for copy mode. For details, refer to the copier User's Guide.

- When the destination is set to [Scan to E-Mail] , [Scan to FTP] or [Scan to PC(SMB)] :
Scan data stored on the print controller's hard disk is transferred to the set destinations.




Important

- When [Scan to E-Mail] , [Scan to FTP] or [Scan to PC(SMB)] is set as the output destination, under some network conditions, the scanned data may be damaged. Always check that the scanned data is not damaged.
 - Printer and scanner functions cannot be performed at the same time if the optional hard disk, HD-103 Type A is not installed.
 - Without HD-103 Type-A, use the scanner function only when the printer is not operated.
You cannot use the scanner function while the printer is operating.
-
-


Application Function Settings

This section explains settings for making the scanner functions more convenient. These settings are made with the [Scanner mode basic] screen on the LCD screen.

1 Touch the [APPLICATION] key.

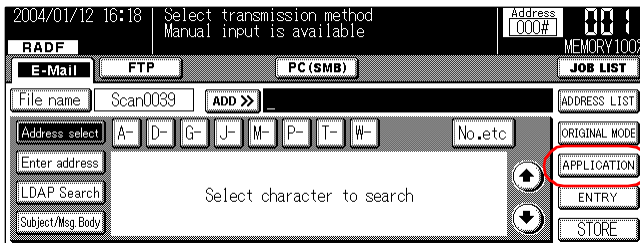

→ The [Select Application Function] screen is displayed.

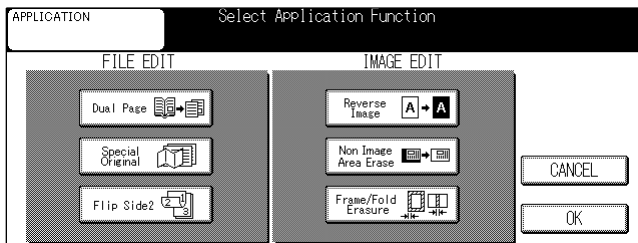

Scanning dividing a two-page bound document into two pages (Dual Page)

The bound document is scanned consecutively according to the binding direction.




- [Dual Page] cannot be selected when the [Special Original-Mixed Original], [Flip Side2], or [Fold Erasure] function is set.

1 From the [Select Application Function] screen, touch the [Dual Page] key.

→ The [Dual page mode] screen is displayed.

2 Touch the [Tx R to L] or [Tx L to R] key according to the document binding directory.

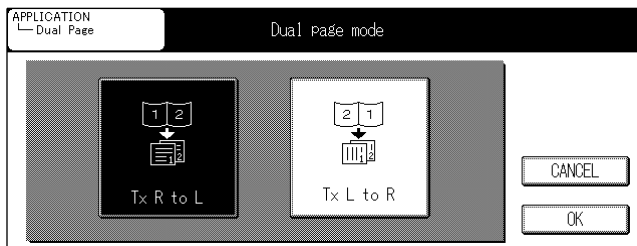

3 Touch the [OK] key.

→ The display returns to the [Select Application Function] screen.

Reading in documents of different sizes (Mixed Original)

This is set when scanning multi-page documents of different sizes using the RADF.




- [Mixed Original] cannot be selected when [Dual Page], [Flip Side2] or [Non Image Area Erase] or [Fold Erasure] is set.

1 From the [Select Application Function] screen, touch the [Special Original] key.

→ The [Select type of original] screen is displayed.

2 Touch the [Mixed Original] key.

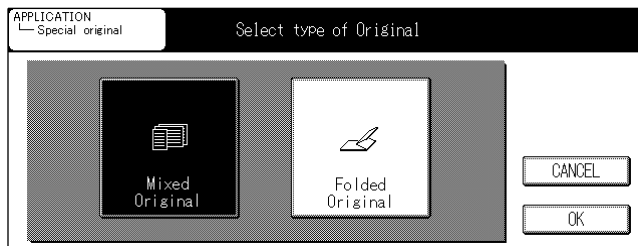

3 Touch the [OK] key.

→ The display returns to the [Select Application Function] screen.

Reading in folded documents (Folded Original)

This is set when a document with a fold is set on the RADF and the document fold is so far up and cannot be scanned in at all.


Limitation

- [Folded Original] cannot be selected when [Non Image Area Erase] is set.
-
-

1 From the [Select Application Function] screen, touch the [Special Original] key.

→ The [Select type of original] screen is displayed.

2 Touch the [Folded Original] key.

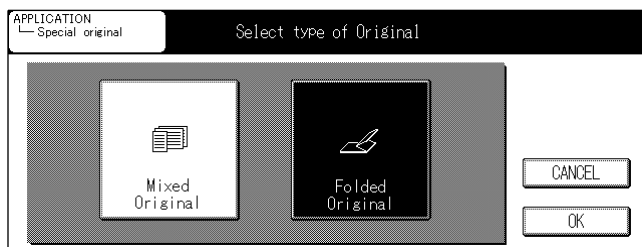

3 Touch the [OK] key.

→ The display returns to the [Select Application Function] screen.


Reading in by selecting binding position (Flip Side2)

When scanning duplex documents top/bottom binded or left/right binded, this setting lines up the tops and bottoms correctly.

Limitation

- [Flip Side2] cannot be selected when the [Dual Page], [Non Image Area Erase] or [Special Original-Mixed Original] function is set.

- 1 Touch the [Flip Side2] key on [Select Application Function] screen.
- 2 Touch the [Left/Right bind] or [Top/Bottom bind] key according to the document binding directory.

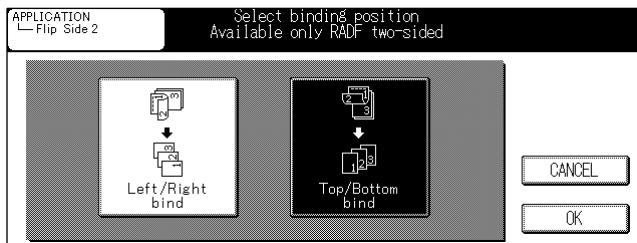

- 3 Touch the [OK] key.
→ The display returns to the [Select Application Function] screen.

Reading in with black and white reversed (Reverse Image)

This scans reversing the white sections of the document into black and the black sections of the document into white.

Limitation

- [Reverse Image] cannot be selected when [Non Image Area Erase] is set.

- 1 Touch the [Reverse Image] key on [Select Application Function] screen.
→ [Reverse Image] is selected.

MEMO

- When you touch the [CANCEL] key on the LCD screen, the setting is not finalized and the display returns to the [Scanner mode basic] screen.

Not scanning outside the document (Non Image Area Erase)

This function detects the size of the document set on the platen glass and does not scan the sections outside this size.



Limitation

- [Non Image Area Erase] cannot be selected when the [Special Original], [Flip Side2] or [Reverse Image] function is set.
-
-

1 Touch the [Non Image Area Erase] key on [Select Application Function] screen.

→ [Non Image Area Erase] is set.

Erasing document frames and folds (Frame/Fold Erasure)

This erases the shadows from the middle, bound section of books and the document dark margins.




- [Frame Erasure] cannot be selected when the [Special Original-Mixed Original] function is set.
- [Fold Erasure] cannot be selected when the [Dual Page] or [Special Original-Mixed Original] function is set.

1 Touch the [Frame/Fold Erasure] key on [Select Application Function] screen.

→ The [Frame/Fold Erasure] screen is displayed.

2 Touch the [Frame Erasure] key.

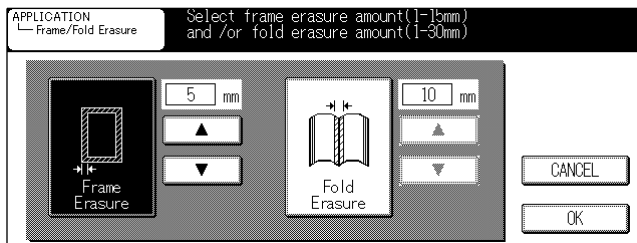

→ [Frame Erasure] is displayed inverted.

3 Specify the length for frame erasure with the [▲] or [▼] key.

4 Touch the [Fold Erasure] key.

→ [Fold Erasure] is displayed inverted.

5 Specify the length for fold erasure with the [▲] or [▼] key.

6 Touch the [OK] key.

→ The display returns to the [Select Application Function] screen.


Checking settings

This checks a list of the set functions.


- 1 With the [Scanner mode basic] screen displayed, press the  (CHECK) button on the control panel.

→ The [Check mode] screen is displayed.

- 2 Touch the [Setting conf] key.

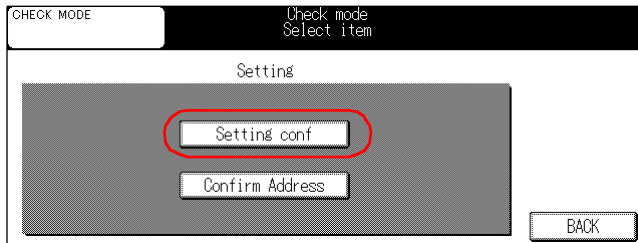

→ The [CHECK MODE] screen is displayed.

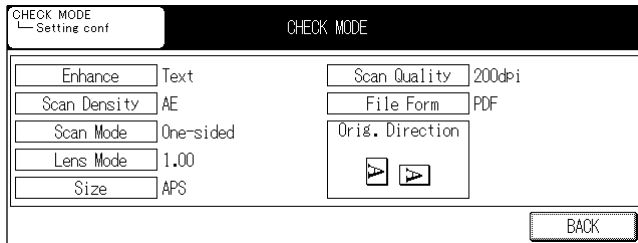


- 3 When the check is complete, touch the [BACK] key.

→ The display returns to the [Settings check mode] screen.


Confirming Address

1 Touch the [Confirm Address] key.

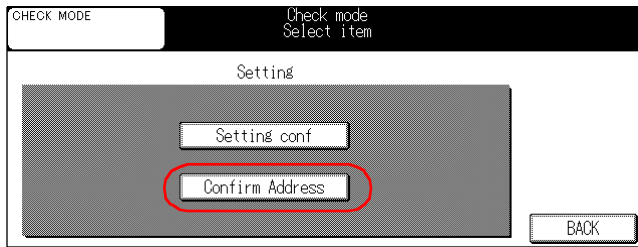

→ The [Check mode] screen is displayed.

2 Check the destination.

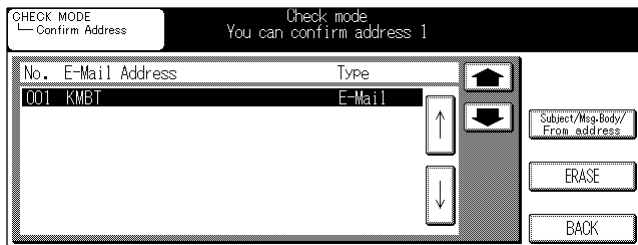

MEMO

- To delete a destination, select the destination to delete, then touch the [ERASE] key on the LCD screen.

3 When the check is complete, touch the [BACK] key.

→ The display returns to the [Check mode] screen.

4 Touch the [BACK] key.

→ The display returns to the [Scanner mode basic] screen.


Chapter 7 When There is Trouble with the Scanner

This chapter explains what to do if problems occur with scanner functions. If the methods in this chapter do not solve the problem, please contact your service representative.

- 7-1. Troubleshooting 182**
- 7-2. Network Error List 183**

7-1. Troubleshooting

- If an error dialog is displayed when you connect to the copier's hard disk from the computer, check the copier's IP address. If you still cannot connect, contact the network administrator.
- Please make sure that the network is connected if the following messages are displayed.
"SMTP is not available"
"FTP is not available"
- The [E-Mail Register], [FTP Register] and [Box No. Register] keys do not appear on the [Registration/ Edit Menu].
This occurs when the [Entry Function Available] feature is set to [YES]. Ask the system administrator for details.

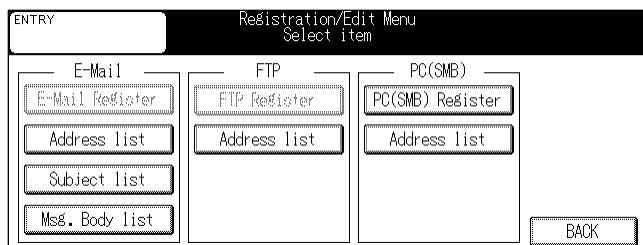

MEMO

- For information on the [Entry Function Available] feature, please refer to section [8-2.Scanner Initial Settings] (Reference ●●● Page 193).

- The HDD Ready display is irregular
Format the Hard Disk if it is the possible. Contact a service representative for other alternatives.

MEMO

- For information on formatting the Hard Disk, refer to the copier User's Guide.

7-2. Network Error List

Take the following steps in response to the corresponding errors. If further assistance is required, please contact your local service representative.

Error Code	Recommended Troubleshooting
N-1	Check the network cable connection
N-2	Conduct JOB deletion
N-14	Internet fax reception error 1) Check the settings used during transmission with the sender, then request retransmission 2) Request the sender to reduce the number of files attached per mail to less than 10 (if necessary, send the attachments in several E-mails) 3) Request the sender to resend all pages in excess of 1000 (i.e., page 1001 and subsequent pages) The pages exceeding 1000 (including mail text) will be deleted on printing out
N-24	Check the LDAP server address in LDAP Setup
N-25	Check each setting item in LDAP Setup
N-26	Check that the LDAP server supports LDAP version 3.0
N-27	Check the SASL authentication mechanism supported by the LDAP server
N-28	Check the SASL authentication mechanism supported by the LDAP server
N-29	Check the login name and password for logging in the LDAP server in LDAP Setup
N-30	Check that the PC (SMB) setting is enabled
N-31	1) Check that the PC (SMB) setting is enabled 2) Check that the network cable is connected properly
N-32	Check the host name for the destination PC(SMB)
N-33	1) Check the user name for the destination PC(SMB) 2) Check the user's access rights to the destination PC(SMB) 3) Check the user's password for the destination PC(SMB)
N-34	Check the folder name for the destination PC(SMB)
N-35	1) Check the settings for the destination PC(SMB) 2) Check that the network cable is connected properly
N-36	Change filename to one without symbols
N-37	1) Check the settings for the destination PC(SMB) 2) Check the file settings for the destination PC (SMB) (The same name already exists) 3) Check the user's access rights to the folder for the destination PC (SMB)
N-38	Check the hard disk status for the destination PC (SMB) and restore the hard disk for the destination
N-39	Wait and try again later
N-40	Turn the main power OFF and back ON again
N-41	Wait and try again later
N-42	Free up the memory for the destination PC(SMB)
N-43	Check that the network cable is connected properly
N-44	Free up the memory for the destination PC(SMB)
N-45	Check the file system status for the destination PC (SMB) and restore
N-50	Check the SMTP server address under E-Mail (SMTP) settings
N-52	Check that the E-Mail (SMTP) setting is active

7-2. Network Error List

Error Code	Recommended Troubleshooting
N-53	Check the network cable connection
N-54	<ol style="list-style-type: none"> 1) Check the network cable connection 2) Check the SMTP server address and port number under E-Mail (SMTP) settings 3) Check the POP server log-in name and password under E-Mail (POP) settings when the SMTP server supports the POP before SMTP setting 4) Check the status of the SMTP Server 5) Check the free space of SMTP Server
N-55	Check the network cable connection
N-56	Check the network cable connection
N-57	<ol style="list-style-type: none"> 1) Check the free space of SMTP Server 2) Try again later to start the network system because the same account of the POP server might be receiving the E-Mail
N-58	Check the network cable connection
N-59	Check the status of SMTP Server
N-60	<ol style="list-style-type: none"> 1) Check that the POP before SMTP setting is active under the E-Mail (SMTP) menu 2) Check that the POP before SMTP set time is shorter than the set holding time for the POP server
N-61	<ol style="list-style-type: none"> 1) Check that the Binary Division function is activated under the E-Mail (SMTP) Menu 2) Reduce the Binary Division data size under the E-Mail (SMTP) Menu 3) Check the status of the SMTP Server 4) Check the max. Binary Division data size under the E-Mail (SMTP) Menu
N-62	Wait and try again later
N-63	<ol style="list-style-type: none"> 1) Check that the Binary Division function is activated under the E-Mail (SMTP) Menu 2) Change the SMTP server capacity under the E-Mail (SMTP) settings 3) Check the free space of SMTP Server
N-64	Turn the main power switch OFF and then ON again
N-65	Contact your local service representative
N-66	Check the From: address settings
N-70	Wait and try again later
N-71	Wait and try again later
N-72	Check the search route for LDAP Setup
N-73	Select [LDAP search (detail)], then increase the search condition and execute again
N-74	<ol style="list-style-type: none"> 1) Check the settings for the LDAP server 2) Check each setting item for LDAP Setup
N-75	<ol style="list-style-type: none"> 1) Check the settings for the LDAP server 2) Check each setting item for LDAP Setup
N-76	<ol style="list-style-type: none"> 1) Check the connection of the network cable 2) Check the status of the LDAP server
N-77	<ol style="list-style-type: none"> 1) Check the setting for the LDAP server 2) Check each item of the LDAP settings
N-80	Check the file name and the destination FTP server
N-81	<ol style="list-style-type: none"> 1) Check the network cable connection 2) Check the destination FTP server address and port number 3) Check the status of the destination server

Error Code	Recommended Troubleshooting
N-82	Check the status of the destination FTP server
N-83	Check the network cable connection
N-84	Check the login name and password of the destination FTP server
N-86	1) Check the network cable connection 2) Check that the FTP server setting is passive
N-87	1) Check the destination FTP server directory 2) Close any open files in the FTP server and repeat the operation again
N-88	Repeat the operation once again
N-89	Delete/compress unnecessary files on the server to free up space
N-91	Turn the main power switch OFF and then ON again
N-92	Contact your local service representative

IV Scanner Key Operator - Administrators only

This section explains the contents of the scanner function settings that can be made with key operator mode on the copier.

Chapter 8 Key Operator Settings 189

Chapter 8 Key Operator Settings

This chapter explains the contents of the settings that can be made with key operator mode on the copier.


8-1. Key Operator Mode	190
8-2. Scanner Initial Settings	193
8-3. List Print.....	206


8-1. Key Operator Mode

Usage Objectives for Key Operator Mode


Key operator mode is for making detailed settings concerning the scanner, for example scanning resolution. To make the settings, use the key operator mode.

Switching the Key Operator Mode

1 Press the  (COPY) button on the control panel.

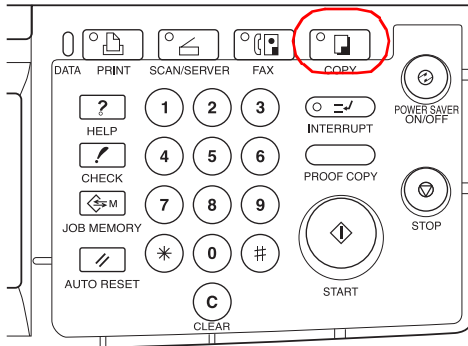


 → The [Copy basic mode] screen is displayed.


2 Press the  (HELP) button on the control panel.

→ The [HELP MODE] screen is displayed.

3 Touch the [Key Ope mode] key.

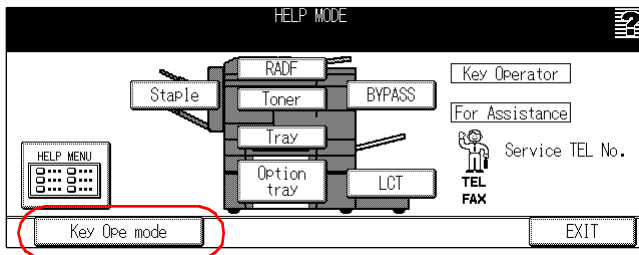

- 4 If a password is set, the key operator's password input screen is displayed. Touch the [Password] key and input the password in the [Data Input] screen. Then, touch the [OK] key or input the password (up to 8 digits) using the ten-keys.

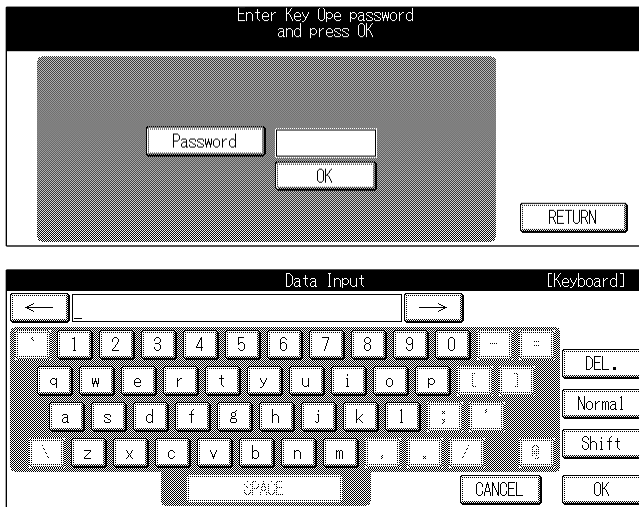


- 5 Touch the [OK] key on the [Password Input] screen.

MEMO

- The Key operator password is set by your service representative. If the key operator password has been set, the key operator should keep the password safe on his/her own responsibility.
- For the Key operator password, please ask your service representative.
- If the [Enhanced Security] is used, the password should be 8 digits.

6 Touch the [OK] key.

→ The [Key operator mode] screen is displayed.

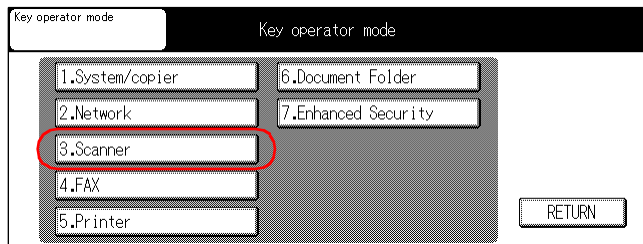


Access [Scanner setting menu] screen from this screen.

■ Scanner settings

Touch the [3.Scanner] key.

→ The [Scanner setting menu] screen will be displayed.

- Touch the [1.Initial setting] key.

Advance to section [8-2.Scanner Initial Settings] ( ●●▶ Page 193).

- Touch the [2.List print] key.


Advance to section [8-3.List Print] ( ●●▶ Page 206).

MEMO

- This screen may not be displayed, depending on which options are set for [4.FAX], [5.Printer] and [6.Document Folder].

8-2. Scanner Initial Settings

1 Touch the [3. Scanner] key on the [Key operator mode] screen.

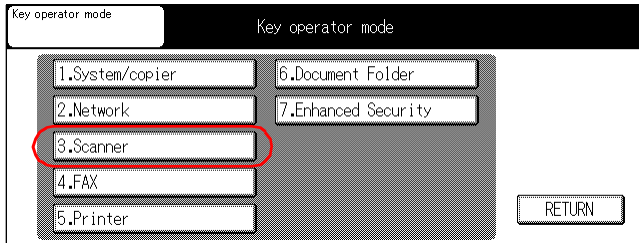


→ The [Scanner setting menu] screen will be displayed.


MEMO

- This screen may not be displayed, depending on which options are set for [4.FAX], [5.Printer] and [6.Document Folder].

2 Touch the [1. Initial setting] key.

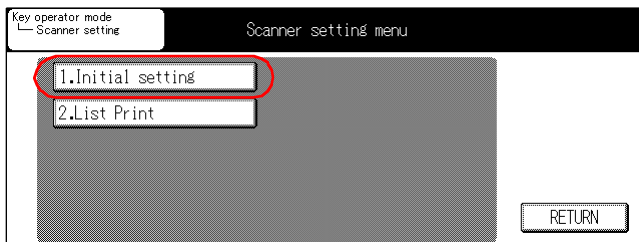

→ The [Initial setting] screen will be displayed.

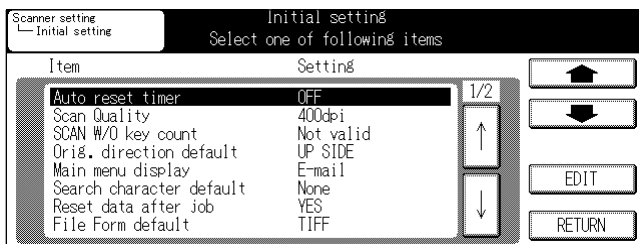

The default values for the following items can be set with key operator mode.

- Auto reset timer
- Scan Quality
- Scan W/O key count
- Orig. direction default
- Main menu display
- Search character default
- Reset data after job

- File Form default
- Text/Photo enhance mode
- Scan Density
- Scan mode
- Disable Entry Function


Auto reset timer

You can set how long the copier will wait with the [Scanner] screen left unused until it automatically returns to the [Printer basic mode] screen.

MEMO

- The factory default is [OFF] (Do not switch screens automatically.).

1 Select [Auto reset timer] on [Initial setting] screen.

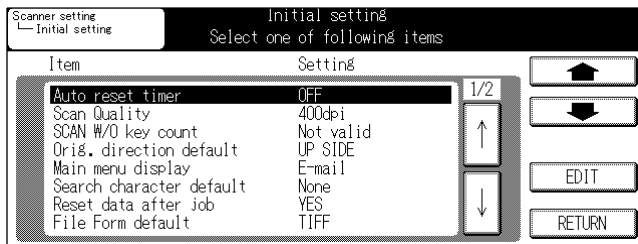

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ([Reference](#) ●●● Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

Select the setting item from among the following.

OFF → 30 → 60 → 90 → 120 → 150 → 180 → 210 → 240 → 270 → 300 (seconds)

When you select [OFF], auto resets are not triggered.

3 Touch the [RETURN] key.

From now on, the copier operates in accordance with this setting.


Scan Quality

This changes the default value for the scanner resolution.

MEMO

- The factory default is [200 dpi].

1 Select [Scan Quality] in [Initial setting] screen.

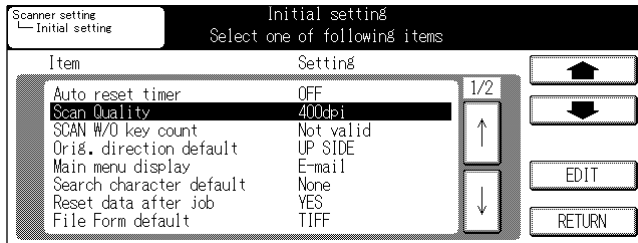

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ([Reference](#) ●●> Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

Select the setting item from among the following.

- [200 dpi] : The scanner resolution is set to 200 dpi.
- [300 dpi] : The scanner resolution is set to 300 dpi.
- [400 dpi] : The scanner resolution is set to 400 dpi.
- [600 dpi] : The scanner resolution is set to 600 dpi.

3 Touch the [RETURN] key.

From now on, documents are scanned according to this setting.


Scan W/O key count

This sets whether to enable scanning or disable scanning when the key counter is removed during scan operations.

MEMO

- The factory default is [Not valid] (scanning is possible whether or not the key counter is present).

1 Select [SCAN W/O key count] in [Initial setting] screen.

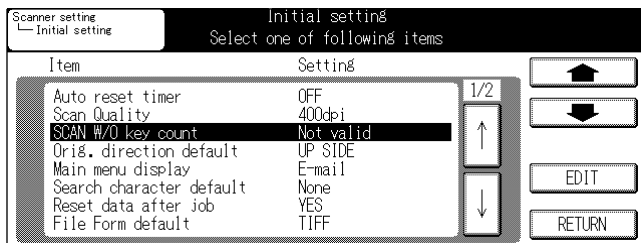

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ([Reference](#) ●●● Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

If you select [Valid], operation is according to the copier setting.

If you select [Not valid], scanning is possible whether or not the key counter is present.

MEMO

- For the copier settings to use when [Valid] is selected, contact one of our service outlets.

3 Touch the [RETURN] key.

From now on, the copier operates in accordance with this setting.


Original direction default

This sets whether or not to automatically rotate images imported in with the scanner.

MEMO

- The factory default is [UP SIDE].

1 Select [Orig. direction default] in [Initial setting] screen.

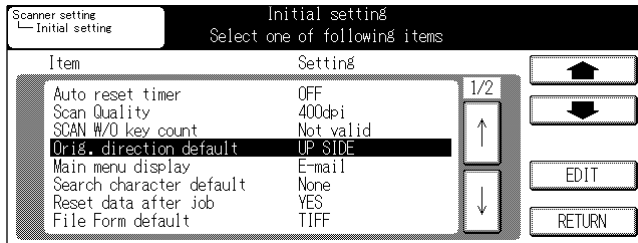

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] (Reference ●●> Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

UP SIDE → DOWN SIDE → LEFT SIDE → RIGHT SIDE

3 Touch the [RETURN] key.

From now on, the copier operates with these settings.


Main menu display

This sets the default on [Scanner mode basic] screen for scanner mode.

MEMO

- The factory default is [E-Mail]. When the optional hard disk is connected, the [Mail Box] is set.

1 Select [Main menu display] in [Initial setting] screen for scanner mode.

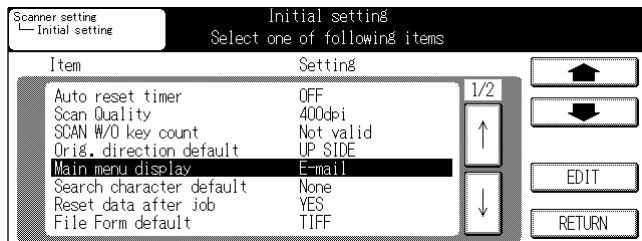

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] (Reference ●●> Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

- [E-Mail] : The E-mail selection screen is displayed by default at scanner mode.
- [FTP] : The FTP selection screen is displayed by default at scanner mode.
- [Mail Box] : The box selection screen is displayed by default at scanner mode.

MEMO

- [Mail Box] will be displayed only when the optional hard disk is connected.

3 Touch the [RETURN] key.

From now on, the copier operates with these settings.


Search character default

This sets the default character for beginning searches on the [Address select] screen.

MEMO

- The factory default is set to [None].

1 Select [Search character default] in [Initial setting] screen for scanner mode.

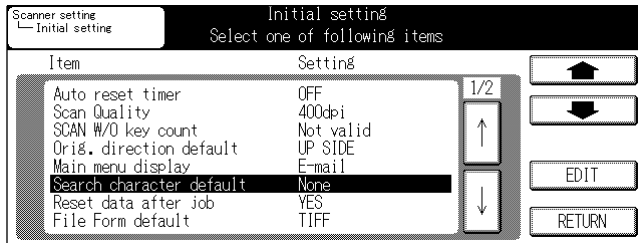

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] (Reference ●● Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

A → D → G → J → M → P → T → W → No.etc. → None

3 Touch the [RETURN] key.

From now on, the copier operates with these settings.


Reset data after job

This sets whether or not to reset the settings after scanning data.

MEMO

- The factory default is [YES].

1 Select [Reset data after job] in [Initial setting] screen.

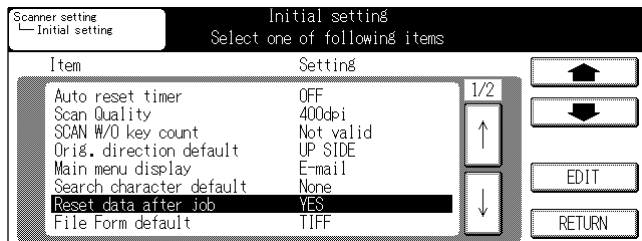

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ([Reference](#) ●● Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

[YES] : All the settings are reset after the upload and the display returns to the address selection screen.

[NO] : Scanning continues with the same settings.

3 Touch the [RETURN] key.

From now on, the copier operates with these settings.


File Form default

This sets the default for the data storage format of scanning mode.

MEMO

- The factory default is [TIFF].

1 Select [File Form default] in [Initial setting] screen.

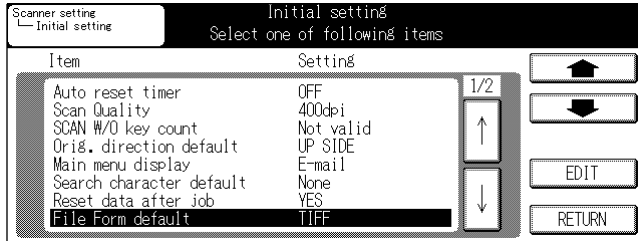

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] (Reference ●●> Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

TIFF → PDF

3 Touch the [RETURN] key.

From now on, the copier operates in accordance with this settings.


Text/Photo enhance mode

This sets the scanning mode according to different resolution of the media.

MEMO


- The factory default is [Photo/Text].

1 Select [Text/Photo enhance mode] in [Initial setting] screen.

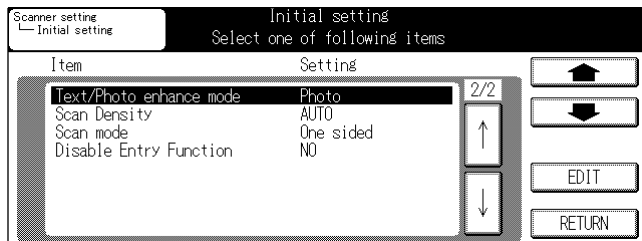

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ( ●●> Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

Text → Photo → Increase Contrast → Photo/Text

3 Touch the [RETURN] key.

From now on, the copier operates in accordance with this settings.


Scan Density

This sets the scanning density.

MEMO

- The factory default is [AUTO].

1 Select [Scan Density] in [Initial setting] screen.

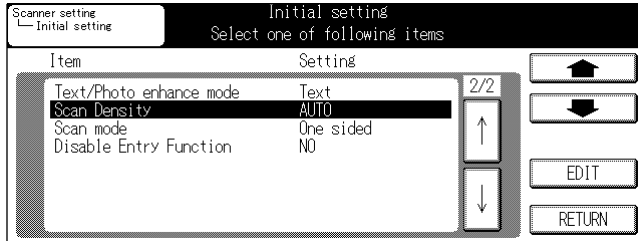

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ([Reference](#) ●●> Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

AUTO → 1 → 2 → 3 → 4 → 5 (NORMAL) → 6 → 7 → 8 → 9

3 Touch the [RETURN] key.

From now on, the copier operates in accordance with this settings.


Scan Mode

This sets the scanning mode.

MEMO

- The factory default is [One sided].

1 Select [Scan mode] in [Initial setting] screen.

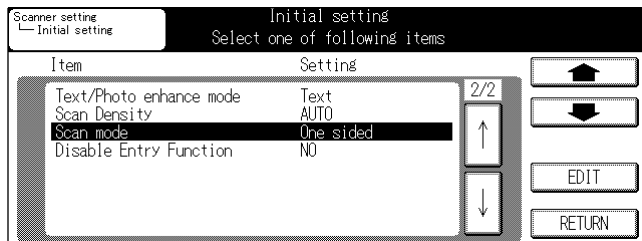

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ([Reference](#) ●●> Page 190).

2 Touch the [EDIT] key, then change the setting.

Each time you touch the [EDIT] key, the setting is switched.

Two sided → One sided

3 Touch the [RETURN] key.


From now on, the copier operates in accordance with this settings.

Disable Entry Function

MEMO

- The factory default is [NO].

1 Select [Disable Entry Function] in [Initial setting] screen.

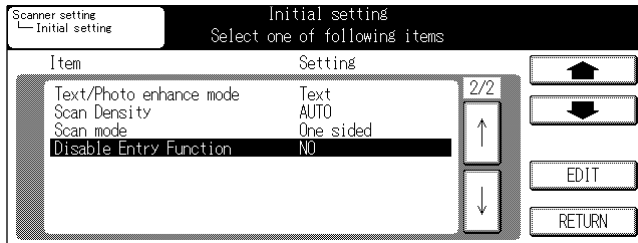

When you touch the [↑] or [↓] key, the selection item is switched.

MEMO

- For details on the procedure for displaying the [Initial setting] screen, refer to [Switching the Key Operator Mode] ([Reference](#) ●●▶ Page 190).

2 Touch the [EDIT] key, then change the setting.


Each time you touch the [EDIT] key, the setting is switched.

YES ↔ NO

3 Touch the [RETURN] key.

From now on, the copier operates in accordance with this settings.


This screen is displayed when [Disable Entry Function] is set to [Yes].

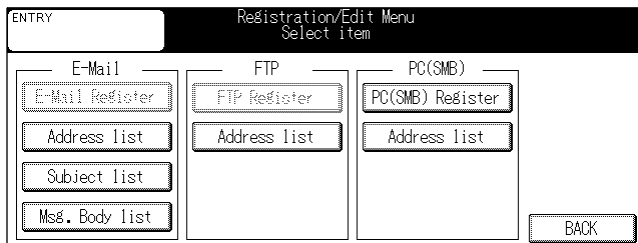

8-3. List Print

Print out a list of registered E-mail addresses, FTP servers, Boxes, E-mail subjects, and text.

1 Touch the [3. Scanner] key on the [Key operator mode] screen.

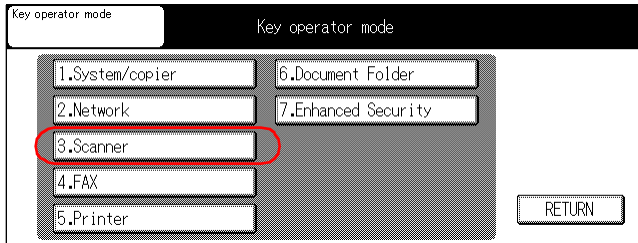


→ The [Scanner setting menu] screen will be displayed.

MEMO

- This screen may not be displayed, depending on which options are set for [4.FAX], [5.Printer] and [6.Document Folder].

2 Touch the [2. List Print] key.

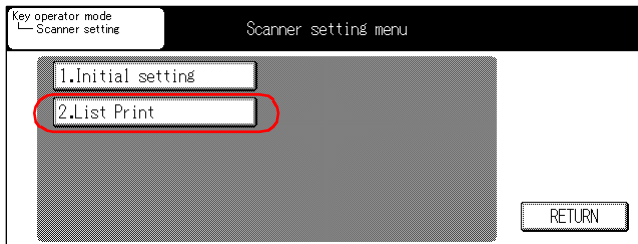

→ The [List Print] screen will be displayed.



3 Touch the [Print] key on the LCD screen. The list will be printed out containing:

- Registered E-mail address
- Registered FTP server
- Registered Boxes
- Registered PC (SMB) destinations
- Registered E-mail Subjects
- Registered E-mail Text

4 Touch the [RETURN] key.

→ The screen will return to the [Scanner setting menu] screen.

V Appendix

This section covers product specifications for the network scanner and the index.

Chapter 9 Appendix.....	209
--------------------------------	------------



Chapter 9 Appendix

This appendix contains product specifications for the network scanner.

- 9-1. Product Specifications210**
- 9-2. Konica Minolta Scan Distributor213**
- 9-3. Index According to Item215**
- 9-4. Purpose Oriented Index218**

9-1. Product Specifications

Scanner Functions

Driver	KONICA MINOLTA Scanner Driver
OSs supported	Windows 95/98/Me Windows NT 4.0/2000/XP Windows 2003Server (Scan to PC(SMB) only)
Protocol supported	TCP/IP
Function	Scan to E-Mail Scan to FTP Scan to PC(SMB)
Scanning speed	For 300 dpi: 65 pages/minute (A4) For 200/400 dpi: 61 pages/minute (A4) For 600 dpi: 45 pages/minute (A4)
Scannable range	Same as for copier
Scanner resolution	200dpi, 300dpi, 400dpi, 600dpi
Magnification ratio	Changes according to read-in resolution For 200 dpi: 75-400% For 400 dpi: 50-400% For 300 dpi: 50-400% For 600 dpi: 25-400%
Paper sizes that can be read in	A3/A4R/A4/A5/A5R/B4/B5R/B5/B6R/8.5 x 11R/8.5 x 11/5.5 x 8.5R/8.5R x 14/11 x 17/Postcard/entire surface
Special functions	Dual page, Mixed Original, Holded Original, Reverse Image, Frame/Fold Erase

Network Functions

Type	Incorporated model
Frame type	IEEE802.2/802.3/Ethernet II/IEEE802.3SNAP
Connection cable type	10Base-T/100Base-TX
Connector	RJ-45
Protocol supported	TCP/IP (BOOTP, ARP, ICMP, DHCP, SNMP, HTTP, FTP, SMTP, POP, IPP, SMB), IPX/SPX, AppleTalk (EtherTalk), LDAP
OSs supported (NOS)	Novell NetWare (3.x, 4.x, 5.x), Microsoft Windows 95/98/Me, Microsoft Windows NT 4.0, Microsoft Windows 2000/XP, Mac OS 8.x or higher
Supporting LDAP server	OpenLDAP 2.0.27, Active Directory, Exchange5.5, Netscape/iPlanet Directory Server, Novell Netware5 NDS, Novell eDirectory 8.6/8.7, Lotus Domino Server*1
Supporting LDAP protocol	LDAP Protocol Version 3 (Version 2 is not supported)
Supporting SSL version	SSL2, SSL3, TLS1.0 (x.509 certificate must be installed in the server)
Multiple protocols	Automatic discrimination
Printing methods supported	Peer-to-Peer (TCP/IP for Windows 95/98/Me), Pserver (IPX/SPX), LPD/LPR (TCP/IP), AppleTalk (EtherTalk), IPP (TCP/IP for Windows 2000/XP)
Dedicated utility	Network Setup
General utilities	Web browser (Netscape Navigator, Internet Explorer)
Operation environment	Temperature 0-50°C, relative humidity 5-80%
Status display LEDs	Green LED, amber LED, one each
Settings	Stored in non-volatile memory

*1 :If [OR] or [END] is selected for the search condition when the Lotus Domino Server is used, the search function does not function normally.

Restrictions

- The copier weekly timer functions can be used in printer mode, but if print data remains in the memory, the power is not switched off until output of that data is completed.



- These specifications are subject to improve without prior notice.

LED Status

LED status	Network status
blinks in green	at receiving data
lights in orange	Network speed : 100Mb/s
OFF	Network speed : 10Mb/s

10/100Base-T UTP cable specifications

When a 10/100Base-T UTP cable is set for connecting to the RJ45 connector on the network, the general Ethernet standard below is used. Use a cable of at least Category 5.

Pin number	Color	Ethernet
8	Blue/white	
7	Blue	
6	Orange/white	Receive-
5	Green/white	
4	Green	
3	Orange	Receive+
2	Brown/white	Transmit-
1	Brown	Transmit+

9-2. Konica Minolta Scan Distributor

Konica Minolta Scan Distributor provides users with a simple solution for scanning and then distributing scanned documents via E-mail.


MEMO

- For details on [Konica Minolta Scan Distributor], refer to the "Konica Minolta Scan Distributor" User's Guide.
- For the use of [Konica Minolta Scan Distributor], please ask your service representative.

Setting Konica Minolta Scan Distributor

To use [Konica Minolta Scan Distributor], set the digital copier according to the following procedure.


1 Touch the [2.Network] key on the [Key operator mode] screen.

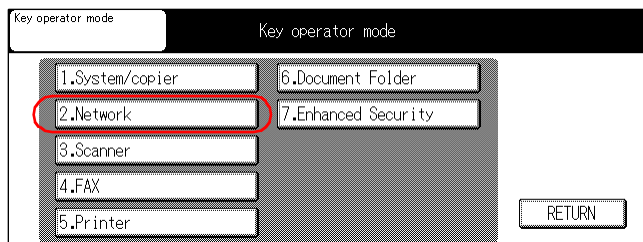


MEMO

- This screen may not be displayed, depending on which options are set for [4.FAX], [5.Printer] and [6.Document Folder].


2 Touch the [↓] key.

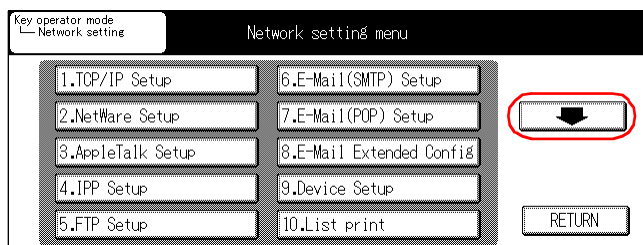

3 Touch the [13.Scan Distributor Set] key.

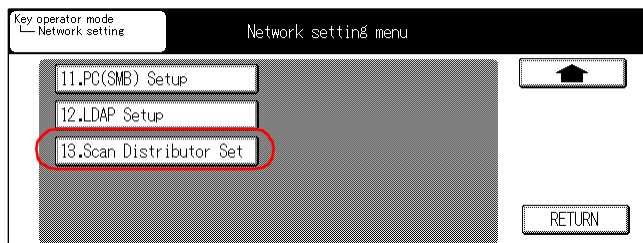

4 Touch the [ON] key on the [Enable Scan Distributor] display and touch the [OK] key.

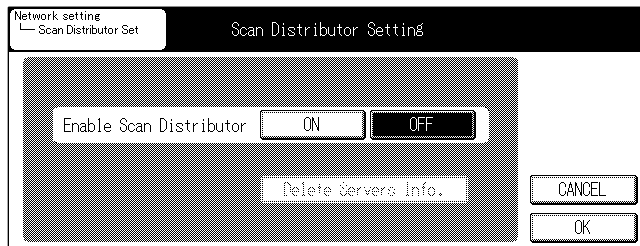

9-3. Index According to Item

A		
Accept IPP Job	46, 104	
Account	142	
anonymous	142	
AppleTalk	41	
AppleTalk Configuration	100	
AppleTalk Setup screen	41	
Application Function	171	
Application Function Settings	171	
Application Function Settings screen	171	
Attached file	127	
Attribute	86	
Authentication Type	83	
Auto Delete	13	
AUTO RESET button	10	
Auto reset timer	194	
Automatic polling	66	
B		
Basic screen	11	
Binary Division	59, 108	
Body	138	
C		
Cable Specifications	212	
Changing Job Order	13	
CHECK button	10	
Checking settings	178	
Condition	87	
Confirm Address	179	
Connection Timeout	56, 60	
Connection with the Network	4	
Control Panel	10	
Copy basic mode	23	
D		
Data LED	10	
Default Gateway	29, 93	
Destination	127, 140	
Destination list	145	
Destinations already registered	130	
Detail search initial setting	86	
Device Configuration	118	
Device Setup	72	
Device Setup screen	72	
DHCP	26	
DHCP Settings	94	
Disable Bindery	40, 99	
Disable Entry Function	205	
DNS Domain Name	32, 95	
DNS Host Name	32, 95	
DNS Server	95	
DNS Settings	95	
Document Format	104	
Document Format Supported	104	
Domain name	85	
DSN Request	70	
Dual page	172	
E		
E-Mail	57, 154	
E-Mail (POP) Setup	63	
E-Mail (POP) Setup screen	63	
E-Mail (SMTP) Setup	57	
E-Mail (SMTP) Setup screen	57	
E-mail address	128	
E-Mail Extended Config	69	
E-Mail Extended Configuration	112	
E-Mail List screen	155	
E-Mail message body list screen	157	
E-Mail Notification Configuration	116	
E-Mail registration/edit screen	152	
E-Mail select screen	127	
E-mail Send (SMTP) Configuration	107	
E-mail Send (SMTP) Configuration menu	107	
E-Mail Setup screen	57	
E-Mail subject list	156	
E-Mail subject list screen	156	
Enable AppleTalk	100	
Enable DHCP	29, 94	
Enable IPP	46	
Enable LDAP	79	
Enable PASV Mode	55, 106	
Enable POP	64	
Enable SMTP	58	
Enable SSL	82	
Enable TCP/IP	28	
Enabling IPP	103	
Error N**	13	
Ethernet connector	4	
Ethernet Frame Type	35, 97	
F		
Factor	13	
Factory Defaults	121	
Fax JOB	12	
File Form default	201	
File Format	166	
File name	127, 130, 140, 144, 165	
File path	141	
File Server	98	
File Server Name	37	
Flip Side2	175	
Folded documents	174	
Folded Original	174	
Frame/Fold Erasure	177	
From Address screen	139	
FTP	5, 54, 182	
FTP Client Port Number	56, 106	
FTP Configuration	105	
FTP Configuration page	105	
FTP list	160	

9-3. Index According to Item

FTP registration/edit	141
FTP registration/edit screen	158
FTP select screen	140
FTP Server Connection Timeout	106

H

HDD Ready	182
-----------------	-----

I

IEEE1284 Timeout	119
Input text screen	16
Interval Time	111
IP Address	26, 90, 93
IP address of the FTP server	141
IPP Configuration	102
IPP Configuration screen	102
IPP Setup	44
IPP Setup screen	44

J

Job	13
Job Deletion	13
Job k-octets Supported	104
JOB LIST	12
Job Size	47

K

Key Operator E-mail Address	108
Key Operator Mode	24, 190
Keyboard Input Screen	17
KONICA MINOLTA Scanner Driver	210

L

LCD screen	10
LDAP Configuration	114
LDAP Setup	77
LED Status	212
Lens Mode	168
List Print	75, 206
List print screen	75
Location	51
Login	142
Login Name	64, 111

M

MAC Address	73
Machine E-mail Address	108
Magnification ratio	168
Main menu display	198
Maximum Hit Number	79
Maximum Message Size	60, 108
MDN Request	71
MDN Response	71
Memory	5
Memory mode	164, 170
Message from Operator	47, 104
MINUTE(s) TO GO	13
Mixed Original	173

More Printer Information	52, 104
--------------------------------	---------

N

NDS Context	98
NDS Context Name	37
NDS Tree	38, 98
NetWare	33
NetWare Configuration	96
NetWare Configuration screen	96
NetWare Setup	33
Network (Rx) Timeout	119
Network Error List	183
Network Information	91
Network Receiving	74
Network setting	4, 25
Network setting screen	25
Network Setup	22
Network Setup list	75
Network Setup Page	110
Network Speed	73, 119
NIC	120
Non Image Area Erase	176

O

Operating Mode	39, 99
Operation Support Information	48
Operations Supported	104
Original Direction	168
Original direction default	197
Other DNS Server	30

P

PAGE(s) LEFT	12
Parallel Receiving (IEEE 1284)	74
Partial Message Size	108
Password	84, 95
PASV mode	142, 159
PC(SMB) address list screen	163
PC(SMB) Configuration	113
PC(SMB) registration/edit	161
PC(SMB) Setup	76
Platen glass	169
Polling Interval	66
POP before SMTP	62, 108
POP Connection Timeout	68
POP Port Number	67
POP Server	64
POP Server Address	111
POP Server Connection Timeout	111
POP Server Port Number	111
Port No.	82, 142
Port No. key	142
Preferred DNS Server	30
PRINT JOB	12
Print Queue Scan Rate	40, 98
Print Server Name	35, 98
Print Server Password	36, 98

Printer Driver Installer	52, 104	SMTP	57, 182
Printer Information	51, 104	SMTP Port Number	61
Printer Location	104	SMTP Server	5, 58
Printer Manufacturer	53, 104	SMTP Server Address	108
Printer Model	52, 104	SMTP Server Connection Timeout	108
Printer Name	42, 51, 101, 104	SMTP Server Port Number	108
Printer Number	39, 99	STORE	169
Printer Related Information	50	Subject	137
Product Specifications	210	Subnet Mask	28, 93
Protocol Information	91	Supported Document Format	49
Protocol Type	108	T	
Proxy	142, 159	TCP/IP	27
Proxy Port Number	55	TCP/IP Configuration	92
Proxy Server	55	Text/Photo Enhance	165
Proxy Server Address	106	Text/Photo Enhance Mode	165, 202
Proxy Server Port Number	106	Troubleshooting	182
R		U	
RADF	169, 170	Unsuccessful Job List	13
RAW Port Number	31, 93	Unsuccessful Job List Data	13
Real mode	164, 169, 170	URL	141
Receive (POP) Configuration menu	110	Usage of this Manual	vii
Registration number	152	USB	74
Registration/edit menu screen	151	USB Timeout	119
Reset	120, 121	User authentication	83
Reset data after job	200	User Name	84
Response Timeout for MDN/DSN	71	User Software CD	viii, 90
Retype Print Server Password	98	UTP cable	4
Reverse Image	175	W	
S		Web Browser	90
Scan Density	165, 203	Web Utility	90
Scan Distributor	213	Web Utility Manual	90
Scan Mode	166, 204	Z	
Scan Size	167	Zone Name	43, 101
Scan to E-Mail	6, 170		
Scan to FTP	7, 140, 170		
Scan to PC (SMB)	5, 8, 146		
Scan W/O key count	196		
Scanned data	5		
Scanner key	193		
Scanner mode basic	151, 164		
Scanner mode basic screen	164, 165		
Scanning dividing	172		
Scanning Documents	164, 165		
Scanning Mode	164		
Scanning Quality	166, 195		
Search character default	199		
Search Root	81		
Search Timeout	79		
Selecting the Destination	126, 144		
Sending E-Mail (SMTP)	57		
Sending to file server	5		
Sending with E-mail	5		
Server address	81		
Set the network connection	23		
Setup Time	108		

9-4. Purpose Oriented Index

C		S	
Control Panel Operation		Scanning	
Control Panel Description	10	Application Function Settings	171
Inputting Text	16	Scanning Documents	165
Job List Screen	12	Specifications	
LCD Screen Operation Methods.....	11	Network Functions	211
		Scanner Functions	210
D		T	
Destination		Text	
Selecting the Destination		Inputting Text	16
Scan to E-Mail.....	127		
Scan to FTP	140	W	
Scan to PC(SMB).....	146	Web Utility	
		AppleTalk Configuration.....	100
K		Changing DNS Settings	95
Key Operation Mode		Default Gateway	93
Setting with Key Operator Mode		Device Configuration.....	118
Auto reset timer.....	194	E-Mail Extended Configuration	112
Disable Entry Function.....	205	E-mail Receive (POP) Configuration.....	110
File Form default.....	201	E-mail Send (SMTP) Configuration.....	107
Main menu display	198	FTP Configuration	105
Orig. direction default.....	197	IP Address	93
Reset data after job.....	200	IPP Configuration	102
Scan Density.....	203	LDAP Configuration	102
Scan Mode.....	204	NetWare Configuration.....	96
Scan Quality.....	195	PC(SMB) Configuration.....	102
Scan W/O key count	196	RAW Port Number	93
Search character default.....	199	Subnet Mask	93
Text/Photo enhance mode.....	202	TCP/IP Configuration	92
L			
List			
Job List.....	12		
List Print	75		
Network Error List	183		
N			
Network Functions			
AppleTalk Setup.....	41		
Device Setup.....	72		
Default Gateway	29		
DNS Setup	32		
E-Mail Extended Config	69		
E-Mail Receiving.....	63		
E-Mail Sending.....	57		
FTP Setup.....	54		
IP Address	28		
IPP Setup.....	44		
LDAP Setup	77		
List Print	75		
Method for Setting Network from Control Panel	23		
NetWare Setup	33		
PC(SMB) Setup	76		
RAW Port Number	31		
Subnet Mask	28		
TCP/IP Setup	27		

Recycled paper is used for the inside pages of this manual.



KONICA MINOLTA

<http://konicaminolta.com/>