

Removable Full Front MP3 WMA CD Player/Receiver with CD Changer Control

可攜帶式面板並附有換片機控制器的MP3.WMA.CD放音/收音機

CQ-DF783W

Removable Full Front CD Player/Receiver with CD Changer Control 可攜帶式面板並附有換片機控制器的CD放音/收音機



Operating Instructions 使用説明書





• Please read these instructions carefully before using this product and save this manual for future use.

●使用本產品前,請務必閱讀這些説明並將本説明書保管好以備將來之用。

(CQ-DF783W)

Matsushita Electric Industrial Co., Ltd.

Web Site: http://www.panasonic.co.jp/global/

Panasonic welcomes you to our ever growing family of electronic product owners. We know that this product will bring you many hours of enjoyment. Our reputation is built on precise electronic and mechanical engineering, manufactured with carefully selected components and assembled by people who take pride in their work. Once you discover the quality, reliability, and value we have built into this product, you too will be proud to be a member of our family.

Use this Product Safely

When Driving

be aware of Do not

Keep the volume level low enough to be aware of road and traffic conditions.

When Washing Your Car

Do not expose the product, including the speakers and CDs, to water or excessive moisture. This could cause electrical shorts, fire, or other damage.

When Parked

Parking in direct sunlight can produce very high temperatures inside your car. Give the interior a chance to cool down before switching the unit on.

Use the Proper Power Supply

This product is designed to operate with a 12 V DC, negative ground battery system.

Disc Mechanism

Do not insert coins or any small objects. Keep screwdrivers and other metallic objects away from the disc mechanism and disc.

Service

This product is made of precision parts. Do not attempt to disassemble or adjust any parts. For repair, please consult your nearest authorized Panasonic service station.

For Installation

This product should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.

Note:

• The preset memory is cleared to return to the original factory setting when the power connector or battery is disconnected.

Features

Front speaker

O

Front speaker

CQ-DF783W

CQ-DF403W

Large-sized Volume Control

An large-sized rotary volume control that looks like one belonging to a Hi-Fi audio system is featured.

Spectrum Analyzer

This shows you the changing energy levels in different frequencies of the music as it is played.

CD Changer Control

You need connect the optional CD changer unit. For details, refer to the operating instructions on the CD changer unit.

Example:

MP3/WMA Playback from CD-R/RW CQ-DF783W

You can play your MP3/WMA (Windows Media Audio) files as well as regular CDs.

With up to 10 to 12 times* the capacity of a conventional CD, a single MP3/WMA-encoded disc can keep you entertained throughout your entire journey.

Power amplifier for

CD changer

front and rear speakers

Power amplifier for subwoofer

*Depending on bit rate.

Rear speaker

Rear speaker

Subwoofer

• This operating instruction manual is for 2 models; CQ-DF783W and CQ-DF403W. All illustrations throughout this manual represent model CQ-DF783W unless otherwise specified. The following table describes the differences between 2 models.

Before Reading these Instructions

Features Models	CQ-DF783W	CQ-DF403W
CD Text display	Yes	None
MP3/WMA playback	Yes	None
Direct track/file/folder/disc operation on the remote control unit	Yes	None
AUX input	Yes	None
Remote control unit	Remote control unit with ten number keys	Remote control unit without ten number keys
Face color	Silver	Chrome black



This can only be controlled through the main unit.



This can only be controlled through the remote control unit.

Operations with neither mark can be performed either by the main unit or the remote control unit.



Indicates features applicable to CQ-DF783W only.

CQ-DF403W CQ-DF403W only.

9