



Table Of Contents:

Introduction
The Front Panel4,5
Some Suggested Settings:
System Block Diagram7
Technical Specificationsback cover






Congratulations!

You are now the proud owner of the compact but powerful Crate BX25DLX/BX50DLX Bass Amplifier. The BX25DLX/BX50DLX features two different channels: a distortion channel, featuring Crate's exclusive Shape control for quick and easy access to the tone you need, and a clean channel with a four-band rotary EQ. Another unique and valuable feature of this amplifier is the Octave control. This feature electronically creates a second signal that is one octave lower than the original signal. An active electronic tuner, conveniently located on top of the amplifier, allows you to get in tune and stay in tune "on the fly." Front panel jacks are provided for connecting a CD player and a pair of headphones, thereby optimizing your practice time.

Like all Crate products, your BX25DLX/BX50DLX is designed by musicians and built using only the best components. Extensive testing at the hands (and ears) of skilled technicians and musicians insures you that this amplifier is the absolute best it can be.

In order to get the most out of your new bass amp, we urge you to check out the information in this manual before you begin playing.

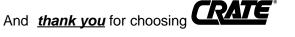

<u>D</u>	eclaration Of Conformity
#	#28, Effective 01-01-2001
Manufacturer's Name: Production Facility: Production Facility: Shipping Facility: Office Facility:	SLM Electronics 11880 Borman Drive, St. Louis, MO 63146, USA 700 Hwy 202 W, Yellville, AR 72687, USA 1400 Ferguson Ave., St. Louis, MO 63133, USA 1400 Ferguson Ave., St. Louis, MO 63133, USA
Product Type:	Audio Amplifier
Complies with Standards: LVD: Safety: EMC:	92/31/EEC, 93/68/EEC, & 73/23/EWG EN60065 EN55013, EN55020, EN55022, EN61000-3-2, & EN61000-3-3
SLM 1901 Congre	on provided by your local Sales & Services Office or: Electronics - R & D Engineering essional Drive, St Louis, MO 63146, USA 314-569-0141, Fax: 314-569-0175



The Front Panel:



1. INPUT: Use this 1/4" jack to connect your bass to the amplifier by means of a shielded instrument cable.

2. GAIN: Use this control to adjust the amount of distortion for the Distortion/A channel. As you rotate the control clockwise the amount of distortion increases.

3. SHAPE: Use this control to adjust the tone of the Distortion/A channel, from a studio "V"-shaped tone to a more "live," more present sound.

4. LEVEL: Use this control to adjust the output level of the Distortion/A channel.

5. CHANNEL SWITCH: Use this switch to select either channel. With the switch in the out position, the Clean/B channel is selected. When the switch is depressed, the Distortion/A channel is selected. The adjacent LED illuminates when the Distortion/A channel is selected. **NOTE:** When using the footswitch (#18): when this switch is depressed, the footswitch switches between the Distortion/A channel and the Clean/B channel; when this button is in the out position, the Clean/B channel is always active, and the footswitch turns the Distortion/A channel on and off, allowing you a blend of both channels.

6. LEVEL: Use this control to adjust the output level of the Clean/B channel, and as part of the Octave level control (see #11).

NOTE: The BX25DLX/BX50DLX employs an internal noise gate to keep residual noise to a minimum. Regardless of which channel is selected, the Clean/B channel's Level control (#6) must be turned up above "0" in order for the noise gate to trigger.

7. LOW: Use this control to adjust the low frequency level of the Clean/B channel.

8. LOW MID: Use this control to adjust the lower-midrange frequency output of the Clean/B channel.

9. HIGH MID: Use this control to adjust the upper-midrange frequency output of the Clean/B channel.

10. HIGH: Use this control to adjust the high frequency output of the Clean/B channel.

11. OCTAVE: The BX25DLX/BX50DLX features internal circuitry which creates a second signal which is one octave lower than the input signal. Use this control in conjunction with the Clean/B channel's Level control (#6) to adjust the level of the octave signal.

12. MASTER: Use this control to adjust the overall output level of the amplifier.






13. CD INPUT: Use these RCA jacks to connect the line level (or headphones) output of a CD player, tape deck or rhythm machine to the amplifier. The signal level from these jacks is adjusted by the Master control (#12). If the signal from the source connected to these jacks is too strong, use the output level control on the source to adjust the signal to obtain the proper level for a good mix.

14. HEADPHONES: Use this jack to listen to the amplifier through a pair of stereo headphones. The internal speaker is disconnected when the headphones jack is used.

CAUTION: To avoid possible damage to your hearing, do not use headphones for extended periods of time at extremely loud listening levels.

15. POWER: Use this switch to turn the amplifier on and off. The adjacent LED illuminates when the amplifier is turned on.

16. ELECTRONIC TUNER (top panel): This active electronic tuner is on whenever the amplifier is turned on, allowing you constant, "real-time" tuning. The tuner is fully chromatic – use the flat and sharp indicators until the LED between them illuminates, indicating proper tuning.

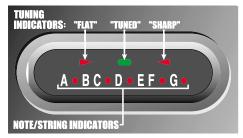

17. AC LINE CORD (rear panel, not shown): The grounded power cord should only be plugged into a grounded power outlet that meets all applicable electrical codes and is compatible with the voltage, power, and frequency requirements stated on the rear panel. **Do not attempt to defeat the safety ground connection.**


18. FOOTSWITCH (rear panel, not shown): Connect a two-button footswitch (such as the Crate CFP-2) here for remote control of the channel selection/"blend" (see #5") and octave on/off. (When the Channel Switch [#5] is depressed, the footswitch switches between the Clean/B channel and the Distortion/A channel; when the switch is in the out position, the Clean/B channel is always active, and the footswitch turns the Distortion/A channel, when channel on and off, allowing you a blend of both channels.)

19. EXTERNAL SPEAKER (rear panel, not shown): Use this jack to connect the amplifier to an external speaker cabinet (BX25DLX = 4Ω minimum, BX50DLX = 8Ω minimum). The internal speaker is disconnected when the external speaker jack is used.




Suggested Starting Settings:

Rock:

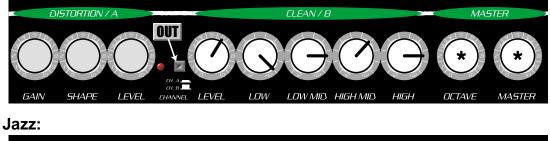





Country:

 


Funk:

 

Solo Fuzz:

 


Super Fat Fuzz:

 



System Block Diagram:

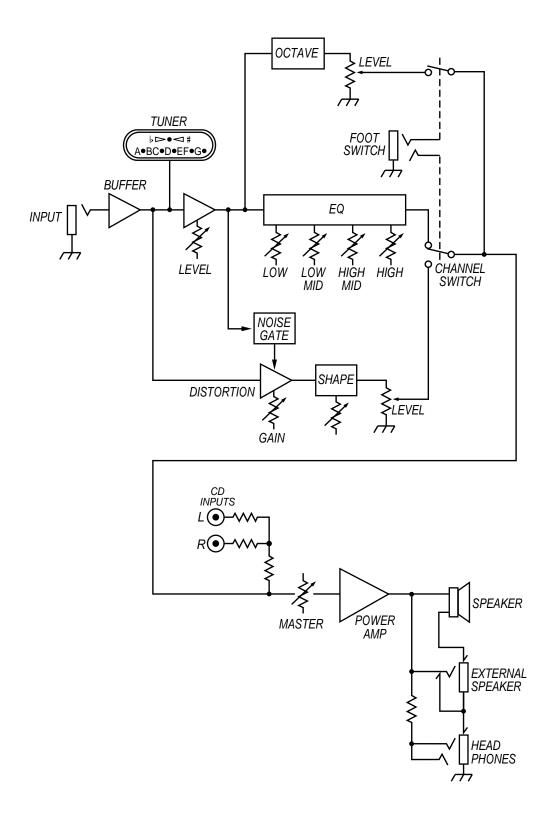

CRATE BX25 DLX/BX50 DLX BASS AMPLIFIER

		BX25DLX	BX50DLX
Output Power Rating		27W RMS 1%THD 4 Ω , 120 VAC	50W RMS 1.5%THD 4Ω 120 VAC
Gain Ch	Channel A	115dB	115dB
	Channel B	76dB	76dB
	CD Inputs	36dB	36dB
Tone Range	Low	20dB @ 50Hz	20dB @ 50Hz
	Low Mid	24dB @ 150Hz	24dB @ 150Hz
	High Mid	20dB @ 1kHz	20dB @ 1kHz
	High	34dB @ 10kHz	34dB @ 10kHz
Signal to Noise Ratio		75dB	75dB
Input Impedance		220k ohms	220k ohm
Maximum Signal Accepted		7 volts, peak-to-peak	7 volts, peak-to-peak
Power Requirements		110VAC, 60Hz, 45VA	110VAC, 60Hz, 85VA
		100/110VAC, 50/60Hz, 45VA	100/110VAC, 50/60Hz, 85VA
		230VAC, 50/60Hz, 45VA	230VAC, 50/60Hz, 85VA
Internal Speaker	Size	10"	12"
	Туре	Crate Custom	Crate Custom
Magnet		30 oz	30 oz
Voice Coil		1.0"	1.5"
RMS Rating		30 watts	50 watts
Impedance		4 ohms	8 ohms
Size		17" H x 17" W x 12" D	20.62" H x 17" W x 13.5" D
Weight		39 lbs	47 lbs

BX25DLX/BX50DLX TECHNICAL SPECIFICATIONS:

The BX25DLX/BX50DLX is covered with a durable black Tolex material: wipe it clean with a lint-free cloth. Never spray cleaning agents onto the cabinet. Avoid abrasive cleansers which would damage the finish.

Crate continually develops new products, as well as improves existing ones. For this reason, the specifications and information in this Crate manual are subject to change without notice.





©2002 SLM ELECTRONICS, A DIVISION OF ST. LOUIS MUSIC, 1400 FERGUSON, ST. LOUIS, MO. 63133

P/N 47-093-01 • 120202