

INSTALLATION GUIDE FOR THE:

PRO-PDA15

Power Door Lock Actuator

Printed in Taiwan

Form No. 128-6367A

ACTUATOR/DOOR LOCK INSTALLATION

- 1.) Carefully remove the door panel.
- 2.) Since the adjustable steel mounting strap is optional at this step, you can either attach strap to the door structure (see Drawing #3) and mount actuator/door lock to the strap, or attach actuator/door lock onto the door structure. Both mounting methods must ensure a suitable position is selected that will not hinder the window mechanism and is close enough to operate the existing lock assembly.
- 3.) Slide connector rod onto the end hole of actuator/door lock. Attach-connector rod clamp to the connector rod (see Drawing #2).
- Set door lock in the unlock position, then tighten connector rod clamp to the existing factory door rod supplied with kit.
- 5.) Pull connector rod until the actuator is fully extended, then tighten connector rod clamp to existing factory door rod.

INSTALLATION DIAGRAM

