
IMPORTANT SAFETY INSTRUCTIONS

user **manual** manual de usuario

> RP5415 RP5415PK

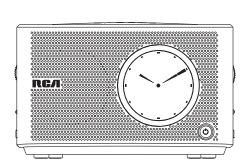

EN/E

It is important to read this user manual prior to using your new product for the first time.

- Do not place lighted candles, cigarettes, cigars, etc. on the
- Connect power cord only to AC power source as marked on
- the product. Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- Caution marking is located at bottom of apparatus.
- This is CLASS II apparatus with double insulation, and no protective earth

Important Battery Precautions

- · Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product usaes more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak. • Discard any leaky or deformed

battery immediately. They

- may cause skin burns or other personal injury.

 • Please help to protect the environment by recycling or disposing of batteries according to federal, state, and
- local regulations.

 Do not expose batteries to excessive heat (for example by leaving them in sunlight or close to fire).

FCC information This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

However, there is no guarantee Modifications not expressly that interference will not occur approved by the party responsible in a particular installation. If for compliance could void the this equipment does cause user's authority to operate the harmful interference to radio or television reception, which can be determined by turning the



SEE MARKING ON BOTTOM OF PRODUCT

For your records

Model No.:

Brand: RCA

Date of Purchase:

Place of Purchase:

Product: Clock Radio

In the event that service should

be required, you may need the

model number and the serial

number. In the space below,

record the date and place of

Technical information

Model: RP5415/RP5415PK

Power Supply: 120V ~ 60Hz

Power Consumption: 4 Watts

purchase and the serial number

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

equipment off and on, the user is

between the equipment and

an outlet on a circuit different

• Connect the equipment into

from that to which the

receiver is connected.

· Consult the dealer or an experienced radio/TV

technician for help

The descriptions and

characteristics in this owner's

you with the highest quality

manual are for the purpose of

general reference only and not as

a guarantee. In order to provide

product, we may make changes

or modifications without prior

encouraged to try to correct the

interference by one or more of

the following measures:

receiving antenna.

receiver.

· Reorient or relocate the

• Increase the separation

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

Manufacturer/Responsible Party

Audiovox Electronics Corp., 150 Marcus Blvd., Hauppauge, NY 11788

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions. Keep these instructions
- Heed all warnings. Follow all instructions. • Do not use this apparatus near
- water. · Clean only with dry cloth. • Do not block any ventilation openings. Install in accordance with the manufacturer's
- instructions. • Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If

the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/ accessories specified by the
- manufacturer. Use only with the cart, stand, tripod. bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to
- avoid injury from tip-over Unplug this apparatus during lightning storms or when unused for long periods of
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or

plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains
- socket outlet completely. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed
- on the apparatus. • Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings

Before you begin

Plugging in for power AC OUTLET POWER SUPPLY: 120V~60Hz

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

Power is fed to the unit even when it is not functioning. To cut the power supply off, the power cable must be unplugged.

Battery back-up operation The power failure protection circuit will not operate unless battery is installed.

When the battery backup functions, the digital display will not light, however, the wake function still occurs during the power interruption if remaining battery power is adequate.

Normal operation will resume after AC power is restored so you will not have to reset the time or wake.

Install battery as follow:

- 1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.
- 2. Connect a 9-volt battery (not supplied) to the connector 3. Replace the compartment door.

Selecting between

Switching off wake

Slide the switches on the sides

of the unit to $\mbox{\bf OFF}$ to switch off

respective wake function. The set

wake time will not be erased and

can be used the next day when

vou switch on wake function

function

analogue and digital clock

Press **DISPLAY** to select between

 
analogue and digital clock display.

Power failure indicator When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless battery is installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

Alkaline (NEDA 1604A/ IEC 6LR61) battery is recommended. Carbonzinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if radio or alarm are not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. Leaky battery can badly damage the clock radio.

General controls

Front view



b – turns on or off the radio; turns off the wake function

 
Top view



SLEEP – activates sleep function

SNOOZE - turns off the wake function temporarily; cancels the sleep function

DISPLAY – switches between analog and digital clock displays Left view



TUNING - selects radio frequency

 ↑ OFF - Slide to activate Wake 1 settings and change Wake

- ⟨wake to alarm⟩ selects alarm as the waking mode
- 13 (wake to radio) selects radio as the waking mode • OFF - deactivates Wake 1 waking mode

WAKE 1 CHECK TIME - checks

Adjust the auxiliary

device to mid-range

volume and adjust the

master volume by rotating

VOLUME knob on the unit.

Do not turn the volume of the

may affect the sound quality.

For other playback operations.

control them on your auxiliary

auxiliary device too high as this

AUX IN - jack for external audio

Right view

 


+ VOLUME - - adjusts volume

2 OFF - Slide to activate

- 😭 (wake to alarm) selects alarm as the waking mode 2.7 (wake to radio) - selects
- radio as the waking mode OFF – deactivates Wake 2 waking mode

Back view



BAND AM/FM - selects radio

AUX ON/OFF - selects auxiliary

– adjusts Wake 2 time

 – adjusts clock time – adjusts Wake 1 time

- BRIGHTNESS + - adjusts display

Clock

Setting clock Turn the clock setting knob @ on the back of the unit to adjust clock time. The time decrements or increments will follow by a faster rate when you turn and hold the knob. The digital clock shows and a clock icon flashes on the display while you are adjusting the time.

Display brightness

Clock time and radio frequency are displayed on the display area at the front of the unit. You can adjust the brightness of the display by rotating BRIGHTNESS on the back of the unit

Radio

Switching on/off Press **b** to turn on or off the radio.

Switching band Slide the **BAND AM/FM** switch on the back of the unit to select FM or AM band.

Tuning radio Turn the TUNING knob on the left of the unit to adjust radio frequency.

Antennas

AM Antenna - A built-in ferrite rod antenna eliminates the need for an outside antenna for AM reception. Rotating the unit slightly may improve reception of distant AM stations.

FM Antenna – The power cord acts as your FM antenna. The power cord picks up moderate the need for an external antenna in most strong signal areas. Be sure the power cord is stretched out to its full length. Do not coil or bunch the cord together.

Changing position of the power cord may improve reception

Built-In AFC – The Built In **Automatic Frequency Control** (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is

 
When tuning in FM stations, you may notice that the station you are tuning can be well-tuned on two or three nearby points on the dial. Always tune carefully at the loudest and clearest point

Auxiliary input

Connecting auxiliary

Selecting AUX IN mode Press AUX ON/OFF on the

IN mode Press AUX ON/OFF again to exit from the AUX IN mode and resume to standby mode To listen to the radio again, press **b**.



Wake 2 settings and change Wake 2 mode:

WAKE 2 CHECK TIME - checks

Sleep function

In sleep mode, you can set the duration (up to 2 hours) before the radio turn off automatically.

1. Press and hold **SLEEP** and turn the clock setting knob 🙉 on the back of the unit to adjust the duration up to 2 hours. The time decrements or increments will follow by a faster rate when you turn and

switched on. 2. To check the remaining duration before the radio turns

3. To cancel the sleep function, press SNOOZE or **O**.

If you set Sleep function with low volume level before going to bed, we advise using Wake to alarm

device Connect your auxiliary audio player (e.g. mp3 player) with an audio cable (not included) to the AUX IN jack on the left side of

back of the unit to select AUX

Wake function Setting wake time

This unit allows two wake times to be set Turn the wake time setting knob have or on the back

of the unit to adjust wake time 1 and 2 respectively. The time decrements or increments will follow by a

faster rate when you turn and hold the knob. "WAKE 1" or "WAKE 2" icon flashes on the display while

you are adjusting respective

wake time Selecting wake source You may be woken up by radio

- 1. Select an AM or FM station (see directions on "Radio"). 2. Set a wake time (see above direction).
- 3. Slide the switches on the sides of the unit to \P / \P (wake by alarm) or 157 / 257 (wake by radio). Corresponding icon lights on the front of the unit.

– Wake 1 by alarm - Wake 1 by radio Wake 2 by alarm - Wake 2 by radio

- Checking wake time • Press WAKE 1 CHECK TIME or WAKE 2 CHECK TIME on the sides of the unit to check respective wake time. Wake time shows briefly on the
- display. • "OFF" shows on the display if no wake source is selected while you are checking the wake time.

Turning off the wake

alarm or radio • Press SNOOZE on the top of the unit. The wake alarm or radio will be switched off temporarily. The alarm or radio will be on again when

the snooze period is over. (see "SmartSnooze™ Operation") · To turn off the wake alarm or radio completely, press 🖰 The wake alarm or radio will activate again the next day unless you switch off the wake function (see "Switching off wake function").

implied warranty lasts or the

exclusion or limitation of

damage so the above

limitations or exclusions

incidental or consequential

may not apply to you. This

Warranty gives you specific

legal rights and you may also

have other rights which vary

(default: 9 min). Set the "quiet" period as follow: 1. Press and hold **SNOOZE**.

SmartSnooze™ operation

This operation allows extra sleep

DISPLAY until the snooze period

time after the wake function

is on. The alarm will be off by pressing **SNOOZE**, **SLEEP** or

is over. Snooze period can be

set between 1 and 30 minutes

2. Turn the clock setting knob 🙉 on the back of the unit to adjust the snooze "quiet" period (default: 9 min). The time decrements or increments will follow by a faster rate when you turn and hold the knob.

hold the knob. · Note: The radio will be

off, press and hold SLEEP.

mode.

Warranty information

12 Month Limited Warranty Applies to RCA Audio/Video

- AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for
- parts and repair labor To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.
- This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/
- or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards. speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems

interruptions of broadcast

 This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND. IN NO EVENT, SHALL THE

COMPANY'S LIABILITY EXCEED

- THE PURCHASE PRICE PAID BY PURCHASER FOR THE
- all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE **DURATION OF THIS WRITTEN** WARRANTY. ANY ACTION FOR **BREACH OF ANY WARRANTY** HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE **BROUGHT WITHIN A PERIOD** OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company

any liability other than

Some states do not allow

limitations on how long ar

expressed herein in connection

with the sale of this product.

- PRODUCT. This Warranty is in lieu of
- from state to state How to make a warranty claim: • If your product is capable

of storing content (such as an mp3 player, digital voice recorder, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR

LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product will be returned with factory default settings. and without any pre-loaded content which may have been installed in the originally purchased products. Consu will be responsible for reloading data and content Consumer will be responsible to restore any personal

preference settings. Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries. even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Include evidence of purchase

date such as the bill of sale.

address and a description of

the defect. Send via standard

Also print your name and

UPS or its equivalent to:

150 Marcus Blvd. Hauppauge N.Y. 11788 1-877-833-3491 · Insure your shipment for loss or damage. Audiovox accepts no

What we will do: exchange unit is under warranty for the remainder of the origina product's warranty period

> c/o Genco Unit#3, Door 16, Mississuaga, Ontario

Audiovox Electronics Corp. Attn: Service Department.

liability in case of damage or loss en route to Audiovox. · Pay any charges billed to you by the Exchange Center for service not covered by the warranty.

• A new or refurbished unit

will be shipped to you freight prepaid. Provide you with a new, or at our option, a refurbished unit. The

For Canada Customers, please

ship to: Audiovox Return Centre 6685 Kennedy Road,

Audiovox Electronics Corp. 150 Marcus Blvd. Hauppauge, NY 11788 ©2009 Audiovox Electronics Corp. Trademark(s) ® Registered Marque(s) ® Deposée(s) Marca(s) ® Registrada(s) www.rcaaudiovideo.com Printed in China