



User's Manual

11.5 AMP Canister Vacuum Cleaner
Model: SNV11CBRB



TABLE OF CONTENTS

SAFETY PRECAUTIONS	3
DESCRIPTION AND OPERATION	4
CLEANING THE FILTER	7
CHANGING THE DUST BAG	8
USING THE VACUUM IN SHOULDER MODE	9
BEFORE ASKING FOR SERVICE	9

SAFETY PRECAUTIONS

- This vacuum cleaner should only be used for normal dry household dust and dirt.
- The manufacturer cannot be held responsible for any damage caused by use of operation of the cleaner contrary to these instructions.
- If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.


- Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag, or cause a fire.
- When rewinding the cord, hold the plug body before pressing the cord rewind button to prevent whipping.
- Do not pull the power cord out beyond the specified length.
- Make sure a dust bag and motor protection filter are always inserted.
- This product includes a cable which, if damages, must be replaced by a repair shop authorized by the manufacturer since special tools are required.

DESCRIPTION AND OPERATION

HOSE CONNECTION




Connecting the hose: insert hose firmly into the hose inlet. You will hear it click into place.

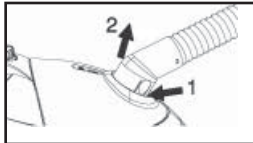


Disconnecting the hose: press the button and pull the hose out of the vacuum cleaner.

SUCTION CONTROL

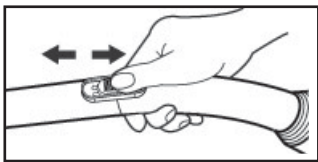


The suction control at the hand grip enables you to control suction power.

PIPE CONNECTION

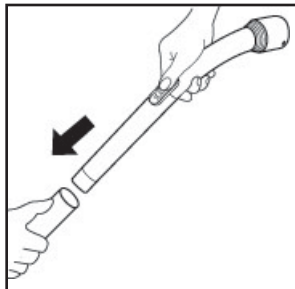

Connecting the nozzle: holding the tubes and handle, insert the narrowed section into the wide section.


WIDE SUCTION NOZZLE

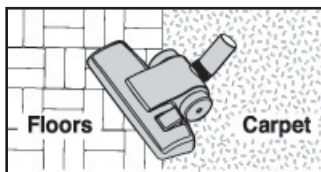

Use the vacuum head for cleaning both carpeted and uncarpeted floor.


DESCRIPTION AND OPERATION

ON/OFF SWITCH

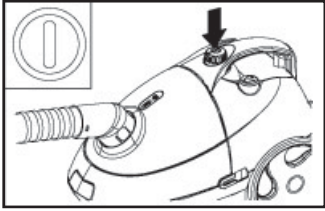

Press the ON/OFF switch to power on or off.

CORD REWIND BUTTON

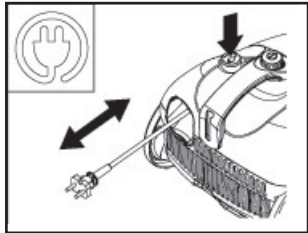


Press the cord rewind button to rewind the power cord.

DUST METER



Change the dust bag when the dust meter displays RED.


CREVICE NOZZLE

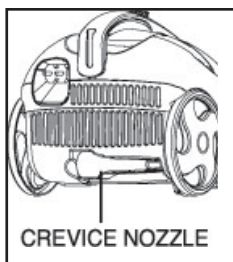

Attach crevice nozzle to the end of the hose for detail cleaning.


DESCRIPTION AND OPERATION

STORAGE

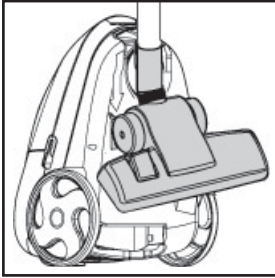

Hook the vacuum head to the body using the built-in clip to store the cleaner.


PRACTICAL PARKING

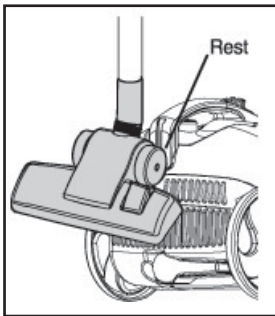

Hook the vacuum head to the body using the built-in clip when you temporarily stop vacuuming.


CLEANING THE FILTER

1

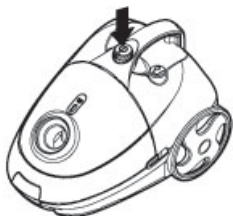


Turn off the cleaner.

2

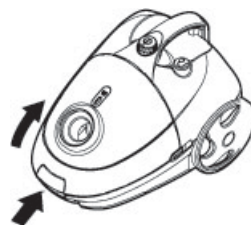

Open the cover.

3

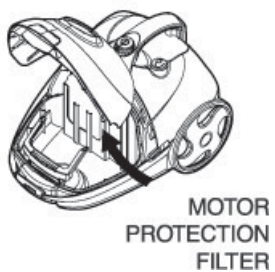

Remove the filter.

4



Shake the dust out of the filter.

5



Replace the filter.

6



Close the cover.


CHANGING THE DUST BAG

1




Turn off the cleaner and open the cover.

2

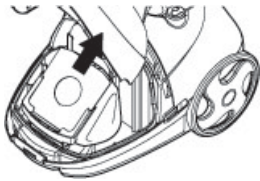

Hold the cover while removing the dust bag from the dust bag holder.

3

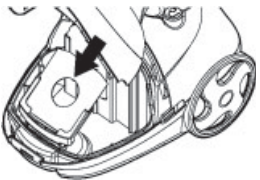

Insert the new dust bag into the dust bag holder properly, as shown in the picture.

Note: If no dust bag has been placed into the dust bag holder, the cover can not be closed.

USING THE VACUUM IN THE SHOULDER MODE

1



Assemble the clips.

2



Vacuum.

BEFORE ASKING FOR SERVICE

Before asking for service, please check each item below if you have trouble with your cleaner.

PROBLEM	CHECK POINT	MEASURE
Suction power is weak.	Dust bag Pipe or hose	If dirt bag is dirty, replace it. If clogged or blocked, remove object.
The cleaner does not work.	Power cord ON/OFF switch	Check if power cord is plugged in. Check if the power is turned on.
Power cord does not rewind.	Power cord	Pull the power cord out a little and press the cord rewind button.



© 2006 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.
Sunbeam® is a registered trademark of Sunbeam Products, Inc. used under license.
Distributed by Petters Consumer Brands, LLC. 4400 Baker Road, Minnetonka, MN 55343.

For service, support and warranty information, visit www.sunbeammajorappliances.com or in the US call 1-866-866-6283.