


## Operating Instructions

### DVD Recorder

Model No. **DMR-EZ47VEB**

# DIGA

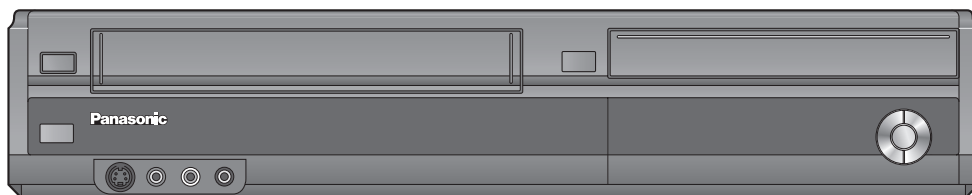

The illustrations in these Operating Instructions show images of the black model.

### Dear customer

Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read the instructions completely.

Please keep this manual for future reference.

Note: "EB" on the packaging indicates the United Kingdom.



Trademark of the DVB Digital Video Broadcasting Project (1991 to 1996)  
Declaration of Conformity No. 4524, 22th January 2007

### Notice for DVB functions

**This DVD Recorder is for viewing and recording free to view channels only, not Pay TV or encrypted channels.**

**This unit does not have an analogue broadcast tuner.**

- Any functions related to DVB (Digital Video Broadcasting) will work in areas where DVB-T (MPEG2) digital terrestrial broadcasting is received. Consult your local Panasonic dealer with coverage areas.
- This unit has the capability for DVB specifications. But future DVB services cannot be guaranteed.

#### Region number supported by this unit

Region numbers are allocated to DVD recorders and DVD-Video according to where they are sold.

- The region number of this unit is "2".
- The unit will play DVDs marked with labels containing "2" or "ALL".

Example:




Web Site: <http://www.panasonic-europe.com>

# Features

## Enjoy Digital Broadcast!

### Receive Freeview using an integrated (Digital Video Broadcasting) tuner


- Watching Television (→ 12)
- TV Guide (→ 12, 15, 30)
- Register and instantly call up favourite programmes with Edit Profiles (→ 58)
- Digital Channel Information (→ 40)

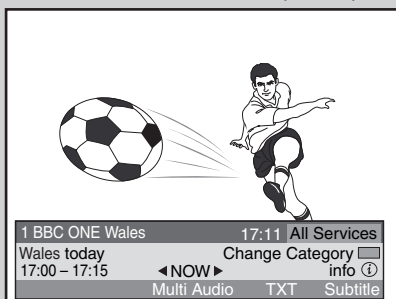

## Enjoy High Quality Video!

### Just one cord and simple connection with HDMI terminal

 When connected to an HDMI compatible unit, an uncompressed digital audio and video signal is transmitted, enabling you to enjoy high quality, digital video and audio with just one cord.



## Easy to Find and Select!

### You can easily find programmes you want to watch and set them for timer recording.


TV Guide (→ 12, 15, 30)

TV Guide: Landscape		Wed 13/01/07 19:45	
Prog. Type	Category		
All Types	All Services		
19:00-20:00 Emmerdale: In today's show we will...			
Time: 19:30 20:00 20:30 21:00 21:30			
1 BBC 1	East...	D.I.Y. SOS	Red Cap
2 BBC 2	Hot Wars	Coronation Street	Holiday Programme
7 ITV 1	Emm...	Coronation Street	The Bill
10 Channel 4	Scrapheap Cha...	Pepsi Chart Show	
31 Channel 5	News	Sex and the City	Terminator 2
45 ITV 2	Me out of here!	Pop Idol	News
70 S4C	Rugby	15 to 1	Scrapheap C...
+24 Hr		Prog. Type	Category

SELECT VIEW Info Page + [A]  
RETURN Guide Change Display Mode Page - [V]

### You can easily select and play recorded programmes.


DIRECT NAVIGATOR (→ 32)

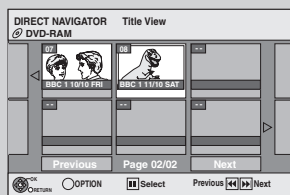

## Convenient Functions!

### Linked operations with the TV

You can enjoy linked operations with the TV and receiver by using VIERA Link or Q Link. Linked operations with the TV (VIERA Link "HDAVI Control™"/Q Link) (→ 42)

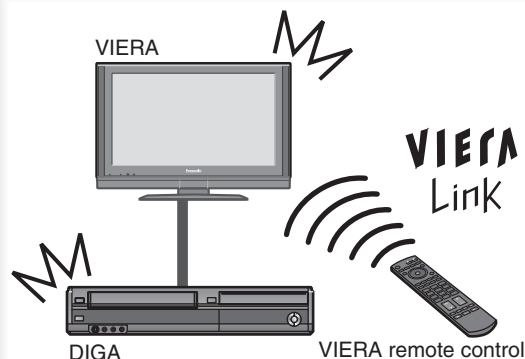

### Linked timer recordings with external equipment

You can set the Timer Recordings on Digital STB/Satellite Receiver when it is connected to this unit with SCART cable. EXT LINK (→ 23)

## Accessories



 
Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts.  
(Product numbers correct as of April 2007. These may be subject to change.)



- 1 Remote control (N2QAYB000130)



- 2 RF coaxial cables (black) (K1TWACC00001)
- 1 RF coaxial cable (grey) (K1TWACA00001)



- 1 AC mains lead (K2CT3CA00004)
  - For use with this unit only. Do not use it with other equipment. Also, do not use cords for other equipment with this unit.



- 2 Batteries for remote control (R6 Size)



- 1 Audio/video cable (K2KA6BA00003)

## Sales and Support Information

### Customer Care Centre

- For customers within the UK: 0844 844 3852
- For customers within the Republic of Ireland: 01 289 8333
- Visit our website for product information
- E-mail: [customer.care@panasonic.co.uk](mailto:customer.care@panasonic.co.uk)



### Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday–Thursday 9:00am–5:30pm, Friday 9:30am–5:30pm (Excluding public holidays).

- Or go on line through our Internet Accessory ordering application at [www.panasonic.co.uk](http://www.panasonic.co.uk).
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

*Interested in purchasing an extended guarantee?  
Please call 0870 240 6284 or visit our website  
[www.panasonic.co.uk/guarantee](http://www.panasonic.co.uk/guarantee).*

# Caution for AC Mains Lead

For your safety, please read the following text carefully.  
This appliance is supplied with a moulded three pin mains plug for your safety and convenience.  
A 5-ampere fuse is fitted in this plug.  
Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.  
Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.  
If you lose the fuse cover the plug must not be used until a replacement cover is obtained.  
A replacement fuse cover can be purchased from your local dealer.

### CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.  
THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13- AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below.  
If in any doubt please consult a qualified electrician.

### IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:  
Blue: Neutral, Brown: Live.  
As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:  
The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.  
The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

**WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  $\perp$  OR COLOURED GREEN OR GREEN/YELLOW.**

**THIS PLUG IS NOT WATERPROOF—KEEP DRY.**

### Before use


Remove the connector cover.

### How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

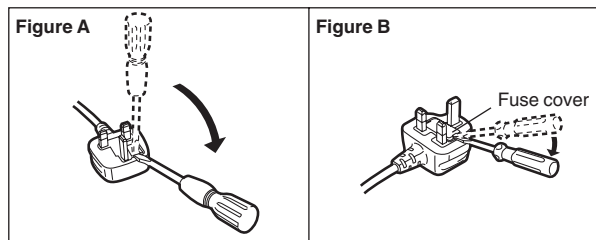

2. Replace the fuse and close or attach the fuse cover.

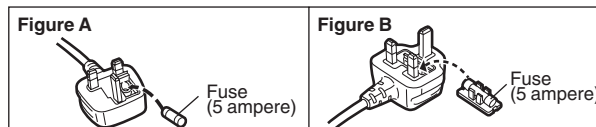

# Table of Contents

## Getting Started

Features .....	2	Caution for AC Mains Lead.....	3
Accessories .....	3	Remote Control Information .....	5
Sales and Support Information.....	3		

## Quick Start Guide

Location of Parts/Controls .....	6
Remote Control .....	6
Main Unit.....	6
The Unit's Display .....	7
Rear Panel .....	7
Basic Connection.....	8
Connecting to a Television only.....	8
Adding a Satellite Receiver: Connecting to a Television and a Satellite Receiver .....	9
Setting the Channels and Clock .....	10
Clock Setting .....	11

## Basic Operations

Watching Television .....	12
Watching Satellite Programmes.....	12
Playback .....	13
Playing Discs .....	13
Playing a Video Cassette.....	13
Recording Television Programmes .....	14
Timer Recording.....	15
Copying Titles .....	16
Copying Titles (VHS → DVD).....	16
Copying Titles (DVD → VHS).....	17
Deleting Titles.....	18
Delete Navigator .....	18
Deleting Titles During Playback .....	18

## Advanced Features

Important Notes for Recording .....	19
Advanced Recording .....	20
DVD Recording Modes and Durations .....	20
VHS Recording Modes and Durations.....	20
When the format confirmation screen is displayed .....	21
When removing a Recorded or Copied Disc.....	21
Specifying the Recording Time .....	21
Direct TV Recording.....	21
Flexible Recording .....	22
Playing while you are recording.....	22
Recording from a Satellite Receiver .....	23
Manual Recording.....	23
Linked timer recordings with external equipment (SKY Digital STB/satellite receiver)—EXT LINK .....	23
Recording from an External Device.....	24
Recording from a VCR, etc.....	24
Recording from a DV Camcorder.....	25
Advanced Timer Recording .....	26
Manual timer recordings .....	26
To cancel a timer recording in progress .....	27
To deactivate timer programme (e.g. to interrupt a daily or weekly timer programming).....	27
Notes on timer recording .....	27
Check, Change, or Delete Programmes .....	28
Making timer recordings on the television .....	29

TV Guide .....	30
Using the TV Guide.....	30
Selecting the programme from the desired programme type or category .....	31

Advanced Disc Playback .....	32
Menu Screens on the TV .....	32
Selecting Titles to Play.....	32
Search .....	32
Skip .....	32
Quick View (Play × 1.3).....	32
Direct Play.....	33
Slow-motion Play .....	33
Frame-by-Frame Viewing.....	33
Time Slip .....	33
Manual Skip .....	33
Create Chapters .....	33

Playing Still Pictures (JPEG) .....	34
Playing MP3s.....	36
Advanced Video Cassette Playback .....	37
Fast-forward/Rewind .....	37
Slow-motion Play .....	37
Cue/Review.....	37
Jet Search.....	37
Jet Rewind .....	37
VHS Index Search System (VISS).....	38
S-VHS Quasi Playback (SQPB).....	38
Repeat Playback.....	38
Adjusting the Playback Picture .....	38
Changing Audio during Playback.....	39
On-screen Display Indicators.....	39
Information Messages .....	40
Digital Channel Information .....	40
Status Messages .....	41
New Service Message.....	41

FUNCTION MENU Window.....	41
Linked Operations with the TV (VIERA Link "HDAVI Control™"/Q Link) .....	42
Easy control only with VIERA remote control .....	43

## Advanced Editing

Entering Text.....	44
Titles—Editing.....	44
Accessing the Title View .....	44
Title Operations.....	45
Chapters—Creating, Editing .....	47
Accessing the Chapter View .....	47
Chapter Operations.....	47
Creating, Editing and Playing Playlists .....	48
Accessing the Playlist View.....	48
Creating Playlists .....	48
Editing Playlists/Chapters .....	48

Copying Titles (Advanced) .....	50
Copying Titles (VHS → DVD) .....	50
Copying Titles (DVD → VHS).....	51
Copying a finalised DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R and +R DL.....	53

## Setting Menus

Setting On-Screen Display .....	54
Accessing the On-Screen Display .....	54
DVD Management .....	56
Accessing the Management Menus.....	56
Setup Menu .....	58
Accessing the Setup Menu .....	58
Channel Settings .....	58
Playback/Recording Settings.....	60
Picture Settings .....	60
Sound Settings .....	61
Display and Connection Settings.....	62
VHS and System Settings .....	64



## Other Settings

Other Settings.....	65
Child Lock .....	65
Using the Unit's Remote Control to Operate the TV .....	65

## Reference

Additional Connections.....	66
Adding a VCR: Connecting to a Television and a Video Cassette Recorder.....	66
Using an Audio/Video Cable .....	67
Using an S Video Cable .....	67
Using Component Video Cables .....	67
Using an Audio Cable for Better Sound .....	68
Using an Optical Digital Audio Cable for Better Sound .....	68
Connecting with an HDMI (High Definition Multimedia Interface) Terminal .....	69
Disc Handling .....	70
Usable Discs for Recording and Playback .....	70
Play-only Discs .....	71
Discs that Cannot be Played.....	71
Types of disc for the type of connected TV .....	71
Inserting Discs .....	72
Disc Care .....	72
MP3s and Still Pictures (JPEG).....	73
MP3 File Information.....	73
Still Picture (JPEG) Information .....	73
Video Cassette Handling .....	74
Inserting a Video Cassette.....	74
Video Cassette Information .....	74

## Troubleshooting Guide ..... 75

When Other Panasonic Products Respond to this Remote Control .....	75
To Reset This Unit.....	75
General Issues: Power .....	76
General Issues: Displays .....	76
General Issues: Operation .....	77
General Issues: TV Guide.....	78
General Issues: DVB-T .....	78
General Issues: VIERA Link.....	79
Playback Issues: Picture .....	80
Playback Issues: Sound.....	81
Playback Issues: Operation .....	82
Playback Issues: VHS Picture.....	83
Playback Issues: VHS Sound.....	83
Playback Issues: VHS Play .....	83
Recording Issues: Recording/Timer Recording/Copying/External input.....	84
Recording Issues: VHS Recording.....	85
Editing Issues: DVD .....	86


## Frequently Asked Questions ..... 87

Setup .....	87
Discs .....	87
Recording .....	88
TV Guide.....	88
DVB-T .....	88
Messages .....	89
On the Unit's Display.....	89
On the TV.....	90
Unit care .....	91
Glossary .....	92
Safety Precautions .....	93
Specifications .....	94
Index.....	Back cover

## Remote Control Information

### About batteries

- Insert so the poles (+ and -) match those in the remote control.
- When closing the lid, insert it from the - (minus) side.
- Do not use rechargeable type batteries.

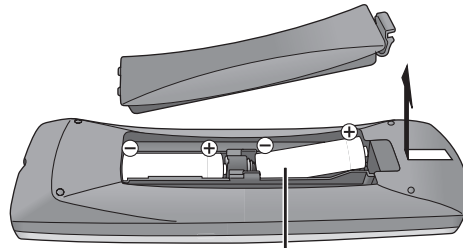

R6/LR6, AA


- Do not mix old and new batteries.
- Do not use different types at the same time.
- Do not heat or expose to flame.
- Do not take apart or short circuit.
- Do not attempt to recharge alkaline or manganese batteries.
- Do not use batteries if the covering has been peeled off.

Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.


### Using the remote control

Aim at the sensor, avoiding obstacles, up to a maximum range of 7 m directly in front of the unit.

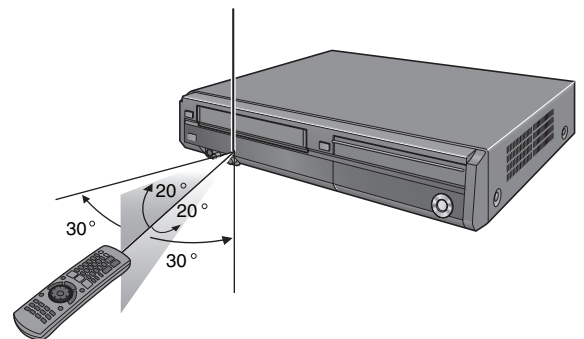


# Location of Parts/Controls

## Remote Control

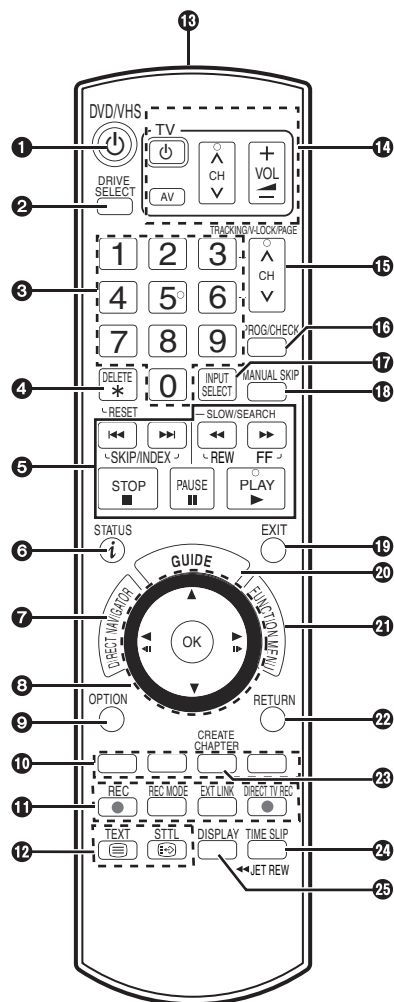


- 1 Turn the unit on or off ..... (→ 10)
- 2 Select drive (DVD or VHS) ..... (→ 13, 14)
- 3 Select channels and title numbers etc./ Enter numbers ..... (→ 10)
- 4 Delete items/Reset the tape counter ..... (→ 18)
- 5 Basic operations for recording and play
- 6 Show the digital channel information/ Programme information within TV Guide screen/ Show status messages ..... (→ 30, 40, 41)
- 7 Show Top Menu/DIRECT NAVIGATOR ..... (→ 32, 34)
- 8 Selection/OK, Frame-by-frame ..... (→ 10, 33)
- 9 Show OPTION menu ..... (→ 35, 44, 47)
- 10 Use Colour buttons according to on-screen instructions. These buttons are for TV Guide/Digital TEXT/Edit Profiles  
In addition,  
"Red": Timer recording list  
"Blue": Digital channel information/Timer recording list
- 11 Recording function  
[● REC]: Start recording ..... (→ 14)  
[REC MODE]: Change recording mode ..... (→ 14)  
[EXT LINK]: Linked timer recordings with external equipment ..... (→ 23)  
[● DIRECT TV REC]: Direct TV recording ..... (→ 21)
- 12 DVB function  
[TEXT (T)]: Show Digital TEXT (MHEG) service ..... (→ 40)  
[STTL (S)]: Show subtitles ..... (→ 40)
- 13 Transmission window
- 14 TV operations ..... (→ 65)
- 15 Channel select/Change pages in the TV Guide list/TRACKING/V-LOCK ..... (→ 14, 30, 38)
- 16 Show timer recording list ..... (→ 26)
- 17 Input select (Tuner, AV1, AV2, AV3, DV) ..... (→ 12, 23, 24)
- 18 Skip approx. 30 seconds forward ..... (→ 33)
- 19 Exit the menu screen
- 20 Show the TV Guide screen ..... (→ 12, 15, 30)
- 21 Show FUNCTION MENU window ..... (→ 41)
- 22 Return to previous screen
- 23 Create chapters ..... (→ 33)
- 24 Skip the specified time/Jet rewind button (JET REW) .... (→ 33, 37)
- 25 Show on-screen display ..... (→ 54)  
Menu for disc playback and switching DVB multi audio etc.

## Main Unit

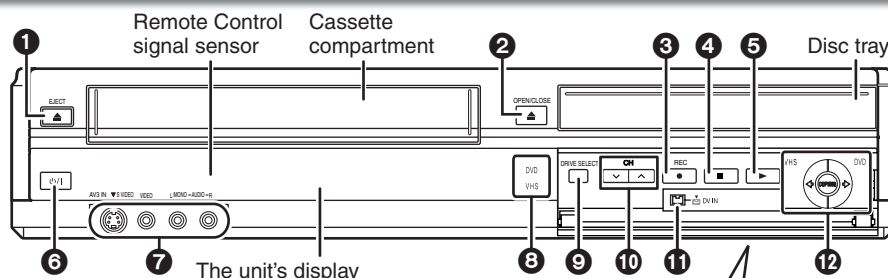


### Opening the front panel

 Press down on the part with your finger.



- 1 Cassette eject button ..... (→ 74)
- 2 Disc tray open/close button ..... (→ 13, 72)
- 3 Start recording button ..... (→ 14)
- 4 Stop button ..... (→ 13, 14)
- 5 Play/× 1.3 button ..... (→ 13)
- 6 Standby/on switch (⏻/⏻) ..... (→ 10)  
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- 7 AV3 input terminals ..... (→ 24)
- 8 DVD/VHS drive indicator ..... (→ 13)  
● Lights when the DVD or VHS drive is selected.
- 9 DRIVE SELECT button ..... (→ 13)  
● Drive changes each time you press [DRIVE SELECT].
- 10 Channel Select button ..... (→ 14)
- 11 DV IN terminal (for a digital video camcorder) .... (→ 25)
- 12 One Touch Copying operation button  
● From VHS to DVD ..... (→ 16)  
● From DVD to VHS ..... (→ 17)

## The Unit's Display

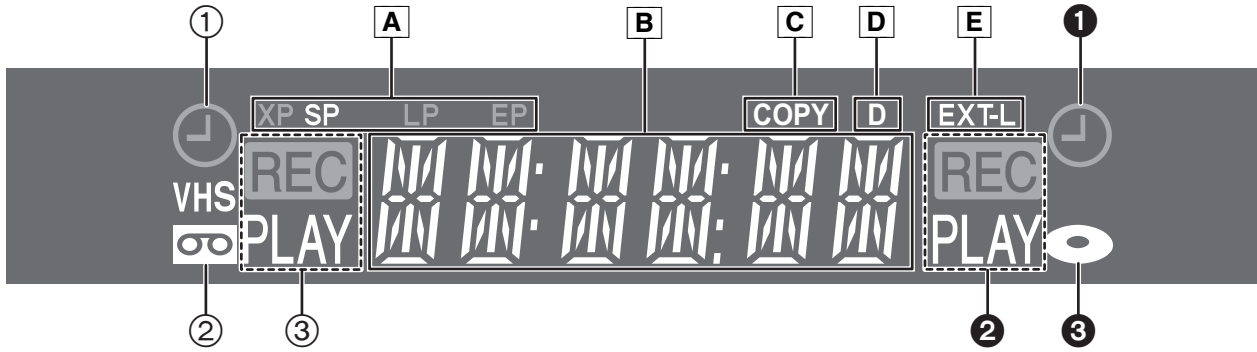

### Common to DVD/VHS

- A** Recording mode indicator  
**DVD:** ..... (→ 20)  
 •XP SP LP EP (all on): FR mode  
**VHS:** ..... (→ 20)
- B** Main display  
 •Current time  
 •Disc recording and play counter  
 •VHS recording and play counter  
 •Miscellaneous messages, etc.
- C** Copying indicator
- D** Digital broadcast indicator  
 Lights when the unit is receiving digital broadcast or TV Guide data.
- E** Linked timer recordings with external equipment indicator ..... (→ 23)


### VHS

- 1** Timer recording indicator (⊖) ..... (→ 15)  
 On:  
 When a timer recording programme is registered and a recordable video cassette is inserted.  
 Flashes:  
 When the unit cannot record a timer recording programme (e.g., there is no video cassette, etc.).
- 2** Tape indicator
- 3** Tape operation status

### DVD

- 1** Timer recording indicator (⊕) ..... (→ 15)  
 On:  
 When a timer recording programme is registered and a recordable disc is inserted.  
 Flashes:  
 When the unit cannot record a timer recording programme (e.g., there is no disc, etc.).
- 2** Disc operation status
- 3** Disc indicator

## Rear Panel

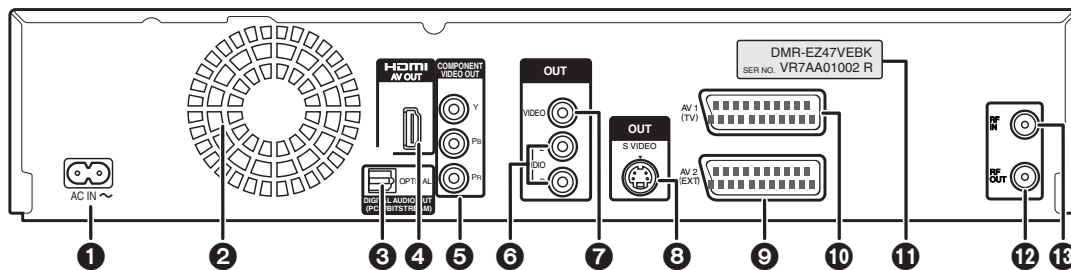

- 1** AC IN~ = Power supply  
 Connection for the AC mains lead
- 2** Cooling fan
- 3** Digital audio output terminal ..... (→ 68)
- 4** HDMI AV OUT terminal ..... (→ 69)  
 Digital audio and video output terminal
- 5** COMPONENT VIDEO OUT (PROGRESSIVE/INTERLACE) terminals ..... (→ 67)  
 Y = Luminance signal (brightness), P<sub>B</sub> = Chrominance signal (colour difference), P<sub>R</sub> = Chrominance signal (colour difference)
- 6** AUDIO output terminals ..... (→ 67, 68)
- 7** Video output terminal ..... (→ 67)
- 8** S VIDEO output terminal ..... (→ 67)
- 9** AV2 (EXT) 21-pin Scart terminal ..... (→ 9, 66)  
 Connection of an external unit
- 10** AV1 (TV) 21-pin Scart terminal ..... (→ 8, 9, 66)  
 TV set connection
- 11** Serial number
- 12** Aerial output terminal ..... (→ 8, 9, 66)
- 13** Aerial input terminal ..... (→ 8, 9, 66)

For information about the 21-pin Scart terminal (→ 8)

# Basic Connection

## Use of the supplied RF coaxial cable


To prevent interference patterns from appearing on your TV, use only the supplied RF coaxial cables when you connect this unit to your TV and aerial outlet or aerial cable and Satellite receiver.

- Keep the RF coaxial cables as far away as possible from other cables.
- Do not roll up the RF coaxial cables.


- Before connection, turn off the mains for all connected equipment and read the appropriate operating instructions.

Be sure to read the Caution for AC Mains Lead on page 3.

## Connecting to a Television only

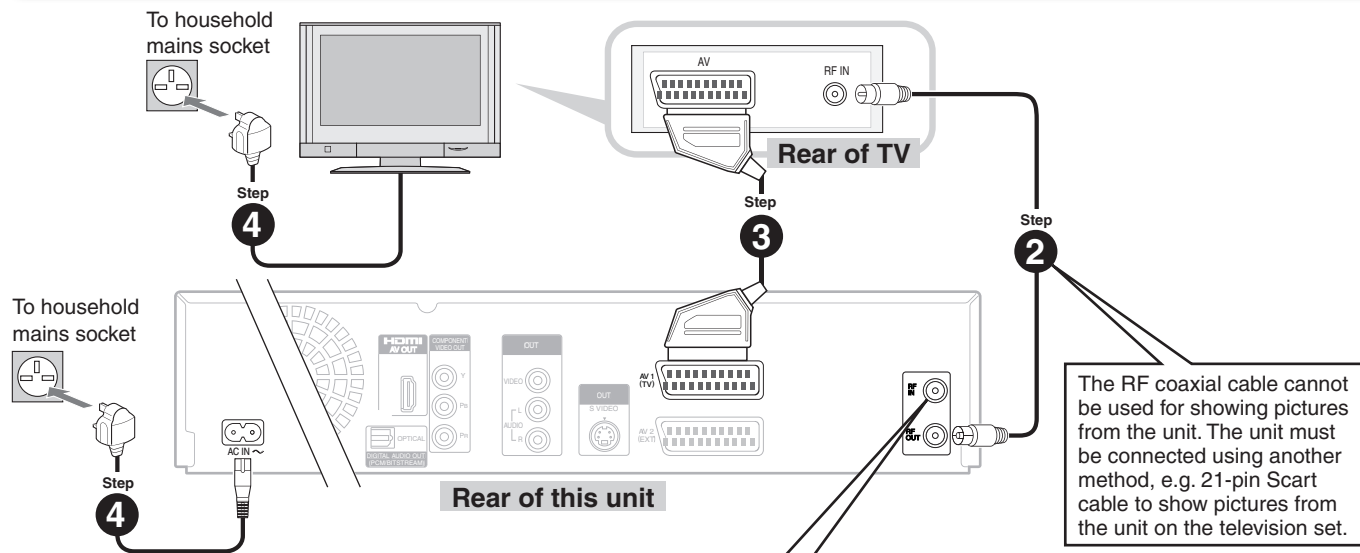

Use one of the RF coaxial cable (black or grey) to connect this unit's RF IN terminal to your aerial socket or aerial cable.

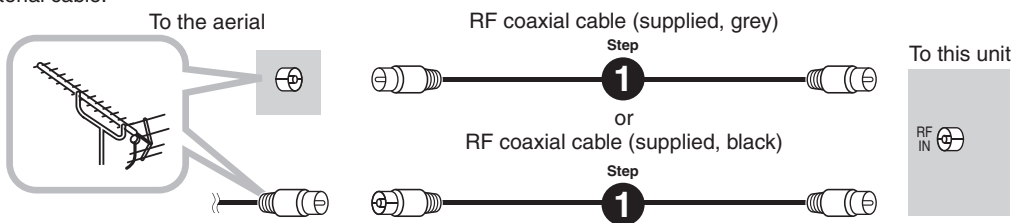

Connections other than the 21-pin Scart cable ▶ 67–69

- 1 RF coaxial cable (supplied) from the aerial socket or aerial cable to the "RF IN" on the unit.
- 2 RF coaxial cable (supplied, black) from the "RF OUT" on the unit to the "RF IN" on the TV.
- 3 21-pin Scart cable (not supplied) from the "AV1 (TV)" on the unit to the "AV" on the TV.
- 4 AC mains lead (supplied) from the "AC IN~" on the unit and the TV to a household mains socket.


After completing the above connections, proceed to the TV Tuning (→ 10).

## 21-pin Scart terminal

The 21-pin Scart terminal transmits both input and output signals for picture and sound. TVs equipped with the same type of terminal can be connected here.

This type of terminal is also called Peritel, Euro Connector and Euro AV.

- When the unit is connected to a Q Link-compatible TV with a fully wired 21-pin Scart cable, You can use convenient functions of Q Link.

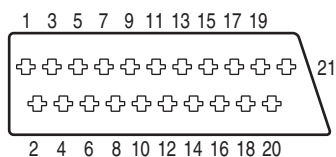

### AV1 Scart terminal (TV)

- 1 Audio output CH2 (R)
- 2 Audio input CH2 (R)
- 3 Audio output CH1 (L)
- 4 Audio ground
- 5 Blue ground
- 6 Audio input CH1 (L)
- 7 Blue output
- 8 Switching voltage output
- 9 Green ground
- 10 Q Link control signal
- 11 Green output
- 12 Reserved
- 13 Red ground
- 14 Blanking ground
- 15 Red output/chrominance output
- 16 Blanking output
- 17 Video output ground
- 18 Video input ground
- 19 Video output/luminance output
- 20 Video input
- 21 Ground

### AV2 Scart terminal (EXT)

- 1 Audio output CH2 (R)
- 2 Audio input CH2 (R)
- 3 Audio output CH1 (L)
- 4 Audio ground
- 5 Blue ground
- 6 Audio input CH1 (L)
- 7 Blue input
- 8 Switching voltage input
- 9 Green ground
- 10 Reserved
- 11 Green input
- 12 Reserved
- 13 Red ground
- 14 Blanking ground
- 15 Red input/chrominance input
- 16 Blanking input
- 17 Video output ground
- 18 Video input ground
- 19 Video output
- 20 Video input/luminance input
- 21 Ground


## Using a fully wired 21-pin Scart cable

- You can use a variety of Q Link functions by connecting the unit to a Q Link compatible television (→ 42).
- You can enjoy high-quality viewing by connecting the unit to an RGB compatible television.  
“AV1 Output” in the Setup menu is set to “RGB 1 (without component)” or “RGB 2 (without component)” (→ 63)
- “AV2 Input” settings in the Setup menu (→ 63)

- **Before connection, turn off the mains for all connected equipment and read the appropriate operating instructions.**

Be sure to read the Caution for AC Mains Lead on page 3.

## Adding a Satellite Receiver: Connecting to a Television and a Satellite Receiver

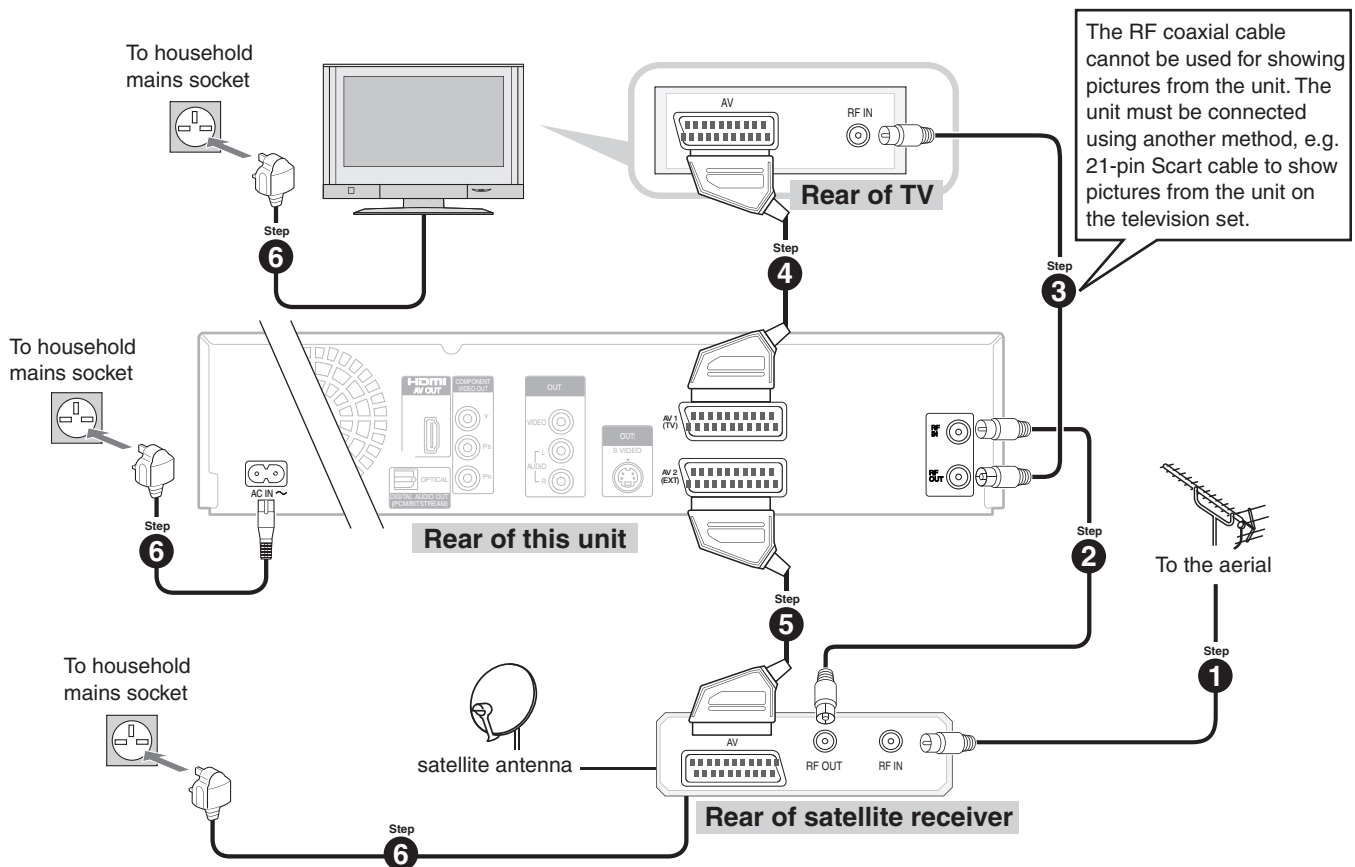

Connections other than the 21-pin Scart cable ▶ 67–69

- 1 RF coaxial cable from the aerial to the “RF IN” on the satellite receiver.
- 2 RF coaxial cable (supplied, black) from the “RF OUT” on the satellite receiver to the “RF IN” on the unit.
- 3 RF coaxial cable (supplied, black) from the “RF OUT” on the unit to the “RF IN” on the TV.
- 4 21-pin Scart cable (not supplied) from the “AV1 (TV)” on the unit to the “AV” on the TV.
- 5 21-pin Scart cable (not supplied) from the “AV” on the satellite receiver to the “AV2 (EXT)” on the unit.
- 6 AC mains lead (supplied) from the “AC IN~” on the unit, the TV and the satellite receiver to a household mains socket.

After completing the above connections, proceed to the TV Tuning (→ 10).

### To view satellite programmes

Refer to “Watching Satellite Programmes” (→ 12)

### To record satellite programmes


Refer to “Recording from a Satellite Receiver” (→ 23)




# Setting the Channels and Clock

## Preparation:


- Turn on the mains for the television (and connected equipment) and select the appropriate AV input to suit the connections to this unit.
- These are the first settings you make upon buying the unit. You don't need to make these settings again.

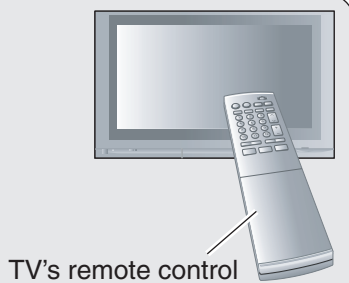


- 1**  to turn the unit on.


DVB Auto-Setup starts. The unit will search for the terrestrial digital channels. This takes about 5 minutes.

- TV channels are sorted and stored in channel numbers order sent by the broadcasters and cannot be changed.

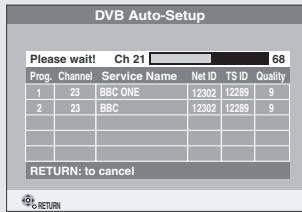


- 2** **Power Save Function:**  
▲, ▼ to select “On” or “Off” then 


- Set to “On” to reduce power consumption in standby mode.
- Refer to the following chart for the Power Save function features when the unit is turned off.

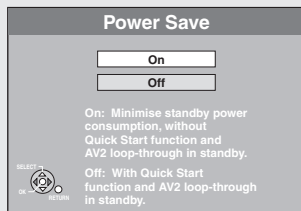


Power Save	On	Off
Power consumption	Approx. 2.2 W	Approx. 13.4 W
Watching the picture from the satellite receiver connected to the AV2 input terminal	Can not do	Can do
Startup time	Not quick	Quick*


\*e.g., TV Guide is displayed within 1 second after [GUIDE] is pressed.


- 3** When setup has completed, the confirmation screen appears. 

- 4** The Owner ID settings screen appears.  and press the numbered buttons to enter your choice of a 4-digit PIN number.

Make a note of the PIN number (don't forget), as it is not possible to return to the factory preset.

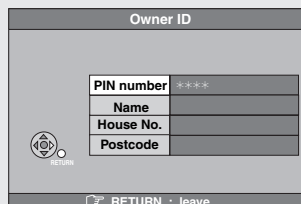

- 5**  to store the PIN number.

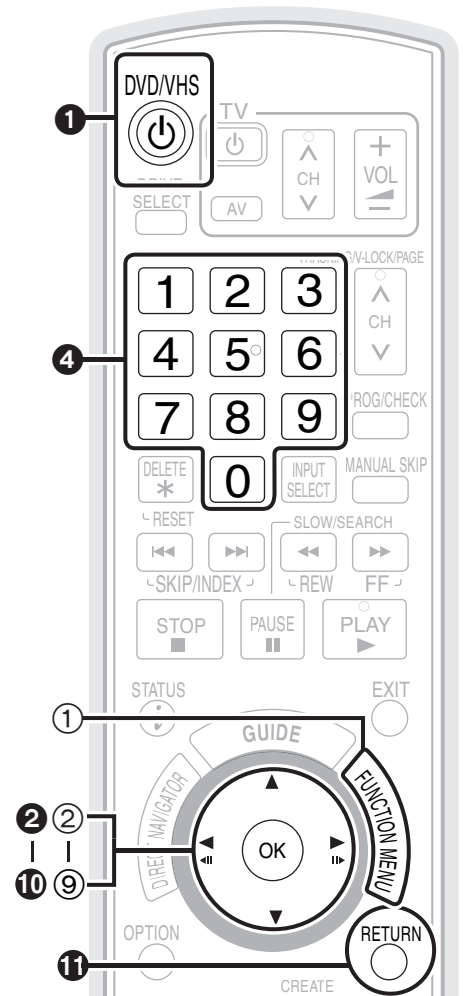

## Tips

**To abort Auto-Setup**  
Press [RETURN].

- **If the unit displays “No stations found !”**  
Press [▶] to select “No” and press [OK]. Go to step 2. After you have performed steps 2-1, turn off the unit and confirm the cable or aerial input is connected to the RF IN terminal. Restart the Auto-Setup again (→ 59).
- If the clock setting menu appears or the clock is not correct, set the clock manually (→ 11).


### Restarting the Auto-Setup (→ 59)

- When turning on the Power Save function, if the unit is turned off, unit's display is also turned off.

### To correct the PIN number


1. Press [◀, ▶] to select the digit.
2. Press the numbered buttons to enter the digit.




6 ◀ to select “Yes”, then   
The cursor moves to “Name”.

7 ▶ to enter the name.

8 ▲, ▼ to select a letter, then ▶ to move to next character.  
Repeat this to enter the name.

9  to store the name.

10 ▼ and ▶ and then repeat steps 8, 9 to enter and store “House No.” and “Postcode”.

11   
The Owner ID settings screen disappears.

- Auto setup for your unit is complete. You can now make your favourite channels and store them in the required order in the profiles. (→ 58)

### Tips

#### To correct the character

1. Press [◀, ▶] to select the character.
2. Press [▲, ▼] to correct the character.

#### To display the Owner ID information on TV

Press and hold [■] on the main unit for more than 5 seconds.  
The PIN number is not displayed.  
After 30 seconds this menu automatically disappears.

## Clock Setting


This unit usually obtains time and date information from digital broadcasts and automatically corrects the time several times a day.


However, if the clock is not set correctly, adjust the clock.

- In the case of a power failure, the clock setting remains in memory for approximately 60 minutes.


1 With the unit stopped




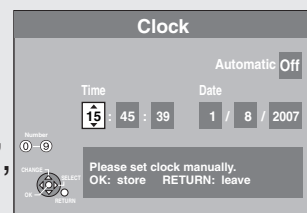
2 ▲, ▼ to select “To Others”, then 

3 ▲, ▼ to select “Setup”, then 

4 ▲, ▼ to select “Others”, then ▶.


5 ▲, ▼ to select “Clock”, then 

6 ▲, ▼ to select “Off” of “Automatic”, then 



7 ◀, ▶ to select the item you want to change.  
The items change as follows:  
Hour↔Minute↔Second↔Day↔Month↔Year

8 ▲, ▼ to change the setting.  
You can also use the numbered buttons for setting.

9  to confirm new date and time and to initiate the clock.

### Tips

#### To return to the previous screen

Press [RETURN].

#### To exit the screen

Press [EXIT].

### Notes

If a TV station transmits a time setting signal, and when “Automatic” in the Clock setting menu is set to “On”, the automatic time correction function checks the time and if necessary it is adjusted several times every day.

# Watching Television

Refer to “TV Guide” (→ 30) for detail information.


## Preparation:

- Turn on the television and select the appropriate video input to suit the connections to this unit.


This DVD recorder has a tuner which allows it to directly receive and record terrestrial digital channels.

## Important:



This unit does not have an analogue broadcast tuner.

**1**  to turn the unit on.

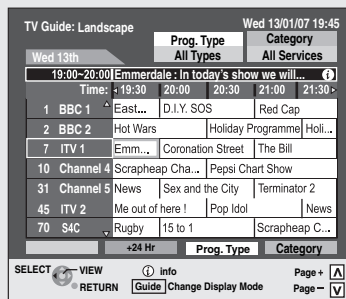**2**    
 –The TV Guide list appears.



Time	Channel	Prog. Type	Category
19:00-20:00	Emmerdale	In today's show we will...	
19:30	BBC 1	East...	D.I.Y. SOS
20:00	BBC 2	Hot Wars	Holiday Programme
20:30	ITV 1	Emm...	Coronation Street
21:00	Channel 4	Scrapheap Cha...	Pepsi Chart Show
21:30	Channel 5	News	Sex and the City
	ITV 2	Me out of here!	Pop Idol
	S4C	Rugby	15 to 1

**3**  to select the current programme, then 

## Selecting a Channel without TV Guide

### To select desired channel

Press [  ,  CH ].

### To directly enter Channels


You can also select channels with the numbered buttons.


e. g., “5”: [0] → [0] → [5] or [5] → [OK]  
 “15”: [0] → [1] → [5] or [1] → [5] → [OK]

## Watching Satellite Programmes

### Preparation:

- Connect a satellite receiver to this unit's input terminals (→ 9).
- Turn on the satellite receiver.
- Turn on the television and select the appropriate video input to suit the connections to this unit.

**1**  to turn the unit on.

**2**  to select the “AV2”.



### Notes

- The TV Guide list is not displayed immediately after purchasing this unit.
- Some of the programmes allow this unit to show Digital TEXT (MHEG) and subtitles (→ 40).
- You can select audio from multiple channels when the unit receives multi-channel broadcast (→ 55, DVB Multi Audio).

### Notes

- When turning off the Power Save function, you can watch the Satellite Programme without turning the unit on (→ 64).
- When the Power Save function is set to on, if the unit is turned off, you cannot watch the Satellite Programme. Turn the unit on.

# Playback


## Preparation:


- Turn on the television and select the appropriate video input to suit the connections to this unit.


## Playing Discs


Refer to “Advanced Disc Playback” (→ 32–33) for detailed information on playback of discs.

**RAM -R -R DL -RW(V) +R +R DL +RW DVD-V -RW(VR) VCD CD**

**1**  **DVD/VHS** to turn the unit on.

**2**  **DRIVE SELECT** to select the DVD drive.  
–The DVD indicator lights up on the unit.

**3**  **OPEN/CLOSE** to open the tray (Button located on front of the unit).  
–Insert a disc (→ 72).

**4**  **PLAY** –The tray closes and play begins.

## Stopping Play

Press [■ STOP].  
–The stopped position is memorized.  
**(Resume play function)**  
–The stopped position is cleared when you press [■ STOP] several times.


## Pausing Play

Press [⏸ PAUSE].  
–Press again to restart play.

## Playing a Video Cassette

Refer to “Advanced Video Cassette Playback” (→ 37–39) for detailed information on playback of video cassette.

**VHS**

**1**  **DVD/VHS** to turn the unit on.

**2**  **DRIVE SELECT** to select the VHS drive.  
–The VHS indicator lights up on the unit.

**3** **Insert a cassette. (→ 74)**  
–Play starts automatically if you insert a cassette with the accidental erasure tab removed.


**4**  **PLAY**

## Stopping Play

Press [■ STOP].

## Pausing Play

Press [⏸ PAUSE].  
–Press again to restart play.

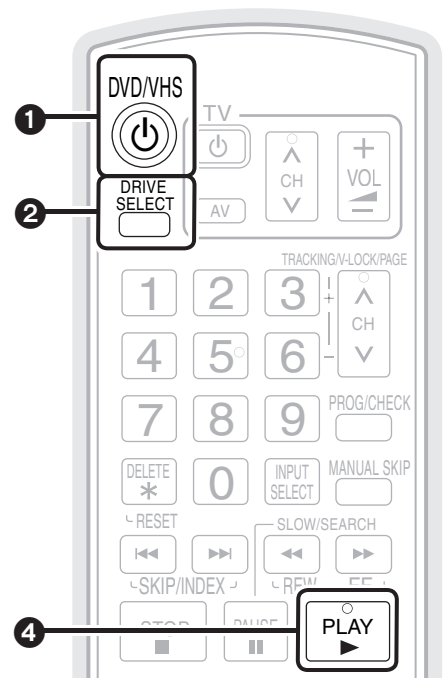

## Tips

- Icons such as “**RAM**” indicate usable discs. Refer to pages 70 and 71.

### To return to the menu screen

- DVD-V** Press [DIRECT NAVIGATOR].
- VCD** Press [RETURN].

## Notes

- **RAM -R -R DL -RW(V) +R +R DL +RW -RW(VR)**  
Playback starts from the most recent recording.
- **DVD-V VCD CD**  
Playback starts from the beginning of the disc.
- Depending on the disc type, playing may automatically start without pressing [▶ PLAY].
- The unit takes some time to read the disc before play starts.
- Discs continue to rotate while menus are displayed. Press [■ STOP] when you finish to preserve the unit’s motor and your television screen.
- If “⊙” appears on the TV, the operation is prohibited by the unit or disc.

## Notes

- Tapes are automatically rewound once they reach the end (except during Timer recording, fast forwarding, etc.).
- You may have to adjust the tracking for tapes recorded on other VCRs (→ 38). In some cases, the picture quality may still be inferior; this is due to format constraints.


# Recording Television Programmes


Refer to “Important Notes for Recording” (→ 19) and “Advanced Recording” (→ 20 to 22) for detail information on recording.

**RAM -R -R DL -RW(V) +R +R DL +RW VHS**


## Preparation:

 
- Turn on the television and select the appropriate video input to suit the connections to this unit.
- **RAM** If the disc is protected, release protection (→ 56).
- **VHS** Ensure accidental erasure tab is intact.

**1**  to turn the unit on.


**2**  to select the drive (DVD or VHS).

**3** Insert a disc or video cassette.  
– Insert a disc or video cassette with enough remaining blank space (→ 72, 74).

**4**  to select desired channel.




- To select with the numbered buttons (→ 12).
- When no channel setting is performed on the unit and broadcast is recorded directly from the satellite receiver, select a channel on the connected equipment and press [INPUT SELECT] to select “AV2”.

**5**  to select the recording mode.



Recording mode (→ 20) Remaining time

**6**  to start recording.



Elapsed recording time

## Pausing Recording

Press [■ PAUSE].

- Press again to restart recording.  
(The title is not divided.)

## Stopping Recording

Press [■ STOP].



## Tips

- Icons such as “**RAM**” indicate usable discs. Refer to pages 70 and 71.
- **-RW(V) +R +R DL +RW**  
To use a new disc, formatting is necessary.

## Notes

- **-R -R DL -RW(V) +R +R DL +RW**  
It takes about 30 seconds for the unit to complete recording management information after recording finishes.
- You cannot change the channel or recording mode during recording.
- This unit cannot record NTSC signals to discs that already have PAL signal recordings.
- Simultaneous recording to both DVD and VHS is not possible.
- **VHS**  
– Even if the video cassette is labelled “S-VHS”, it is not possible to record in the S-VHS system with this unit. This unit records in the normal VHS system.  
– When recording is paused for 5-minutes or more, the unit returns to stop.


# Timer Recording


Refer to “TV Guide” (→ 30) and “Advanced Timer Recording” (→ 26) for detail information on TV Guide.

**RAM -R -R DL -RW(V) +R +R DL +RW VHS**

## Preparation:

- Turn on the television and select the appropriate video input to suit the connections to this unit.
- **RAM** If the disc is protected, release protection (→ 56).
- **VHS** Ensure accidental erasure tab is intact.
- Confirm that the clock on the unit’s display is set to the correct time.

**1**  to turn the unit on.

**2**  to select the drive (DVD or VHS).

**3** Insert a disc or video cassette.  
– Insert a disc or video cassette with enough remaining blank space (→ 72, 74).

**4**  – The TV Guide list appears.

TV Guide: Landscape		Wed 13/01/07 19:45	
Time	Prog. Type	Category	All Services
19:00-20:00	Emmerdale: In today's show we will...		
1	BBC 1 East...	D.I.Y. SOS	Red Cap
2	BBC 2 Hot Wars	Holiday Programme	Holi...
7	ITV 1 Emm...	Coronation Street	The Bill
10	Channel 4 Scrapheap Cha...	Pepsi Chart Show	
31	Channel 5 News	Sex and the City	Terminator 2
45	ITV 2 Me out of here!	Pop Idol	News
70	S4C Rugby	15 to 1	Scrapheap C...


**5**  to select the future programme, then 

TV Guide: Landscape		Wed 13/01/07 19:45	
Time	Prog. Type	Category	All Services
20:30-21:40	Holiday Programme		
1	BBC 1 East...	D.I.Y. SOS	Red Cap
2	BBC 2 Hot Wars	Holiday Programme	Holi...
3	ITV 1 Emm...	Coronation Street	The Bill
10	Channel 4 Scrapheap Cha...	Pepsi Chart Show	
31	Channel 5 News	Sex and the City	Terminator 2
45	ITV 2 Me out of here!	Pop Idol	News
70	S4C Rugby	15 to 1	Scrapheap C...

Name	Date	Start	Stop	Drive	Mode	STTL
3 BBC 13/1 WED	20:30	21:40	DVD SP	OFF		
All Services - BBC 2 Holiday Programme						

Press OK to store the programme.

- Confirm the programme (start and end time) by using a TV magazine, etc. and make corrections if necessary using [▲, ▼, ◀, ▶] (→ 26, step 3).

**6**  – The settings are stored and the timer programme is on.  
– The timer icon is displayed.  
– “⌚” lights on the unit’s display to indicate timer recording standby has been activated.  
– Repeat steps 5–6 to programme other recordings.  
– Press [⏻/I] to turn the unit off.

20:30	21:00	21:30▶
SOS	Red Cap	
⌚ Holiday Programme Holi...		

Timer icon

## To cancel a timer recording programming

1. Press [▲, ▼, ◀, ▶] to select the programme (the timer icon is displayed) and press [OK].  
– Confirmation screen appears.
2. Press [◀] to select “Yes” and press [OK].  
– The timer icon disappears.



## Tips

- Icons such as “**RAM**” indicate usable discs. Refer to pages 70 and 71.
- **-RW(V) +R +R DL +RW**  
To use a new disc, formatting is necessary.

To check programmes (→ 28)

## Notes

- The TV Guide list is not displayed immediately after purchasing this unit.
- The TV Guide system will not work if the clock is not set correctly.
- If “NTSC” has been selected for “TV System” (→ 63), the TV Guide system cannot be used.
- When programmes are recorded from the TV Guide, the name of the selected programme is transferred automatically for the recording.
- Simultaneous recording to both DVD and VHS is not possible.

# Copying Titles

Refer to “Copying Titles (Advanced)” (→ 50–53) for detail information on copying.

## Copying Titles (VHS → DVD)


Programmes are automatically copied onto the disc from the location of playback at the time when the copying of the tape starts.

**VHS → RAM -R -R DL -RW(V) +R +R DL +RW**

### Preparation:

- Turn on the television and select the appropriate video input to suit the connections to this unit.
- **RAM** If the disc is protected, release protection (→ 56).
- Insert a disc with enough space for recording.
- Select the DVD recording mode (→ 20).
- Insert the video cassette containing the programme to be copied.
- Press [▶ PLAY] to play the video cassette and then press and hold [STTL] for about 5 or more seconds to select the audio type you wish to record.
- Stop the tape at the point where you want to start copying from.


On the main unit

- 1 While both DVD and VHS are stopped  

  
Press and hold for about 3 seconds.

**-R -R DL -RW(V) +R +R DL**

- 2a  to copy and automatically finalise when done (see page 57 for more information on finalising).  
–If you press [■ STOP], you can cancel copying.


– or –

- 2b  to copy without finalising.  
–If you press [■ STOP], you can cancel copying.


- Check if copying starts properly (“COPY” lights on the unit’s display).
- Copying is automatically completed when the tape reaches its end or the disc becomes full.

### Tips

- **Dividing a title to be copied**  
When copying from VHS to DVD, titles on the DVD are divided according to index signals detected on the tape.  
–Titles that are too short may not be divided correctly.  
–The recording time may become longer than the original title depending on the number of index signals.
- **To cancel copying in the middle**  
Press [■ STOP].  
–You can also press and hold [RETURN] for about 3 or more seconds to cancel copying in the middle.  
However, you cannot stop finalising after it has started.

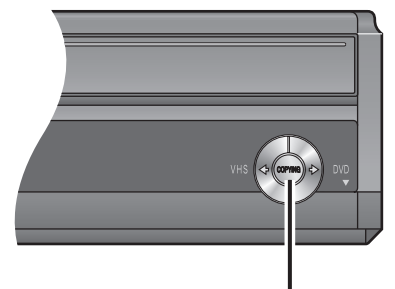

COPYING indicator

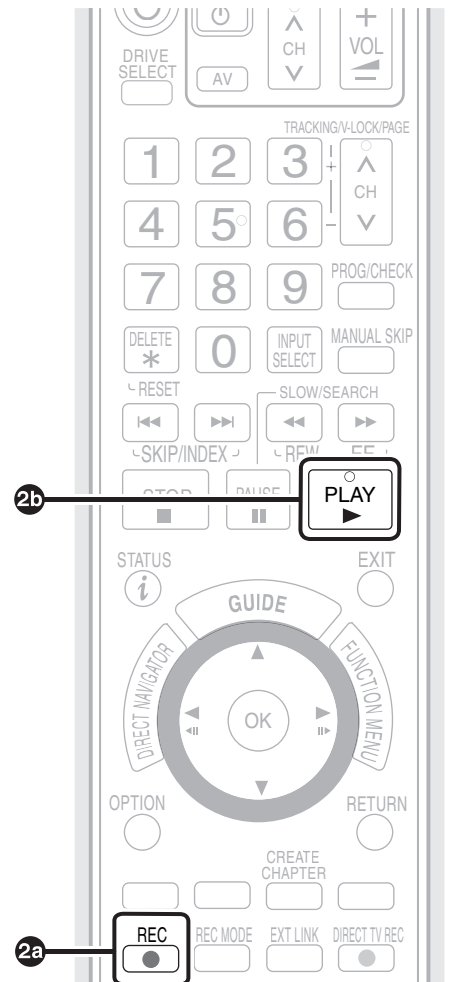

### Tips

Icons such as “**RAM**” indicate usable discs. Refer to pages 70 and 71.

### Notes

- If copying doesn’t complete due to shortage of remaining time, disc space, or other reasons, finalising won’t start.
- When copying doesn’t start, the “COPYING” indicator on the main unit blinks for about 7 seconds. Check if the unit is properly prepared.



## Copying Titles (DVD → VHS)


All titles on the disc are automatically copied onto the tape.

**RAM -R -R DL -RW(V) -RW(VR) +R +R DL +RW → VHS**

### Preparation:

- Turn on the television and select the appropriate video input to suit the connections to this unit.
- **VHS** Ensure accidental erasure tab is intact.
- Insert a video cassette with enough space for recording. Stop the tape at the point where you want to start copying to.
- Select the VHS recording mode (→ 20).
- Insert the disc containing the programme to be copied.
- **RAM -RW(VR)** Press and hold [STTL] for about 5 or more seconds to select the audio you wish to record.

On the main unit

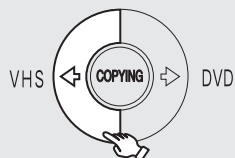

Press and hold for about  
**3 seconds.**

- Check if copying starts properly (“COPY” lights on the unit’s display).
- Copying automatically stops when playback of the disc finishes or the tape reaches its end.




### Tips

- **When you start copying from the selected title**
  1. Press [DRIVE SELECT] to select the DVD drive.
  2. Press [DIRECT NAVIGATOR].
  3. Press [▲, ▼, ◀, ▶] to select the recording you want to start, then press [OK].
  4. Go to the operation shown above.
- Index signals are automatically recorded on the tape according to the division of titles on the DVD (→ 38, VHS Index Search System (VISS)).
- **To cancel copying in the middle**

Press [■ STOP].

– You can also press and hold [RETURN] for about 3 or more seconds to cancel copying in the middle.

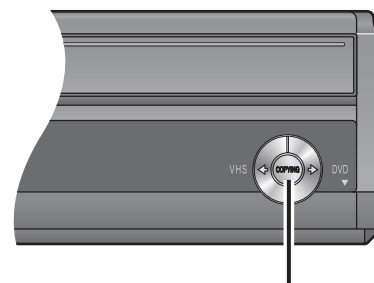

COPYING indicator



### Tips

Icons such as “**RAM**” indicate usable discs. Refer to pages 70 and 71.



### Notes

- If you start copying when the resume function is activated, the DVD is copied from the beginning of the title you stopped play at.  
To copy a whole disc, press [■ STOP] to deactivate it before copying (→ 13).
- When copying doesn’t start, the “COPYING” indicator on the main unit blinks for about 7 seconds. Check if the unit is properly prepared.

# Deleting Titles

## Preparation:

- Turn on the television and select the appropriate video input to suit the connections to this unit.
- **RAM** If the disc is protected, release protection (→ 56).
- Press [**▲** OPEN/CLOSE] and insert a disc. Press [**▲** OPEN/CLOSE] again to close the tray.

## Important:


Once deleted, contents cannot be recovered.

## Delete Navigator



**RAM -R -R DL -RW(V) +R +R DL +RW**

- 1 **DRIVE SELECT** to select the DVD drive.

- 2 With the unit stopped

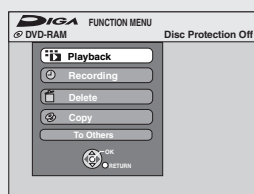

- 3 **▲, ▼** to select “Delete”, then **OK**

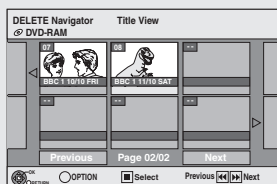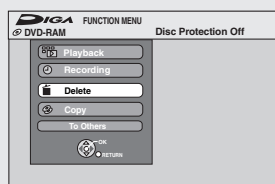

- 4 **▲, ▼, ◀, ▶** to select the title, then **OK**

- 5 **◀** to select “Delete”, then **OK**

## Tips

**To return to the previous screen**  
Press [RETURN].

### To view other pages

Press [**▲**, **▼**, **◀**, **▶**] to select “Previous” or “Next”, then press [OK].  
• You can also press [**◀◀**, **▶▶**] to view other pages.

### Multiple deleting

Select with [**▲**, **▼**, **◀**, **▶**], then press [**⏸** PAUSE]. (Repeat.)  
• A check mark appears. Press [**⏸** PAUSE] again to cancel.


## Deleting Titles During Playback

**RAM -R -R DL -RW(V) +R +R DL +RW**

- 1 During playback



- 2 **◀** to select “Delete”, then **OK**

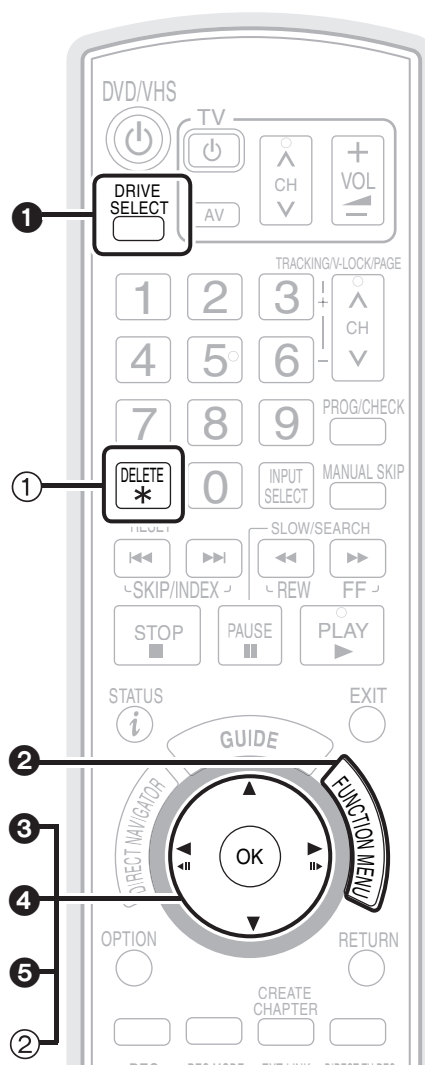

## Notes

- You cannot delete while recording or copying.
- **+R +R DL +RW** Even if you have set protection on other equipment, such titles are deleted.

## Tips

- Icons such as “**RAM**” indicate usable discs. Refer to pages 70 and 71.
- **RAM** Deleting an item increases the available disc space by the amount of space taken by the item deleted.
- **-R -R DL +R +R DL** Available disc space does not increase after deletion.
- **-RW(V) +RW** Available disc space increases when you delete the last title (the recording space may increase slightly when other titles are deleted).

# Important Notes for Recording

## Selecting audio for recording

### Broadcast in multi-channel sound:

You can select audio language when received audio in multi-channel broadcast ("Multi Audio" appears at the bottom of digital channel information display). However, audio cannot be switched after recording.



Select the audio that you want to record in "DVB Multi Audio" in the on-screen display (→ 55).

## About the aspect when recording a programme

RAM -R -R DL -RW(V) VHS

The original aspect used for the source programme will also be used with the recording. However, in the following case, programme will be recorded in 4:3.

-R -R DL -RW(V)

Programme recorded using "EP" or "FR (recordings 5 hours or longer)" recording modes will be recorded in 4:3 aspect.

+R +R DL +RW

Recorded in 4:3 aspect



## Copy-once recording

It is not possible to record digital broadcasts that allow "One time only recording" onto DVD-R, DVD-R DL, DVD-RW, +R, +R DL, +RW or 8 cm DVD-RAM discs. Use the CPRM (→ 92) compatible DVD-RAM.

RAM CPRM compatible discs only

-R -R DL -RW(V) +R +R DL +RW

12cm



(O: Can do, -: Cannot do)

## Playing the disc on other DVD players

-R -R DL -RW(V) +R +R DL

The disc must be finalised after recording or copying (→ 57).

It is necessary to finalise DVD-R, etc. on this unit after recording or copying titles to them. You can then play them as a commercially sold DVD-Video. However, the discs become play-only and you can no longer record or copy.\*

\* You can record and copy again if you format DVD-RW.




Record to DVD-R, etc.



Finalise

Play on other DVD equipment

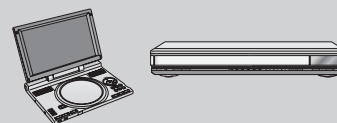

+RW

We recommend you to create the menu before playing a +RW disc on other equipment (→ 57).


## Recording to DVD-R DL and +R DL

DVD-R DL and +R DL discs have two layers of recording surface on one side.

It is not possible to record continuously from the first layer to the second layer. Recording stops when space on the first layer becomes full. You must close the first layer to start recording on the second layer (→ 57).

Closing makes the first layer unavailable for recording (editing is still available). You cannot cancel closing. Make certain before proceeding.

DVD-R DL  
+R DL

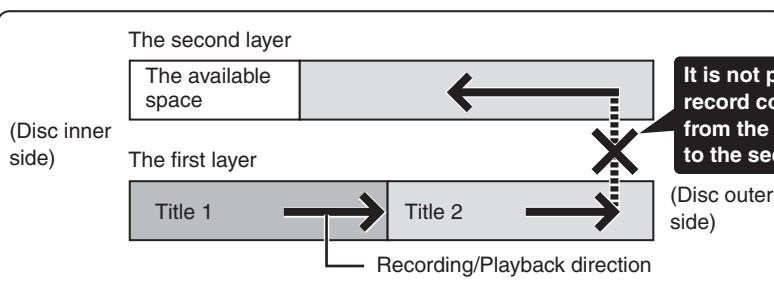

It is not possible to record continuously from the first layer to the second layer.

# Advanced Recording

## DVD Recording Modes and Durations


Recording Mode	DVD-RAM		DVD-R, DVD-RW, +R, +RW (4.7 GB)	DVD-R DL <sup>*3</sup> , +R DL <sup>*3</sup> (8.5 GB)	
	Single-sided (4.7 GB)	Double-sided <sup>**1</sup> (9.4 GB)		First layer (L0)	Second layer (L1)
XP (High quality)	1 hour	2 hours	1 hour	55 minutes	50 minutes
SP (Standard play)	2 hours	4 hours	2 hours	1 hour 50 minutes	1 hour 40 minutes
LP (Long play)	4 hours	8 hours	4 hours	3 hours 40 minutes	3 hours 20 minutes
EP (Extra long play)	8 (6 <sup>**2</sup> ) hours	16 (12 <sup>**2</sup> ) hours	8 (6 <sup>**2</sup> ) hours	7 hours 25 minutes (5 hours 30 minutes <sup>**2</sup> )	6 hours 50 minutes (5 hours 15 minutes <sup>**2</sup> )
FR (Flexible Recording)	8 hours maximum	8 hours maximum for one side	8 hours maximum	7 hours 25 minutes maximum	6 hours 50 minutes maximum

<sup>\*1</sup> It is not possible to record or play continuously from one side of a double sided disc to the other.

<sup>\*2</sup> When "Recording time in EP mode" has been set to "EP (6Hours)" in the Setup menu (→ 60).

The sound quality is better when using "EP (6Hours)" than when using "EP (8Hours)".

<sup>\*3</sup> Refer to "Recording to DVD-R DL and +R DL" (→ 19).

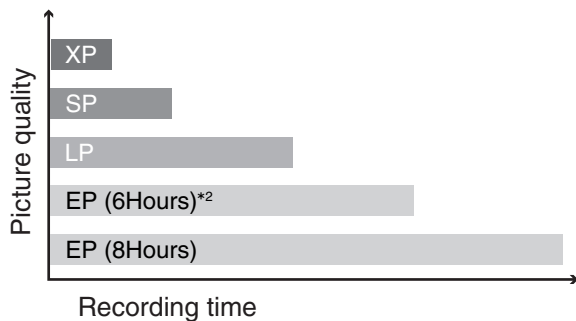

### Notes

- This unit uses variable bit rate (VBR) recording which varies the amount of data recorded to suit the picture quality, so actual recording times and remaining recording times shown by the unit will be different. (-R DL +R DL) The difference will be especially noticeable.) Use a disc enough remaining blank space.
- When recording to DVD-RAM using EP (8Hours) mode, play may not be possible on DVD players, even if they are compatible with DVD-RAM. In this case use EP (6Hours) mode.



### Tips

- Maximum number of titles to a disc  

RAM	-R	-R DL	-RW(V)
-----	----	-------	--------

 99 titles on a disc  

+R	+R DL	+RW
----	-------	-----

 49 titles on a disc
- **FR (Flexible recording mode)**  
 Using "Flexible Recording" is convenient in these kinds of situations:
  - When the amount of free space on the disc makes selecting an appropriate recording mode difficult
  - When you want to record a long programme with the best picture quality possible
 e.g., Recording a 90 minutes programme to 4.7 GB DVD-RAM disc:
  - If you select XP mode, the programme will not fit on one disc.



A second disc is necessary for 30 minutes of the programme.

- If you select SP mode, the programme will fit on one disc.



However there will be 30 minutes remaining disc space.

- If you select "Flexible Recording" the programme will fit on one disc perfectly.



You can set FR mode when programming timer recordings and flexible recording (→ 22).

## VHS Recording Modes and Durations

Recording Mode	Durations
SP	You can record the length shown on the tape.
LP	2 times the length of SP mode. •LP cannot be selected when recording NTSC signals.
EP	3 times the length of SP mode.
AUTO	Automatically switches the recording mode to LP (NTSC to EP) mode during a timer recording if there is not enough tape left to record the programme in SP mode.




### Tips

- **To prevent recording errors:**  
 Set a timer recording period slightly longer than the actual programme (to make sure the programme is recorded in full).
- If the image quality is important to you or if you wish to store the tape for a long period, select "SP".
- The unit can play tapes recorded in LP mode on other equipment.

### AUTO Mode

Timer recording

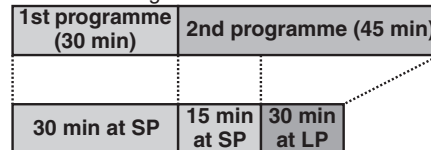

Video tape (e.g.: 60-minute cassette)

- The tape length must be set correctly (→ 64).
- Picture distortion may occur when the recording mode switches.
- This may not work correctly with some video cassettes.
- It may not work correctly when NTSC is set as the "TV System" (→ 63).

## When the format confirmation screen is displayed

Formatting is the process of making media such as DVD-RAM recordable on recording equipment.


### Important:

Formatting permanently deletes all disc contents (including the contents that have been recorded on a PC), regardless of protection status of disc.

RAM -RW(V) +R +R DL +RW

The following screen may appear when inserting a new disc or a disc that has been recorded on another equipment.

Only format the disc if you intend to use it for recording.

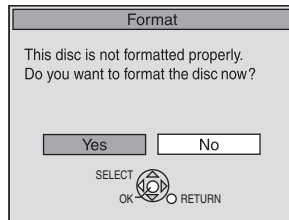

Do not format if you intend to view pre-recorded titles or contents from the disc.

◀ to select "Yes", then


### Tips

Refer to "Formatting Discs" (→ 56) for more detail of formatting.

## When removing a Recorded or Copied Disc

-R -R DL -RW(V) +R +R DL

After recording or copying, if you press [▲ OPEN/CLOSE] to eject the disc, the following screen may appear.

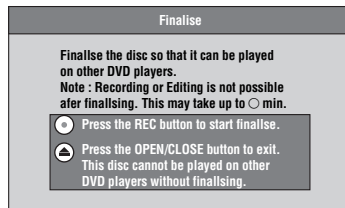

### Finalising

DVD-R, etc. recorded or copied on this unit cannot be played on other players immediately after recording or copying. Using the Finalise feature allows you to play these discs on other players.

(However, once the disc is finalised you will no longer be able to record onto the disc.)

to start finalising.

or  
 to eject the disc without finalising.

### Notes

- You cannot stop finalising once you have started it.

### Tips

- If you want to provide the disc with a name or set play menu select, select "Disc Name" (→ 56) or "Auto-Play Select" (→ 57) in "DVD Management" before finalising.
- Refer to "Finalising" (→ 57) for more detail of finalising.

## Specifying the Recording Time

RAM -R -R DL -RW(V) +R +R DL +RW VHS

This function allows specifying the length of recording time up to 4 hours.

During recording  
 On the main unit

repeatedly until the desired time is reached.

– The recording time and the unit's display changes as follows:

Counter (Cancel) → OFF 0:30 → OFF 1:00

↑ OFF 4:00 ↓ OFF 1:30  
 ↑ OFF 3:00 ← OFF 2:00 ←

### Notes

- This function does not work during timer recording or Flexible Recording.
- Recording stops and the set time is cleared if you press [■ STOP].
- The unit turns off automatically after recording finished.

## Direct TV Recording

RAM -R -R DL -RW(V) +R +R DL +RW VHS

This function allows you to immediately start recording the programme that you are viewing on the TV without having to change the channels on this unit.

You can use the function when you connect the unit to a Q Link compatible TV using the 21-pin Scart cable.

1 to select the DVD or VHS drive.

–Insert a disc or video cassette with enough remaining blank space (→ 72, 74).

2 Press and hold for about 1 second.

### Tips

**To stop recording**  
 Press [■ STOP].

### Notes

- When Digital TEXT (MHEG) (→ 40) is displayed, Direct TV recording is unavailable.
- When the unit is connected to a Panasonic TV, if you switch TV channels while using Direct TV recording, the Direct TV recording stops.
- When "EXT-L" lights on the unit's display (→ 23), Direct TV recording is unavailable.
- When the TV is in the HDMI input mode, this function is not available. Switch to other mode except for the HDMI input mode and use Direct TV Recording.
- However this function does not work if you select the TV channels on this unit.

# Advanced Recording

## Flexible Recording

**RAM** -R -R DL -RW(V) +R +R DL +RW

The unit sets the best possible picture quality that fits the programme within the remaining disc space.

The recording mode becomes FR mode. Refer to “FR (Flexible Recording)” (→ 20).

### Preparation:

- Select the channel or the external input to record.
- Press [DRIVE SELECT] to select the DVD drive.

- 1** With the unit stopped



- 2** ▲, ▼ to select “To Others” then,



- 3** ▲, ▼ to select “Flexible Rec”, then OK



- 4** ◀, ▶ to select “Hour” and “Min.” and ▲, ▼ to set the recording time.  
–You can set “Hour” and “Min.” using the numbered buttons.

- 5** When you want to start recording ▲, ▼, ◀, ▶ to select “Start”, then OK

–Recording starts.



### Notes

- You cannot record more than 8 hours.



### Tips

**To exit the screen**

 
Press [EXIT].

**To stop recording partway**

Press [■ STOP].

**To show the remaining recording time**

Press [STATUS] to show the remaining recording time.



Remaining time

## Playing while you are recording

- You can play DVD or VHS while recording to the other drive. The recording will not be affected
  - DVD playback (→ 13, 32, 33)
  - VHS playback (→ 13, 37–39)



### Notes

You cannot watch images on a tape from the DVD priority out terminals or HDMI AV OUT terminal while recording on a disc (→ 66).

## Chasing Playback

**RAM**

Allows playback from the beginning of the title you are recording.

During recording



### Tips

- **To stop play**

Press [■ STOP] once.

- **To stop recording**

Press [■ STOP] at least 2 seconds after chasing playback stops.

## Simultaneous Record and Playback

**RAM**

Allows playback of a previous title, while recording something else.

- 1** During recording



- 2** ▲, ▼, ◀, ▶ to select the title to play, then OK



### Tips

**To stop play**

Press [■ STOP].

**To exit the DIRECT NAVIGATOR screen**

Press [DIRECT NAVIGATOR].

**To stop recording**

After play stops

1. Press [DIRECT NAVIGATOR] to exit the screen.
2. Press [■ STOP].



### Notes

- During playing while you are recording, you cannot edit or delete titles.



# Recording from a Satellite Receiver

RAM -R -R DL -RW(V) +R +R DL +RW VHS

## Manual Recording


### Preparation:

- **RAM** If the disc is protected, release protection (→ 56).
- **VHS** Ensure accidental erasure tab is intact.
- Connect a satellite receiver to this unit's input terminals (→ 9).
- When the output signal from the external equipment is NTSC, change the "TV System" to "NTSC" in the Setup menu (→ 63).


- 1** With the unit stopped.




to select "AV2" for the satellite receiver you have connected.

- 2**  to select the DVD or VHS drive.

–Insert a disc or video cassette with enough remaining blank space (→ 72, 74).

- 3**  to select the recording mode.

- 4** Select the channel on the satellite receiver.

- 5**  to start recording.



### Tips

#### To skip unwanted parts

Press [PAUSE] to pause recording. (Press again to restart recording.)

#### To stop recording

Press [STOP].


## Linked timer recordings with external equipment (SKY Digital STB/satellite receiver) — EXT LINK

To record programmes from a SKY Digital STB/satellite receiver using timer programming

### Preparation:

- **RAM** If the disc is protected, release protection (→ 56).
- **VHS** Ensure accidental erasure tab is intact.
- Make sure you connect the AV2 input terminal of this unit to "VCR Scart Terminal" of a SKY Digital STB/satellite receiver with a 21-pin scart cable (→ 9).
- Set the "AV2 Input" and "Ext Link" to match the connected equipment in the Setup menu (→ 63).

- 1** Make timer programming on SKY Digital STB/satellite receiver.  
– Refer to the equipment's operating instructions.

- 2**  to select the DVD or VHS drive.

–Insert a disc or video cassette with enough remaining blank space (→ 72, 74).

- 3** 

- The unit turns off and "EXT-L" lights on the unit's display to indicate timer recording standby has been activated.
- While the unit is in EXT LINK standby mode or recording, most operations on this unit are prohibited ([OPEN/CLOSE], [I/P] etc.). When you operate, press [EXT LINK] to cancel EXT LINK standby mode or recording (The unit turns on and "EXT-L" disappears.).



### Tips

#### To cancel the external control

Press [EXT LINK] to stop recording or to cancel linked timer recording standby (The unit turns on and "EXT-L" disappears.).

**Manual timer recordings (→ 26)**




### Notes

- In order to prevent accidental operation, press [EXT LINK] to cancel the setting after recording is finished.
- This function does not work with some equipment. Refer to the equipment's operating instructions.
- The beginnings of recordings may not be recorded correctly in some cases.
- When "Ext Link" is set to "Ext Link 2", this function does not work if the input signal is NTSC system.
- Programmes are recorded as one title on this unit when the end time of the earlier timer recording and the start time of the later timer recording are close to each other.
- **RAM** To divide the titles, go to "Divide Title" (→ 46).
- While the unit is in EXT LINK standby mode or recording, video picture is from the AV2 input terminal irrespective of "AV1 Output" setting (→ 63).

# Recording from an External Device

## Recording from a VCR, etc.

Connect cables while both the unit and the external device are turned off.

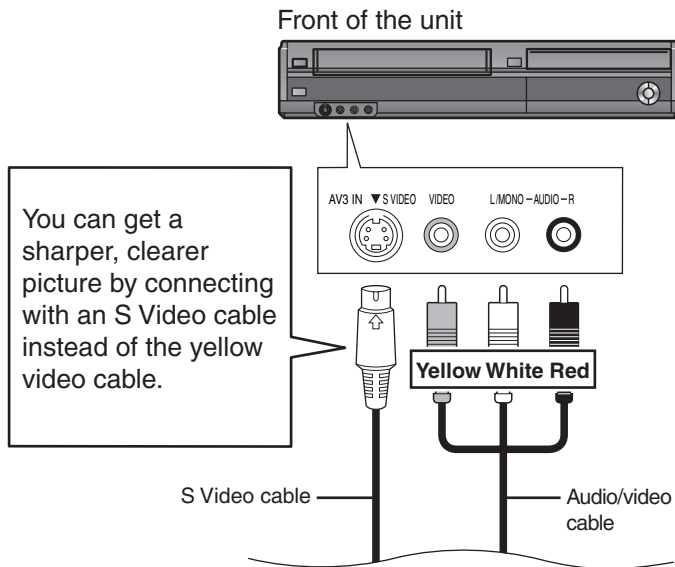

### Preparation:

- Turn on the unit.
- **RAM** If the disc is protected, release protection (→ 56).
- **VHS** Ensure accidental erasure tab is intact.
- When the output signal from the external device is NTSC, change the “TV System” to “NTSC” in the Setup menu (→ 63).  
This unit cannot record NTSC signals to discs that already have PAL signal recordings.
- To reduce noise in input from a video cassette recorder, set “Copy NR” to “On” in the on-screen display (→ 55).

- 1** to select the DVD or VHS drive.

–Insert a disc or video cassette with enough remaining blank space (→ 72, 74).

- 2** to select the recording mode (→ 20).

- 3** to select the input where your external device is connected.

–Front panel inputs are AV3.

## Recording to DVD

**RAM -R -R DL -RW(V) +R +R DL +RW**

Perform steps **1**–**3** left.

- 4** Start play on the external device.

- 5** at the point you want to start recording to the disc.

## Recording to VHS

**VHS**

Perform steps **1**–**3** left.

- 4** to bring the tape to the point at which you want to start recording from.

- 5** when you reach that point.

- 6** to put the unit in recording standby.

- 7** Start play on the external device.

- 8** to start recording at the point you desire.



### Notes

- When timer recording starts while recording from an external device, timer recording takes priority and recording from the external device stops.



### Tips

- You can also connect to the AV2 on the rear.
- If the audio output of the external device is monaural, connect to L/MONO on the AV3 input terminals at the front.

### To skip unwanted parts

Press [PAUSE] to pause recording. (Press again to restart recording.)


### To stop recording

Press [STOP].

## Recording from a DV Camcorder

Connect the cable while both the unit and the external device are turned off.

Front of the unit

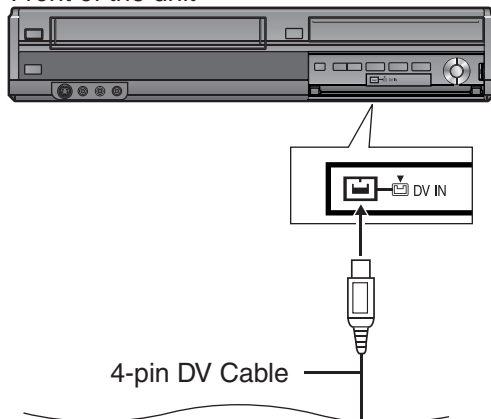


**RAM -R -R DL -RW(V) +R +R DL +RW**

### Preparation:

- Turn on the unit.
- **RAM** If the disc is protected, release protection (→ 56).
- When the output signal from the external device is NTSC, change the “TV System” to “NTSC” in the Setup menu (→ 63).
- When recording bilingual programmes (→ 61)

**1**  to select the DVD drive.

- Insert a disc (→ 72).
- External DV cannot be recorded to VHS.

**2**  to select the recording mode (→ 20).

**3** Turn on the DV equipment and pause play on the DV equipment at the point you want recording to start.

“DV Auto Rec” screen may appear.



### When “DV Auto Rec” screen does not appear

Perform steps **1–3** (→ above).

1. With the unit stopped  
Press [FUNCTION MENU].
2. Press [▲, ▼] to select “To Others”, then press [OK].
3. Press [▲, ▼] to select “DV Auto Rec”, then press [OK].

You can proceed to step **5** (→ right).

**4**  to select “Rec to DVD”, then



**5**  to select “Rec”, then



### Notes

- When timer recording starts while recording from an external device, timer recording takes priority and recording from the external device stops.
- If the desired audio is not recorded, select the kind of audio for “Audio Mode for DV Input” in the Setup menu (→ 61).
- **RAM** Programmes are recorded as a single item; breaks in the images create chapters and playlists are created automatically.
- If you use video camcorders from other manufacturers, these are not guaranteed to work.
- It is not possible to operate the unit from the connected DV equipment.
- The DV equipment name may not be shown correctly.
- Date and time information is not recorded, even if displayed on the camcorder.
- The DV IN terminal is not meant to be connected to a computer.
- This unit uses a 4-pin “DV IN” connector;  
Your DV camcorder may use a 4-pin or 6-pin external connector. Please consult your DV camcorder’s manufacturer to confirm correct external connection.
- You cannot record and play simultaneously.



### Tips

#### When recording finishes

The confirmation screen appears.  
Press [OK] to finish DV camcorder recording.

#### To stop recording

Press [■ STOP].  
The confirmation screen appears. Press [OK].

If the DV camcorder recording function does not work properly, check the connections and DV equipment settings, and turn the unit off and back on. If that does not work, follow the instructions on page 24.

# Advanced Timer Recording


RAM -R -R DL -RW(V) +R +R DL +RW VHS

## Manual timer recordings

### Preparation:


- Turn on the television and select the appropriate video input to suit the connections to this unit.
- **RAM** If the disc is protected, release protection (→ 56).
- **VHS** Ensure accidental erasure tab is intact.
- Insert a disc or a video cassette with enough remaining blank space.
- Confirm that the clock on the unit's display is set to the correct time.
- If connected via a satellite receiver, set channel there before timer recording starts.

**1** PROG/CHECK

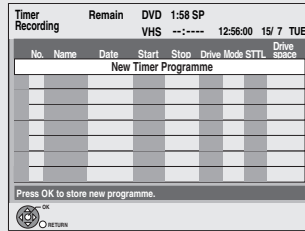

**2** ▲, ▼ to select "New Timer Programme", then OK


**3** ◀, ▶ to move through the items and ▲, ▼ to set the items.

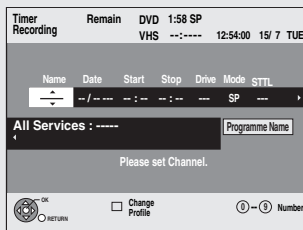

- Name:** – TV Station Name/External Input
- When recording satellite programmes, select "AV2".
  - You can press the "Blue" button to change the category [e.g., Free TV, Radio, Registered Profiles (→ 58, Edit Profiles)]
- Date:** – You can set a daily or weekly programme (→ right, Tips).
- Start (start time)/Stop (end time):**
- Hold button to change in 30-minute increments or decrements.
- Drive:** – DVD or VHS
- Mode:** – Recording mode (→ 20)
- STTL [Subtitles (→ 40)]:**
- ON/OFF
- Programme Name:**
- Press [OK]. (→ 44, Entering Text)

**4** OK

– The timer icon is displayed in left column.

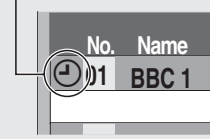

- "⌚" lights on the unit's display to indicate timer recording standby has been activated.
- Repeat steps 2–4 to programme other recordings.
- Press [⏻ DVD/VHS] to turn the unit off.



### Notes

- "⌚" on the unit's display flashes when the unit cannot go to timer recording standby.
- If two timer recording times overlap, the first recording always has priority. The second recording will start only after the first recording has finished.
- Recorded subtitles cannot be deleted later.
- A Timer Recording will not start while a disc is being formatted, deleted or finalised. The recording begins afterwards.
- When "Name" is set in AV1, AV2 or AV3, STTL setting is unavailable.




### Tips

#### To exit the timer recording list

Press [PROG/CHECK].


- "Date" Setting  
Each press of [▲] changes items in the order below.  
(Each press of [▼] changes items in the reverse order.)


Current date → --- → One month later

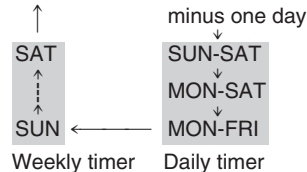

- You can also use the numbered buttons to enter "Name", "Date", "Start", and "Stop".
- You can also press [DRIVE SELECT] to switch the drive, [REC MODE] to switch "Mode" and press [STTL] to switch "STTL".

## To cancel a timer recording in progress

 **1** While the unit is on  
 to select the drive.

**2**   
– Confirmation screen appears.

**3** ◀ to select “Stop Recording”,  
then 




### Notes


- Recording stops and the timer programme is deleted. (Daily and weekly timer programmes remain and timer recording will start as programmed.)

## To deactivate timer programme (e.g. to interrupt a daily or weekly timer programming)

The timer recording list can be viewed even when the unit is off.

**1**   
– See “Tips” (→ 28) for explanation of icons displayed.

**2** ▲, ▼ to select the programme.

**3**   
– “⊖” (→ 28) disappears from the timer recording list.  
– Press the “Red” button again to activate timer programme.



### Tips


You can deactivate the timer programme in the following procedure as well.

Perform steps **1-2** (→ above)

1. Press [OPTION]
2. Press [▲, ▼] to select “Timer Off”, then press [OK].

## Notes on timer recording

- Timer recordings are activated regardless of whether the unit is turned on/off.
- Timer recordings begin when the set time is reached even when playing.
- Timer recordings do not begin while editing or copying.
- If the unit is turned on when timer recording begins, it remains turned on after recording finishes. It does not turn off automatically. You can turn the unit off during timer recording.
- If the unit is not put in the timer recording standby mode at least 10 minutes before the programmed timer recording starting time, the “⊖” flashes on the unit’s display.
- When you programme successive timer recordings to start immediately one after the other, the unit cannot record the part at the beginning of the later programmes.

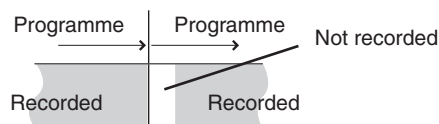

# Advanced Timer Recording

## Check, Change, or Delete Programmes

The timer recording list can be viewed even when the unit is off.

1

PROG/CHECK



– See “Tips” (→ right) for explanation of icons displayed.

2

▲, ▼ to select the programme.

3a



to delete.

– You cannot delete programmes that are currently recording.

3b



to modify the programme.

▲, ▼, ◀, ▶ to make changes,

then to confirm.




### Notes

- Recording may fail if there are changes to the station's programming.
- “☺” disappears from the unit's display when no timer programme is set or when all timer programmes are deactivated.



### Tips

- You can enter up to 16 programmes a month in advance.

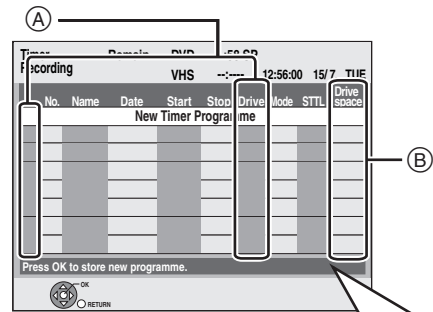

#### A Timer Recording screen icons

- ☺: Timer programme is active.
- : Currently recording
- W: Programmes are overlapped. Recording of the programme with the later start time starts when the earlier programme finishes recording.
- ⊖: You stopped a weekly or daily timer recording. The icon disappears when the next timer recording starts.
- F: The disc was full. (not enough space)
- ☒: The TV programme may not be recorded due to copy-protect.
- X: Recording stopped (Dirty disc or video cassette, etc.)

**Drive** Recording drive is set to DVD or VHS

#### B Drive space

**OK:** Recordable **DVD**

→ **(Date):** For recordings made daily or weekly, the display will show until when recordings can be made (up to one month ahead from the present time) based on the time remaining on the disc. **DVD**

- !:
- It may not be possible to record because:
  - The disc is write-protected. **DVD**
  - There is no more space left. **DVD**
  - The number of possible titles has reached its maximum. **DVD**
  - The new timer recording will completely or partially record over this timer recording.
- The timer recording was not performed or completed for the following reasons:
  - A disc or a video cassette was not inserted.
  - A protected disc or a video cassette without a secure accidental erasure prevention tab was inserted.
  - The remaining recording time on the video cassette was insufficient. **VHS**
- : When the drive is set to VHS, "--" is displayed.

#### You can also delete a programme with the following steps

1. Press [▲, ▼] to select the programme and press [OPTION].
2. Press [▲, ▼] to select “Delete” and press [OK].

#### To exit the timer recording list

Press [PROG/CHECK].


Programmes that failed to record are deleted from the timer recording list at 4 a.m. two days later.




## Making timer recordings on the television

To make a timer recording with your television, connect to a television with a Q Link function (→ 42) that you can use for setting timer recordings using a fully wired 21-pin Scart cable (→ 8, 9).

**1** Make timer programming on the TV.

**2**  to select the DVD or VHS drive.

– Insert a disc or video cassette with enough remaining blank space (→ 72, 74).

**3**  to turn the unit off.

– The start and end of recording is controlled by TV.



### Tips

#### To stop recording

Press [■ STOP].



### Notes

- When this unit is in EXT LINK standby (“EXT-L” on the unit’s display lights), recording from TV does not start.
- Programmes are recorded as one title on this unit when the end time of the earlier timer recording and the start time of the later timer recording are close to each other.

**RAM** To divide the titles, go to “Divide Title” (→ 46).

# TV Guide

## What is TV Guide?

The TV Guide gives you an overview of the programme for your digital television and radio stations up to 7 days. For many of these programmes, you can select additional information provided by the stations. You can search the programme preview according to various topics such as sport, films etc., according to categories such as TV or radio. You can easily find the desired programmes and set Timer recording.

### Landscape view

**Broadcast date** → Wed 13th  
**Broadcast time** → 20:00-21:00  
**Timer icon** (→ 15)  
**Selected programme**  
 □ : current programme  
 ■ : future programme

### Landscape view:

TV Guide offers detailed information such as what programme is broadcast on what channel and what time as if you see a TV programme magazine, which is convenient to check the status of Timer recording.

### Portrait view:

This is convenient to narrow down channels to search for the programme you want to watch.

### To switch between Landscape view and Portrait view

Press [GUIDE].

### Portrait view

## Using the TV Guide

<b>To change channels</b>	<p><b>Landscape view</b> Press [▲, ▼] to select a channel.</p> <p><b>Portrait view</b> Press [◀, ▶] to select a channel. The TV Guide list appears for this channel.</p>
<b>To view a programme list for another day</b>	<ul style="list-style-type: none"> <li>Jump ahead 24 hours Press the "Green" button to jump ahead by one day.</li> <li>Jump back 24 hours Press the "Red" button. You can only jump back to the current date. Past information cannot be viewed.</li> </ul>
<b>To browse through the TV Guide list.</b>	Press [▲, ▼ CH].
<b>To see programme information</b> (Programmes with the ⓘ symbol)	<p>Press [STATUS ⓘ]. Additional information (programme name, programme duration, broadcast time, description) is available for these programmes.</p> <ul style="list-style-type: none"> <li>Press [▲] and [▼] to scroll up and down.</li> </ul> <p><b>To show other pages</b> Press [▲ CH] (Previous) or [▼ CH] (Next).</p> <p><b>To return to the TV Guide list</b> Press [STATUS ⓘ]</p>
<b>To return to the previous screen</b>	Press [RETURN].
<b>To exit the screen</b>	Press [EXIT].



## Notes

- The receipt of the TV Guide system data is only possible via the aerial input of this unit. The receipt of the TV Guide data via externally connected satellite receivers is not possible.
- The TV Guide system setup will not work if the clock is not set correctly.



## Tips


When the unit displays "No Data" or the empty TV Guide list:


The "empty" field

- Some digital broadcast may not send programme information. Set the timer recording manually (→ 26, Manual timer recordings).

## Selecting the programme from the desired programme type or category

This function lets you display a TV Guide list sorted by programme type (e.g. Movies, Sport) or category (e.g. Free TV, Radio).

**1a**  to display the list of programme type.


**1b**  to display the list of categories.

**2** ▲, ▼ to select the desired item.

Prog.Type	Category
All Types	All Services
All Types	All Services
Movies	Free TV
News and Factual	Radio
Entertainment	Information
Sport	Profile 1
Children's	Profile 2
Education	Profile 3
Lifestyle	Profile 4
Drama	

**3** 

- A list appears with all programmes of the selected item.
- When you select the landscape view, the unit displays in grey programmes that do not belong to the selected programme type.

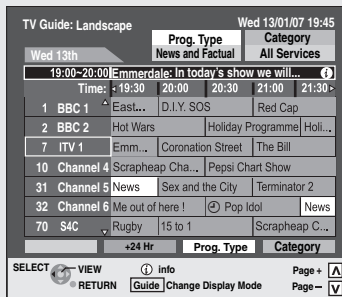

Time	Channel	Prog. Type	Category
19:00-20:00	Emmerdale	News and Factual	All Services
19:30	BBC 1	East...	D.I.Y. SOS
20:00	BBC 2	Hot Wars	Holiday Programme
20:30	ITV 1	Emm...	Coronation Street
21:00	Channel 4	Scrapheap Cha...	Pepsi Chart Show
21:30	Channel 5	News	Sex and the City
	Channel 6	Me out of here!	Pop Idol
	S4C	Rugby	15 to 1

e. g., Programme type, “News and Factual” is selected in step 2 of Landscape view.

**4** ▲, ▼, ◀, ▶ to select the programme.

## Notes

- The broadcasters allocate individual programmes to topic areas. This function does not work properly unless the information which distinguishes the programme type and categories sent from broadcast stations is correct.

## Tips

**To return to the previous TV Guide list before you have selected the programme type or categories**

Select “All Types” of the programme type and “All Services” of the categories in step 2 above.

**To return to the previous screen**

Press [RETURN].

**To exit the screen**

Press [EXIT].



## Notes

- If the unit is disconnected from the AC mains, all programme data are lost.
- The programme list is available immediately if this unit has found a digital station and loaded the information in the memory. This process can take a while depending on the particular station.
- The programme list data are continuously downloaded in the background when the unit is turned on. That means that the programme list can sometimes change while you are looking at it.

# Advanced Disc Playback

## Menu Screens on the TV

### DVD-V VCD

Generally, menu screens that appear on the TV may be navigated as follows:



### DVD-V

▲, ▼, ◀, ▶ to select an item, then



You can sometimes use the numbered buttons to select an item.

### VCD

Press the numbered buttons to select an item.

e. g., "5": 0 → 5 "15": 1 → 5



### Tips

**To return to the menu screen**

**DVD-V** Press [DIRECT NAVIGATOR].

**VCD** Press [RETURN].




### Notes

If "⊘" appears on the TV, the operation is prohibited by the unit or disc.

## Selecting Titles to Play

You can easily select and play recorded programmes by using DIRECT NAVIGATOR.

**RAM -R -R DL -RW(V) +R +R DL +RW -RW(VR)**

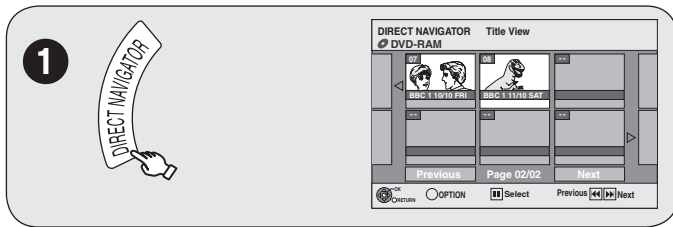

2

▲, ▼, ◀, ▶ to select the title you want to watch, then



### Tips

**To select the title with the numbered buttons**

e. g., 5: [0] → [5]

15: [1] → [5]

**To view other pages**

Press [▲, ▼, ◀, ▶] to select "Previous" or "Next", then press [OK].

– You can also press [◀◀, ▶▶] to view other pages.

**To exit the DIRECT NAVIGATOR screen**

 
Press [DIRECT NAVIGATOR].

## DIRECT NAVIGATOR screen icons

- Protected.
- Not recorded due to recording protection (Digital broadcasts, etc.)
- It cannot be played because data is damaged, etc.
- Currently recording.
- "One time only recording" restriction (→ 92, CPRM)
- (NTSC) Title recorded using a different encoding system from that of the TV system currently selected on the unit.
- (PAL) • Alter the "TV System" setting on this unit to suit (→ 63).

## Search

During playback



– There are 5 search speeds. Each press increases the search speed. (**+R +R DL +RW** up to 3 speeds)

– Press [▶ PLAY] to restart normal playback.



### Tips

Depending on the disc, search may not be possible.

## Skip

You can skip to the beginning (or the end) of Title/Chapter. Skip is operated for each chapter.

During playback or while paused



– Each press increases the number of skips.

## Quick View (Play ×1.3)

### RAM

Allows you to increase the play speed slightly without distorting the audio.

During playback



(Press and hold.)

– Press again to return to normal speed.

## Direct Play

During playback, you can access specific titles or scenes through direct entry of the numbered buttons.

<b>1</b>	<b>2</b>	<b>3</b>	e.g., 5: [0] → [5]
			15: [1] → [5]
<b>4</b>	<b>5</b>	<b>6</b>	• <b>MP3 and JPEG</b>
			e.g., 5: [0] → [0] → [0] → [5]
			15: [0] → [0] → [1] → [5]
<b>7</b>	<b>8</b>	<b>9</b>	
DELETE *	<b>0</b>	INPUT SELECT	


## Slow-motion Play

**RAM -R -R DL -RW(V) +R +R DL +RW**  
**DVD-V -RW(VR) VCD**

While paused

**◀** Or **▶**

- There are 5 slow-motion speeds. Each press increases the speed.
- Press **[▶ PLAY]** to restart normal playback.


 **Notes**

- If continued for approx. 5 minutes, slow-motion play pauses automatically (except **DVD-V VCD**).
- **VCD** allow slow-motion in the forward direction only.


## Frame-by-Frame Viewing

**RAM -R -R DL -RW(V) +R +R DL +RW**  
**DVD-V -RW(VR) VCD**

While paused

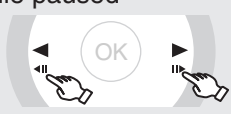

- Each press shows the next or previous frame.
- Press and hold to advance or reverse frame-by-frame in succession.
- Press **[▶ PLAY]** to restart normal playback.


 **Notes**

- **VCD** allow Frame-by-Frame in the forward direction only.


## Time Slip

**RAM -R -R DL -RW(V) +R +R DL +RW -RW(VR)**  
 Use to skip in 1-minute or 10-minute increments.

**1** During playback



**2** **▲, ▼** to select the time, then




- Each time you press **[▲, ▼]**, the time increases **[▲]** or decreases **[▼]** by 1 minute intervals.
- Press and hold for 10-minute intervals.

## Manual Skip

**RAM -R -R DL -RW(V) +R +R DL +RW -RW(VR)**  
 Skips approx. 30 seconds forward with each press.

During playback




## Create Chapters

**RAM**

When creating chapters in your favourite scenes, you can easily reach the head of scene using **[◀◀, ▶▶]** (SKIP) or play on Chapter View. (→ 47)

During playback




 **Tips**


- Chapters cannot be created during EXT LINK standby (→ 23).


# Playing Still Pictures (JPEG)



**-R -R DL CD**

You can playback still pictures recorded onto a DVD-R, DVD-R DL or CD-R/CD-RW on a PC (Close the session or finalise the disc after recording).

**1**  to select the DVD drive.

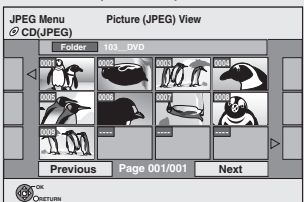**2**  Picture (JPEG) View screen is shown.



**3**  to select a picture, then .

## Tips

**To stop viewing a picture**  
Press [■ STOP].

**To exit the menu screens**  
Press [DIRECT NAVIGATOR].

**To view other pages**  
Press [▲, ▼, ◀, ▶] to select "Previous" or "Next", then press [OK].  
– You can also press [◀◀, ▶▶] to view other pages.

**To select the still picture with the numbered buttons**

e.g., "5": [0] → [0] → [0] → [5]  
"15": [0] → [0] → [1] → [5]  
"115": [0] → [1] → [1] → [5]  
"1115": [1] → [1] → [1] → [5]

**When you insert discs which contain both MP3 and still pictures (JPEG)**



The screen shown below is displayed.


Play mode is set to MP3.  
To play another type of file,  
select the file type  
from "Playback" in FUNCTION MENU.





1. Press [RETURN] to exit the screen.
2. Press [FUNCTION MENU].
3. Press [▲, ▼] to select "Playback", then press [OK].
4. Press [▲, ▼] to select "JPEG", then press [OK].

## Selecting Still Pictures in Another Folder

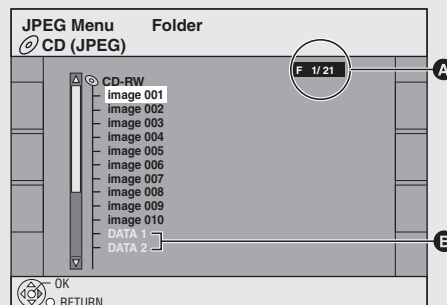**1** From the Picture (JPEG) View screen  
 to select "Folder",  
then .



- A:** Selected Folder No./Total Folder No.  
If the folder has no compatible file, "--" is displayed as the folder number.
- B:** You cannot select folders that contain no compatible files.



**2**  to select the desired folder,  
then .



## Tips

**To return to the previous screen**  
Press [RETURN].

## Slide Show

You can display still pictures one by one with constant interval.

**1** From the Picture (JPEG) View screen  
 to select "Folder",  
then .

**2**  to select "Start Slide Show", then 



## Tips

**To stop the Slide Show**  
Press [■ STOP].

**To change the rate at which pictures are displayed**

- 1 In step **2** above, press [▲, ▼] to select "Slide Interval", then press [OK].
- 2 Press [◀, ▶] to select desired interval (0 to 30 seconds), then press [OK].




## Rotate Pictures

- 1 While playing a picture  
OPTION



- 2 ▲, ▼ to select “Rotate RIGHT” or “Rotate LEFT”, then OK

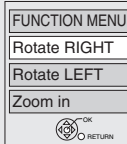

### Notes

#### To return to the picture to its original position

Press [▲, ▼] to select the opposite rotation in step 2, then press [OK].


- Rotation information will not be stored.

## Zoom

- 1 While playing a picture  
OPTION



- 2 To zoom in:  
▲, ▼ to select “Zoom in”, then OK

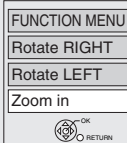

### Notes

#### To return to the picture to its original size

Press [▲, ▼] to select “Zoom out” in step 2, then press [OK].

- When zooming in, the still picture may be cut off.
- “Zoom in” information is not stored.
- “Zoom in” and “Zoom out” do not work with images that have a resolution larger than 640×480 pixels.

## Picture Properties

Picture information is shown (e.g., shooting date).

While playing a picture

STATUS **twice** to display picture properties.



18:53:50 11/10

Date 1/1/2005 No. 3/9

Shooting Date

STATUS **again** to exit.



### Notes


- Depending on the camera or editing software; shooting dates may not be displayed correctly.


# Playing MP3s

**-R -R DL CD**

You can play DVD-R, DVD-R DL or CD-R/RW discs which contain MP3 files that have been recorded on a PC (Close the session or finalise the disc after recording).


**1**  to select the DVD drive.

**2**  Selected group

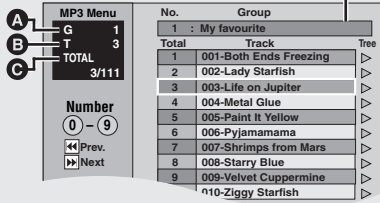


–Track list is shown.

- A:** Group No.
- B:** Track No. in the group
- C:** Track No./Total tracks in all groups

**3** ▲, ▼ to select a track, then  to play.

## Tips

 - “” indicates the track currently playing.

**To stop playing**  
Press [■ STOP].

**To exit the menu screens**  
Press [DIRECT NAVIGATOR].

**To view other pages**  
Press [◀◀, ▶▶].

**To select the track with the numbered buttons**  
e.g., “5”: [0] → [0] → [0] → [5]  
“15”: [0] → [0] → [1] → [5]

**2** ▲, ▼ to select a group, then




– The track list for the selected group appears.

## Tips

**To return to the track list**  
Press [RETURN].

**When you insert discs which contain both MP3 and still pictures (JPEG)**


The screen shown below is displayed

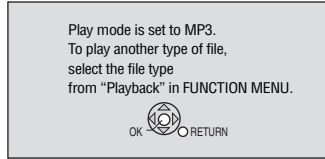

Press [OK].

## Using the Tree Screen to Find a Group

**1** From the track list  
▶ while a track is highlighted to display the tree screen.

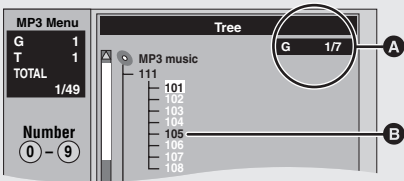

- A:** Selected Group No./Total Group No.  
If the group has no compatible track, “--” is displayed as the group number.
- B:** You cannot select a group that contains no compatible track.

# Advanced Video Cassette Playback

## Fast-forward/Rewind

With the unit stopped



 
to fast-forward the tape.



to rewind the tape.

## Slow-motion Play

During playback



Press and hold for about 2 seconds.

–Press [▶ PLAY] to restart normal playback.



### Notes

Slow-motion Play is automatically cancelled after 10 minutes.

## Cue/Review

You can quickly review a portion of the video just played or cue to later portions of the tape.

During playback



to cue to later portions of the tape.



to review a portion just played.

–Press [▶ PLAY] to restart normal playback.



### Notes

Cue/review is automatically cancelled after 10 minutes.



### Tips

**For quicker operation**

- Hold [◀▶] to start cue/review and release the button to restart normal playback.

## Jet Search

You can high speed search a video in the forward or the reverse direction.

During playback



twice to Jet Search forward.



twice to Jet Search in reverse.

–Press [▶ PLAY] to restart normal playback.



### Notes

- Depending on your TV, the picture may not be in colour or may be distorted.
- Jet Search is automatically cancelled after 10 minutes.

## Jet Rewind

Video tapes will rewind to the beginning of the tape at higher-speed.



### Notes

 
- Depending on the tape or an operating condition, the rewind speed may change somewhat.
- The tape counter is reset to “0:00.00” when the tape is rewound to the beginning.
- Depending on the tape, this function may not work.

# Advanced Video Cassette Playback

## VHS Index Search System (VISS)

The unit automatically records special index signals on a tape every time a recording is started (via [● REC], or a timer recording). The index search function makes use of these index signals to help you find the beginning of a desired programme quickly and easily.

While stopped or during normal play



- The unit automatically starts playback after the index signal is found.
- Each press increases the number of skips.
- Press [■ STOP] to cancel the search.



### Notes

- Up to 20 index signals can be searched in either direction.
- If you overshoot in either direction, press the opposite button to correct.
- For correct operation, make recordings of at least 5 minutes to ensure that index signals are not spaced too closely together.

## S-VHS Quasi Playback (SQPB)

This unit can play tapes recorded in S-VHS.

- Some picture noise may occur depending on the type of tape used.
- It is not possible to fully obtain the high resolution S-VHS is capable of.
- This unit cannot record in S-VHS.

## Repeat Playback

When the tape reaches the end of the programme, it will automatically rewind to the beginning and play again.

During playback or while stopped



Press and hold for about 5 or more seconds.

- Repeat Playback goes on indefinitely until you cancel it.
- The "R ▷" indication appears on screen.
- Press [■ STOP] to stop play.



### Notes


Only works if there is at least 5 seconds blank space at the end of the programme.

## Adjusting the Playback Picture

### Manual Tracking


The unit usually makes tracking adjustments automatically, but you may need to do it manually if noise appears on a tape recorded on other equipment.

During playback

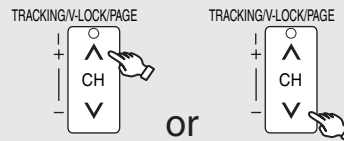

Press and hold until the picture noise disappears.

To return to auto tracking:

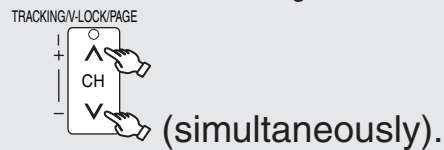

### Tips

To remove the noise from a paused picture: Start slow play (→ 37), then adjust the tracking.




### Notes

- This function may not work with some tapes.
- You can also adjust the tracking with [CH ^, v] on the main unit.

## Vertical Locking Adjustment


Adjust the vertical synchronisation to stop the picture from shaking while paused.

While paused

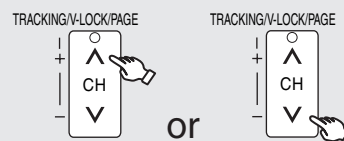

Press and hold until the shaking stops.

To return to the standard position:

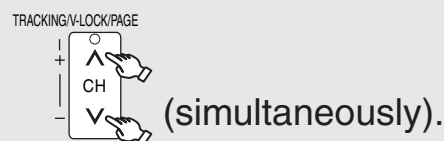

### Notes

- This function may not work with some tapes.
- You can also adjust vertical synchronisation with [CH ^, v] on the main unit.

## Changing Audio during Playback

STTL



Press and hold for about 5 or more seconds.

The audio changes as follows

L R (Stereo) → L → R


↑ No display (Normal audio track) ↓

## On-screen Display Indicators

STATUS



to display on-screen indicators.

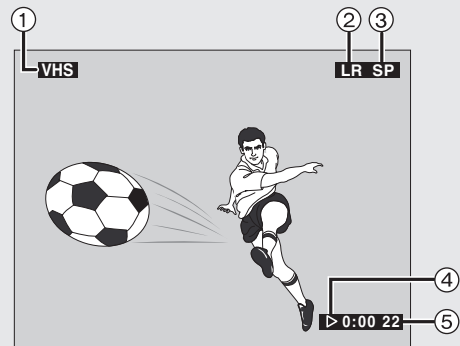

- ① VHS drive indicator
- ② L and R indicators  
The Left (L) and Right (R) indicators show which sound mode is selected as follows:
  - L R (Stereo): Hi-Fi stereo audio
  - L -: Mono L audio of the Hi-Fi stereo audio
  - R: Mono R audio of the Hi-Fi stereo audio
  - (Normal): Normal audio
- ③ Recording mode (→ 20)
- ④ Operation status
- ⑤ Shows the tape counter and remaining tape time  
Pressing [STATUS ①] to cycle the display as follows:
  - No display → Tape counter
  - ↑ Remaining tape time ↓
  - Press [DELETE \*] to reset the tape counter (elapsed time) to "0:00.00". The tape counter is automatically reset when inserting a video cassette.



### Tips

#### To exit on-screen indicators

Press [STATUS ①] several times.



### Notes


#### Remaining tape time display

 
 
- The displayed time is approximate.
- The displayed time will be incorrect if you set the wrong tape length in "Tape Length" in the Setup menu (→ 64) and if the tape is of poor quality.

# Information Messages


## Digital Channel Information

You can display the information about programmes (programme name, broadcast time, etc.).

With the unit stopped  
STATUS  to show the screen information.


When the digital channel information is being displayed,  
– press [STATUS ] again and detailed information will be displayed (only when “info ” is displayed).

Status message (→ 41)

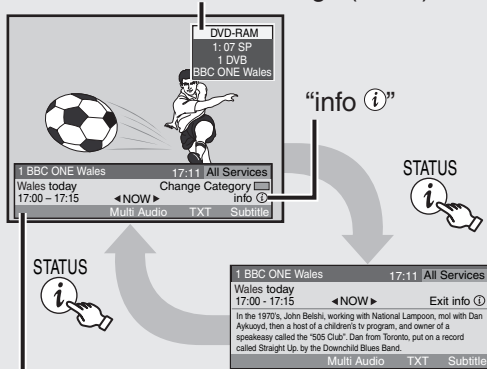

Digital channel information      Detailed information

Programme name and Broadcast time

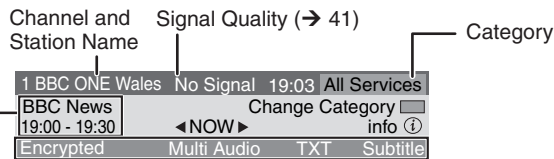

- Encrypted** During scrambled broadcasting (You cannot watch the broadcast).
- Multi Audio** Programme is broadcast in multi-channel sound (→ 55, DVB Multi Audio).
- TXT** Digital TEXT is possible.
- Subtitle** Subtitle can be displayed.

### Tips

**To switch information of the current programme and the next programme**  
Press [◀, ▶].

- NOW: current programme
- NEXT: next programme

**To select the information of another channel**  
Press [▲, ▼].

- Press [OK] to watch the selected channel.


**To change the length of time digital channel information is displayed for**  
(→ 62, On-Screen Messages)



### Notes

- Everytime you change the channel, digital channel information appears automatically. They disappear again after a short time.
- If you record a digital radio broadcast or a digital broadcast that is not being received correctly, digital channel information is also recorded and will remain visible during playback.

## Showing the Digital TEXT (MHEG)

When “TXT” appears in digital channel information  
TEXT  to show the Digital TEXT.

– Press again to hide.



### Notes

- During recording the Digital TEXT function is not possible.
- The Digital TEXT function depends on respective stations.
- When subtitle is on or the digital channel information is displayed, the Digital TEXT function does not work.



### Tips

**To view another page of Digital TEXT (MHEG)**


Press [▲, ▼] to select another page and press [OK].

- You can also use the numbered buttons to select another page.

**Quickly access to certain topic areas and navigation**

Use colour buttons according to on-screen instructions.

## Showing Subtitles

When “Subtitle” appears in digital channel information  
STTL  to show subtitles.

– Press again to hide.



### Notes

- Programmes are recorded with subtitles when you record them with the subtitles on.
- You cannot switch subtitles during timer recording.




### Tips

**To select subtitle language (→ 62, DVB Preferred Subtitles)**

## Changing the Category

You can select one of your favourite channels by changing the category [such as Free TV, Radio and Registered Profiles (→ 58)].

When digital channel information is displayed

 (Blue) to change the category.

– Press [▲, ▼] to select the channel.




# FUNCTION MENU Window

By using the FUNCTION MENU window you may access the main functions quickly and easily.

With the unit stopped

1

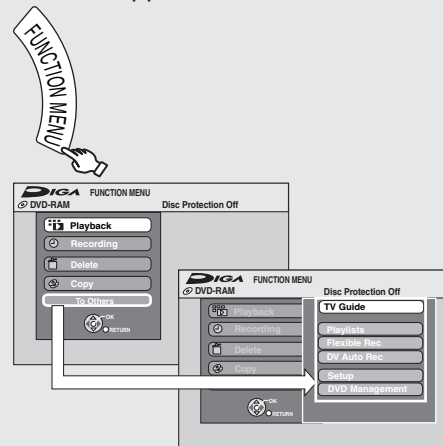

2

▲, ▼ to select a menu item, then OK

– If you select “To Others”, press [▲, ▼] to select a menu item and press [OK].

## Signal Quality

No Signal:	The digital broadcast signal is not being received.
Bad Signal:	Due to poor signal conditions, etc., the digital broadcast signal has been interrupted.
No Service:	No broadcasts are currently available.

If “No Signal” or “Bad Signal” is displayed, check the following;


- Check that the aerial is correctly positioned.
- Check that the current digital broadcast channel is correctly broadcasting.

## Status Messages

The following messages and displays appear to let you know what operations are being performed and the status of the unit.


During playback and/or recording

STATUS **Keep pressing to cycle through available displays.**

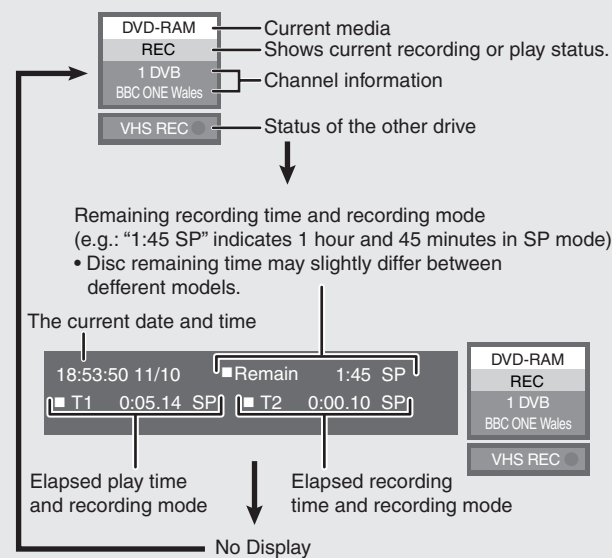

## New Service Message

When a new DVB channel is added this unit will be informed automatically. Then the confirmation message appears. If you select “Yes” on the display, Auto-Setup starts (all channel settings and all created profiles are deleted. The timer recording programmes are also cancelled.).

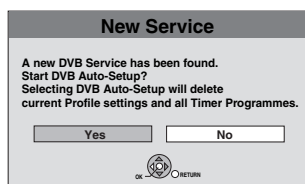

Tips

The display/hide setting can be changed (→ 62).

- Playback** ▶ 32  
You can select and play recorded programmes.
- Recording** ▶ 26  
You can make timer recording settings.
- Delete** ▶ 18  
You can delete recorded titles using Delete Navigator.
- Copy** ▶ 50  
You can copy recorded titles using Copy List.
- TV Guide** ▶ 12, 15  
You can easily find programmes you want to watch and set them for timer recording.
- Playlists** ▶ 48  
You can create playlists by grouping your favourite chapters.
- Flexible Rec** ▶ 22  
The unit sets the best possible picture quality that fits the recording within the remaining disc space.
- DV Auto Rec** ▶ 25  
DV automatic recording function
- Setup** ▶ 58  
You can change the unit's settings using Setup menu.
- DVD Management** ▶ 56  
You can manage discs through formatting, finalising and other operations.

# Linked Operations with the TV (VIERA Link “HDAVI Control™”/Q Link)

You can enjoy linked operations with the TV and receiver by using “VIERA Link” or Q Link.

## What is VIERA Link “HDAVI Control”? VIERA Link

VIERA Link “HDAVI Control” is a convenient function that offers linked operations of this unit, and a Panasonic TV (VIERA) or receiver under “HDAVI Control”. You can use this function by connecting the equipment with the HDMI cable. See the operating instructions for connected equipment for operational details.

- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.
- **This unit supports “HDAVI Control 2” function.** “HDAVI Control 2” is the newest standard (current as of February, 2007) for Panasonic’s HDAVI Control compatible equipment. This standard is compatible with Panasonic’s conventional HDAVI equipment.

### Preparation:

1. Connect this unit to your TV or receiver with an HDMI cable (→ 69).
2. Set “VIERA Link” to “On” (→ 63). (The default setting is “On”.)
3. Set the “HDAVI Control” operations on the connected equipment (e.g., TV).
  - **When using HDMI2 terminal of VIERA as “HDAVI Control”, set the input channel to HDMI2 on VIERA.**
4. Turn on all “HDAVI Control” compatible equipment and select this unit’s input channel on the connected TV so that the “HDAVI Control” function works properly.  
**Also when the connection or settings are changed, repeat this procedure.**

## What is Q Link? Q Link

Q Link is a convenient function that offers linked operations of this unit and a Panasonic TV. You can use this function by connecting the equipment with a fully wired 21-pin Scart cable.

### Preparation:

- Connect this unit to your TV with a fully wired 21-pin Scart cable (→ 8, 9).



### Notes

The following systems from other manufacturers have similar function to Q Link from Panasonic.

For details, refer to your television’s operating instructions or consult your dealer.

- Q Link (registered trademark of Panasonic)
- DATA LOGIC (registered trademark of Metz)
- Easy Link (registered trademark of Philips)
- Megalogic (registered trademark of Grundig)
- SMARTLINK (registered trademark of Sony)

## (When the TV is on) Easy playback

VIERA Link Q Link

When the TV is on and the following operations are performed, the TV’s input will automatically switch to HDMI input mode (VIERA Link) or AV input mode (Q Link) and the TV displays the corresponding action.

(Picture or sound may not be available for the first few seconds.)

Press **[FUNCTION MENU]\*1**, **[▶ PLAY]\*2**, **[DIRECT NAVIGATOR]**, **[GUIDE]**, **[PROG/CHECK]** etc.

## (When the TV is off) Power on link

VIERA Link Q Link

When the TV is off and the following operations are performed, the TV will automatically turn on and displays the corresponding action.

(Picture or sound may not be available for the first few seconds.)

Press **[FUNCTION MENU]\*1**, **[▶ PLAY]\*2**, **[DIRECT NAVIGATOR]**, **[GUIDE]**, **[PROG/CHECK]** etc.

## Power off link

VIERA Link Q Link

When you turn the TV off, the unit is also automatically turned off. The unit is automatically turned off even if the FUNCTION MENU screen, the status message or the on-screen display is displayed, during playback or when the unit is set to a timer recording.

Even if the TV is turned off, the unit will not be turned off at the same time in the following conditions:

- when you pressed **[● REC]** and this unit is recording
- when copying
- when finalising, etc
- When this unit is connected to an “HDAVI Control” compatible Panasonic receiver with an HDMI cable, the receiver will also turn off.

## Direct TV Recording

Q Link

This function allows you to immediately start recording the programme that you are viewing on the TV. (→ 21)

- When the TV is in the HDMI input mode, this function is not available. Switch to other mode except for the HDMI input mode and use Direct TV Recording.
- **However this function does not work if you select the TV channels on this unit.**

\*1 This button is available only when this unit is on.

\*2 When this button is pressed, the playback image is not immediately displayed on the screen and it may not be possible to watch the contents from where playback started.

In this case, press **[◀◀]** or **[◀◀]** to go back to where playback started.

## Easy control only with VIERA remote control

If you connect this unit to the TV that has “HDAVI Control 2” function with an HDMI cable, you can enjoy using more convenient functions.

You can operate this unit using the following buttons on the TV remote control.


[▲, ▼, ◀, ▶], [OK], [RETURN], [EXIT], [OPTION] and the coloured buttons.


Use the remote control for this unit to operate any other buttons (numbered buttons, etc.) that are not listed above.

Using the  
FUNCTION MENU  
window to operate  
this unit

VIERA Link

Refer to TV operating instructions for operating the TV.

- 1 Display this unit’s “FUNCTION MENU” window using the TV remote control.
  - If this unit is turned off, this unit will be automatically turned on.
- 2 Select the item you want to operate with the TV remote control, then 

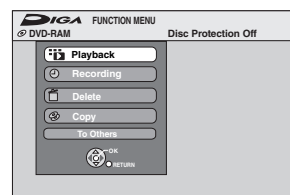


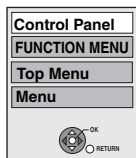
FUNCTION MENU window (→ 41)


Using the OPTION  
menu window to  
operate this unit

VIERA Link


By using the TV remote control, you can play discs using the “Control Panel” (→ below) and display the Top Menu for DVD-Video.

- When the VHS drive is selected on this unit, it automatically switches to the DVD drive.

- 1  e.g.,  


 **Notes**

- You cannot use the OPTION menu while the Top Menu for DVD-Video is displayed and while DVD-Video is copying.

- 2 Select an item, then 

Control Panel	“Control Panel” is displayed (→ below).
FUNCTION MENU	FUNCTION MENU window is displayed (→ above).
Top Menu <b>DVD-V</b>	Top Menu is displayed (→ 32).
Menu <b>DVD-V</b>	Menu is displayed (→ 32).
Rotate RIGHT (JPEG)	Rotate the still pictures (→ 35).
Rotate LEFT (JPEG)	
Zoom in (JPEG)	Enlarge or shrink the still picture (→ 35).
Zoom out (JPEG)	


Using the Control  
Panel

Using the “Control Panel”, you can operate search backward, search forward, stop, etc. with the TV remote control.

Perform steps 1 and 2 of “Using the OPTION menu window to operate this unit” (→ above).

The Control Panel is displayed (→ right)

- While playing a title or DVD-Video, etc.
  - [▲]: Pause, [▼]: Stop, [◀]: Search backward, [▶]: Search forward, [OK]: Play, [EXIT]: Exit the screen.
- While playing still pictures
  - [▼]: Stop, [◀]: View previous picture, [▶]: View next picture, [EXIT]: Exit the screen.

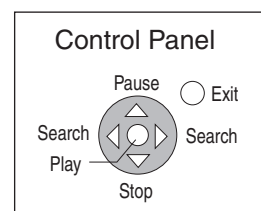

 **Notes**

- These functions may not work normally depending on the equipment condition.
- About “HDAVI Control” function, read the operating instructions of the connected equipment (e.g., TV) too.

**When you want to leave the TV on and set only this unit to standby mode**

Press [⏻ DVD/VHS] on this unit’s remote control and set to standby mode.


**When not using “HDAVI Control”**

Set “VIERA Link” in the Setup menu to “Off” (→ 63).

# Entering Text

You can give names to recorded titles or discs in the different menus and while setting up the timer recording.

## 1 When viewing the Enter Name screen.

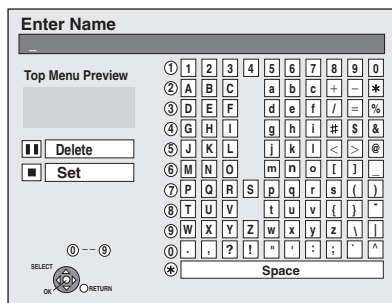

- 2 Press [**▲**, **▼**, **◀**, **▶**] to select a character, then press [**OK**].  
– Repeat this step to enter other characters.
- 3 Press [**■ STOP**] when you've finished entering text.



### Tips

**Using the numbered buttons to enter characters**

e.g.: entering the letter "R"

1. Press [7] to move to the 7th row.
2. Press [7] twice to highlight "R".
3. Press [OK].

**To enter a space**

Press [DELETE \*], then press [OK].

**To delete a character**

Press [■ PAUSE] on a character in the name field.

**To cancel in the middle**

Press [RETURN].

Characters will not be saved.



### Notes

If you enter a long name, only part of it is shown in the Top Menu after finalisation (→ 57). When entering a title name, the name that will appear in the Top Menu can be previewed in "Top Menu Preview" window.



# Titles—Editing

You can edit titles on the DIRECT NAVIGATOR screen: deleting unwanted parts of titles such as commercials, changing Thumbnail, dividing and deleting titles, etc.



### Tips

- **Maximum numbers of titles on a disc**

**RAM -R -R DL -RW(V)**  
99


**+R +R DL +RW**  
49

## Accessing the Title View

**Preparation:**

- **RAM** Release protection (disc, cartridge → 56).
- Insert a disc.

- 1 Press [DRIVE SELECT] to select the DVD drive.
- 2 Press [DIRECT NAVIGATOR].
- 3 Press [**▲**, **▼**, **◀**, **▶**] to select a title.  
– Multiple editing (→ below, Tips)
- 4 Press [OPTION] to display the menu list.
  - To view more options.  
– Press [**▲**, **▼**] to select "Edit", then press [OK].
  - Items that cannot be selected are grey.

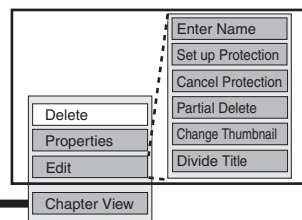

Refer to "Title Operations" (→ 45).

If you select "Chapter View" (→ 47)



### Notes

- You cannot edit during recording or copying, etc.
- **+R +R DL** Management information is recorded in unused sections when you edit discs. The available space on these discs decreases each time you edit their contents.



### Tips

**To exit the menu screens**

Press [DIRECT NAVIGATOR].

**To view other pages**

Press [**▲**, **▼**, **◀**, **▶**] to select "Previous" or "Next", then press [OK].

– You can also press [**◀◀**, **▶▶**] to view other pages.

**Multiple editing**

(Only Delete, Set up Protection/Cancel Protection)

Select with [**▲**, **▼**, **◀**, **▶**], then press [■ PAUSE].

(Repeat.)

– A check mark appears. Press [■ PAUSE] again to cancel.

## Title Operations

### Delete

**RAM -R -R DL -RW(V) +R +R DL +RW**

Use to delete unneeded titles.

**Important:** Once deleted, contents cannot be recovered.

Perform steps 1–4 of “Accessing the Title View” (→ 44).

- 5 Press [**▲**, **▼**] to select “Delete”, then press [OK].
- 6 Press [**◀**] to select “Delete”, then press [OK] to confirm.



### Notes

- **RAM** Deleting an item increases the available disc space by the amount of space taken by the item deleted.
- **-R -R DL +R +R DL** Available disc space does not increase after deletion.
- **-RW(V) +RW** Available disc space increases when you delete the last title (the recording space may increase slightly when other titles are deleted).
- Available disc space may not increase after erasing a short title.


### Properties

**RAM -R -R DL -RW(V) +R +R DL +RW -RW(VR)**

Title information is shown (e.g., date, time)

Perform steps 1–4 of “Accessing the Title View” (→ 44).

- 5 Press [**▲**, **▼**] to select “Properties”, then press [OK].

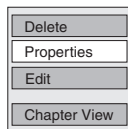

## Set up Protection/Cancel Protection


**RAM +R +R DL +RW**

Use to prevent accidental erasure of titles.

Perform steps 1–4 of “Accessing the Title View” (→ 44).

- 5 Press [**▲**, **▼**] to select “Set up Protection” or “Cancel Protection”, then press [OK].
- 6 Press [**◀**] to select “Yes”, then press [OK].

The lock symbol appears when the title is protected.

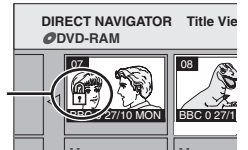

## Partial Delete



**RAM**

Use to remove unwanted parts of titles, such as commercials.

**Important:** Once deleted, the parts cannot be recovered.

Perform steps 1–4 of “Accessing the Title View”, (→ 44).

- 5 Press [**▲**, **▼**] to select “Partial Delete”, then press [OK].

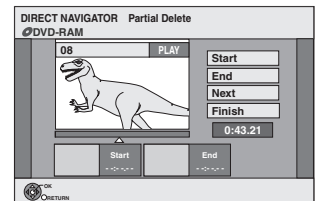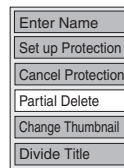

- 6 Press [OK] to set the “Start” point and then press [OK] again to set the “End” point of the section you want to erase.
  - To delete multiple sections: press [**▲**, **▼**] to select “Next”, and repeat this step.
- 7 Press [**▲**, **▼**] to select “Finish”, then press [OK].
- 8 Press [**◀**] to select “Delete”, then press [OK] to confirm.

## Enter Name

**RAM -R -R DL -RW(V) +R +R DL +RW**

You can give a name for the title.

Perform steps 1–4 of “Accessing the Title View” (→ 44).

- 5 Press [**▲**, **▼**] to select “Enter Name”, then press [OK].  
Entering Text (→ 44)



### Notes

- You may not be able to specify start and end points within 3 seconds of each other.
- Available disc space may not increase after erasing short parts of titles.

# Titles—Editing


## Change Thumbnail

RAM -R -R DL -RW(V) +R +R DL +RW

Changes the thumbnail picture shown in the Title View screen.

Perform steps 1–4 of “Accessing the Title View” (→ 44).

- 5 Press [▲, ▼] to select “Change Thumbnail”, then press [OK].

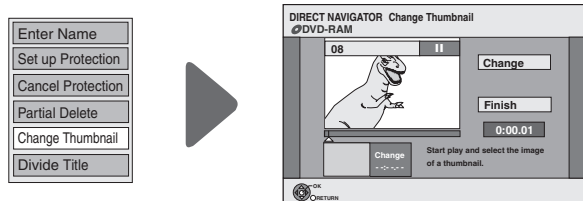

- 6 Press [▶ PLAY] to start play.
- 7 Press [OK] at the point you want to use as the thumbnail.
  - To change the thumbnail:  
Restart play and press [▲, ▼] to select “Change”, then press [OK] at the point you want to use as the thumbnail.
- 8 Press [▲, ▼] to select “Finish”, then press [OK].



### Tips

#### For quicker editing

- Use Search (→ 32), Slow-motion (→ 33) or Time Slip (→ 33) to find the desired point.
- To skip to the start or end of a title press [◀◀] (start) or [▶▶] (end).
- For better precision, use Slow-motion (→ 33) and Frame-by-Frame (→ 33).

## Divide Title


RAM

You can divide a title into two.

Once divided, titles cannot be recombined.

Perform steps 1–4 of “Accessing the Title View” (→ 44).

- 5 Press [▲, ▼] to select “Divide Title”, then press [OK].

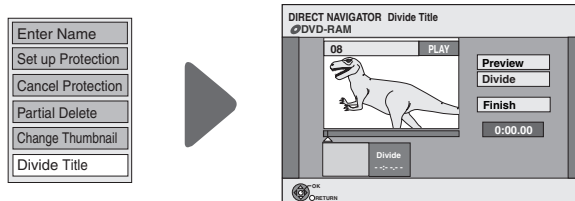

- 6 Press [OK] at the point you want to divide.
  - For quicker editing (→ left, Tips)
  - Selecting “Preview”, then pressing [OK] plays the title from 10 seconds prior, to 10 seconds after the division point.
  - To change the point to divide at:  
Press [▲, ▼] to select “Divide”, then press [▶ PLAY] to bring to the point where you want to divide, then press [OK].
- 7 Press [▲, ▼] to select “Finish”, then press [OK].
- 8 Press [◀] to select “Divide”, then press [OK].
  - The title is divided at that point.



### Notes

- Divided titles retain the name of the original.
- A short amount of video and audio just before and after the division point get cut out.
- You cannot divide a title when the resulting parts are too short or when the total number of titles exceeds 99.



# Chapters—Creating, Editing

## RAM


When creating chapters in your favourite scenes, you can easily reach the head of scene using [**◀◀**, **▶▶**] (SKIP) or play on Chapter View.



### Tips

#### • Title/Chapter

Normally, programmes are recorded as a single item consisting of one chapter.

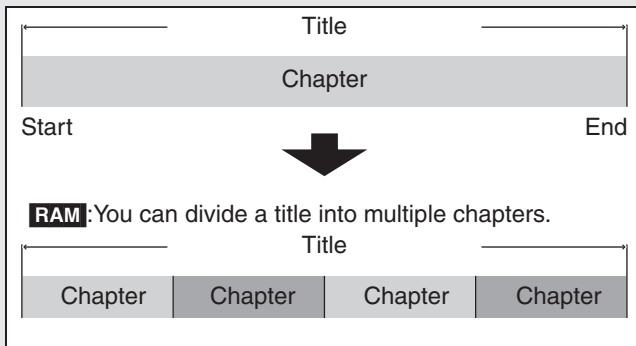

– **RAM**: You can change the order of chapters and create a playlist (→ 48).

– After finalising, titles are divided into chapters of the following lengths.

**-R -R DL -RW(V)**: Chapters are approx. 5 minutes long

**+R +R DL**: Chapters are approx. 8 minutes long


#### • Maximum numbers of Chapters on a disc

**RAM -R -R DL -RW(V)**      **+R +R DL +RW**  
Approx. 1000                      Approx. 254


## Accessing the Chapter View

Allows viewing and editing chapters individually.

- 1 Press [**DRIVE SELECT**] to select the DVD drive.
- 2 Press [**DIRECT NAVIGATOR**].
- 3 Press [**▲**, **▼**, **◀**, **▶**] to select a title.
- 4 Press [**OPTION**] to display the menu list.

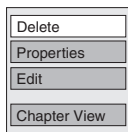

- 5 Press [**▲**, **▼**] to select “Chapter View”, then press [**OK**].
- 6 Press [**▲**, **▼**, **◀**, **▶**] to select a chapter.  
– Multiple editing (→ right, Tips)
- 7a To play  
Press [**OK**].
- 7b To edit  
Press [**OPTION**] to display the menu list.

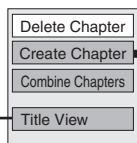

Refer to “Chapter Operations” (→ right).

You can go back to the Title View.



### Tips

#### To exit the menu screens

Press [**DIRECT NAVIGATOR**].

#### To view other pages

Press [**▲**, **▼**, **◀**, **▶**] to select “Previous” or “Next”, then press [**OK**].

– You can also press [**◀◀**, **▶▶**] to view other pages.

#### Multiple editing

(Only Delete Chapter)

Select with [**▲**, **▼**, **◀**, **▶**], then press [**|| PAUSE**]. (Repeat.)

– A check mark appears. Press [**|| PAUSE**] again to cancel.



## Chapter Operations

### Create Chapter

You can divide a title into multiple chapters.

Perform steps 1–7b of “Accessing the Chapter View” (→ left).

- 8 Press [**▲**, **▼**] to select “Create Chapter”, then press [**OK**].

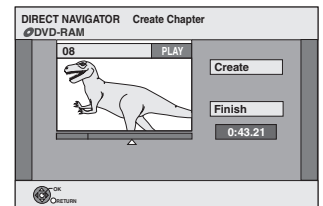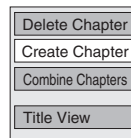

- 9 Press [**OK**] at the point you want to divide.  
– Repeat this step to create additional chapters.
- 10 Press [**▲**, **▼**] to select “Finish”, then press [**OK**].



### Notes

- A short portion of the title just after the creation point may be lost.



### Tips

For quicker editing (→ 46, Tips)

### Delete Chapter

You can delete the chapters for each title.

**Important:** Once deleted, recorded contents cannot be recovered.

Perform steps 1–7b of “Accessing the Chapter View” (→ left).

- 8 Press [**▲**, **▼**] to select “Delete Chapter”, then press [**OK**].
- 9 Press [**◀**] to select “Delete”, then press [**OK**].

### Combine Chapters

You can combine the divided chapters.

Perform steps 1–7b of “Accessing the Chapter View” (→ left).

- 8 Press [**▲**, **▼**] to select “Combine Chapters”, then press [**OK**].
- 9 Press [**◀**] to select “Combine”, then press [**OK**].  
– The selected chapter gets combined with the next chapter.

# Creating, Editing and Playing Playlists

## RAM

**-RW(VR)** (play only)


You can create playlists by grouping your favourite scenes (chapters) from the recorded titles and edit the created playlists.



## Tips

### RAM

A playlist is a compilation of your favourite chapters as shown in the chart below.

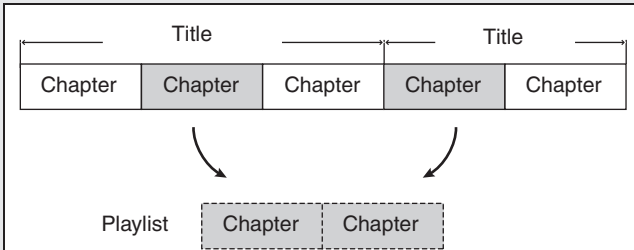

- Editing playlists doesn't modify titles.
- Playlists are not recorded separately so this doesn't use much capacity.


## Accessing the Playlist View

### Preparation:


- Press [DRIVE SELECT] to select the DVD drive.
- **RAM** Release protection (disc, cartridge → 56).
- Insert a disc.

With the unit stopped

- 1 Press [FUNCTION MENU].
- 2 Press [▲, ▼] to select "To Others", then press [OK].

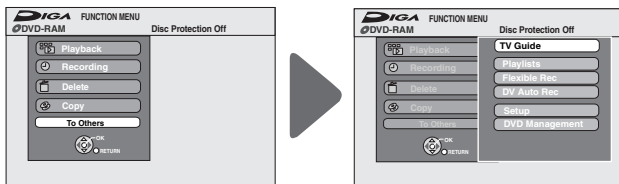

- 3 Press [▲, ▼] to select "Playlists", then press [OK].
- 4a To play  
Press [▲, ▼, ◀, ▶] to select the playlist to play, then press [OK].
- 4b To create  
Press [▲, ▼, ◀, ▶] to select "Create", then press [OK].
- 4c To edit  
Press [▲, ▼, ◀, ▶] to select the playlist, then press [OPTION].  
– Multiple editing (→ 49, left column, Tips)

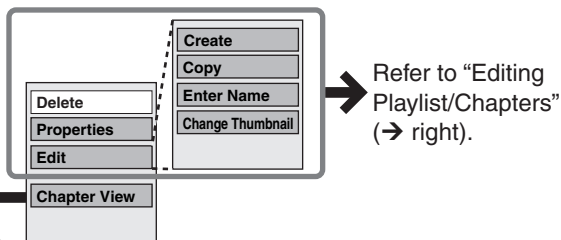

If you select "Chapter View" (→ 49)

## Creating Playlists

### RAM

Perform steps 1–4b of "Accessing the Playlist View". (→ left)

- 5 Press [◀, ▶] to select the source title, then press [▼].  
– Press [OK] to select all the chapters in the title, then skip to step 7.
- 6 Press [◀, ▶] to select the source chapter you want to add to a playlist and press [OK].  
– Press [▲] to cancel.  
– Press [OPTION] to select "Create Chapter", then press [OK] if you want to create a new chapter in the source title (→ 47).
- 7 Press [◀, ▶] to select the position to insert the chapter, then press [OK].  
– Press [▲] repeatedly to return to step 5, if you want to add additional source titles.

Chapters are registered to the playlist. Repeat steps 6 and 7 to add other chapters.

- 8 Press [RETURN] to finish and exit the screen.



## Notes

- Playlists cannot be created while recording or copying.
- You are allowed a maximum of 99 playlists, with approximately 1000 chapters per playlist.

## Editing Playlists/Chapters

### Properties

### RAM -RW(VR)

Playlist information (e.g., length and date) is shown.

Perform steps 1–4c of "Accessing the Playlist View". (→ left)

- 5 Press [▲, ▼] to select "Properties", then press [OK].



## Tips

To exit the screen  
Press [OK].

### Delete

### RAM

Use to delete unneeded playlists.

Once deleted, playlists contents cannot be recovered (titles are not affected).

Perform steps 1–4c of "Accessing the Playlist View". (→ left)

- 5 Press [▲, ▼] to select "Delete", then press [OK].
- 6 Press [◀] to select "Delete", then press [OK] to confirm.



## Tips

To delete during play

1. Press [DELETE \*]. A confirmation message displays.
2. Press [◀] to select "Delete", then press [OK] to confirm.

## Edit

### RAM

You can create and copy playlists, and change thumbnail.

Perform steps ①–④c of “Accessing the Playlist View”. (→ 48)

- ⑤ Press [▲, ▼] to select “Edit”, then press [OK].
- ⑥ Press [▲, ▼] to select desired operation from the menu displayed location then press [OK] (→ below).

Create	① Press [▲, ▼] to select “Create” then press [OK]. (→ 48, Creating Playlists)
Copy	① Press [▲, ▼] to select “Copy” then press [OK]. ② Press [◀] to select “Copy” then press [OK].
Enter Name	① Press [▲, ▼] to select “Enter Name” then press [OK]. ② Enter a name for the playlist. (→ 44, Entering Text).
Change Thumbnail	① Press [▲, ▼] to select “Change Thumbnail” then press [OK]. ② Press [▶ PLAY], Time Slip (→ 33), Slow-motion (→ 33), or Search (→ 32) to find the desired point. ③ Press [OK] at the image you wish you use for your thumbnail. ④ Press [▲, ▼] to select “Finish” then press [OK]. – The thumbnail picture is now changed.



### Tips

#### To exit the menu screens

Press [EXIT].

#### Multiple editing

(Only Delete, Copy)

Select with [▲, ▼, ◀, ▶], then press [|| PAUSE]. (Repeat.)

– A check mark appears. Press [|| PAUSE] again to cancel.


## Chapter View

### RAM

You can add, move, divide, combine or delete chapters in the playlist.

Perform steps ①–④c of “Accessing the Playlist View”. (→ 48)


- ⑤ Press [▲, ▼] to select “Chapter View”, then press [OK].
- ⑥ Press [▲, ▼, ◀, ▶] to select a chapter.  
– Multiple editing (→ right, Tips)
- ⑦a To play  
Press [OK].
- ⑦b To edit  
Press [OPTION] to display the menu list.

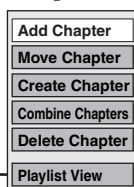

→ Refer to “Chapter Operations”  
(→ right)

You can go back to the Playlist View.

## Chapter Operations

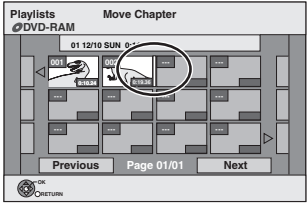Add Chapter	① Press [▲, ▼] to select “Add Chapter” then press [OK]. (→ 48, Creating Playlists)
Move Chapter	① Press [▲, ▼] to select “Move Chapter” then press [OK]. ② Press [▲, ▼, ◀, ▶] to select the position to insert the chapter then press [OK]. 
Create Chapter	① Press [▲, ▼] to select “Create Chapter” then press [OK]. ② Press [▶ PLAY], Time Slip (→ 33), Slow-motion (→ 33), or Search (→ 32) to find the desired point. ③ Press [OK] at the point you want to divide. ④ Press [▲, ▼] to select “Finish” then press [OK].
Combine Chapters	① Press [▲, ▼] to select “Combine Chapters” then press [OK]. ② Press [◀] to select “Combine” then press [OK]. – The selected chapter gets combined with the next chapter.
Delete Chapter	① Press [▲, ▼] to select “Delete Chapter” then press [OK]. ② Press [◀] to select “Delete” then press [OK].



### Tips

#### To exit the menu screens

Press [EXIT].

#### To view other pages

Press [▲, ▼, ◀, ▶] to select “Previous” or “Next” then press [OK].

– You can also press [◀◀, ▶▶] to view other pages.

#### Multiple editing

(Only Delete Chapter)

Select with [▲, ▼, ◀, ▶], then press [|| PAUSE]. (Repeat.)

– A check mark appears. Press [|| PAUSE] again to cancel.

#### For quicker editing

– To skip to the start or end of a playlist/chapter, press [◀◀] (start) or [▶▶] (end).

# Copying Titles (Advanced)


## Preparation:

- Insert a disc and video cassette that you can use for copying (→ 72, 74).
- Confirm that there is enough remaining disc space.
- When copying an NTSC tape to a DVD, change the “TV System” to “NTSC” in the Setup menu (→ 63).  
This unit cannot record NTSC signals to discs that already have PAL signal recordings.

## Copying Titles (VHS → DVD)

VHS → **RAM -R -R DL -RW(V) +R +R DL +RW**

- 1 Press [FUNCTION MENU].
- 2 Press [▲, ▼] to select “Copy”, then press [OK].

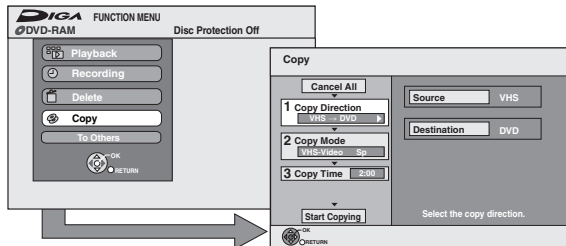

– If you are not going to change the registered list, press [▼] several times (→ step 3).

### 3 Set the copy direction.

– If you are not going to change the copying direction, press [▼] (→ step 4).

- 1 Press [▲, ▼] to select “Copy Direction”, then press [▶].
- 2 Press [▲, ▼] to select “Source”, then press [OK].
- 3 Press [▲, ▼] to select “VHS”, then press [OK].  
– “Destination” is automatically set to “DVD”.
- 4 Press [◀] to confirm.

### 4 Set the recording mode.

– If you are not going to change the recording mode, press [▼] (→ step 5).

- 1 Press [▲, ▼] to select “Copy Mode”, then press [▶].  
– “Format” is automatically set to “VHS-Video”.
- 2 Press [▲, ▼] to select “Recording Mode”, then press [OK].
- 3 Press [▲, ▼] to select the mode, then press [OK].
- 4 Press [◀] to confirm.

### 5 Set “Copy Time”.


– If you are not going to change the setting (→ step 6).

#### Setting the unit to copy according to the set time

- 1 Press [▲, ▼] to select “Copy Time”, then press [▶].
  - 2 Press [▲, ▼] to select “Time Setting”, then press [OK].
- Setting the unit to copy all the content on the video cassette
- 3 Press [▲, ▼] to select “Off”, then press [OK].
  - 4 Press [◀] to confirm.

– Setting the copying time

- 3 Press [▲, ▼] to select “On”, then press [OK].
- 4 Press [▲, ▼] to select “Copy Time”, then press [OK].

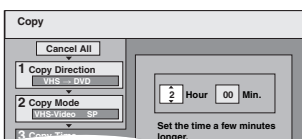

- 5 Press [◀, ▶] to select “Hour” and “Min.”, then press [▲, ▼] to set the recording time.
- 6 Press [OK].
- 7 Press [◀] to confirm.

– You can also set the recording time with the numbered buttons.

- 6 Press [▲, ▼] to select “Start Copying”, then press [OK].
- 7 Press [◀] to select “Yes”, then press [OK] to start copying.

VHS → **-R -R DL -RW(V) +R +R DL**

Press [◀, ▶] to select “Copy & Finalise” or “Copy Only”, then press [OK].

– If “Copy & Finalise” is selected

After finalising, the discs become play-only and you can also play them on other DVD equipment. However, you can no longer record or edit.

– Copying is automatically stopped when the tape reaches the end, the remaining capacity of the disc is filled.



## Tips

### To stop copying

Press and hold [RETURN] for 3 seconds.  
(You cannot stop while finalising)

### To return to the previous screen

Press [RETURN].



## Notes

- To play DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R and +R DL on other players, it is necessary to finalise them after copy.

### About FR mode

#### When “Time Setting” is set to “Off” in step 5 left:

- The recording mode is automatically selected by estimating the remaining capacity of the disc for copying of only the recorded parts in the video cassette (unrecorded parts will not be recorded).
- When you press [OK] to start copy, the tape is automatically fast-forwarded to the end and then fast-rewound to the beginning before the copying is actually started. It may take time to start copy. If the remaining capacity of the disc is insufficient, the copying will be stopped in the middle.
- The recording is divided into titles every time the tape index signals are detected.


#### When “Time Setting” is set to “On” in step 5 left:

- The recording mode is automatically determined by estimating the remaining capacity of the disc for copying of the contents equivalent to the recording time set from the start point of the copying on the video cassette (unrecorded parts will also be recorded).
- The recording is not divided into titles.

## Copying Titles (DVD → VHS)

RAM -RW(VR) +RW → VHS

- 1 Press [FUNCTION MENU].
- 2 Press [▲,▼] to select “Copy”, then press [OK].

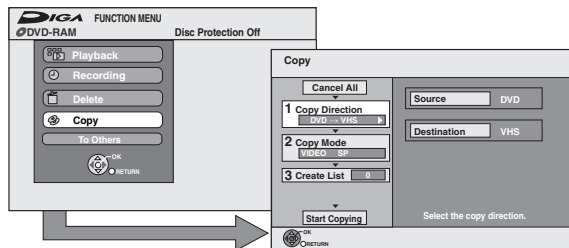

– If you are not going to change the registered list, press [▼] several times (→ step 6).

### 3 Set the copy direction.

– If you are not going to change the copying direction, press [▼] (→ step 4).

- 1 Press [▲,▼] to select “Copy Direction”, then press [▶].
- 2 Press [▲,▼] to select “Source”, then press [OK].
- 3 Press [▲,▼] to select “DVD”, then press [OK].
  - “Destination” is automatically set to “VHS”.
- 4 Press [◀] to confirm.

### 4 Set the recording mode.


– If you are not going to change the recording mode, press [▼] (→ step 5).

- 1 Press [▲,▼] to select “Copy Mode”, then press [▶].
  - “Format” is automatically set to “VIDEO”.
- 2 Press [▲,▼] to select “Recording Mode”, then press [OK].
- 3 Press [▲,▼] to select the mode, then press [OK].
- 4 Press [◀] to confirm.


### 5 Register titles and playlists for copy.

– If you are going to copy a registered list without making any changes to it (→ step 6).

- 1 Press [▲,▼] to select “Create List”, then press [▶].

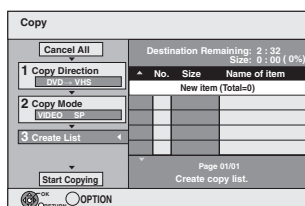

- 2 Press [▲,▼] to select “New item”, then press [OK].
- 3 Press the “Red” button to select “VIDEO” or press the “Green” button to select “Playlists”.

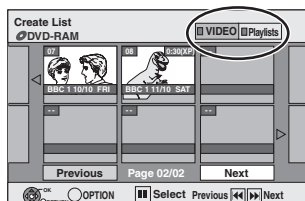

- 4 Press [▲,▼,◀,▶] to select the titles or playlists, then press [OK].

**You can register a multiple number of titles and playlists on the copying list by repeating steps 2–4.**

- 5 Press [◀] to confirm.

- 6 Press [▲,▼] to select “Start Copying”, then press [OK].
- 7 Press [◀] to select “Yes” and press [OK] to start copying.

(Continued on the next page)


# Copying Titles (Advanced)

(Continued)

## Edit the copying list

Select the item in step ⑤-④ (→ 51, left column)

⑤-⑤ Press [OPTION].

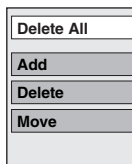

Delete All	Delete all items registered on the copying list. 1. Press [▲, ▼] to select "Delete All", then press [OK]. 2. Press [◀] to select "Yes", then press [OK].
Add	Add new items to the copying list. 1. Press [▲, ▼] to select "Add", then press [OK]. 2. Press [▲, ▼, ◀, ▶] to select the playlists and titles to be added, then press [OK].
Delete	Delete the selected items. 1. Press [▲, ▼] to select "Delete", then press [OK]. 2. Press [◀] to select "Yes", then press [OK]. You can also delete multiple items (→ right, Multiple editing).
Move	Move selected items or change the order of items on the copying list. 1. Press [▲, ▼] to select "Move", then press [OK]. 2. Press [▲, ▼] to select the destination, then press [OK].

## Cancel all registered copying setting and lists

After performing steps ①-② (→ 51, left column)





③ Press [▲, ▼] to select "Cancel All", then press [OK].

④ Press [◀] to select "Yes", then press [OK].

- The settings and lists may be cancelled in the following situations.
  - When a title or a playlist has been recorded or deleted at the copy source
  - When steps have been taken, for instance, to turn off the unit, open the tray, change the copy direction, etc.

## Copying list icons and functions

Depending on the icon, you may be informed about the on-screen display.

-  Title with "One time only recording" restriction (→ 19, Copy-once recording)
-  Title or playlist contains still picture(s)
  - Still picture(s) cannot be copied.
-  (NTSC) Title or playlist recorded using a different encoding system from that of the TV system currently selected on the unit.
-  (PAL)
  - Titles and playlists displaying these marks cannot be selected.



## Tips

### To view other pages

Press [▲, ▼, ◀, ▶] to select "Previous" or "Next", then press [OK].

– You can also press [◀◀, ▶▶] to show other pages.

### Multiple editing

Select with [▲, ▼, ◀, ▶] and press [|| PAUSE]. (Repeat.) Press [OK] to register to the list.

– A check mark appears. Press [|| PAUSE] again to cancel.  
– When you switch between the "VIDEO" and "Playlists" tab, the check mark is cancelled.

### To stop copying

Press and hold [RETURN] for 3 seconds.

### To return to the previous screen

Press [RETURN].



## Copying a finalised DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R and +R DL

DVD-V → VHS

You can copy the content of finalised DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, and +R DL to the VHS.

While playing a disc, the content being played is copied to the VHS according to the set time.

- Operations and on screen displays during copy are also recorded.
- Almost all DVD-Video on sale have been treated to prevent illegal copying, and cannot be copied.
- The following cannot be copied: Video CD, Audio CD and so on.

### Preparation:

- Insert the finalised disc and video cassette (→ 72, 74).

After performing steps ①–④ (“Format” is automatically set to “DVD-Video”) (→ 51, Copying Titles (DVD → VHS))

### ⑤ Set “Copy Time”.

– If you are not going to change the setting (→ step ⑥).


#### Setting the unit to copy according to the set time

- ① Press [▲, ▼] to select “Copy Time”, then press [▶].
  - ② Press [▲, ▼] to select “Time Setting”, then press [OK].
- Setting the unit to copy all the content on the disc
- ③ Press [▲, ▼] to select “Off”, then press [OK].
  - ④ Press [◀] to confirm.

Copy will continue until the tape reaches the end.

– Setting the copying time

- ③ Press [▲, ▼] to select “On”, then press [OK].
- ④ Press [▲, ▼] to select “Copy Time”, then press [OK].

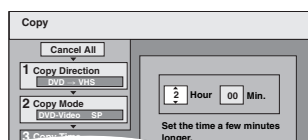

- ⑤ Press [◀, ▶] to select “Hour” and “Min.”, then press [▲, ▼] to set the recording time.
  - ⑥ Press [OK].
  - ⑦ Press [◀] to confirm.
- Copying to the VHS continues for the set time even after the content being played finishes.

- Set a few minutes longer than the source title, in order to include the operation time before play begins.
- You can also set the recording time with the numbered buttons.


### ⑥ Press [▲, ▼] to select “Start Copying”, then press [OK].

 Press [◀] to select “Yes”, then press [OK] to start copying. The disc top menu is displayed.

- Disc play automatically begins from title 1 when “Title 1” is selected from the “Auto-Play Select” menu when finalising the disc (→ 57).

### ⑦ When the top menu is displayed

Press [▲, ▼, ◀, ▶] to select the title you want to start copying, and press [OK].



While playing in order, all the titles after the selected title are recorded until the set time. (After the last title on the disc has finished playing the top menu is recorded until the set time is reached.)



### Tips

**To return to the previous screen**  
Press [RETURN].

**To stop copying**  
Press [■ STOP].

You can also press and hold [RETURN] for 3 seconds to stop copying.

- If stopped partway, copying will be up to that point.



### Notes

- If you perform search, frame-by-frame or pause while copying, that portion of title is not recorded.
- The screen saver on the right is recorded at the beginning.
- The content is recorded as 1 title from the start of copy to the end.
- If play does not begin automatically or if the top menu does not display automatically, press [▶ PLAY] to start.
- Even if you copy a high quality video/audio DVD, the original picture and audio quality cannot be exactly replicated.
- If you want to copy a title from a finalised DVD-RW (DVD Video Recording format), create a copy list and then copy (→ 51, Copying Titles (DVD → VHS)).



# Setting On-Screen Display

## Accessing the On-Screen Display

When playing discs (except for JPEG discs), you can display and set the options including disc audio, subtitle, image quality, sound effect, Repeat Play, etc. In addition, when receiving the multi-channel broadcast, you can change the audio settings. Menu options will differ based on disc type and contents.

- 1 Press [DRIVE SELECT] to select the DVD drive.
- 2 Press [DISPLAY].

Disc	Soundtrack	1	Digital 2/0ch
Play	Subtitle		Off
Picture	Audio channel		LR
Sound			
Other			

Menu                      Item                      Setting

- 3 Press [▲, ▼] to select a menu, then press [▶].
- 4 Press [▲, ▼] to select an item, then press [▶].
- 5 Press [▲, ▼] to select a setting.

Follow the on-screen prompts to change individual settings.



### Notes

- Some settings may not be changeable, based on the unit's current activity (playing, stopped, etc.) and disc contents.
- When the VHS drive is selected, you can only set "DVB Multi Audio" and "Position".



### Tips

**To exit the on-screen display**  
Press [DISPLAY].

## Disc Menu

RAM -R -R DL -RW(V) +R +R DL +RW DVD-V  
-RW(VR) VCD

You can change the settings of disc audio, subtitle, etc.

### Soundtrack

RAM -R -R DL -RW(V) +R +R DL +RW -RW(VR)

The disc's audio attributes appear (→ below, Audio attributes).

DVD-V

Select the audio and language (→ below, Audio attributes, Soundtrack/Subtitle language).

VCD (SVCD only)

Select the soundtrack number.

- Soundtrack numbers are displayed even when there is only one audio type.

### Subtitle

RAM -R -R DL -RW(V) +R +R DL +RW -RW(VR)

(Only discs that contain subtitle on/off information)

Turn the subtitle on/off.

- Subtitle on/off information cannot be recorded using this unit.

DVD-V

Turn the subtitle on/off and select the language (→ below, Soundtrack/Subtitle language).

VCD (SVCD only)

Turn the subtitle on/off and select the subtitle number.

- Subtitle numbers are displayed even if there are not multiple subtitles.

### Audio channel

RAM -RW(VR) VCD

Change audio during playback.

LR / L / R

### Angle

DVD-V

Change the number to select an angle.

### PBC (Playback control → 92) VCD

Indicates whether menu play (playback control) is on or off.

### Soundtrack/Subtitle language

ENG: English	CHI: Chinese
FRA: French	KOR: Korean
DEU: German	MAL: Malay
ITA: Italian	VIE: Vietnamese
ESP: Spanish	THA: Thai
NLD: Dutch	POL: Polish
SVE: Swedish	CES: Czech
NOR: Norwegian	SLK: Slovak
DAN: Danish	HUN: Hungarian
POR: Portuguese	FIN: Finnish
RUS: Russian	*: Others
JPN: Japanese	

### Audio attributes

LPCM/PPCM/Digital/DTS/MPEG: Signal type

k (kHz): Sampling frequency

b (bit): Number of bits

ch (channel): Number of channels



### Notes

- You cannot make a change when there is no recording.
- Some discs allow changes to soundtracks, subtitles, and angles only by using the disc's menus (→ 32).

## Play Menu

RAM -R -R DL -RW(V) +R +R DL +RW DVD-V  
-RW(VR) CD VCD

### Repeat Play

This function works only when the elapsed play time is displayed.

Select the item for repeat play. Depending on the disc, the items that can be selected will differ.

Select "Off" to cancel.

## Picture Menu

RAM -R -R DL -RW(V) +R +R DL +RW DVD-V -RW(VR)

You can change the progressive output setting and the noise reduction setting when playing discs or of images from the connected device.

### Playback NR

"On" reduces noise and picture degradation.

**Progressive** [Only when you have set "Progressive" to "On" in the Setup menu (→ 62).]

Select "On" to enable progressive output.

- Select "Off" if the picture is stretched horizontally.


**Transfer** [Only when you have selected "On" in "Progressive" (→ above)]

Select the method of conversion for progressive output to suit the type of material being played.

When the output signal is PAL

(When the tray is opened, the setting will return to "Auto".)

- Auto: Automatically detects the film and video content, and appropriately converts it.
- Video: Select when using "Auto", and the content is distorted.
- Film: Select this if the edges of the film content appear jagged or rough when "Auto" is selected. However, if the video content is distorted as shown in the illustration to the right, then select "Auto".

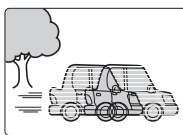

When the output signal is NTSC

- Auto1 (normal): Automatically detects the film and video content, and appropriately converts it.
- Auto2: In addition to "Auto1", automatically detects film contents with different frame rates and appropriately converts it.
- Video: Select when using "Auto1" and "Auto2", and the content is distorted.

**Copy NR** (Only when AV1, AV2, AV3 or DV is selected)

Reduces video tape noise during recording. Depending on the video signal, jittering may occur.

- Automatic: Noise reduction only works on picture input from a video tape.
- On: Noise reduction works for any video input.
- Off: Noise reduction is off. Select when you want to record input as is.

## Sound Menu

You can change the settings of audio when receiving the multi-channel broadcast, and also change the settings of sound effect when playing discs.

### DVB Multi Audio

(MPEG Audio only)

If more than one audio channel is output, you can set the desired channel before recording.

- DVB Multi Audio cannot be selected during playback or recording.
- Depending on the broadcast, the items that can be selected will differ.

English 1/ English 2

RAM -R -R DL -RW(V) +R +R DL +RW DVD-V -RW(VR)

**V.S.S.** (Dolby Digital, MPEG Audio with 2.0 or over channels only)

This function does not work for bilingual recordings.

- Enjoy a surround-sound effect if you are using 2 front speakers (L/R) only.
- Turn off if it causes distortion.

Natural/Emphasis/Off

**Dialog Enhancer** (Dolby Digital, 3-channel or over only, including a centre channel)

When "On", the volume of the centre channel is raised to make dialogue easier to hear.

## Other Menu

### Position

Change where this menu screen appears on your TV.

# DVD Management

You can manage discs through formatting, finalising and other operations.


## Accessing the Management Menus

### Preparation:

- **RAM** Release protection (disc, cartridge, → below).
- Insert a disc.

With the unit stopped

- 1 Press [DRIVE SELECT] to select the DVD drive.
- 2 Press [FUNCTION MENU].
- 3 Press [▲, ▼] to select “To Others”, then press [OK].

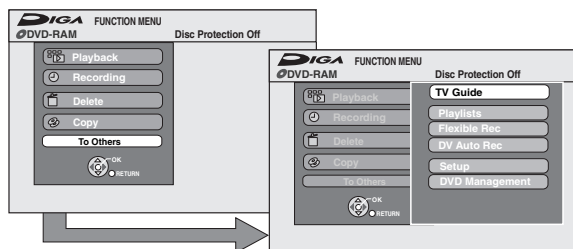

- 4 Press [▲, ▼] to select “DVD Management”, then press [OK].

### Tips

**To return to the previous screen**

Press [RETURN].

**To exit the screen**

Press [EXIT].

## Setting Protection

### RAM

Use to prevent accidental erasure of disc.

Perform preparation steps 1–4 of “Accessing the Management Menus” (→ above).

- 5 Press [▲, ▼] to select “Disc Protection”, then press [OK].
- 6 Press [◀] to select “Yes”, then press [OK].

### Protection of cartridge disc

**RAM** (With a cartridge)

With the write-protect tab in the protect position, you cannot record to, edit, format, or erase from the disc.



## Naming Discs

**RAM -R -R DL -RW(V) +R +R DL +RW**

You can give a name for the disc.

Perform preparation steps 1–4 of “Accessing the Management Menus” (→ above).

- 5 Press [▲, ▼] to select “Disc Name”, then press [OK].
- Entering Text (→ 44).



### Tips

- The disc name is displayed in the DVD Management window.
- With finalised discs and +RW created Top Menu, the name is displayed on the Top Menu.

## Deleting All Titles

You can delete all titles on the single-sided DVD-RAM at once.

**Important:** Once deleted, contents cannot be recovered.

### RAM

Perform preparation steps 1–4 of “Accessing the Management Menus” (→ left).

- 5 Press [▲, ▼] to select “Delete all titles”, then press [OK].
- 6 Press [◀] to select “Yes”, then press [OK].
- 7 Press [◀] to select “Start”, then press [OK].
  - A message appears when deleting is finished.
- 8 Press [OK] to complete.



### Notes

- Deleting does not work if one or more titles are protected.

## Formatting Discs

**RAM -RW(V) +RW -RW(VR)**

**+R +R DL** (New disc only)

Formatting is the process of making media such as DVD-RAM recordable on recording equipment.

You can record or edit after formatting the finalised DVD-RW.

**Important:** Once formatted, contents cannot be recovered.

Perform preparation steps 1–4 of “Accessing the Management Menus” (→ left).

- 5 Press [▲, ▼] to select “Format Disc”, then press [OK].
- 6 Press [◀] to select “Yes”, then press [OK].
- 7 Press [◀] to select “Start”, then press [OK].
  - Formatting starts (**RAM** may take up to a maximum of 70 minutes).
  - A message appears when formatting is finished.
- 8 Press [OK] to complete.



### Notes

- Do not disconnect the AC mains lead while formatting. This can render the disc unusable.
- When a disc has been formatted using this unit, it may not be possible to use it on any other equipment.
- **-R -R DL** Formatting cannot be performed.
- **-RW(V) -RW(VR)** You can format only as DVD-Video format on this unit.
- **RAM** Pressing [RETURN] during format will cancel the process. The disc must be reformatted if you do this.
- **RAM** The disc cannot be formatted if the write protect tab (→ left) is switched to “PROTECT”. Release the protection to continue.
- The message “Unable to format” appears when trying to format discs the unit cannot use.

## Selecting Whether to Show the Top Menu First —Auto-Play Select

**-R -R DL -RW(V) +R +R DL +RW**

Before finalising a disc, select whether the top menu shows after finalising.

Perform preparation steps ①–④ of “Accessing the Management Menus” (→ 56).

- ⑤ Press [**▲**, **▼**] to select “Auto-Play Select”, then press [OK].
- ⑥ Press [**▲**, **▼**] to select “Top Menu” or “Title 1”, then press [OK].
  - Top Menu: The Top Menu appears first.
  - Title 1: The disc content is played without displaying the Top Menu.

## Finalising

**-R -R DL -RW(V) +R +R DL**

You can play these discs on compatible DVD players by finalising it on the unit, effectively making it into DVD-Video that complies with DVD-Video standards. The menu you create with the unit can also be used on most DVD players.

Perform preparation steps ①–④ of “Accessing the Management Menus” (→ 56).

- ⑤ Press [**▲**, **▼**] to select “Finalise”, then press [OK].
- ⑥ Press [**◀**] to select “Yes”, then press [OK].
- ⑦ Press [**◀**] to select “Start”, then press [OK].
  - Finalising starts and cannot be cancelled (may take up to 15 minutes) (**-R DL +R DL** up to 60 minutes)
  - A message appears when finalising is finished.
- ⑧ Press [OK] to complete.



### Notes

- Do not disconnect the AC mains lead while finalising. This can render the disc unusable.
  - When finalising a high-speed recording compatible disc, it may take longer than displayed on the confirmation screen (approximately 4 times longer).
  - After finalising
    - **-R -R DL +R +R DL** The disc becomes play-only and you can no longer record or edit it.
    - **-RW(V)** You can record and edit the disc after formatting although it becomes play-only after finalising.
    - The disc finalised on the unit may not be playable on other players depending on the condition of the recording.
    - There is a pause of several seconds between titles and chapters during playback.
    - Titles are divided into about 5-minute chapters (**+R +R DL** 8 minute).\*
- \* This time varies greatly depending on the condition and mode of recording.



### Tips

- After you have finished recording or copying and try to eject the disc, a screen asking if you want to finalise the disc appears (→ 21).

## Create Top Menu

**+RW**

+RW discs contain no Top Menu data. Top Menu is a convenient function. We recommend you create the menu before playing a +RW disc on other equipment.

Perform preparation steps ①–④ of “Accessing the Management Menus” (→ 56).

- ⑤ Press [**▲**, **▼**] to select “Create Top Menu”, then press [OK].
- ⑥ Press [**◀**] to select “Yes”, then press [OK].
- ⑦ Press [**◀**] to select “Start”, then press [OK].
  - “Create Top Menu” cannot be cancelled once started.
  - “Create Top Menu” takes a few minutes.
- ⑧ Press [OK] to complete.



### Notes

- Recording or editing on the disc may delete the Top Menu. In that case, create the Top Menu again.
- You cannot use the Top Menu for playing on this unit.

## Enabling the Second Layer on DL (Dual-or Double-Layer on Single Side) Discs to be Recordable

**-R DL +R DL**

DVD-R DL and +R DL discs have two layers of recording surface on one side. As this unit does not offer seamless recording on two layers, recording stops when space on the first layer becomes full. You must close the first layer to start recording on the second layer. Closing makes the first layer unavailable for recording (editing is still possible).

Perform preparation steps ①–④ of “Accessing the Management Menus” (→ 56).

- ⑤ Press [**▲**, **▼**] to select “Close First Layer”, then press [OK].
- ⑥ Press [**◀**] to select “Yes”, then press [OK].
- ⑦ Press [**◀**] to select “Start”, then press [OK].
- ⑧ Press [OK] to complete.



### Notes

- The first layer cannot be closed when there is no recording on it.
- Closing cannot be cancelled once started.
- Do not disconnect the AC mains lead while closing the layer. This can render the disc unusable.
- Closing takes several minutes, up to a maximum of 30 minutes, depending on the remaining space on the first layer.



### Tips

- You can confirm the remaining recording time on the layer in the DVD Management screen.






# Setup Menu

You can change the unit's settings using Setup menu.

## Accessing the Setup Menu

With the unit stopped

- 1 Press [FUNCTION MENU].
- 2 Press [▲, ▼] to select "To Others" then press [OK].

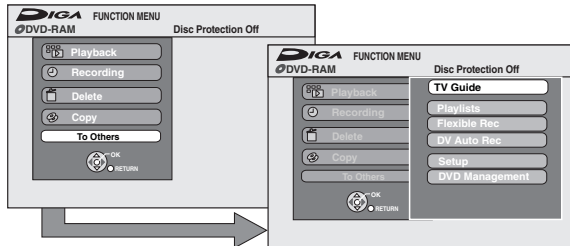

- 3 Press [▲, ▼] to select "Setup", then press [OK].
- 4 Press [▲, ▼] to select a menu, then press [▶] to go to the item list.

Menus	Items	Options
Setup	Remote Control	DVD 1
	Clock	
	Owner ID	
Tuning	Power Save	On
Disc	System Update	
Picture	Initialize	
Sound		
Display		
Connection		
VHS		
Others		

- 5 Press [▲, ▼] to select an item to change, then press [OK].
- 6 Press [▲, ▼] to select the option, then press [OK].

For Setting details, refer to pages 58–64.



### Notes

- Changed settings remain intact even when switching the unit to standby mode.



### Tips

#### To return to the previous screen

Press [RETURN]. Even if you have changed an option, the change is not activated until you press [OK].

#### To exit the screen

Press [EXIT].

# Channel Settings




▶ To Others ▶ Setup

(→ left, Accessing the Setup menu)  
All factory default settings are indicated with "Underlined>" text.

## Tuning


▲, ▼ select "Tuning" → ▶ → ▲, ▼ select item → OK

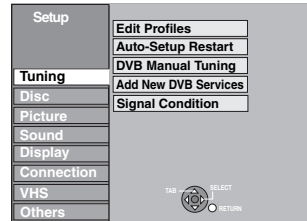

### Edit Profiles

You can create four profiles of channels for making viewing and recording easier. Editing these profiles does not affect the channel setting itself.

- Timer recording may not work correctly if you edit the profiles during timer recording standby.
- Channel numbers cannot be changed, due to broadcast restrictions.

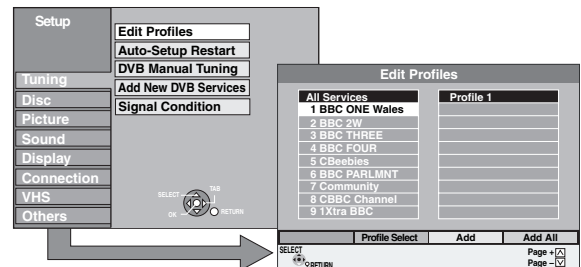

#### To select the profile

Press the "Green" button.

#### To add channels to a profile

- 1 Press [▲, ▼] to select the channel in the "All Services" column, then press the "Yellow" button.

- Repeat this step to add other channels.
- Press the "Blue" button to add all the available channels to the profile. (Only when no channels have been added to the profile.)

- 2 Press [OK] to save the profile.

#### To change the order of channels of a profile

- 1 Press [▶]\*.
- 2 Press [▲, ▼] to select the channel in the "Profile" column to move, then press the "Green" button.
- 3 Press [▲, ▼] to select the new position of the channel, then press the "Green" button.
  - Repeat the steps 2–3 to move other channels.
- 4 Press [OK] to save the profile.

#### To delete channels on a profile

- 1 Press [▶]\*.
- 2 Press [▲, ▼] to select the channel in the "Profile" column, then press the "Yellow" button.
  - Repeat this step to delete other channels.
  - Press the "Blue" button to delete all the channels from the profile.
- 3 Press [OK] to save the profile.
 

Deleting a channel from a profile does not affect the channel itself. You can still select the channel from the "All Services" profile.

#### To change the name of a profile in the "Profile" column

- 1 Press [▶]\*.
- 2 Press the "Red" button.
 

(→ 44, Entering Text)

\* When the station name of the "All Services" column is highlighted





## Tips

To browse through the list  
Press [ $\wedge$   $\vee$  CH].

## Auto-Setup Restart

You can restart auto channel setting for terrestrial digital channels if set up ( $\rightarrow$  10) fails for some reason.

However, if you perform "Auto-Setup Restart", all channel settings and all created profiles are deleted.

Press [ $\leftarrow$ ] to select "Yes", then press [OK].




## Tips

- You can also use the following method to restart Auto-Setup. (All the settings except for the ratings level, ratings password, Owner ID and Clock return to the factory preset. The timer recording programmes are also cancelled.)

When the unit is turned on and stopped, press and hold [CH  $\wedge$ ] and [CH  $\vee$ ] on the main unit simultaneously for about 5 seconds. Auto-Setup screen appears.

## DVB Manual Tuning

You can set channels manually if the DVB Auto Setup could not be completed successfully.

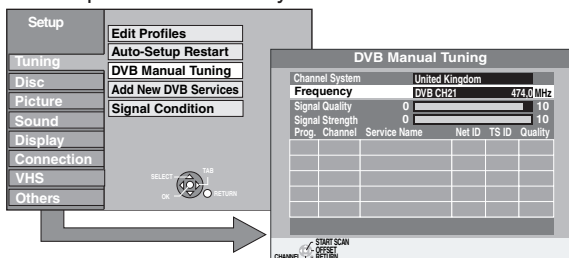

- Press [ $\blacktriangle$ ,  $\blacktriangledown$ ] to select the channel you want to set.
- Press [ $\leftarrow$ ,  $\rightarrow$ ] to adjust the frequency.
  - The frequency rises and falls in steps of 0.5 MHz.
  - Adjust the frequency by checking the signal strength and signal quality displays.

[Refer to "Signal Condition" ( $\rightarrow$  right) for signal strength and signal quality.]
- Press [OK] to start scan.
 

The set channel is displayed in the table.


DVB Manual Tuning						
Channel System: United Kingdom						
Frequency: DVB CH21 474.0 MHz						
Signal Quality: 0 10						
Signal Strength: 0 10						
Prog.	Channel	Service Name	Net ID	TS ID	Quality	
1	22	ZDF	12290	514	7	
2	22	3sat	12290	514	7	
3	22	Doku/KiKa	12290	514	7	

3 services found.

- Press [EXIT] and press [ $\wedge$   $\vee$  CH], check that applicable channels have been selected.

## Add New DVB Services

You can search for newly added terrestrial digital channels to receive.

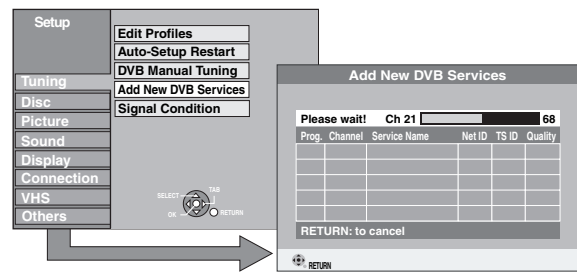

- The unit starts searching for newly available terrestrial digital channels. This takes about 5 minutes.
- The bar over the table shows the search progress. At the end of the search, the number of found new digital stations appears.
- "No new services found.", is displayed when no new services can be found.

Press [OK] to save the newly found channels.



## Tips

To cancel in middle

Press [RETURN].

The channels found before stopping are not saved.


## Signal Condition

You can check the quality and strength of digital broadcast signals.

Realign the aerial if you are receiving a poor signal.

When "Signal Condition" is displayed in grey and cannot be selected:

- Press [EXIT] to exit the screen.
- Press [ $\wedge$   $\vee$  CH] to select a digital channel. "D" appears on the unit's display.
- Display the Setup menu again

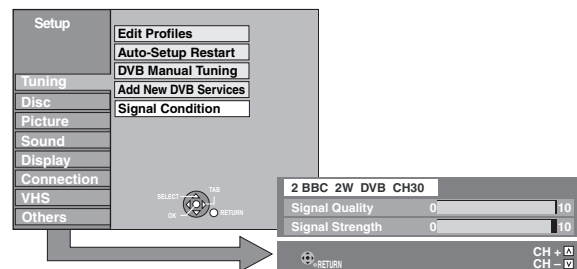

The quality and strength of the signal are shown. Press [ $\wedge$   $\vee$  CH] to select the channel.

## Signal Quality

Below 2 (display red):	The signal quality is so poor that there may be interference in the pictures and sound.
2-5 (display orange):	The signal quality is basically adequate, but brief interference in the pictures and sound is possible in isolated case.
Over 5 (display green):	Optimum picture and sound quality.

## Signal Strength

The display for signal strength is grey. "0" means signal strength 0%, "10" means signal strength 100%.

If the signal is too strong, the display will change from grey to red. Reduce the signal amplification at your aerial.

- When the signal is weak:
  - check that the aerial is correctly positioned
  - adjust the aerial reception with "DVB Manual Tuning" in the Setup menu ( $\rightarrow$  left).
  - check that the current digital broadcast channel is correctly broadcasting.


# Playback/Recording Settings



(→ 58, Accessing the Setup menu)  
All factory default settings are indicated with "Underlined>" text.

## Disc

▲, ▼ select "Disc" → ▶ → ▲, ▼ select item →

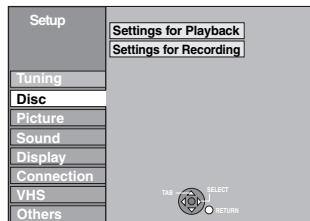

### Settings for Playback

Press [OK] to show the following settings.

#### Ratings

- Set a ratings level to limit DVD-Video play. Follow the on-screen instructions. Enter a 4-digit password with the numbered buttons when the password screen is shown. Do not forget your password.
- Setting ratings (When level 8 is selected)
    - [8 No Limit] All DVD-Video can be played.
    - [1] to [7] Prohibits play of DVD-Video with corresponding ratings recorded on them.
    - [0 Lock All] Prohibits play of all DVD-Video.
  - Changing settings (When level 0 to 7 is selected)
    - [Unlock Recorder] [Change Password] [Change Level] [Temporary Unlock]

#### Soundtrack

[English] [German] [French] [Italian] [Spanish] [Original] [Other \*\*\*\*\*]

#### Subtitle

[Automatic] [English] [German] [French] [Italian] [Spanish] [Other \*\*\*\*\*]

#### Menus

[English] [German] [French] [Italian] [Spanish] [Other \*\*\*\*\*]



### Notes

**DVD-V** Choose the language for audio, subtitles and disc menus. If a language which is not recorded is selected, or if languages are already fixed on the disc, the language set as the default on the disc will be played instead.

- [Original] The original language of each disc will be selected.
- [Other \*\*\*\*\*] This is the language code setting. Input a code number with the numbered buttons (→ 86, "Language code list").
- [Automatic] If the language selected for "Soundtrack" is not available, subtitles of that language will automatically appear if available on the disc.

### Settings for Recording

Press [OK] to show the following settings.

#### Recording time in EP mode

- Select the maximum number of hours for recording in EP mode.
- [EP (6Hours)] You can record for 6 hours on an unused 4.7 GB disc.
  - [EP (8Hours)] You can record for 8 hours on an unused 4.7 GB disc.


# Picture Settings



(→ 58, Accessing the Setup menu)  
All factory default settings are indicated with "Underlined>" text.

## Picture

▲, ▼ select "Picture" → ▶ → ▲, ▼ select item →

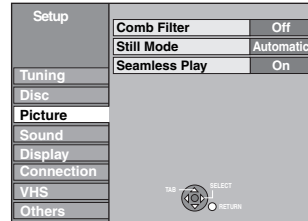

### Comb Filter

- Select the picture sharpness when recording. The setting is fixed with "On" if you set "TV System" to "NTSC" (→ 63).
- [On] Select it to record clear picture.
  - [Off] Normally, use this setting.

### Still Mode

- Select the type of picture shown when you pause play (→ 92, Frame and Field).
- [Automatic]
    - [Field] Select if jittering occurs when "Automatic" is selected.
    - [Frame] Select if you cannot see small text or fine patterns clearly when "Automatic" is selected.

### Seamless Play

- Select the play mode between playlist chapter segments and partially deleted titles.
- [On] The chapters in playlists are played seamlessly. This does not work when there are several audio types included on the playlist and when using Quick View (Play ×1.3). Additionally, the positioning of chapter segments may change slightly.
  - [Off] The points where chapters in playlists change are played accurately, but the picture may freeze for a moment.


# Sound Settings

**FUNCTION MENU** ▶ **To Others** ▶ **Setup**

(→ 58, Accessing the Setup menu)  
All factory default settings are indicated with "Underlined>" text.

## Sound

▲, ▼ select "Sound" → ▶ → ▲, ▼ select item → **OK**

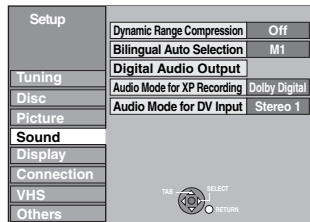

### Dynamic Range Compression

**DVD-V** (Dolby Digital only)

Change the dynamic range (→ 92) for easier listening in low volume.

[On] [Off]

### Bilingual Audio Selection

**+R +R DL +RW(V) +R +R DL +RW**

When recording bilingual programmes from equipment connected to the DV IN terminal of this unit, select whether to record the main or secondary audio type.

[M 1] [M 2]

### Digital Audio Output

Change the settings when you have connected equipment through the unit's DIGITAL AUDIO OUT terminal (→ 68).

Press [OK] to show the following settings.

#### PCM Down Conversion

Select how to output audio with a sampling frequency of 96 kHz or 88.2 kHz.

Signals are converted to 48 kHz or 44.1 kHz despite the above settings if the signals have a sampling frequency of over 96 kHz or 88.2 kHz, or the disc has copy protection.

[On] Signals are converted to 48 kHz or 44.1 kHz. (Choose when the connected equipment cannot process signals with sampling frequency of 96 kHz or 88.2 kHz.)

[Off] Signals are output as 96 kHz or 88.2 kHz. (Choose when the connected equipment can process signals with sampling frequency of 96 kHz or 88.2 kHz.)

#### Dolby Digital\*

Choose whether to output by "Bitstream", which processes Dolby Digital signals on other connected equipment, or to convert the signals to "PCM (2ch)" on the unit before output.



[Bitstream] When you have connected the unit to a piece of equipment having Dolby Digital logo.

[PCM] When you have connected the unit to a piece of equipment that doesn't have Dolby Digital logo.

#### DTS\*

Choose whether to output by "Bitstream", which processes DTS signals on other connected equipment or to convert the signals to "PCM (2ch)" on the unit before output.



[Bitstream] When you have connected the unit to a piece of equipment having DTS logo.

[PCM] When you have connected the unit to a piece of equipment that doesn't have DTS logo.

#### MPEG\*

Choose whether to output by "Bitstream" which processes MPEG audio signals on other connected equipment or to convert the signals to "PCM (2ch)" on the unit before output.

[Bitstream] When you have connected the unit to a piece of equipment with a built-in MPEG decoder.

[PCM] When you have connected the unit to a piece of equipment without a built-in MPEG decoder.

### Audio Mode for XP Recording

Choose the audio type when recording or copying with XP mode.

[Dolby Digital] (→ 92)

[LPCM] (→ 92)

- The picture quality of LPCM recordings may be lower than that of normal XP mode recordings.

- The audio recording becomes Dolby Digital even if you selected LPCM when using a recording mode other than XP.

### Audio Mode for DV Input

You can select the kind of audio when recording from the unit's DV IN terminal (→ 25).

[Stereo 1] Records audio (L1, R1)

[Stereo 2] Records added audio such as narration (L2, R2) subsequent to original recording.

[Mix] Records both Stereo 1 and Stereo 2.

When recording bilingual broadcast, select the type of audio in advance from "Bilingual Audio Selection" (→ left).

\* Incorrect settings can cause noise to be output which can be harmful to your ears and speakers, and audio will not be recorded properly on media such as mini discs.

# Display and Connection Settings


**FUNCTION MENU**

▶ **To Others** ▶ **Setup**

(→ 58, Accessing the Setup menu)  
All factory default settings are indicated with "Underlined>" text.

## Display

▲, ▼ select "Display" → ▶ → ▲, ▼ select item → **OK**

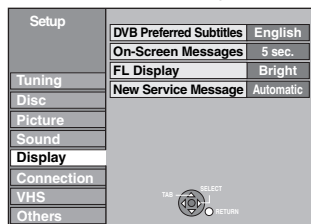

### DVB Preferred Subtitles

Choose the subtitle language for digital broadcast.  
If the selected subtitle is not available, then the available subtitle will be shown.

- [English] [Welsh] [Gaelic]
- [English for hearing impaired]
- [Welsh for hearing impaired]
- [Gaelic for hearing impaired]

### On-Screen Messages

Choose the approximate time until the digital channel information screen (→ 40) disappears automatically.  
The length of time the control panel (→ 43) is displayed can also be changed, but "Off" does not work.

- [Off]: The digital channel information is not displayed.
- [3 sec.] [5 sec.] [7 sec.] [10 sec.]

### FL Display

Changes the brightness of the unit's display.  
Regardless of the setting, when "Power Save" (→ 64) is "On" and this unit is turned off, the unit's display is turned off.

- [Bright]
- [Dim]

### New Service Message


When a new DVB channel is added, this unit will be informed automatically. Then the confirmation message appears. If you select "Yes" on the display, Auto Setup starts (all channel settings and all created profiles are deleted. The timer recording programmes are also cancelled.)

- [Automatic]
- [Off] The Service Messages are not shown.

## Connection

▲, ▼ select "Connection" → ▶ → ▲, ▼ select item

→ **OK**

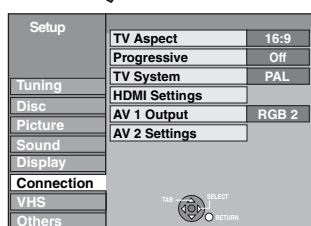


### TV Aspect

This setting needs to be changed when connected to a 4:3 standard aspect TV.

Press [▲, ▼] to select the TV Aspect, then press [OK].

[16:9] [4:3] [Letterbox]

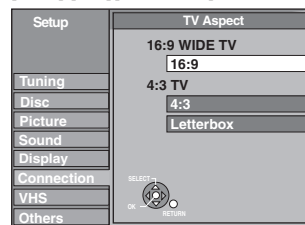

### Notes

#### Aspect 4:3/16:9

4:3

16:9

4:3 standard aspect television    16:9 widescreen television

- 16:9: When connected to a 16:9 widescreen television.
- 4:3: When connected to a 4:3 aspect television, side picture is trimmed for 16:9 picture (→ 92, Pan & Scan).
- Letterbox: When connected to a 4:3 aspect television, widescreen picture is shown in the letterbox style (→ 92).



### Progressive

You can enjoy progressive video by connecting this unit's COMPONENT VIDEO OUT terminals to an LCD/plasma television or LCD projector compatible with progressive scan (→ 93).

Before this setting, set "AV1 Output" to "Video (with component)" (→ 63)

Press [▲, ▼] to select "On", then press [OK].

[On] Output becomes progressive.

[Off]

This setting is fixed with "Off" and there is no output from the COMPONENT VIDEO OUT terminals if you set "AV1 Output" to "RGB 1 (without component)" or "RGB 2 (without component)" (→ 63).

 
### Notes

- When connected to a regular television (CRT: Cathode ray tube) or a multi-system television using PAL mode, even if it is progressive compatible, progressive output can cause some flickering. Turn off "Progressive" if this occurs (→ 55).
- Picture will not be displayed correctly if connected to an incompatible television.

## TV System

Change this setting if you connect an NTSC television or to record NTSC video from another source.

1. Press [**▲**, **▼**] to select the TV System, then press [OK].



### [PAL]

- Select when connecting to a PAL or Multi-system television. Programmes recorded using NTSC are played as PAL 60.
- Select to record television programmes and PAL input from other equipment.

### [NTSC]

- Select when connecting to an NTSC television. Television programmes cannot be recorded properly.
- Select to record NTSC input from other equipment.

The confirmation screen appears.

2. Press [**◀**] to select “Yes”, then press [OK].



## Tips

**To change the setting all at once (PAL ↔ NTSC)**  
While stopped, press and hold [**■**] and [**▲** OPEN/CLOSE] on the main unit simultaneously for about 5 seconds.

## HDMI Settings<sup>\*1</sup>

- Press [OK] to show the following settings.

### HDMI Video Format<sup>\*2</sup>

You can only select items compatible with the connected equipment. If you are concerned about output picture quality, it may be improved by changing the setting.

[576i/480i] [576p/480p] [720p] [1080i]

[1080p] When setting video output to “1080p”, we recommend using a Panasonic HDMI cable 5 meters or less in length to prevent video distortion. To enjoy High Quality Video up-converted to 1080p, you need to connect the unit to 1080p compatible HDTV.

[Automatic] Automatically selects the output resolution best suited to the connected television (1080p, 1080i, 720p, 576p/480p or 576i/480i).

### Aspect for 4:3 Video

To play a 4:3 title when connected with an HDMI cable, set how to show images on the TV screen. 4:3 picture from HDMI output will be slightly smaller than that from the other outputs, e.g. Scart and component, this is not a malfunction of the unit.

[4:3] Picture output expands left or right.



[16:9] Picture is output as original aspect with side panels.



## Digital Audio Output

[HDMI and Optical]

[Optical Only] Select when this unit is connected to an amplifier with an optical digital audio cable (→ 68) and connected to a TV with an HDMI cable (→ 69) and you want to enjoy the highest quality of audio from discs.

## VIERA Link

[On]

[Off] Select when you do not want to use “HDAVI Control”.

## AV1 Output

Selects the output from the AV1 terminal.

Select “Video (with component)” for component output (progressive output).

Set according to the signal and terminal of the connected TV.

[Video (with component)]

Select when a TV is connected that can receive a composite signal.

[RGB 1 (without component)]

Select when a TV is connected that can receive an RGB signal. If you always would like to view the picture from the unit in RGB signal, select this mode. The TV screen will automatically switch to display the picture from the unit when the unit is turned on.

[RGB 2 (without component)]

Select when a TV is connected that can receive an RGB signal. If you would like to switch to display the picture from the unit only when playback or viewing menus, select this mode.

- If this unit is connected with an HDMI cable, you cannot select “RGB 1 (without component)” or “RGB 2 (without component)”.

## AV2 Settings

Set to match the connected equipment.

- Press [OK] to show the following settings.

### AV2 Input

Set to “RGB/Video” or “RGB” when receiving or recording RGB output from external equipment.

[RGB/Video] The unit automatically detects whether the input signal from the AV2 terminal is an RGB signal or other signals and makes settings.

[RGB]

[Video]

[S Video]

### Ext Link

This setting cannot be made when the “TV System” is set to “NTSC” (→ left)

[Ext Link 1] When this unit is connected to a satellite receiver with a 21-pin Scart cable and this unit receives a control signal.

[Ext Link 2] When external equipment with a timer function is connected.

Recording is continued while the image signal is being sent to the unit from the external equipment.

Recording is stopped when the image signal is halted by turning the external equipment off.

<sup>\*1</sup> Depending on the connected equipment, some items may be shaded in grey on the display and cannot be selected, or you may not be able to change the settings.

<sup>\*2</sup> Choose the setting to suit your TV and preference.




# VHS and System Settings

**FUNCTION MENU** ▶ **To Others** ▶ **Setup**

(→ 58, Accessing the Setup menu)  
All factory default settings are indicated with "Underlined>" text.

## VHS

▲, ▼ select "VHS" → ▶ → ▲, ▼ select item

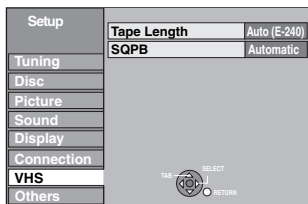

### Tape Length

Set the length of the tape you are using so the unit can show the correct remaining time.

[Auto (E-240)] The VHS automatically distinguishes E30, -60, -90, -120, -180, and -240 tapes.

[E-195] For E195 tape  
[E-260] For E260 tape  
[E-300] For E300 tape

### SQPB

To play back video cassettes recorded in S-VHS format (SQPB; S-VHS Quasi Playback)

[Automatic] This unit automatically detects the format in which the recording was made and selects the same format for playback. However, picture distortion may appear.


Therefore, set to [On] or [Off].

[On] Use this setting when playing back a cassette tape recorded in the S-VHS format.

[Off] Use this setting when playing back a cassette tape recorded in the VHS format only.

## Others

▲, ▼ select "Others" → ▶ → ▲, ▼ select item

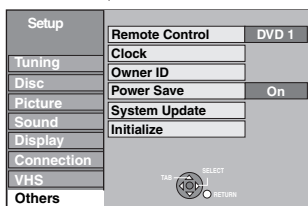

### Remote Control (→ 75)

[DVD 1] [DVD 2] [DVD 3]

### Clock (→ 11)

#### Owner ID (→ 10)

In order to prevent another person from using this unit if it is stolen, you can set a PIN number and input your personal information.

Once the PIN number has been set, you cannot return to the factory preset. Make sure not to forget this.

- PIN number
- Name
- House No.
- Postcode

## Power Save

[On] [Off]

Refer to the following when "Power Save" is set to "On".

- Power consumption is minimized when the unit is turned off (→ 94).
- Startup of the unit becomes slower compared to when "Power Save" is "Off".
- When the unit is off, satellite programmes cannot be watched on the TV because the signal from the satellite receiver connected to AV2 input terminal of this unit is not looped through. To watch them, turn on the unit. (→ 10)

## System Update

In order to update this unit, the EPG download, and support system changes made by broadcasts, this unit periodically performs software updates.

- Press [OK] to show the following settings.
- Update data and EPG download information are sent by an unscheduled digital broadcast. In order to receive these updates, you must be able to receive digital broadcasts.
- An update will take approximately 60 minutes. While the update is in progress, "SW-DL" appears on the unit's display. You cannot operate the unit until the update is complete. Removing the AC mains lead while the update is in progress may damage the unit.
- An EPG download will take approximately 30 minutes. While the EPG download is in progress, "GUIDE" appears on the unit's display. The EPG download can be interrupted by switching on the unit, since the download will continue in the background.
- To avoid hearing the startup sound of System Update for the unit, perform the following steps.
  - Select the time for Software Update (→ below, EPG/Software search period).
  - Set "EPG Download in Standby" and "Software Update in Standby" (→ below) to "Off", and update manually (→ below, Software Update Search Now).

### EPG Download in Standby

[On] When the unit is turned off, EPG data is downloaded automatically.

[Off]

### Software Update in Standby

[On] You can perform the unit updates automatically when the unit is turned off.

[Off]

### EPG/Software search period

Selects the time to automatically perform EPG download and updates when the unit is turned off. This can only be set when "EPG Download in Standby" and "Software Update in Standby" is set to "On".

• If there is a programmed recording set for the time you have selected, the programmed recording will be given priority.

[Automatic] The unit will give priority to searching for update data at midnight.

[02:00–06:00] [06:00–10:00] [10:00–14:00]

[14:00–18:00] [18:00–22:00] [22:00–02:00]

### Software Update Search Now

Start the search for new software manually.

A new software version is announced by a message. Do not switch your unit off during the update. This could result in the loss of data. A message shows that the update has finished. If a new software version is not going to be broadcast until the next few days, a corresponding message also appears.

• If applicable update data is found, press [◀, ▶] to select "Yes" and press [OK].

## Initialize

Press [OK] to show the following settings.

### Shipping Condition

This returns Setup menus to default settings, except for the ratings level, ratings password, Owner ID and Clock.

[Yes] [No]

• The timer recording programmes are also cancelled.

### Default Settings

This returns Setup menus to default settings, except for the programmed channels, time settings, disc language settings, ratings level, ratings password, Owner ID and remote control code.

[Yes] [No]



# Other Settings

## Child Lock

The Child Lock deactivates all buttons on the unit and remote control. Use it to prevent other people from operating the unit.

**Press and hold [OK] and [RETURN] simultaneously until "X HOLD" appears on the unit's display.**



If you press a button while the Child Lock is on, "X HOLD" appears on the unit's display and operation is impossible.




### Tips

#### To cancel the Child Lock

Press and hold [OK] and [RETURN] simultaneously until "X HOLD" disappears.

## Using the Unit's Remote Control to Operate the TV

You can configure the remote control TV operation buttons to turn the television on/off, change the television input mode, select the television channel and change the television volume.

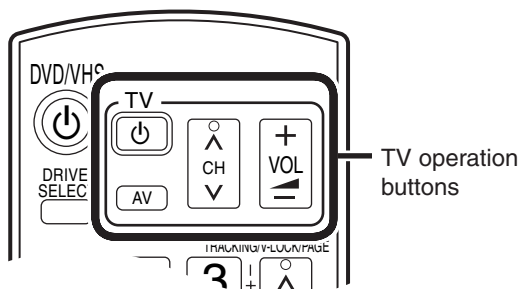

- 1 Point the remote control at the TV.
- 2 While pressing and holding [TV], enter the code from the table below using the numbered buttons. e.g., 01: press [0] → [1]
- 3 Test the TV functions of the remote control for operability.
  - If the functions do not work, repeat steps 1 to 3 using different codes, if available. Some TVs may not be compatible with the unit's remote control.

### Remote Control Codes for the TV

Manufacturer	Code No.
Panasonic	01 / 02 / 03 / 04
AIWA	35
AKAI	27 / 30
BEJING	33
BEKO	05 / 71 / 72 / 73 / 74
BENQ	58 / 59
BP	09
BRANDT	10 / 15
BUSH	05
CENTREX	66
CHANGHONG	69
CURTIS	05
DAEWOO	64 / 65
DESMET	05
DUAL	05
ELEMIS	05

Manufacturer	Code No.
FERGUSON	10 / 34
FINLUX	61
FISHER	21
FUJITSU	53
FUNAI	63 / 67
GOLDSTAR	05 / 50 / 51
GOODMANS	05
GRADIENTE	36
GRUNDIG	09
HIKONA	52
HITACHI	05 / 22 / 23 / 40 / 41
INNO HIT	05
IRRADIO	30
ITT	25
JINGXING	49
JVC	17 / 30 / 39 / 70
KDS	52
KOLIN	45
KONKA	62
LG	05 / 50 / 51
LOEWE	07 / 46
MAG	52
METZ	05 / 28
MITSUBISHI	05 / 19 / 20 / 47
MIVAR	24
NEC	36
NOBLEX	33
NOKIA	25 / 26 / 27 / 60 / 61
NORDMENDE	10
OLEVIA	45
ONWA	30 / 39 / 70
ORION	05
PEONY	49 / 69
PHILCO	41 / 48 / 64
PHILIPS	05 / 06 / 46
PHONOLA	05
PIONEER	37 / 38
PROVIEW	52
PYE	05
RADIOLA	05
SABA	10
SALORA	26
SAMSUNG	32 / 42 / 43 / 65 / 68
SANSUI	05
SANYO	21 / 54 / 55 / 56
SCHNEIDER	05 / 29 / 30
SEG	05 / 69 / 75 / 76 / 77 / 78
SELECO	05 / 25
SHARP	18
SIEMENS	09
SINUDYNE	05
SONY	08
TCL	31 / 33 / 66 / 67 / 69
TELEFUNKEN	10 / 11 / 12 / 13 / 14
TEVION	52
TEX ONDA	52
THOMSON	10 / 15 / 44
TOSHIBA	16 / 57
WHITE WESTINGHOUSE	05
YAMAHA	18 / 41

# Additional Connections

## Using a fully wired 21-pin Scart cable

- You can use a variety of Q Link functions by connecting the unit to a Q Link compatible television (→ 42).
- You can enjoy high-quality viewing by connecting the unit to an RGB compatible television.
- "AV1 Output" in the Setup menu is set to "RGB 1 (without component)" or "RGB 2 (without component)" (→ 63)
- "AV2 Input" settings in the Setup menu (→ 63)

## Use of the supplied RF coaxial cable

To prevent interference patterns from appearing on your TV, use only the supplied RF coaxial cables when you connect this unit to your TV and Video Cassette Recorder.

- Keep the RF coaxial cables as far away from other cables.
- Do not roll up the RF coaxial cables.

## DVD output and DVD/VHS output


The unit has DVD/VHS common out terminals and DVD priority out terminals.

### DVD/VHS common out

- For DVD/VHS common out terminals, both DVD and VHS signals can be output.


### DVD priority out

- This is the dedicated terminal to enjoy pictures played on DVD in higher picture quality.
- The DVD priority out terminals can also output the VHS signal. However this is not possible during DVD recording or DVD timer recording.

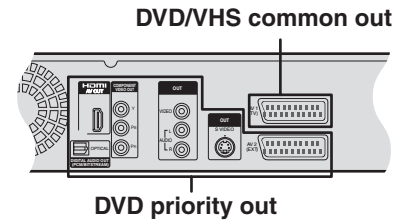

- Before connection, turn off the mains for all connected equipment and read the appropriate operating instructions. Be sure to read the Caution for AC Mains Lead on page 3.

## Adding a VCR: Connecting to a Television and a Video Cassette Recorder

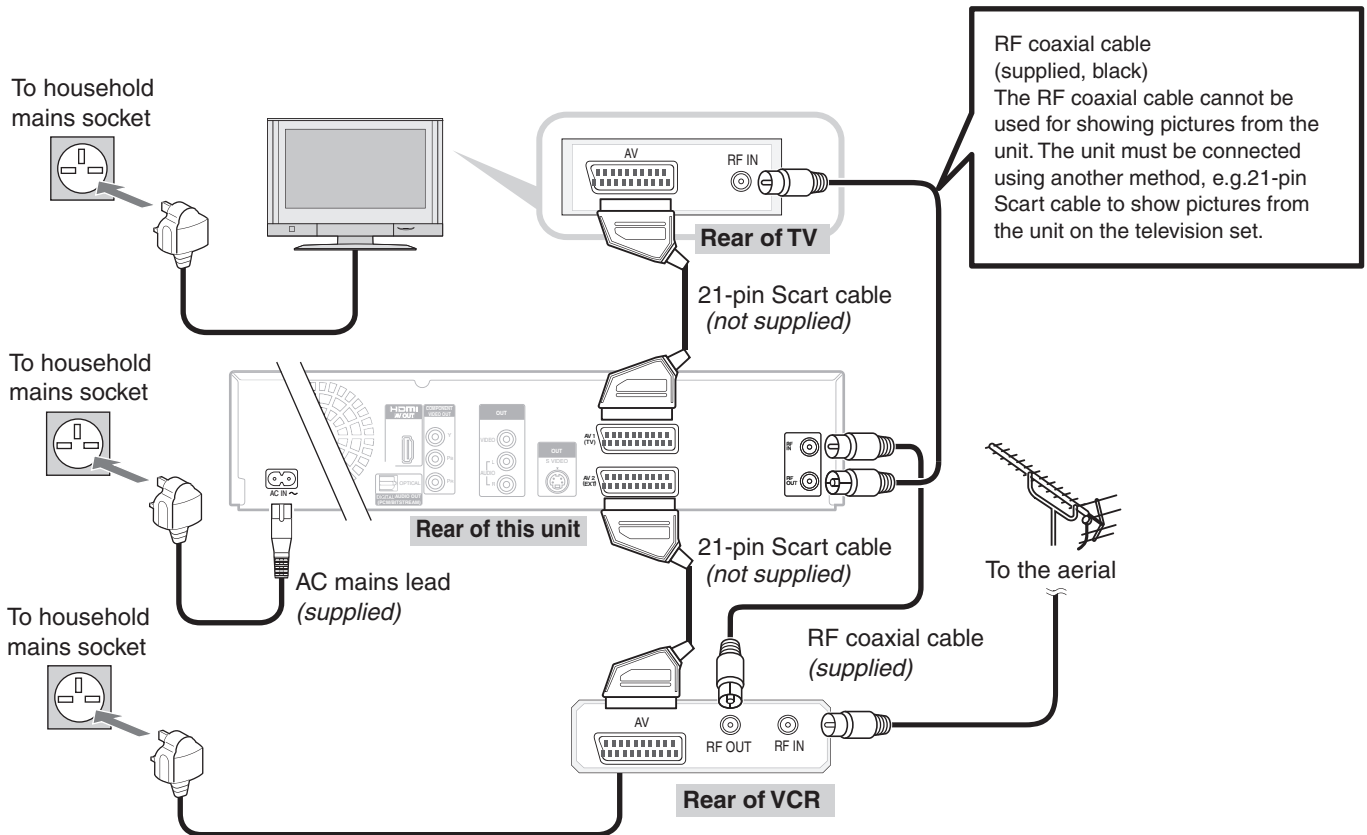


After completing the above connections, proceed to the TV Tuning (→ 10).

### To recording from a VCR

Refer to "Recording from an External Device" (→ 24).


- You can connect this unit to a TV using the audio/video (AV) cable, S-Video cable or component cables instead of the 21-pin Scart cable (→ 8, 9, 66).

### Using an Audio/Video Cable

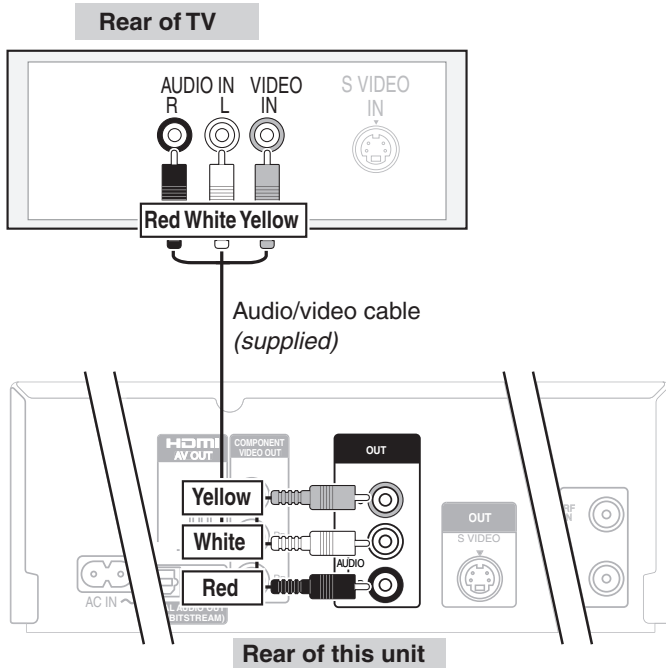


### Using an S Video Cable

The S VIDEO OUT terminal achieves a more vivid picture than the VIDEO OUT terminal. (Actual results depend on the television).

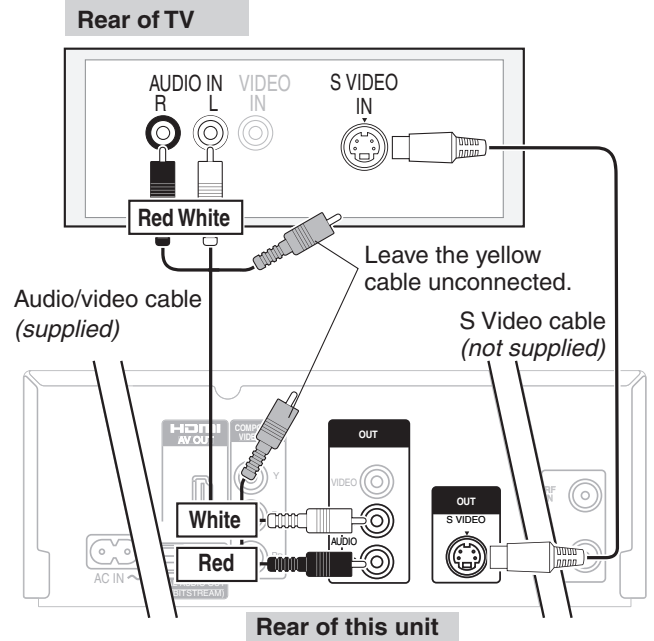

### Using Component Video Cables

The COMPONENT VIDEO OUT terminals on this unit can be used for either interlace or progressive output (→ 93) to provide a purer picture than the S VIDEO OUT terminal.

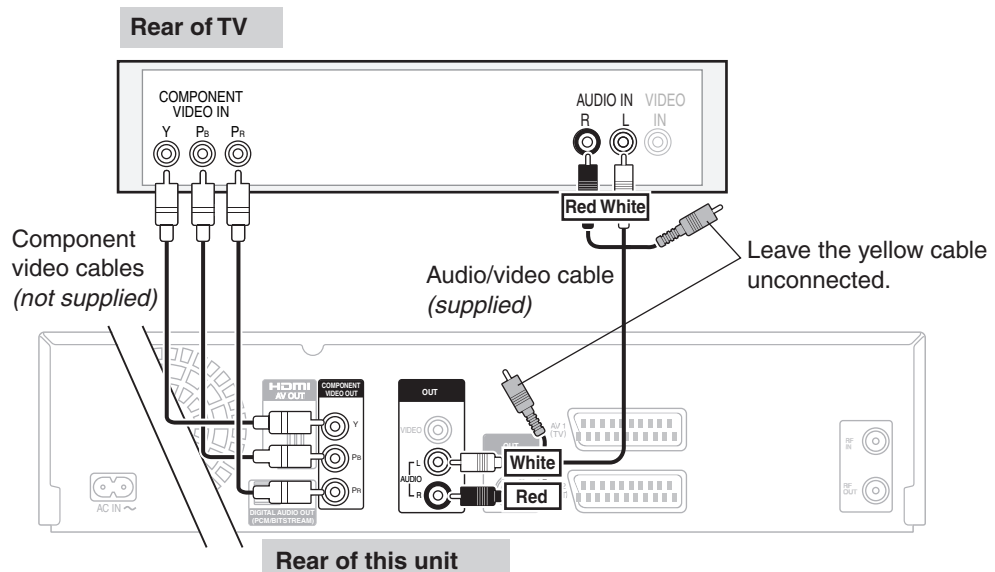


- For progressive output (→ 55)



#### Notes

- If you have a regular television (CRT: cathode ray tube) Use component output with progressive "Off" (Factory setting → 62), even if it is progressive compatible, because progressive output can cause some flickering. This is the same for multi-system televisions using PAL mode.

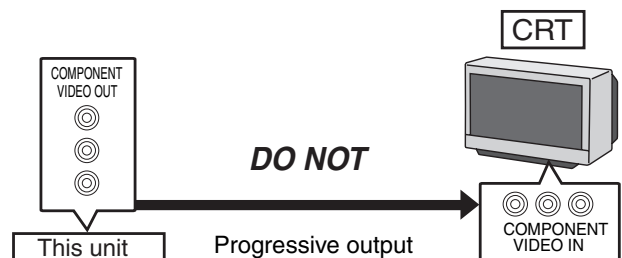


# Additional Connections

- You can improve sound quality by connecting this unit to an amplifier or system component using the audio cable or the optical digital audio cable.


## Using an Audio Cable for Better Sound

Use this connection to play sound through speakers connected to an amplifier or system component.

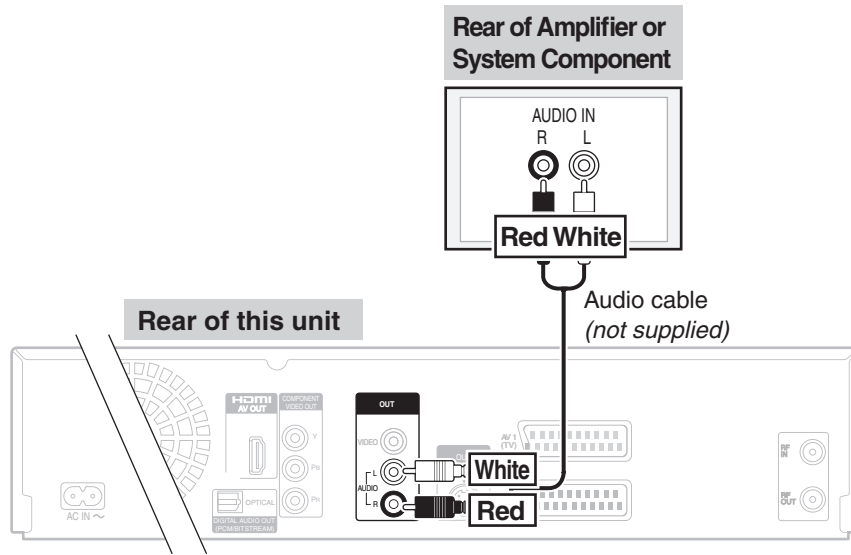

## Using an Optical Digital Audio Cable for Better Sound

This method allows you to enjoy multi-channel surround sound on DVD-Video.

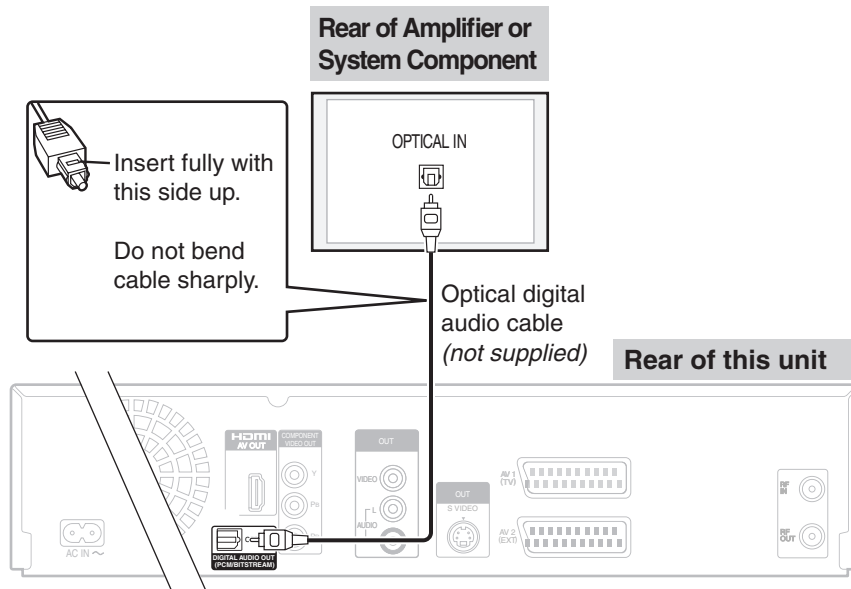

- Connect an amplifier or system component with a built-in decoder displaying these logo marks or MPEG decoder.



- Adjust settings in “Digital Audio Output” (→ 61).



### Notes

- When this unit is connected to an amplifier with an optical digital audio cable and connected to a television with an HDMI cable, you can enjoy the highest quality of audio from the disc by setting “Digital Audio Output” to “Optical Only” in the Setup menu (→ 63). In this case audio is only output from the amplifier not the television.
- You cannot use DTS Digital Surround decoders not meant for DVD.
- Before purchasing an optical digital audio cable, check the terminal shape of the equipment to be connected.

- You can enjoy high-quality picture and audio by adding the HDMI cable connection to the 21-pin Scart cable connection between the unit and your TV (→ 8, 9, 66).

## Connecting with an HDMI (High Definition Multimedia Interface) Terminal


When connected to an HDMI compatible unit, an uncompressed digital audio and video signal is transmitted, enabling you to enjoy high quality, digital video and audio with just one cable. When connecting to an HDMI-compatible HDTV (High Definition Television), the output can be switched to 1080p, 1080i or 720p HD video.

### Regarding VIERA Link “HDAVI Control™” function

When connecting with a Panasonic TV (VIERA) or a receiver equipped with the “HDAVI Control” function, linked operations would be possible. [→ 42, Linked Operations with the TV (VIERA Link “HDAVI Control™/Q Link)]

- It is recommended that you use Panasonic’s HDMI cable.  
Recommended part number: RP-CDHG15 (1.5 m), RP-CDHG30 (3.0 m), RP-CDHG50 (5.0 m), etc.
- Non-HDMI-compliant cables cannot be utilized.

### Connecting to a TV

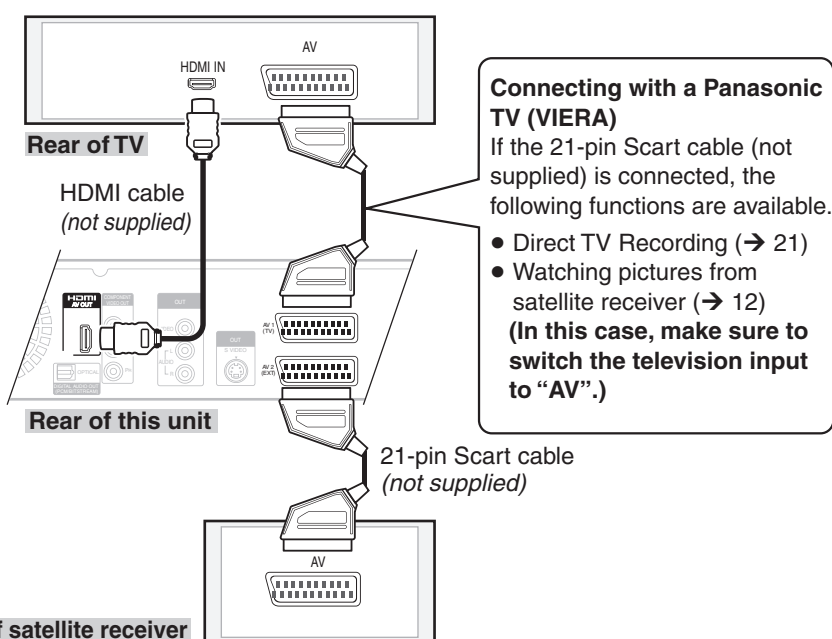


- Set “VIERA Link” to “On” (→ 63). (The default setting is “On”.)
  - Set “Digital Audio Output” to “HDMI and Optical” (→ 63). (The default setting is “HDMI and Optical”.)
- To enjoy High Quality Video up-converted to 1080p, you need to connect the unit to 1080p compatible HDTV and set “HDMI Video Format” in the Setup menu to “1080p” (→ 63).



### Notes



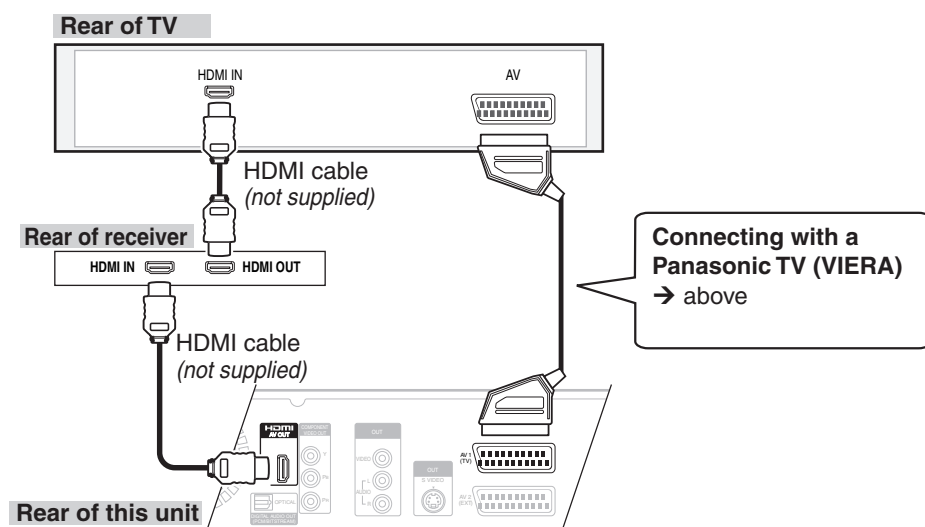

- If connecting to equipment that is only compatible with 2 channel output, audio with 3 channels or more will be down-mixed (→ 92) and output as 2 channels (some discs cannot be down-mixed).
- For display units compatible with HDCP (High-Band width Digital Content Protection) that are equipped with a digital DVI input terminal (PC monitors, etc.):  
Depending on the unit, picture may not display properly or at all when connecting with a DVI/HDMI switching cable (audio cannot be output).

### Connecting to a TV and a Receiver



# Disc Handling

## Usable Discs for Recording and Playback

Disc type	Rewritable	Play on other players <sup>*1</sup>	Recording 16:9 aspect picture <sup>*2</sup>	Copy-once recording (CPRM) (→ 19)	Standard symbol
DVD-RAM 	○	○	○	○ CPRM (→ 92) compatible discs only.	<b>RAM</b>
DVD-R 	—	○	○	—	<b>-R</b> before finalisation <b>DVD-V</b> after finalisation
DVD-R DL 	—	○	○	—	<b>-R DL</b> before finalisation <b>DVD-V</b> after finalisation
DVD-RW 	○	○	○	—	<b>-RW(V)</b> before finalisation <b>DVD-V</b> after finalisation
+R	—	○	— (4:3 aspect)	—	<b>+R</b> before finalisation <b>DVD-V</b> after finalisation
+R DL	—	○	— (4:3 aspect)	—	<b>+R DL</b> before finalisation <b>DVD-V</b> after finalisation
+RW	○	○	— (4:3 aspect)	—	<b>+RW</b>

○: Can do, —: Cannot do

- The explanations concerning discs are indicated by **DVD**, and those concerning video cassettes are indicated by **VHS**.

<sup>\*1</sup> **-R -R DL -RW(V) +R +R DL**

Finalisation needed for playback on other equipment (→ 57).

**RAM** can be played back on Panasonic DVD recorders and DVD-RAM compatible DVD players.

**-R DL**, **+R DL** or **+RW** can be played back only on equipment compatible with these discs.

<sup>\*2</sup> For further information (→ 19, Important Notes for Recording)

- Use of Panasonic discs is recommended.  
For available recording times for different discs under different recording modes, see “DVD Recording Modes and Durations” on page 20.  
Formatting and/or recording/initializing constraints may prevent you from playing or recording certain discs.
- Please see specifications (→ 94) for compatible disc versions and recording speeds.










### Notes

- **RAM** will show an increase in available space whenever a title has been erased.
- **-RW(V)** and **+RW** discs will only show an increase in available space when their last title has been erased.
- **-R -R DL +R +R DL** The discs will show no increase in available space after deleting titles.
- You may not be able to record depending on the condition of the discs and you may not be able to play them due to the condition of the recording.



## Play-only Discs

Disc type	Standard symbol	Uses
DVD-Video 	<b>DVD-V</b>	High quality movie and music discs
DVD-RW (DVD Video Recording format) 	<b>-RW(VR)</b>	DVD-RW video recorded on another DVD recorder* <ul style="list-style-type: none"> <li>You can play programmes that allow "One time only recording" if they have been recorded onto a CPRM compatible disc.</li> <li>By formatting (→ 56) the disc, you can record onto it in DVD-Video format.</li> <li>It may be necessary to finalise the disc on the equipment used for recording.</li> </ul>
DVD-R 	<b>-R</b>	<ul style="list-style-type: none"> <li>DVD-R* and DVD-R DL* with music recorded in MP3 (→ 73)</li> <li>Still pictures (JPEG) recorded on DVD-R* and DVD-R DL* (→ 73)</li> </ul>
DVD-R DL 	<b>-R DL</b>	
Audio CD 	<b>CD</b>	<ul style="list-style-type: none"> <li>Recorded audio and music (including CD-R/RW*)</li> <li>CD-R* and CD-RW* with music recorded in MP3 (→ 73)</li> <li>Still pictures (JPEG) recorded on CD-R/RW* (→ 73)</li> </ul>
Video CD 	<b>VCD</b>	<ul style="list-style-type: none"> <li>Recorded music and video</li> </ul>
SVCD 		<ul style="list-style-type: none"> <li>Capable of playing discs that conform to IEC62107 only.</li> </ul>

\* Play may be impossible on some DVD-RW (DVD Video Recording format), DVD-R, DVD-R DL, CD-R or CD-RW discs due to the condition of the recording.

- You can play still pictures (JPEG), and MP3 format data recorded on DVD-R, DVD-R DL or CD-R/RW. You can also play CD-DA, Video CD and SVCD (conforming to IEC62107) format data recorded on CD-R/RW. Close the session or finalise the disc after recording.
- The producer of the disc can control how discs are played. So you may not always be able to control play as described in these operating instructions. Read the disc's instructions carefully.

## Discs that Cannot be Played

- 2.6/5.2 GB DVD-RAM, 12 cm
- 3.95/4.7 GB DVD-R for Authoring
- DVD-R recorded in DVD Video Recording format
- DVD-R (DVD-Video format), DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL recorded on another unit and not finalised (→ 92)
- Discs recorded with AVCHD format
- DVD-Video with a region number other than "2" or "ALL"
- Blu-ray, HD DVD
- DVD-Audio
- DVD-ROM, +R 8 cm, CD-ROM, CDV, CD-G, Photo CD, CVD, SACD, MV-Disc, PD, DivX Video Disc, "Chaoji VCD" available on the market including CVD, DVCD and SVCD that do not conform to IEC62107, etc.

## Types of disc for the type of connected TV

When you use the discs recorded either PAL or NTSC, refer to this table.

(○: Possible to view, —: Impossible to view)

TV type	Disc	Yes/No
Multi-system TV	PAL	○
	NTSC	○
PAL TV	PAL	○
	NTSC	○* <sup>1</sup> (PAL60)
NTSC TV	PAL	—
	NTSC	○* <sup>2</sup>


\*<sup>1</sup> If your television is not equipped to handle PAL 525/60 signals the picture will not be shown correctly.

\*<sup>2</sup> Select "NTSC" in "TV System" (→ 63).

# Disc Handling

## Inserting Discs

- 1 Press [**▲** OPEN/CLOSE] to open the tray.
  - Insert a disc.

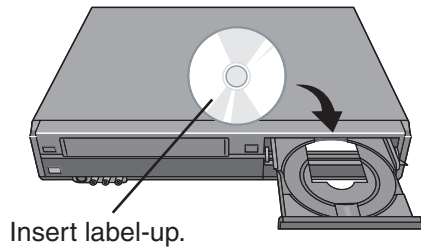

- 2 Press [**▲** OPEN/CLOSE] to close the tray.



### Notes

- When using 8 cm DVD-RAM or 8 cm DVD-R, remove the disc from the cartridge.
- It is not possible to record or play continuously from one side of a double sided disc to the other. You will need to eject the disc and turn it over.

### Automatic drive select function

**RAM** [Only for discs with the write-protect tab on the cartridge set to "PROTECT" (→ 56, Setting Protection)]

**DVD-V VCD CD**

- If the unit is stopped, it automatically switches to the DVD drive when a disc is inserted.

## Disc Care

**RAM** Use cartridges to protect them from scratches and dirt.

### Holding a disc

Handle discs by the edges to avoid inadvertently scratching or getting oil from your fingers on the disc. Do not touch the signal surface of discs (the shiny side).

### Cleaning discs

Discs are not indestructible and occasionally dirt or condensation may appear. Clean by gently wiping with a soft, dry lint-free cloth in a straight line from the centre of the disc to the edge of the disc. Return discs to their cases when not in use; this helps to protect against scratches and dirt.

### Storing discs

- Do not place or store discs in the following locations:
  - Direct sunlight
  - Very dusty or humid areas
  - Near a heat source
  - Places that undergo extreme shifts in temperature (condensation can occur)
  - Where static electricity or electromagnetic waves occur

### Discs to avoid

- Discs that are not perfectly circular in shape
- Warped discs, which may not balance properly in your unit, causing improper operation or damage to the unit
- Cracked discs
- Discs with exposed adhesive (from removed stickers or labels, such as may occur with rental discs or improperly cared-for discs that were previously labeled or re-labeled)

# MP3s and Still Pictures (JPEG)

## MP3 File Information

Playable discs	<b>-R -R DL CD</b>
File format	MP3 Files must have the extension “.mp3” or “.MP3”.
Number of folders (groups)	Maximum number of folders (groups) recognizable: 300 folders (groups) (including the root folder)
Number of files (tracks)	Maximum number of files (tracks) recognizable* <sup>1</sup> : 3000 files (tracks)
Bit rates	32 kbps to 320 kbps
Sampling frequency	16 kHz/22.05 kHz/24 kHz/ 32 kHz/44.1 kHz/48 kHz
ID3 tags	not compatible

- If there is a large amount of still picture data etc. within an MP3 file, play may not be possible.

## Still Picture (JPEG\*<sup>2</sup>) Information

Playable discs	<b>-R -R DL CD</b>
File format	JPEG Files must have the extension “.jpg” or “.JPG”.
Number of pixels	between 34×34 and 6144×4096 (Sub sampling is 4:2:2 or 4:2:0)
Number of folders* <sup>3</sup>	Maximum number of folders recognizable: 300 folders (including the root folder)
Number of files* <sup>3</sup>	Maximum number of files recognizable* <sup>1</sup> : 3000 files
MOTION	not compatible
JPEG	

\*<sup>1</sup> Total number of recognizable file including MP3, JPEG and other type of files is 4000.

\*<sup>2</sup> It may take a few moments for still pictures to display.

\*<sup>3</sup> When there are many files and/or folders, some files may not display or be playable.



## Notes

- Compatible formats: ISO9660 level 1 or 2 (except for extended formats) and Joliet
- This unit is compatible with multi-session; however, reading or play of the disc may take time if there are a lot of sessions.
- Operation may take time to complete when there are many files (tracks) and/or folders (groups); some files (tracks) may not display or be playable.
- Images recorded at a very high resolution may take a long time to display.
- English alphabetical characters and Arabic numerals are displayed correctly. Other characters may not display correctly.
- The display order on this unit may differ from how the order is displayed on a computer.
- Depending on how you create the disc (writing software), files (tracks) and folders (groups) may not play in the order you number them.
- This unit is not compatible with packet-write format.
- Depending on the recording conditions, the disc may not play.




## Tips

You can play MP3s and still pictures (JPEG) on this unit by making folders as shown below. Depending on how you create the disc (writing software), play may not be in the order you number the folders.

**-R -R DL CD**

### How to structure MP3 folders


Prefix with 3-digit numbers in the order you want to play them.

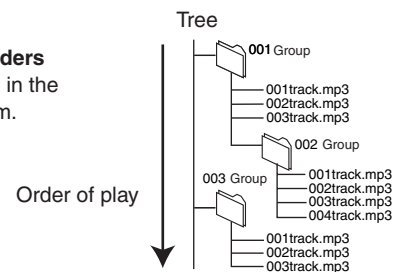

**-R -R DL CD**

### Structure of still pictures (JPEG)

Files inside a folder are displayed in the order they were updated or taken

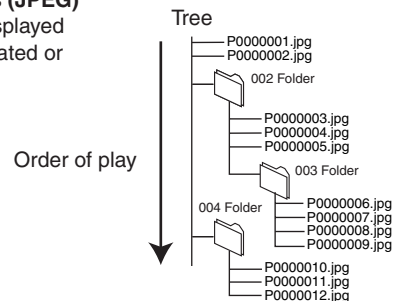


# Video Cassette Handling

## Inserting a Video Cassette

Insert a cassette (the surface with the roll of tape should face up).

–The unit turns on automatically.

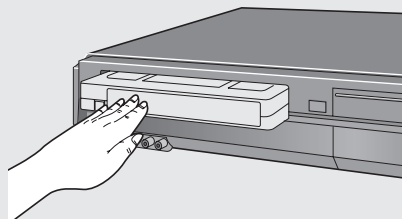

To eject:

From the main unit:

EJECT



or

From the remote control



to select the VHS drive.




Press and hold for 3 or more seconds.

## Video Cassette Information

### Video cassettes

- Break off the video cassette's tab to prevent accidental erasure. Cover the hole with a double layer of adhesive tape when you want to use the video cassette for recording again.
- You can use video cassettes with the VHS and S-VHS marks, but the unit is unable to make full use of the characteristics of S-VHS video cassettes.

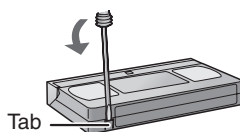

### Video cassette care

- Poor quality or damaged video cassettes can cause the heads to become dirty and malfunction. Store your video cassettes carefully and discard them when they become dirty or damaged.
- Never use video cassettes on which juice has been spilled or those that are extremely damaged since this will not only cause the heads to become dirty, but will also make the unit malfunction.


# Troubleshooting Guide

## When Other Panasonic Products Respond to this Remote Control

Use this function to synchronize the codes for the remote control and the main unit when there are other Panasonic products close to your unit.

With the unit stopped

- 1 Press [FUNCTION MENU].
- 2 Press [▲, ▼] to select "To Others", then press [OK].
- 3 Press [▲, ▼] to select "Setup", then press [OK].
- 4 Press [▲, ▼] to select "Others", then press [▶].
- 5 Press [▲, ▼] to select "Remote Control", then press [OK].
- 6 Press [▲, ▼] to select the code ("DVD 1", "DVD 2" or "DVD 3"), then press [OK].

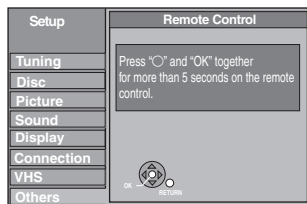

- 7 While pressing and holding [OK], press and hold the numbered button [1], [2] or [3] corresponding to the code set in step 6 for more than 5 seconds to set.
- 8 Press [OK] to complete.

When the following indicator appears on the unit's display



- Change the code on the remote control to match the code displayed for the main unit (→ step 7).



### Tips

**To return to the previous screen**

Press [RETURN].

**To exit the screen**

Press [EXIT].

## To Reset This Unit

### To reset the unit's settings

All the settings except for the ratings level, ratings password, Owner ID and Clock return to the factory preset. The timer recording programmes are also cancelled.

On the main unit

**Press and hold [▼ CH] and [CH ▲] for about 5 seconds.**

- Refer to Tips of "Auto-Setup Restart" (→ 59) for detail information.

### To reset the ratings level settings

With the unit stopped

- 1 Press [▲ OPEN/CLOSE] to open the disc tray.
- 2 Press [DRIVE SELECT] to select the DVD drive.

On the main unit

- 3 Press and hold [● REC] and [▶] for about 5 seconds.

### To restore the unit if it freezes

On the main unit

**Press and hold [⏻/⏪] for more than 10 seconds.**

- The unit is turned off.

# Troubleshooting Guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the chart do not solve the problem, consult your dealer for instructions.

## The following does not indicate a problem with the unit:

- Regular disc/video cassette rotating sound.
- Poor reception due to atmospheric conditions.
- Image disturbance during search.
- Periodic interruptions to the reception due to satellite broadcasting breaks.
- Operations not working due to a poor-quality disc. (Try again using a Panasonic disc.)
- The unit freezing due to the activation of one of its safety devices (→ 75, To restore the unit if it freezes).


## General Issues

### Power

		Page
No power.	<ul style="list-style-type: none"> <li>• Insert the AC mains lead securely into a known active household mains socket.</li> </ul>	8, 9, 66
The unit does not turn on pressing [⏻ DVD/VHS].	<ul style="list-style-type: none"> <li>• Linked timer recordings with external equipment is in recording standby ("EXT-L" on the unit's display blinks when [⏻ DVD/VHS] is pressed). Press [EXT LINK] to cancel the recording standby.</li> </ul>	23
The unit switches to standby mode.	<ul style="list-style-type: none"> <li>• One of the unit's safety devices is activated. Press [⏻/I] on the main unit to turn the unit on.</li> </ul>	–
The unit is turned off automatically.	<ul style="list-style-type: none"> <li>• If you connected this unit to a "HDAVI Control" compatible TV with an HDMI cable, or connected this unit to a Q Link-compatible TV with a fully wired 21-pin Scart cable, this unit will be automatically set to standby mode when the TV is set to standby mode.</li> </ul>	42

## General Issues

### Displays

		Page
The display is dim.	<ul style="list-style-type: none"> <li>• Change "FL Display" in the Setup menu.</li> </ul>	62
"0:00" is flashing on the unit's display.	<ul style="list-style-type: none"> <li>• Set the clock.</li> </ul>	11
The displayed time of this unit is different from the actual recording time or MP3 recording time.	<ul style="list-style-type: none"> <li>• Times shown may disagree with actual times.</li> <li>• <b>-R -R DL +R +R DL</b> The remaining capacity does not increase even if titles are deleted.</li> <li>• Available space on a DVD-RW (DVD-Video format) or +RW disc increases when you delete the last title (space may increase slightly when you delete other titles).</li> <li>• If you record or edit about 200 times or more, the remaining capacity of DVD-R, DVD-R DL, +R, and +R DL is reduced and then recording or editing may be disabled (for the second layer on DVD-R DL and +R DL, this happens after about 60 times).</li> <li>• The time during searching may not be displayed accurately.</li> </ul>	– – – – –
The clock is not correct.	<ul style="list-style-type: none"> <li>• Under adverse reception conditions, etc., the automatic time correction function may not work. In this case, "Automatic" is automatically turned to "Off". If re-setting the Auto Clock Setting does not work, set the time manually.</li> </ul>	11
Compared to the actual recorded time, the elapsed time displayed is less. (Only when recording in NTSC)	<ul style="list-style-type: none"> <li>• The displayed recording/play time is converted from the number of frames at 29.97 frames (equal to 0.999 seconds) to one second. There will be a slight difference between the time displayed and the actual elapsed time (e.g., actual one-hour elapsed time may display as approximately 59 minutes 56 seconds). This does not affect the recording.</li> </ul>	–
The tape counter is not changing.	<ul style="list-style-type: none"> <li>• The tape counter does not change while playing unrecorded parts. The "second" display changes as follows: (e.g., Blank after 1 h 36 min)</li> </ul>  <ul style="list-style-type: none"> <li>• The unit's display also appears like this if the tape is dirty or damaged. Consult your dealer if this is the case.</li> </ul>	– –



Cannot operate the TV with unit's remote control.	<ul style="list-style-type: none"> <li>● Change the manufacturer code on the remote control.</li> <li>● It may be necessary to set the code on the remote control again after changing the batteries.</li> </ul>	65 75
Cannot operate the DVD.	<ul style="list-style-type: none"> <li>● Press [DRIVE SELECT] to select the DVD drive when operating DVDs or CDs.</li> </ul>	13
Cannot operate the VHS.	<ul style="list-style-type: none"> <li>● Press [DRIVE SELECT] to select the VHS drive when operating video cassettes.</li> </ul>	13
The remote control doesn't work.	<ul style="list-style-type: none"> <li>● The remote control code is wrong. Change to the correct code.</li> <li>● The batteries are depleted. Replace them with new ones.</li> <li>● Point the remote control at the remote control sensor on the main unit.</li> <li>● Remove obstacles between the remote control and the main unit.</li> <li>● Remove dust from the transmission window and the unit's sensor.</li> <li>● Coloured glass may obstruct the signal reception/transmission.</li> <li>● Don't place the signal sensor in direct sunlight or in areas that may be subject to sun exposure.</li> <li>● It may be necessary to set the manufacturer code again after changing the batteries.</li> <li>● The Child Lock function is activated.</li> </ul>	75 5 5 – – – – 65 65
The unit is on but cannot be operated.	<ul style="list-style-type: none"> <li>● Recording drive or playback drive has not been selected properly.</li> <li>● Some operations may be prohibited by the disc.</li> <li>● The unit is warm ("U59" appears on the unit's display). Wait until "U59" disappears.</li> <li>● One of the unit's safety devices may have been activated. Reset the unit as follows: Press [⏻/I] on the main unit to switch to standby mode, If the unit doesn't switch to standby mode, reset the unit (→ 75, "To restore the unit if it freezes").</li> <li>● The unit cannot be operated while performing an update. "SW-DL" appears on the unit's display while it is updating. Please wait until the "SW-DL" disappears.</li> </ul>	13, 14 – 89 – 64
"U88" is displayed and the disc cannot be ejected.	<ul style="list-style-type: none"> <li>● The unit is carrying out the recovery process. The disc may be defective. Do the following to eject the disc. Try another disc. (1) Press [⏻/I] on the main unit to switch to standby mode. If the unit doesn't switch to standby mode, reset the unit (→ 75, "To restore the unit if it freezes"). (2) While the unit is turned off, press and hold [■] and [CH ^] on the main unit at the same time for about 5 seconds. (Ejection may take extra time depending on discs.)</li> </ul>	–
Cannot eject a disc.	<ul style="list-style-type: none"> <li>● The unit is recording.</li> <li>● The unit may have a problem. Eject the disc as in (2) above.</li> <li>● Linked timer recordings with external equipment is in recording standby ("EXT-L" on the unit's display blinks when [⏻ DVD/VHS] is pressed.) Press [EXT LINK] to cancel the recording standby. If the Child Lock function is activated, above operation does not work. Cancel the Child Lock function.</li> </ul>	– – 23, 65
Startup is slow.	<ul style="list-style-type: none"> <li>● Startup takes time in the following situations: <ul style="list-style-type: none"> <li>– A disc other than a DVD-RAM is inserted.</li> <li>– The clock is not set.</li> <li>– Immediately after a power failure or the AC mains lead is connected.</li> <li>– When the unit is connected with an HDMI cable.</li> </ul> </li> <li>● When "Power Save" is set to "Off", startup becomes faster than when "Power Save" is "On".</li> </ul>	– 64

# Troubleshooting Guide

General Issues		TV Guide	Page
The TV Guide System does not receive any data.	<ul style="list-style-type: none"> <li>• Check whether the clock is properly set.</li> <li>• If signal quality is bad (ghost images or limited reception), the TV Guide system may not be able to receive any data.</li> </ul>		11 –
“No Data” is displayed for some or all stations.	<ul style="list-style-type: none"> <li>• Some stations are not supported by the TV Guide system.</li> <li>• Programme the Timer recording manually.</li> </ul>		– 26
The TV Guide information is not displayed properly.	<ul style="list-style-type: none"> <li>• There was a programme change or TV Guide information from a broadcast station was possibly not correctly transmitted. Check the current programme, e.g. on the Web site for the TV Guide system provider or station provider.</li> </ul>		–
The TV Guide data is not updated.	<ul style="list-style-type: none"> <li>• The unit must be in standby mode in order to update the data. If the unit is in EXT LINK mode (“EXT-L” lights on the unit’s display), then the data update may also not work.</li> <li>• Make sure that the time is set correctly.</li> <li>• Check whether “Off” is set under “EPG Download in Standby” and change the setting in System Update in the Setup menu.</li> </ul>		– 11 64

General Issues		DVB-T	Page
Digital broadcasts cannot be received.	<ul style="list-style-type: none"> <li>• Check the connections.</li> <li>• Digital broadcast may not have started in your region yet.</li> <li>• The aerial may not be pointing in the direction of the TV station, or the direction of the aerial may have changed due to strong winds or vibration. If problem persists consult your local TV aerial installer.</li> </ul>		8, 9, 66 – –
TV reception worsens after connecting the unit.	<ul style="list-style-type: none"> <li>• This can occur because the signals are being divided between the unit and other equipment. It can be solved by using a signal booster, available from electronics retailers.</li> </ul>		–
After DVB Auto-Setup only some or no DVB channels are found.	<ul style="list-style-type: none"> <li>• Check to ensure your area is covered by DVB transmissions.</li> <li>• Check that the aerial and antenna cable are designed for DVB. Use the supplied RF coaxial cable shown in STEP 2, Basic Connection. If you live within 5–10 km of DVB transmission towers, a combined VHF/UHF aerial should be adequate. Outside this area, separate VHF and UHF aeriels provide superior reception performance.</li> </ul>		– 8, 9
Picture regularly breaks up on some channels, “No Signal” message is displayed.	<ul style="list-style-type: none"> <li>• Check “Signal Condition”. If “Signal Quality” or “Signal Strength” are displayed in red or constantly changing, check aerial. If problem persists consult your local TV aerial installer.</li> <li>• Check that the aerial and antenna cable are designed for DVB. Use the supplied RF coaxial cable shown in STEP 2, Basic Connection.</li> <li>• Interference (known as impulse noise) from household appliances such as light switches, fridges, etc. may cause picture break up and/or audio distortion. Use a high quality quad shielded coaxial cable fly lead between this unit and antenna wall socket to minimise impulse noise pickup. If problem persists consult your local TV aerial installer.</li> <li>• When “No Signal” message is displayed, check aerial connection.</li> <li>• Adjust the aerial reception with “DVB Manual Tuning”.</li> </ul>		59 8, 9 –
			– 59
Picture very infrequently breaks up on some or all channels.	<ul style="list-style-type: none"> <li>• Electrical atmospheric interference caused by local or distant lightning storms or heavy rain with wind in “leafy” locations may cause pictures to break up and audio to mute or distort momentarily.</li> <li>• Impulse noise interference from an infrequently used electrical appliance, or a passing vehicle or lawn mower with a “noisy” ignition system.</li> </ul>		– –

## General Issues

## DVB-T (Continued)

Page

Unusual station sorting.	<ul style="list-style-type: none"> <li>The station sorting of this unit is pre-defined. Use profiles to sort the stations as you want them.</li> </ul>	58
The digital channel information does not appear.	<ul style="list-style-type: none"> <li>Select the length of time (3–10 sec.) in the “On-Screen Messages” in the Setup menu.</li> <li>The digital channel information will not appear during playback or recording.</li> </ul>	62 –
No Digital TEXT	<ul style="list-style-type: none"> <li>When subtitle is on or additional information in the digital channel informaion is displayed, Digital Text does not work.</li> </ul>	–
After the auto setup, there aren't any stations in the station list although found stations were displayed during auto setup.	<ul style="list-style-type: none"> <li>“Shipping Condition” was performed or the unit was in the delivery status. The auto setup was then started and interrupted. Do an auto setup again and let it continue right through to the end. The data is only saved after this has been completed.</li> </ul>	–
The Signal Strength is over 100% (> 10)	<ul style="list-style-type: none"> <li>Reduce the signal amplification at your aerial.</li> </ul>	59
Poor picture in spite of good signal quality.	<ul style="list-style-type: none"> <li>Overmodulation makes the signal strength display go to red. Readjust the picture with your room aerial until the picture quality improves.</li> </ul>	–

## General Issues

## VIERA Link

Page

VIERA Link doesn't work.	<ul style="list-style-type: none"> <li>Check the HDMI cable connection. Check that “HDMI” is displayed on the front display when the power for the main unit is set to On.</li> </ul>	–
	<ul style="list-style-type: none"> <li>Make sure that “VIERA Link” is set to “On”.</li> </ul>	63
	<ul style="list-style-type: none"> <li>Check the “HDAVI Control” settings on the connected device.</li> </ul>	–
	<ul style="list-style-type: none"> <li>If the connection for the equipment connected with an HDMI cable was changed, or if there was a power failure or the plug was removed from the household mains socket, “HDAVI Control” may not work. In this case, perform the following operations. <ol style="list-style-type: none"> <li>When the HDMI cable is connected to all equipment with the power on, turn the TV (VIERA) on again.</li> <li>Change the TV (VIERA) settings for the “HDAVI Control” function to off, and then set to on again. (For more information, see the VIERA operating instructions.)</li> <li>Switch the VIERA input to HDMI connection with this unit, and after this unit's screen is displayed, check that “HDAVI Control” is working.</li> </ol> </li> </ul>	–
The control panel does not appear.	<ul style="list-style-type: none"> <li>The control panel is only displayed when connected to a TV with “HDAVI Control 2” function.</li> </ul>	43

# Troubleshooting Guide

Playback Issues	Picture	Page
<p>The images from this unit do not appear on the TV.</p> <p>Picture is distorted.</p>	<ul style="list-style-type: none"> <li>● Make sure recorder is connected to an appropriate AV input of the TV.</li> <li>● Make sure the TV's input setting (e.g., AV 1) is correct.</li> <li>● The TV isn't compatible with progressive signals. Press and hold [■] and [▶] on the main unit for about 5 seconds. The setting will change to interlace.</li> <li>● The unit's "TV System" setting differs from the TV system used by the disc now playing. While stopped, keep pressing [■] and [▲ OPEN/CLOSE] on the main unit for 5 or more seconds. The system switches from PAL to NTSC or vice versa.</li> <li>● When this unit is connected with an HDMI cable, use a disc that matches with this unit's TV system.</li> <li>● Picture may not be seen when more than 4 devices are connected with HDMI cables. Reduce the number of connected devices.</li> </ul>	<p>8, 9, 66, 67, 69</p> <p>–</p> <p>–</p> <p>63</p> <p>–</p> <p>–</p>
<p>Picture does not appear during timer recording.</p>	<ul style="list-style-type: none"> <li>● Timer recordings work regardless of whether the unit is on or off. To confirm the timer recording is going to work properly, turn the unit on.</li> </ul>	<p>–</p>
<p>The 4:3 aspect ratio picture expands left and right. Screen size is wrong.</p>	<ul style="list-style-type: none"> <li>● Use the TV to change the aspect. If your TV does not have that function, set "Progressive" in the Picture menu to "Off".</li> <li>● If you connect an HDMI cable, set "Aspect for 4:3 Video" in the Setup menu to "16:9".</li> <li>● Check the settings for "TV Aspect" in the Setup menu.</li> </ul> <p>It may be possible to adjust the display mode on the TV. Refer to your television's operating instructions.</p>	<p>55</p> <p>63</p> <p>62</p>
<p>The recorded title is stretched vertically.</p>	<ul style="list-style-type: none"> <li>● 16:9 aspect programmes are recorded in 4:3 aspect in the following cases. <ul style="list-style-type: none"> <li>– <b>-R -R DL -RW(V)</b> If you recorded or copied using "EP" or "FR (recordings 5 hours or longer)" recording mode.</li> <li>– If you recorded or copied to a +R, +R DL or +RW.</li> </ul> </li> </ul> <p>It may be possible to adjust the display mode on the TV. Refer to your television's operating instructions.</p>	<p>–</p> <p>–</p>
<p>There is a lot of after-image when playing video.</p>	<ul style="list-style-type: none"> <li>● Set "Playback NR" in the Picture menu to "Off".</li> </ul>	<p>55</p>
<p>When playing DVD-Video using progressive output, one part of the picture momentarily appears to be doubled up.</p>	<ul style="list-style-type: none"> <li>● Set "Progressive" in the Picture menu to "Off". This problem is caused by the editing method or material used on DVD-Video, but should be corrected if you use interlaced output.</li> </ul>	<p>55</p>
<p>There is no apparent change in picture quality when making adjustments in the Picture menu using the on-screen display.</p>	<ul style="list-style-type: none"> <li>● The effect cannot be seen with certain types of video.</li> </ul>	<p>–</p>
<p>Cannot see the beginning of the title played.</p>	<ul style="list-style-type: none"> <li>● (If connecting to a TV that supports VIERA Link with an HDMI cable) When [▶ PLAY] is pressed on this unit's remote control, but you may not be able to see the beginning of the title played until the picture is displayed on the TV. Using [◀◀], return to the beginning of the title.</li> </ul>	<p>–</p>
<p>The picture is distorted during play, or video will not play correctly.</p>	<ul style="list-style-type: none"> <li>● You may be playing a TV programme recorded with poor reception or unfavourable weather conditions.</li> <li>● The picture may be distorted or a black screen may appear briefly between recorded titles in the following situations: <ul style="list-style-type: none"> <li>– between titles recorded with different recording modes.</li> <li>– between scenes recorded with different aspect ratios.</li> <li>– between scenes recorded with different resolutions.</li> <li>– between playlist chapters.</li> </ul> </li> </ul>	<p>–</p> <p>–</p>

<p>No sound. Low volume. Distorted sound. Cannot hear the desired audio type.</p>	<ul style="list-style-type: none"> <li>● Check the connections and the “Digital Audio Output” settings. Check the input mode on the amplifier if you have connected one.</li> <li>● Check if TV is muted.</li> <li>● Check if amplifier is muted.</li> <li>● Sound is not output while fast-forwarding during chasing playback and simultaneous record and playback.</li> <li>● Set “V.S.S.” in the Sound menu to “Off” in the following cases:                         <ul style="list-style-type: none"> <li>– When using discs that do not have surround sound effects, such as Karaoke discs</li> <li>– When playing bilingual broadcast programmes</li> </ul> </li> <li>● The sound effects will not work when the bitstream signal is output from the HDMI AV OUT terminal or the DIGITAL AUDIO OUT terminal.</li> <li>● Audio may not be heard when more than 4 devices are connected with HDMI cables. Reduce the number of connected devices.</li> <li>● To output audio from a device connected with an HDMI cable, set “Digital Audio Output” to “HDMI and Optical” in the Setup menu.</li> <li>● Depending on the connected equipment, the sound may be distorted if this unit is connected with an HDMI cable.</li> </ul>	<p>61, 68</p> <p>–</p> <p>–</p> <p>–</p> <p>55</p> <p>–</p> <p>–</p> <p>63</p> <p>–</p>
<p>Cannot switch audio.</p>	<ul style="list-style-type: none"> <li>● You cannot switch the audio in the following cases.                         <ul style="list-style-type: none"> <li>– When a DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL or +RW disc is in the disc tray while DVD drive is selected.</li> <li>– When the recording mode is XP and “Audio Mode for XP Recording” is set to “LPCM”.</li> </ul> </li> <li>● When recording a digital broadcast with multiple audio channels, this will record only the audio channel selected in “DVB Multi Audio” in the on-screen display. The audio channel cannot be switched during playback.</li> <li>● You have used a digital connection. Set “Dolby Digital” to “PCM” or connect using audio cables (analogue connection)</li> <li>● There are discs whose audio cannot be changed due to how the disc was created.</li> </ul>	<p>–</p> <p>61</p> <p>55</p> <p>61, 68</p> <p>–</p>

# Troubleshooting Guide

Playback Issues	Operation	Page
Play fails to start even when [▶ PLAY] is pressed. Play starts but then stops immediately.	<ul style="list-style-type: none"> <li>● Insert the disc correctly with the label facing up.</li> <li>● The disc is dirty.</li> <li>● You tried to play a blank disc or a disc that is unplayable on the unit.</li> <li>● You tried to play a +RW that needs to be finalised on the equipment used for recording.</li> <li>● When recording to DVD-RAM using EP (8Hours) mode, play may not be possible on DVD players that are compatible with DVD-RAM. In this case use EP (6Hours) mode.</li> <li>● You cannot play discs during DV automatic recording.</li> </ul>	72 72 70, 71, 73 – 60 –
Audio and video momentarily pause.	<ul style="list-style-type: none"> <li>● This occurs between playlist chapters.</li> <li>● This occurs as scenes change during Quick View (Play ×1.3).</li> <li>● <b>-R DL</b> <b>+R DL</b> When playing a title recorded on both layers, the unit automatically switches between layers and plays the title in the same way as a normal programme. However, video and audio may momentarily cut out when the unit is switching layers.</li> </ul>	– – 19
DVD-Video is not played.	<ul style="list-style-type: none"> <li>● Ensure the DVD-Video region number for the disc is correct, and the disc is not defective.</li> <li>● You have set a ratings level to limit DVD-Video play. Change this setting.</li> </ul>	Cover 71 60
Alternative soundtrack and subtitles cannot be selected.	<ul style="list-style-type: none"> <li>● The languages are not recorded on the disc.</li> <li>● You may have to use the disc's own menus to select languages and audio tracks.</li> </ul>	– 32
No subtitles.	<ul style="list-style-type: none"> <li>● Subtitles are not recorded on the disc.</li> <li>● Set "Subtitle" in the Disc menu to "On".</li> </ul>	– 54
Angle cannot be changed.	<ul style="list-style-type: none"> <li>● This function depends on software availability. Angles can only be changed during scenes where different angles are recorded.</li> </ul>	–
You have forgotten your ratings password.	<ul style="list-style-type: none"> <li>● With the tray open, press [DRIVE SELECT] to select the DVD drive, then press and hold [● REC] and [▶] on the main unit simultaneously for about 5 or more seconds.</li> </ul>	–
Quick View (Play ×1.3) does not work.	<ul style="list-style-type: none"> <li>● This does not work when audio is other than Dolby Digital.</li> <li>● This does not work while recording in XP or FR mode.</li> </ul>	– –
The resume play function does not work.	<ul style="list-style-type: none"> <li>● Memorized positions are cancelled when the tray is opened.</li> </ul>	–
The Video CD picture does not display properly.	<ul style="list-style-type: none"> <li>● When connecting to Multi-system TV, select "NTSC" in "TV System" in the Setup menu.</li> <li>● When connecting to PAL TV, the lower part of the picture cannot be displayed correctly during search.</li> </ul>	63 –
Time Slip, Manual Skip, etc. does not work.	<ul style="list-style-type: none"> <li>● These functions do not work with finalised discs.</li> <li>● Time Slip does not work when the unit's "TV System" settings are different from the title recorded on the disc.</li> </ul>	– 63
Cannot see the beginning of the title played.	<ul style="list-style-type: none"> <li>● (If connecting to a TV that supports VIERA Link with an HDMI cable) When [▶ PLAY] is pressed on this unit's remote control, you may not be able to see the beginning of the title played until the picture is displayed on the TV. Using [◀◀], return to the beginning of the title.</li> </ul>	–



**Playback Issues****VHS Picture**

Page

On-screen display indicators do not appear.	<ul style="list-style-type: none"><li>● Select a setting other than “Off” in “On-Screen Messages” in the Setup Menu. – Press [STATUS ⓘ] to show the on-screen display indicators.</li></ul>	39, 62
The grey background appears during playback.	<ul style="list-style-type: none"><li>● You are playing a blank or poor quality portion of the tape.</li><li>● You can damage the unit if you play dirty or damaged tapes and this can cause the grey background to appear.</li></ul>	– –

**Playback Issues****VHS Sound**

Page

Cannot hear the desired audio type.	<ul style="list-style-type: none"><li>● Press and hold [STTL Ⓜ] for about 5 or more seconds to select the audio.</li></ul>	39
There is noise when playing a video tape.	<ul style="list-style-type: none"><li>● Adjust the tracking.</li><li>● The tape is old or damaged.</li></ul>	38 –

**Playback Issues****VHS Play**

Page

The playback screen flickers.	<ul style="list-style-type: none"><li>● The video head is dirty.</li><li>● The tape is old or damaged.</li><li>● Check the “SQPB” setting.</li></ul>	91 – 64
-------------------------------	--	---------------

# Troubleshooting Guide

Recording Issues	Recording/Timer Recording/Copying/External input	Page
<p>Cannot record. Cannot copy.</p>	<ul style="list-style-type: none"> <li>● You haven't inserted a disc or the disc you inserted cannot be recorded on. Insert a disc the unit can record onto.</li> <li>● <b>RAM -RW(V) +R +R DL +RW</b> The disc is unformatted. Format the disc.</li> <li>● The write-protect tab on the cartridge is set to "PROTECT" or the disc is protected with the "DVD Management" settings.</li> <li>● Some programmes have limitations on the number of times they can be recorded (CPRM).</li> <li>● The disc is full or nearly full. Delete unneeded titles (<b>RAM -RW(V) +RW</b>) or use another disc.</li> <li>● You cannot record and copy on finalised DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL discs. However, you can record and copy again if you format DVD-RW.</li> <li>● If you repeatedly insert discs or turn the unit on and off about 50 times or more, the recording or editing of DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL, and +RW discs may be disabled.</li> <li>● DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL and +RW discs recorded on this unit may not be recordable on other Panasonic DVD Recorders.</li> <li>● The broadcast you are trying to record is copy-protected.</li> <li>● This unit cannot record NTSC signals to discs that already have PAL signal recordings. Play of discs recorded with both PAL and NTSC on another unit is not guaranteed.</li> </ul>	<p>70</p> <p>56</p> <p>56</p> <p>19, 92</p> <p>18, 45, 56</p> <p>–</p> <p>–</p> <p>–</p> <p>–</p> <p>63</p>
<p>Digital broadcasts cannot be recorded or copied.</p>	<ul style="list-style-type: none"> <li>● Some digital broadcasts are copyright protected with a "One time only recording" security feature. This type of programme can only be recorded to a CPRM compatible DVD-RAM.</li> </ul>	<p>19, 70, 92</p>
<p>Timer recording does not work properly.</p>	<ul style="list-style-type: none"> <li>● The timer programme is incorrect or different timer programme times overlap. Correct the programme.</li> <li>● The programme is not in timer recording standby. ("Ⓞ" in the timer recording list is not on.) 1 Press [PROG/CHECK]. 2 Press [▲, ▼] to select the programme and press the "Red" button.</li> <li>● The clock is not correct. Set the clock.</li> </ul>	<p>28</p> <p>28</p> <p>11</p>

Recording Issues	Recording/Timer Recording/Copying/External input (Continued)	Page
Timer recording does not stop even when [■ STOP] is pressed.	<ul style="list-style-type: none"> <li>● Make sure that the recording drive is selected. Press [DRIVE SELECT] to select the recording drive.</li> </ul>	27
	<ul style="list-style-type: none"> <li>● When using the linked timer recording with external equipment, press [EXT LINK]. ("EXT-L" on the unit's display disappears.)</li> </ul>	23
The timer programme remains even after recording finishes.	<ul style="list-style-type: none"> <li>● The timer programme remains if set to daily or weekly.</li> </ul>	26, 28
Part or all of a recorded title has been lost.	<ul style="list-style-type: none"> <li>● If the power shuts down or the AC mains lead is disconnected from the household mains socket while recording or editing, the title may be lost or the disc may become unusable. We cannot offer any guarantee regarding lost titles or discs. You will have to format the disc (<b>RAM -RW(V) +RW</b>) or use a new disc.</li> </ul>	-
Cannot copy VHS to DVD.	<ul style="list-style-type: none"> <li>● The write-protect tab on the cartridge is set to "PROTECT" or the disc is protected with the "DVD Management" settings.</li> </ul>	56
	<ul style="list-style-type: none"> <li>● Some video tapes on the market (including rental videos) are copy-protected to prevent illegal reproductions. Copy-protected video tapes cannot be properly recorded.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● You cannot copy using the One Touch Copying operation button while the FUNCTION MENU window, the Timer Recording List screen, etc. are displayed.</li> </ul>	-
Cannot copy DVD to VHS.	<ul style="list-style-type: none"> <li>● A video cassette without the accidental erasure prevention tab is inserted. Use a video cassette with an accidental erasure prevention tab.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● Some DVDs on the market (including rental DVD) are copy-protected to prevent illegal reproductions. Copy-protected DVDs cannot be properly recorded.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● You cannot copy using the One Touch Copying operation button while the FUNCTION MENU window, the Timer Recording List screen, etc. are displayed.</li> </ul>	-
The sound level after editing is not equal on DVD and on VHS.	<ul style="list-style-type: none"> <li>● The sound level on DVD and VHS may not match depending on the disc. When the sound level in a particular part of the sound source is soft or loud, the sound may be recorded loudly or softly on a video tape.</li> </ul>	-
Stripe-shaped black noise is recorded.	<ul style="list-style-type: none"> <li>● An external playback device is interfering with the TV because the device is too close to the TV. Move the device away from the TV.</li> </ul>	-
The programme name and the recorded title do not match.	<ul style="list-style-type: none"> <li>● There was a programme change after timer recording was set but the recorded title still has the old programme name.</li> </ul>	-
An unusually loud sound is coming from the rotating DVD-R, etc.	<ul style="list-style-type: none"> <li>● When recording to a DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL and +RW the sound of the disc rotating may be louder than normal, however, this is not a problem.</li> </ul>	-
Cannot record video or sound from the external device.	<ul style="list-style-type: none"> <li>● The external device is not correctly connected.</li> </ul>	24, 25
	<ul style="list-style-type: none"> <li>● The proper external input channel (AV2, AV3, or DV) is not selected. Press [INPUT SELECT] to change.</li> </ul>	-
The DV auto recording function does not work.	<ul style="list-style-type: none"> <li>● If images cannot be recorded or if the recording is aborted, check the connections and the DV equipment settings.</li> </ul>	25
	<ul style="list-style-type: none"> <li>● You cannot start recording until the images from the DV equipment appear on the television.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● Recording may not be performed as desired if the time codes on the tape in the DV equipment are not successive.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● Depending on the equipment, the DV automatic recording may not operate properly.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● You can only record audio/video images on a DV tape.</li> </ul>	-

Recording Issues	VHS Recording	Page
"Ⓛ" flashes when I try to start recording. Cannot record.	<ul style="list-style-type: none"> <li>● A video cassette is not inserted. Insert a video cassette with an accidental erasure prevention tab.</li> </ul>	74
	<ul style="list-style-type: none"> <li>● The accidental erasure prevention tab has been removed. Cover the hole with adhesive tape.</li> </ul>	74

# Troubleshooting Guide

## Editing Issues

## DVD

Page

Cannot format.	<ul style="list-style-type: none"> <li>• The disc is dirty. Wipe with a damp cloth and then wipe dry.</li> <li>• Disc may be defective or of poor quality.</li> <li>• You tried formatting a disc that is not compatible with the unit.</li> </ul>	72 – 56
Cannot create chapters.  Cannot mark the start point or the end point during “Partial Delete” operation.	<ul style="list-style-type: none"> <li>• The unit writes the chapter division information to the disc when you turn it off or remove the disc. The information is not written if there is an interruption in the power.</li> <li>• These operations are not possible with still pictures.</li> <li>• You cannot set points if they are too close to each other. You cannot set an end point before a start point.</li> </ul>	– – –
Cannot delete chapters.	<ul style="list-style-type: none"> <li>• When the chapter is too short to delete, use “Combine Chapters” to make the chapter longer <b>RAM</b>.</li> </ul>	47
The available recording time doesn't increase even after deleting titles on the disc.	<ul style="list-style-type: none"> <li>• Available space on DVD-R, DVD-R DL, +R, or +R DL does not increase even after deleting previous titles.</li> <li>• Available space on DVD-RW (DVD-Video format) or +RW increases when you delete the last title.</li> </ul>	– –
Cannot create a playlist.	<ul style="list-style-type: none"> <li>• You cannot select all the chapters in a title at once as the source of playlist editing if the title also includes still pictures. Select them individually.</li> </ul>	–

### Language code list

Enter the code with the numbered buttons.

Abkhazian: 6566	Chinese: 9072	Hausa: 7265	Lithuanian: 7684	Romanian: 8279	Telugu: 8469
Afar: 6565	Corsican: 6779	Hebrew: 7387	Macedonian: 7775	Russian: 8285	Thai: 8472
Afrikaans: 6570	Croatian: 7282	Hindi: 7273	Malagasy: 7771	Samoan: 8377	Tibetan: 6679
Albanian: 8381	Czech: 6783	Hungarian: 7285	Malay: 7783	Sanskrit: 8365	Tigrinya: 8473
Amharic: 6577	Danish: 6865	Icelandic: 7383	Malayalam: 7776	Scots Gaelic: 7168	Tonga: 8479
Arabic: 6582	Dutch: 7876	Indonesian: 7378	Maltese: 7784	Serbian: 8382	Turkish: 8482
Armenian: 7289	English: 6978	Interlingua: 7365	Maori: 7773	Serbo-Croatian: 8372	Turkmen: 8475
Assamese: 6583	Esperanto: 6979	Irish: 7165	Marathi: 7782	Shona: 8378	Twi: 8487
Aymara: 6589	Estonian: 6984	Italian: 7384	Moldavian: 7779	Sindhi: 8368	Ukrainian: 8575
Azerbaijani: 6590	Faroese: 7079	Japanese: 7465	Mongolian: 7778	Singhalese: 8373	Urdu: 8582
Bashkir: 6665	Fiji: 7074	Javanese: 7487	Nauru: 7865	Slovak: 8375	Uzbek: 8590
Basque: 6985	Finnish: 7073	Kannada: 7578	Nepali: 7869	Slovenian: 8376	Vietnamese: 8673
Bengali, Bangla: 6678	French: 7082	Kashmiri: 7583	Norwegian: 7879	Somali: 8379	Volapük: 8679
Bhutani: 6890	Frisian: 7089	Kazakh: 7575	Oriya: 7982	Spanish: 6983	Welsh: 6789
Bihari: 6672	Galician: 7176	Kirghiz: 7589	Pashto, Pushto: 8083	Sundanese: 8385	Wolof: 8779
Breton: 6682	Georgian: 7565	Korean: 7579	Persian: 7065	Swahili: 8387	Xhosa: 8872
Bulgarian: 6671	German: 6869	Kurdish: 7585	Polish: 8076	Swedish: 8386	Yiddish: 7473
Burmese: 7789	Greek: 6976	Laotian: 7679	Portuguese: 8084	Tagalog: 8476	Yoruba: 8979
Byelorussian: 6669	Greenlandic: 7576	Latin: 7665	Punjabi: 8065	Tajik: 8471	Zulu: 9085
Cambodian: 7577	Guarani: 7178	Latvian, Lettish: 7686	Quechua: 8185	Tamil: 8465	
Catalan: 6765	Gujarati: 7185	Lingala: 7678	Rhaeto-Romance: 8277	Tatar: 8484	

# Frequently Asked Questions

Setup		Page
How can I enjoy High Quality Video up-converted to 1080p?	<ul style="list-style-type: none"> <li>● Connect the unit to 1080p compatible HDTV using an HDMI cable. Set "HDMI Video Format" in the Setup menu to "1080p".</li> </ul>	63, 69
What equipment is necessary to play multi-channel surround sound?	<ul style="list-style-type: none"> <li>● You cannot playback multi-channel sound on this unit without other equipment. You must connect this unit with an HDMI cable or an optical digital cable to an amplifier with a built-in (Dolby Digital, DTS or MPEG) decoder.</li> </ul>	68, 69
Can the headphones and speakers be directly connected to the unit?	<ul style="list-style-type: none"> <li>● You cannot directly connect to the unit. Connect through the amplifier, TV, etc.</li> </ul>	–
The television has a Scart terminal and component video input terminal. Which terminal should I connect with?	<ul style="list-style-type: none"> <li>● If you have a regular television (CRT: cathode ray tube) we recommend using the Scart terminal. You can enjoy high-quality RGB video from this unit by connecting to an RGB compatible television. If you have an LCD/plasma television or LCD projector compatible with progressive scan, connect through the component video terminals for high quality progressive video. If you have a CRT television or a multi-system television using PAL mode that is compatible with progressive scan, we cannot recommend progressive output as some flickering can occur.</li> </ul>	8, 9, 66, 67
Is my TV progressive output compatible?	<ul style="list-style-type: none"> <li>● All Panasonic televisions that have 625 (576)/50i · 50p, 525 (480)/60i · 60p input terminals are compatible. Consult the manufacturer if you have another brand of TV.</li> </ul>	–
When are the software updates broadcast?	<ul style="list-style-type: none"> <li>● The unit shows automatically when a software update has been broadcast, and also automatically updates the software if this function has not been switched off in the Setup menu.</li> </ul>	64

Discs		Page
Can I play DVD-Video, DVD-Audio and Video CDs bought in another country?	<ul style="list-style-type: none"> <li>● You cannot play DVD-Video if their region number does not include "2" or "ALL". Refer to the disc's jacket for more information.</li> <li>● You cannot play DVD-Audio.</li> </ul>	Cover –
Can a DVD-Video that does not have a region number be played?	<ul style="list-style-type: none"> <li>● Discs either without region encoding or region code 2 will not play on this unit.</li> </ul>	–
What are the constraints regarding DVD-R, DVD-R DL, DVD-RW, +R, +R DL, and +RW compatibility with the unit?	<ul style="list-style-type: none"> <li>● This unit records and plays DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL, and +RW, and plays DVD-RW (DVD Video Recording format).</li> <li>● This unit also records and plays high speed recording compatible discs.</li> <li>● After recording but before finalising these discs:               <ul style="list-style-type: none"> <li>– You may not be able to play and record discs on this unit after recording them on other Panasonic products or other manufacturers' equipment.</li> <li>– You may not be able to play and record discs on other equipment after recording them on this unit.</li> </ul>               After finalising the disc, however, you will be able to play it on any DVD-Video compatible player.             </li> </ul>	70, 71 94 –
What are the constraints regarding CD-R and CD-RW compatibility with the unit?	<ul style="list-style-type: none"> <li>● This unit plays CD-R/CD-RW discs which have been recorded in one of the following standards: CD-DA, Video CD, SVCD (conforming to IEC62107), MP3 and still pictures (JPEG). Close the session or finalise the disc after recording. This unit can recognize up to 300 folders (groups) and 3000 files (tracks) on a disc with MP3 or still pictures (JPEG).</li> <li>● You cannot write to a CD-R or CD-RW with the unit.</li> </ul>	71, 73 –

# Frequently Asked Questions

Recording		Page
Can I record from a commercially purchased video cassette or DVD?	<ul style="list-style-type: none"> <li>Most commercially sold video cassettes and DVDs are copy protected; therefore, recording is usually not possible.</li> </ul>	–
Can DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL, and +RW recorded on the unit be played on other equipment?	<ul style="list-style-type: none"> <li>You can play these discs on compatible equipment such as DVD players after finalising the disc on this unit.                             <ul style="list-style-type: none"> <li><b>+RW</b> It is not necessary to finalise +RW. To enable play on other DVD players, please use “Create Top Menu” in the DVD Management menu.</li> </ul> </li> <li>In any case, ability to play a disc depends on the condition of the recording, the quality of the disc, and the capability and format constraints of the DVD player.</li> <li>If you play a DVD-R DL, +R DL or +RW, use compatible equipment.</li> </ul>	57 – –
Can I record digital audio signals using the unit?	<ul style="list-style-type: none"> <li>You cannot record digital signals. The digital audio terminals on the unit are for output only. (The audio recorded from a digital video camcorder using the DV automatic recording function, however, is recorded digitally.)</li> </ul>	–
Can a digital audio signal from the unit be recorded to other equipment?	<ul style="list-style-type: none"> <li>You can record if using the PCM signal. When recording DVD, change the “Digital Audio Output” settings to the following via the Setup menu:                             <ul style="list-style-type: none"> <li>– PCM Down Conversion: “On”</li> <li>– Dolby Digital: “PCM”</li> <li>– DTS: “PCM”</li> <li>– MPEG: “PCM”</li> </ul>                             However, only                             <ul style="list-style-type: none"> <li>– As long as digital recording from the disc is permitted.</li> <li>– As long as the recording equipment is compatible with 48 kHz sampling frequency.</li> </ul> </li> <li>You cannot record MP3 signals.</li> </ul>	61 –

TV Guide		Page
Is it possible to programme a recording, with a start and end time that are different from the TV Guide system?	<ul style="list-style-type: none"> <li>You can manually change the start and end time of programmes in the Timer Recording menu.</li> </ul>	26
Can I receive TV Guide system data via a connected satellite receiver or a Set Top Box?	<ul style="list-style-type: none"> <li>No, only via the built-in tuner. To perform timer recordings with satellite receivers or Set Top Boxes, please use the External Link feature or your unit’s manual timer programming.</li> </ul>	23, 26
What happens when I unplug my unit from the household mains socket?	<ul style="list-style-type: none"> <li>The TV Guide system data will not be updated. If the unit is disconnected from the AC mains for a longer period of time, then the TV Guide data is lost. Make sure that the time is set again appropriately.</li> </ul>	–

DVB-T		Page
Which aerial is suitable for receiving digital terrestrial broadcasts?	<ul style="list-style-type: none"> <li>Any (terrestrial) roof aerial can be used. However, depending on the area where you live, a new aerial may be necessary. Consult your local TV aerial installer.</li> </ul>	–
Can this unit receive or record High Definition (HD) broadcasts?	<ul style="list-style-type: none"> <li>No, this unit cannot receive or record High Definition (HD) broadcasts.</li> </ul>	–



# Messages

On the Unit's Display		Page
H□□, F□□ (“□” stands for a service number.)	<ul style="list-style-type: none"> <li>● An error has occurred. The number following “H” or “F” depends on the status of the unit. Check the items below and in the Troubleshooting Guide. If the service number still does not disappear after the check, reset the unit (→ 75, “To restore the unit if it freezes”).</li> <li>● If the service numbers fail to clear, note the service numbers and contact a qualified service person.</li> </ul>	–
DVD □ (“□” stands for a number.)	<ul style="list-style-type: none"> <li>● The remote control and the main unit are using different codes. Change the code on the remote control.</li> </ul>	75
GUIDE	<ul style="list-style-type: none"> <li>● TV Guide data is being downloaded.</li> </ul>	64
HARD ERR*	<ul style="list-style-type: none"> <li>● If there is no change after turning the unit on and off, consult the dealer where the unit was purchased.</li> </ul>	–
NoCASSETTE*	<ul style="list-style-type: none"> <li>● You have not inserted a video cassette for the recording.</li> </ul>	74
NoERAS	<ul style="list-style-type: none"> <li>● You cannot delete items on this disc. The disc may be damaged. Use a new disc.</li> </ul>	–
NoREAD	<ul style="list-style-type: none"> <li>● The disc is dirty or badly scratched. The unit cannot record, play, or edit.</li> <li>● The disc may be incompatible or of poor quality.</li> <li>● You have used a lens cleaner and it has finished operation. Press [▲ OPEN/CLOSE] on the main unit to eject the disc.</li> </ul>	72 70, 71 91
NoWRIT	<ul style="list-style-type: none"> <li>● You cannot write to this disc. The disc may be damaged. Use a new disc.</li> </ul>	–
FINAL	<ul style="list-style-type: none"> <li>● When the screen asking if you want to finalise the disc appears, the message is displayed.</li> </ul>	21
PLEASE WAIT*	<ul style="list-style-type: none"> <li>● Displayed when the unit is started. This is not a malfunction.</li> <li>● The unit is carrying out its recovery process. You cannot operate the unit while the message is displayed.</li> </ul>	– –
PROG FULL*	<ul style="list-style-type: none"> <li>● There are already 16 timer recording programmes. Delete unnecessary timer recording programmes.</li> </ul>	28
PROTECT*	<ul style="list-style-type: none"> <li>● You have inserted a video cassette without the accidental erasure prevention tab. Use a video cassette with an accidental erasure prevention tab.</li> </ul>	74
SW-DL	<ul style="list-style-type: none"> <li>● The unit is performing a software update.</li> </ul>	64
UNSUPPORT*	<ul style="list-style-type: none"> <li>● You have inserted a disc the unit cannot play or record onto.</li> </ul>	70, 71
UNFORMAT*	<ul style="list-style-type: none"> <li>● You inserted an unformatted DVD-RAM, DVD-RW, +RW, an unused +R, +R DL or DVD-RW (DVD-Video format) that has been recorded on other equipment. Format the disc to use it. However all the recorded contents on the disc are deleted.</li> </ul>	56
F74	<ul style="list-style-type: none"> <li>● The HDMI connection could not be authenticated due to a transfer malfunction. Consult the dealer where the unit was purchased.</li> </ul>	–
F75	<ul style="list-style-type: none"> <li>● The HDMI connection could not be authenticated due to an internal data malfunction. Consult the dealer where the unit was purchased.</li> </ul>	–
U59	<ul style="list-style-type: none"> <li>● The unit is hot. The unit switches to standby for safety reasons. Wait for about 30 minutes until the message disappears. Select a position with good ventilation when installing the unit. Do not block the cooling fan on the rear of the unit.</li> </ul>	–
U61	<ul style="list-style-type: none"> <li>● (When a disc is not inserted) Displays when a malfunction has occurred during recording, playback or copy. This is displayed when the unit is in the recovery process to return to normal operation; it is not broken. Once the display disappears you can use the unit again.</li> </ul>	–

\* The message are alternately displayed.

(Continued on the next page)

# Messages

On the Unit's Display (Continued)		Page
U72 U73	<ul style="list-style-type: none"> <li>● The HDMI connection acts unusually.               <ul style="list-style-type: none"> <li>– The connected equipment is not HDMI compatible.</li> <li>– The HDMI cable is too long. Please use a cable 5.0 meters or less.</li> <li>– The HDMI cable is damaged.</li> </ul> </li> </ul>	–
U76	<ul style="list-style-type: none"> <li>● HDMI cannot be output because you are connected to a model that does not support copyright protection.</li> </ul>	–
U88	<ul style="list-style-type: none"> <li>● There was something unusual detected with the disc while recording, playing or copying; there was a power failure or the AC mains lead was disconnected while the unit was on. The unit is carrying out its recovery process. This process restores the unit to normal operation. The unit is not broken. Wait until the message disappears.</li> </ul>	77
U80 U81 U99	<ul style="list-style-type: none"> <li>● The unit fails to operate properly. Press [⏻/I] on the main unit to switch the unit to standby mode. Press [⏻/I] on the main unit again to turn the unit on.</li> </ul>	–
X HOLD	<ul style="list-style-type: none"> <li>● The Child Lock function is activated. Press and hold [OK] and [RETURN] simultaneously until "X HOLD" disappears.</li> </ul>	65

On the TV		Page
Cannot finish recording completely.	<ul style="list-style-type: none"> <li>● The programme was copy-protected.</li> <li>● The disc may be full.</li> <li>● The maximum number of title has been exceeded.</li> </ul>	– – 20
Cannot play.	<ul style="list-style-type: none"> <li>● You inserted an incompatible disc.</li> </ul>	71
Cannot record to the disc.	<ul style="list-style-type: none"> <li>● The disc may be dirty or scratched.</li> </ul>	72
Unable to format.		
Please check the disc.		
Cannot record. Disc is full.	<ul style="list-style-type: none"> <li>● <b>RAM -RW(V) +RW</b> Create space by erasing unwanted titles. Even if you erase recorded content from the DVD-R, DVD-R DL, +R or +R DL there is no increase in disc space. Available recording space on a DVD-RW (DVD-Video format) or +RW disc increases when the last title is deleted (space may increase slightly when you delete other titles).</li> </ul>	18, 45, 56
Cannot record. Maximum number of titles exceeded.	<ul style="list-style-type: none"> <li>● Use a new disc.</li> </ul>	–
No Disc	<ul style="list-style-type: none"> <li>● You haven't inserted a disc. Correctly insert a disc that the unit can play.</li> <li>● The disc is upside down. If it is a single-sided disc, insert it so the label is facing up.</li> </ul>	70, 71, 72 72
No cassette.	<ul style="list-style-type: none"> <li>● There is no video cassette in the tape deck when playing or recording TV programmes. Insert a video cassette.</li> </ul>	74
The cassette is write-protected.	<ul style="list-style-type: none"> <li>● A video cassette without a secure accidental erasure prevention tab is inserted when recording programmes. Use a video cassette with a secure accidental erasure prevention tab.</li> </ul>	74
Now recording on DVD. To watch pictures on VHS, use AV1 socket, and switch to an appropriate AV channel on your TV.	<ul style="list-style-type: none"> <li>● The VHS plays back while recording on DVD. You can watch the VHS playback by connecting to the DVD/VHS common terminals.</li> </ul>	66
Please set clock.	<ul style="list-style-type: none"> <li>● Set the clock.</li> </ul>	11
This is a non-recordable disc.	<ul style="list-style-type: none"> <li>● The unit cannot record on the disc you inserted. Insert a DVD-RAM or unfinalised DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, +R DL or +RW disc.</li> <li>● The disc may be incompatible or of poor quality.</li> </ul>	70 70, 71
This disc is not formatted properly. Format it using DVD Management in FUNCTION MENU.	<ul style="list-style-type: none"> <li>● You inserted an unformatted DVD-RAM, DVD-RW, +R, +R DL or +RW disc. Format the disc with the unit.</li> </ul>	56
⊘	<ul style="list-style-type: none"> <li>● The operation is prohibited by the unit or disc, or video cassette.</li> </ul>	–

# Unit Care

The precision parts in this unit are readily affected by the environment, especially temperature, humidity, and dust. Cigarette smoke also can cause malfunction or breakdown.

To clean this unit, wipe with a soft, dry cloth.

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, carefully read the instructions that came with the cloth.

Observe the following points to ensure continued listening and viewing pleasure.

Dust and dirt may adhere to the unit's lens over time, making it impossible to record or play discs.

Use the **DVD lens cleaner** about once every year, depending on frequency of use and the operating environment. Carefully read the lens cleaner's instructions before use.

DVD lens cleaner: RP-CL720E

## Cleaning the video heads

Dirt on the video heads can cause poor recording and play. If the picture does not improve, use an optional head-cleaning cassette. If the problem persists, seek advice from a qualified service person.

Head-cleaning cassette: NV-TCL30PT


Some optional accessories may not be available in some countries.

- Do not place the unit on amplifiers or equipment that may become hot. The heat can damage the unit.

- The unit should not be installed or operated near large magnets or electromagnetic devices. Such devices can damage pre-recorded VHS recordings.

- Do not place any heavy objects on top of the unit.
- The unit should not be mounted in a vertical position. It's designed to operate in the horizontal position.

**DO NOT**

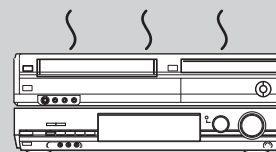

Select a position with good ventilation when installing the unit. Do not block the cooling fan on the rear of the unit.

**Before moving the unit, ensure the disc tray and cassette compartment are empty. Failure to do so will risk severely damaging the disc and the unit.**

## Cautions about condensation

Condensation can cause unreliable playback of VHS recordings. Condensation may form in the following cases,

- The unit is brought from cold surroundings into a well-heated room.
- The unit is suddenly brought from cool surroundings, such as an air-conditioned room or car, to a place which is hot and humid.
- During rainy seasons.

In any of the above-mentioned conditions, do not operate the unit for at least 2 hours. The unit is not equipped with a moisture sensor.

**The manufacturer accepts no responsibility and offers no compensation for loss of recorded or edited material due to a problem with the unit or recordable media, and accepts no responsibility and offers no compensation for any subsequent damage caused by such loss.**

**Examples of causes of such losses are**

- A disc recorded and edited with this unit is played in a DVD Recorder or computer disc drive manufactured by another company.
- A disc used as described above and then played again in this unit.
- A disc recorded and edited with a DVD Recorder or computer disc drive manufactured by another company is played in this unit.

# Glossary

## Bitstream

This is a signal compressed and converted into digital form. It is converted back to a multi-channel audio signal, e.g., 5.1-channel, by a decoder.

## CPRM (Content Protection for Recordable Media)

CPRM is technology used to protect broadcasts that are allowed to be recorded only once. Such broadcasts can be recorded only with CPRM-compatible recorders and discs.

## Decoder

A decoder restores the coded audio signals on DVDs to normal. This is called decoding.

## Dolby Digital

This is a method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2-channel) audio, these signals can also be multi-channel audio. A large amount of audio information can be recorded on one disc using this method.

When recording on this unit Dolby Digital (2 channel) is the default audio.

## Down-mixing

This is the process of remixing the multi-channel audio found on some discs into two channels. It is useful when you want to listen to the 5.1-channel audio recorded on DVDs through your TV's speakers. Some discs prohibit down-mixing. If this is the case, this unit can only output the front two channels.

## Drive

In the instance of this unit, this refers to disc (DVD) and video cassette (VHS). These perform the reading and writing of data.

## DTS (Digital Theater Systems)

This surround system is used in many movie theaters. There is good separation between the channels, so realistic sound effects are possible.

## Dynamic range

Dynamic range is the difference between the lowest level of sound that can be heard above the noise of the equipment and the highest level of sound before distortion occurs. Dynamic range compression means reducing the gap between the loudest and softest sounds. This means you can hear dialogue clearly at low volume.

## Film and Video

DVD-Videos are recorded using either film or video. The unit can determine which type has been used, then uses the most suitable method of progressive output.

**Film:** Recorded at 25 frames per second (PAL discs) or 24 frames per second (NTSC discs). (NTSC discs recorded at 30 frames per second as well.)  
Generally appropriate for motion picture films.

**Video:** Recorded at 25 frames/50 fields per second. (PAL discs) or 30 frames/60 fields per second (NTSC discs). Generally appropriate for TV drama programmes or animation.

## Finalise

A process that makes play of a recorded CD-R, CD-RW, DVD-R, etc. possible on equipment that can play such media. You can finalise DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R, and +R DL on the unit. After finalising, the disc becomes play-only and you can no longer record or edit. However, finalised DVD-RW can be formatted to become recordable.

## Formatting


Formatting is the process of making media such as DVD-RAM recordable on recording equipment.

You can format DVD-RAM, DVD-RW (only as DVD-Video format) and, +RW or unused +R and +R DL on this unit.

Formatting irrevocably erases all contents.

## Frame and Field

Frame refers to the single images that constitute the video you see on your TV. Each frame consists of 2 fields.

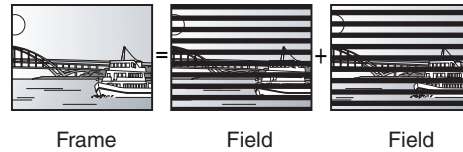

- A frame still shows 2 fields, so there may be some blurring between them, but picture quality is generally better.
- A field still shows less picture information so it may be rougher, but there is no blurring.

## HDMI (High-Definition Multimedia Interface)

Unlike conventional connections, it transmits uncompressed digital video and audio signals on a single cable. This unit supports high-definition video output [720p (750p), 1080i (1125i) and 1080p (1125p)] from HDMI AV OUT terminal. To enjoy high-definition video a high definition compatible television is required.

## JPEG (Joint Photographic Experts Group)

This is a system used for compressing/decoding color still pictures. If you select JPEG as the storage system on digital cameras, etc., the data will be compressed to 1/10-1/100 of its original size. The benefit of JPEG is less deterioration in picture quality considering the degree of compression.

## LPCM (Linear PCM)

These are uncompressed digital signals, similar to those found on CDs. LPCM sound is available when recording in XP mode.

## MPEG2 (Moving Picture Experts Group)

A standard for efficiently compressing and expanding colour video. MPEG2 is a compression standard used for DVD and satellite based digital broadcasting. This unit records programmes using MPEG2.

## MP3 (MPEG Audio Layer 3)

An audio compression method that compresses audio to approximately one-tenth of its size without any significant loss of audio quality. You can play MP3s you have recorded onto DVD-R, DVD-R DL, CD-R and CD-RW.

## Pan & Scan/Letterbox

In general, DVD-Video are produced with the intention that they will be viewed on a widescreen TV (16:9 aspect ratio), so images often don't fit regular TVs (4:3 aspect ratio). 2 styles of picture, "Pan & Scan" and "Letterbox", deal with this problem.

**Pan & Scan:** The sides are cut off so the picture fills the screen.



**Letterbox:** Black bands appear at the top and bottom of the picture so the picture itself appears in an aspect ratio of 16:9.



## Playback control (PBC)

If a Video CD has playback control, you can select scenes and information with menus.

(This unit is compatible with version 2.0 and 1.1.)

# Safety Precautions

## Progressive/Interlace

The PAL video signal standard has 625 (or 576) interlaced (i) scan lines, whereas progressive scanning, called 625p (or 576p), uses twice the number of scan lines. For the NTSC standard, these are called 525i (or 480i) and 525p (or 480p) respectively.

Using progressive output, you can enjoy the high-resolution video recorded on media such as DVD-Video.

Your television must be compatible to enjoy progressive video.

Panasonic televisions with 625 (576)/50i · 50p, 525 (480)/60i · 60p input terminals are progressive compatible.

## Protection

You can prevent accidental erasure by setting writing protection or erasure protection.

## RGB

This refers to the three primary colours of light, red (R), green (G), and blue (B) and also the method of producing video that uses them. By dividing the video signal into the three colours for transmission, noise is reduced for even higher quality images.

## Sampling frequency

Sampling is the process of converting the heights of sound wave (analog signal) samples taken at set periods into digits (digital encoding). Sampling frequency is the number of samples taken per second, so larger numbers mean more faithful reproduction of the original sound.

## Signal Quality

This is the guide for checking the aerial direction. The numbered values displayed do not indicate the strength of the signal, but the quality of the signal (the signal to noise ratio, or "S/N"). The channels you can receive are affected by weather conditions, seasons, time (day/night), region, length of the cable that is connected to the aerial, etc.

## Thumbnail

This refers to a miniature representation of a picture used to display multiple pictures in the form of a matrix.

## 1080i

In one high-definition image, 1080 (1125) alternating scan lines pass every 1/50<sup>th</sup> of a second to create an interlace image. Because 1080i (1125i) more than doubles current television broadcasts of 480i (525i), the detail is much clearer and creates a more realistic and rich image.

## 1080p

In one high-definition image, 1080 (1125) scan lines pass at the same time every 1/50<sup>th</sup> of a second to create a progressive image. Since progressive video does not alternate scan lines like interlace, there is a minimal amount of screen flicker.

## 720p

In one high-definition image, 720 (750) scan lines pass at the same time every 1/50<sup>th</sup> of a second to create a progressive image. Since progressive video does not alternate scan lines like interlace, there is a minimal amount of screen flicker.

## Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life.

Do not place heavy items on the unit.

## Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire.

Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

## AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead.

Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock.

Do not handle the plug with wet hands. This can cause electric shock.

## Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the AC mains supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

## Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service centre. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the AC mains if it is not to be used for a long time.



# Specifications

Power supply:	AC 220 V to 240 V, 50 Hz
Power consumption:	Approx. 32 W
Standby mode: (Power Save mode)	Approx. 2.2 W
(Quick Start mode)	Approx. 13.4 W

## Recordable discs:

DVD-RAM:	2X SPEED (Ver. 2.0) 2-3X SPEED (Ver. 2.1) 2-5X SPEED (Ver. 2.2)
DVD-R (SL):	1X SPEED (Ver. 2.0) 1-4X SPEED (Ver. 2.0) 1-8X SPEED (Ver. 2.0) 1-16X SPEED (Ver. 2.1)
DVD-R (DL):	2-4X SPEED (Ver. 3.0) 2-8X SPEED (Ver. 3.0)
DVD-RW:	1X SPEED (Ver. 1.1) 1-2X SPEED (Ver. 1.1) 2-4X SPEED (Ver. 1.2) 2-6X SPEED (Ver. 1.2)
+R (SL):	2.4X SPEED (Ver. 1.0) 2.4-4X SPEED (Ver. 1.1) 2.4-8X SPEED (Ver. 1.2) 2.4-16X SPEED (Ver. 1.3)
+R (DL):	2.4X SPEED (Ver. 1.0) 2.4-8X SPEED (Ver. 1.1)
+RW:	2.4X SPEED (Ver. 1.1) 2.4-4X SPEED (Ver. 1.2)

## Recording system:

DVD-RAM:	DVD Video Recording format
DVD-R:	DVD-Video format
DVD-R DL (Dual Layer):	DVD-Video format
DVD-RW:	DVD-Video format
+R	
+R DL (Double Layer)	
+RW	

## Recording time:

Max. 8 hours (using 4.7 GB disc)	
XP: Approx. 1 hour	SP: Approx. 2 hours
LP: Approx. 4 hours	EP: Approx. 6 hours or 8 hours

## Playable discs:

DVD-RAM:	DVD Video Recording format
DVD-R:	DVD-Video format, MP3, JPEG
DVD-R DL (Dual Layer):	DVD-Video format, MP3, JPEG
DVD-RW:	DVD Video Recording format, DVD-Video format
+R	
+R DL (Double Layer)	
+RW	
DVD-Video, CD-Audio (CD-DA), Video CD, SVCD*1	
CD-R/CD-RW (CD-DA, Video CD, SVCD*1, MP3, JPEG)	

## Optical pick-up:

System with 1 lens, 2 integration units  
(662 nm wavelength for DVDs, 780 nm wavelength for CDs)

## LASER Specification

Class 1 LASER Product	
Wave Length:	780 nm (CDs) 662 nm (DVDs)
Laser Power:	No hazardous radiation is emitted with the safety protection

## Television system

Tuner System:	DVB-T
Channel Coverage:	UK
UHF:	21 to 68 ch
RF converter output:	Not provided

## Video

Video system:	PAL colour signal, 625 lines, 50 fields NTSC colour signal, 525 lines, 60 fields
Recording system:	MPEG2 (Hybrid VBR)
Video In (PAL/NTSC):	AV1/AV2 (21 pin), AV3 (pin jack) 1 Vp-p 75 $\Omega$ , termination
S-Video In (PAL/NTSC):	AV2 (21 pin), AV3 (S terminal) 1 Vp-p 75 $\Omega$ , termination
RGB In (PAL):	AV2 (21 pin) 0.7 Vp-p (PAL) 75 $\Omega$ , termination
Video Out (PAL/NTSC):	AV1/AV2 (21 pin), Video Out (pin jack) 1 Vp-p 75 $\Omega$ , termination
S-Video Out (PAL/NTSC):	AV1 (21 pin), S-Video Out (S terminal) 1 Vp-p 75 $\Omega$ , termination
RGB Out (PAL/NTSC):	AV1 (21 pin), 0.7 Vp-p (PAL) 75 $\Omega$ , termination
Component video output (NTSC 480p/480i, PAL 576p/576i)	Y: 1.0 Vp-p 75 $\Omega$ , termination P <sub>s</sub> : 0.7 Vp-p 75 $\Omega$ , termination P <sub>R</sub> : 0.7 Vp-p 75 $\Omega$ , termination

## Audio

Recording system:	Dolby Digital (2 ch), Linear PCM (XP mode)
Audio In:	AV1/AV2 (21 pin), AV3 (pin jack)
Input Level:	Standard: 0.5 Vrms, Full scale: 2.0 Vrms at 1 kHz
Input Impedance:	More than 10 k $\Omega$
Audio Out:	AV1/AV2 (21 pin), Audio Out (pin jack)
Output Level:	Standard: 0.5 Vrms, Full scale: 2.0 Vrms at 1 kHz
Output Impedance:	Less than 1 k $\Omega$
Digital Audio Out	Optical terminal (PCM, Dolby Digital, DTS, MPEG)

## DV Input:

IEEE 1394 Standard, 4 Pin :1pc

## HDMI Output:

19 pin type A :1pc

This unit supports "HDAVI Control 2" function.

## VHS

Recording format:	VHS Video Cassette System Standard with FM audio
Heads:	4 Helical Scan Heads for Video 2 Helical Scan Heads for FM audio 1 Fixed Head for Normal audio
Tape speed/Recording time (with E-240 cassette):	
PAL:	SP: 23.39 mm/s, 240 min LP: 11.7 mm/s, 480 min EP: 7.8 mm/s, 720 min
NTSC:	SP: 33.35 mm/s, 168 min EP: 11.12 mm/s, 505 min

## Quick Start for Recording & EPG Display (Power Save: Off)

1 Sec. Quick Start for Recording & EPG Display\*  
(when connecting to TV using 21-pin Scart, Component Video, Video or S-Video terminals)

\* From the power on, recording on DVD-RAM starts in about 1 second after the REC button is pressed. If the GUIDE button is pressed while the unit is off, the Electronic Program Guide (EPG) displays in less than 1 second. (Quick Start Mode).

## Others

Regional Code:	# 2
Operating temperature range:	5 $^{\circ}$ C to 40 $^{\circ}$ C

Operating humidity range:  
10 % to 80 % RH (no condensation)

Dimensions (W $\times$ H $\times$ D):	430 mm $\times$ 84 mm $\times$ 345 mm
Mass:	Approx. 5.4 kg

## \*1 Conforming to IEC62107

This unit is not compatible with "Chaoji VCD" available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.



## Notes

- Specifications are subject to change without notice.



## CAUTION!

THIS PRODUCT UTILIZES A LASER.  
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

## WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,

- DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.
- USE ONLY THE RECOMMENDED ACCESSORIES.
- DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

 
## CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible.  
The mains plug of the power supply cord shall remain readily operable.  
To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from AC receptacle.



(Back of product)

DANGER – VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. FDA 21 CFR/Class IIb	
CAUTION – CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM. IEC60825-1 #A2/Class 3B	
ATTENTION – RAYONNEMENT LASER VISIBLE ET INVISIBLE CLASSE 3B EN CAS D'OUVERTURE. ÉVITER L'EXPOSITION AU FAISCEAU.	
FORSIGTIG – SYNLIIG OG USYNLIIG LASERSTRÅLING KLASSE 3B. NÅR LÅGET ER ÅBENT, UNDGÅ AT BLIVE UDSAT FOR STRÅLEN.	
VARO – AVATTAESSA OLET ALTTIINA LUOKAN 3B NÄKYVÄÄ JA NÄKYMÄTÖNTÄ LASERSTRÄLYÄ. VARO ALITSTUMISTA SÄTEILLE.	
WARNING – KLASS 3B SYNLIIG OCH OSYNLIIG LASERSTRÅLING NÄR DENNA DEL ÄR ÖPPNAD. UNDVIK EXPONERING FÖR STRÅLEN.	
VORSICHT – SICHTBARE UND UNSICHTBARE LASERSTRÄHLUNG KLASSE 3B. WENN ABDECKUNG GEÖFFNET, NICHT DEM STRAHL AUSSETZEN.	
注意 – 打开时有可见及不可见激光辐射。避免光束照射。	
注意 – ここを開くと可視及び不可視レーザー光が出ます。ビームを見たり、触れたりしないでください。VOL1J70	

(Inside of product)

- For your safety, be sure not to connect or handle equipment with wet hands.
- Your attention is drawn to the fact that recording pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

### Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

#### Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

# Index

<b>A</b> Add New DVB Services .....	59	<b>Enter name</b>		<b>Protection</b>	
<b>Audio</b>		Disc .....	44, 56	Cartridge .....	56
DVB Multi Audio .....	55	Playlist .....	44, 49	Disc .....	56
Language .....	54	Title .....	44, 45	Title .....	45
Recording .....	19, 55	<b>External Device</b> .....	24	<b>Q Link</b> .....	42
Settings.....	54, 55, 61	<b>EXT LINK</b> .....	23	<b>Quick View (Play × 1.3)</b> .....	32
<b>Auto mode</b> .....	20	<b>F</b> Finalise .....	21, 57	<b>Ratings</b> .....	60
<b>C</b> Change Thumbnail .....	46, 49	<b>Flexible Recording</b> .....	22	<b>Recording</b>	
<b>Channel</b>		Format disc.....	21, 56	Aspect .....	19
Audio .....	54	<b>FR (Flexible Recording) Mode</b> .....	20	Direct TV Recording .....	21
Set Channels .....	58, 59	<b>FUNCTION MENU Window</b> .....	41	DV automatic recording .....	25
<b>Chapter</b> .....	33, 47, 49	<b>G</b> Guide.....	12, 15, 30	External Link .....	23
<b>Chasing playback</b> .....	22	<b>H</b> HDMI .....	42, 43, 69	Flexible Recording .....	22
<b>Child Lock</b> .....	65	<b>I</b> Initialize .....	64	From a Satellite Receiver .....	23
<b>Cleaning</b>		<b>J</b> Jet Rewind .....	37	From an External Device .....	24
Disc .....	72	<b>JPEG</b> .....	34, 73	Important notes .....	19
Lens .....	91	<b>L</b> Language		Mode .....	20
Main unit .....	91	Audio .....	54	Timer .....	15, 26
Video heads.....	74, 91	Code list .....	86	<b>Remaining tape time</b> .....	39
<b>Clock setting</b> .....	11	Soundtrack .....	54	<b>Repeat Play</b> .....	55
<b>Close First Layer</b> .....	57	Subtitle .....	54	<b>Resume play function</b> .....	13
<b>Connection</b>		<b>LPCM</b> .....	61, 92	<b>RGB</b>	
Aerial .....	8, 9, 66	<b>M</b> Manual Skip .....	33	Input .....	63
Amplifier, system component .....	68	<b>Menu</b>		Output .....	63
DV IN terminal .....	25	MP3 .....	36	<b>S</b> Satellite Receiver	
External device .....	24, 66	On-screen .....	54	Connection .....	9
HDMI .....	69	Pictures.....	34	Recording .....	23
Satellite receiver.....	9	Setup .....	58	Watching.....	12
Television .....	8, 9, 66, 67, 69	<b>Mode</b>		<b>Select channel</b> .....	12
<b>Copy</b>		Recording .....	20	<b>Serial number</b> .....	7
Title/Playlist .....	51	Still Mode .....	60	<b>Setup menu</b> .....	58
<b>CPRM</b> .....	92	<b>MP3</b> .....	36, 73	<b>Shipping Condition</b> .....	64
<b>Create Chapter</b> .....	33, 47, 49	<b>N</b> Name		<b>Signal Condition</b> .....	59
<b>Create playlists</b> .....	48	Disc .....	56	<b>Simultaneous rec and play</b> .....	22
<b>Create Top Menu</b> .....	57	Entering text .....	44	<b>Slide Show</b> .....	34
<b>D</b> Default Settings .....	64	Playlist .....	49	<b>Soundtrack</b> .....	54
<b>Delete</b>		Title .....	26, 45	<b>SQPB</b> .....	38, 64
All titles .....	56	<b>New Service</b> .....	41, 59, 62	<b>Status messages</b> .....	41
Chapter .....	47, 49	<b>Noise reduction (NR)</b> .....	55	<b>Still picture</b>	
Playlist .....	48	<b>O</b> On-screen		Play .....	34
Title .....	18, 45	Digital channel information .....	40	<b>Subtitle</b>	
<b>DELETE Navigator</b> .....	18	Display .....	54	Disc.....	54
<b>Dialog Enhancer</b> .....	55	Status messages .....	41	DVB Subtitle .....	40, 62
<b>Digital channel information</b> .....	40	<b>Optical digital audio cable</b> .....	68	<b>System Update</b> .....	64
<b>Digital TEXT (MHEG)</b> .....	40	<b>Owner ID</b> .....	10, 64	<b>T</b> Thumbnail.....	46, 49, 93
<b>Direct Navigator</b> .....	32, 34, 44	<b>P</b> Partial Delete .....	45	<b>Time Slip</b> .....	33
<b>Direct TV Recording</b> .....	21	<b>PCM Down Conversion</b> .....	61	<b>Timer recording</b> .....	15, 26
<b>Divide Title</b> .....	46	<b>Picture settings</b> .....	55, 60	<b>Top Menu</b> .....	32
<b>DV automatic recording</b> .....	25	<b>Playback discs</b> .....	13	<b>Tracking</b> .....	38
<b>DVB Multi Audio</b> .....	55	Settings.....	54, 55, 60	<b>Transfer</b> .....	55
<b>DVB Subtitle</b> .....	40, 62	<b>Playback NR</b> .....	55	<b>Tuning</b>	
<b>DVD-RAM, DVD-R, DVD-R DL,</b>		<b>Playlist</b> .....	48	Auto-Setup.....	59
<b>DVD-RW, +R, +R DL, +RW</b> .....	70	<b>Power Save</b> .....	10, 64	DVB Manual .....	59
<b>DVD-Video</b> .....	32, 71	<b>Profile</b> .....	58	<b>TV Aspect</b> .....	62
<b>E</b> Edit		<b>Progressive</b> .....	55, 62	<b>TV Guide</b> .....	12, 15, 30
Chapter.....	47	<b>Properties</b>		<b>TV System (PAL/NTSC)</b> .....	63
Playlist .....	48	Playlist .....	48	<b>V</b> VHS settings.....	64
Profile .....	58	Still picture .....	35	<b>VIERA Link</b> .....	42, 43
Title.....	44	Title .....	45	<b>VISS</b> .....	38
<b>Enabling the second layer</b>		<b>V.S.S.</b> .....	55	<b>W</b> Watching television .....	12
<b>on DL discs to be recordable</b>		<b>W</b> 1080p .....	63, 93	<b>1</b> 21-pin Sart terminal .....	8, 9, 66
- <b>Close First Layer</b> .....	57	<b>2</b>			
- <b>Encrypted</b> .....	40				

Manufactured under license from Dolby Laboratories.  
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" is a registered trademark of DTS, Inc. and "DTS 2.0+Digital Out" is a trademark of DTS, Inc.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

HDAVI Control™ is a trademark of Matsushita Electric Industrial Co., Ltd.

Environment friendly printed on chlorine free bleached paper.

**Matsushita Electric Industrial Co., Ltd.**  
**Web Site:** <http://panasonic.net>

(En)  
RQT8857-B  
F0407TN0