



DVD



V I D E O



ELECTRONICS


DVD PLAYER

DVD/VIDEO-CD/CD

DVD-711

AH68-00442F

 Precautions



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

CAUTION: DVD PLAYERS USE AN INVISIBLE LASER BEAM WHICH CAN CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE PLAYER CORRECTLY AS INSTRUCTED.

CAUTIONS

Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

FCC NOTE (for U.S.A):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus meets all requirements of the Canadian Interference -- Causing Equipment Regulations.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT

Precautions

WARNING

To reduce the risk of fire or shock hazard, do not expose this DVD player to rain or moisture.

CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

Note:

- This unit can be used only where the power supply is AC 120V, 60Hz. It cannot be used elsewhere.
- This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, the DVD player cannot play the disc.
- This device is protected by U.S. patent numbers 4,631,603, 4,577,216 and 4,819,098 and other intellectual property rights. The use of Macrovision's copy protection technology in the device must be authorized by Macrovision and is intended for home and other limited pay-per-view uses only, unless otherwise authorized in writing by Macrovision. Reverse engineering or disassembly is prohibited.

Handling Cautions

- Before connecting other components to this player, be sure to turn them all off.
- Do not move the player while a disc is being played, or the disc may be scratched or broken, and the player's internal parts may be damaged.
- Do not put a flower vase filled with water or any small metal objects on the player.
- Be careful not to put your hand into the disc tray.
- Do not place anything other than the disc in the disc tray.
- Exterior interference such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- Be sure to remove the disc and turn off the player after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the player for long periods of time.
- Clean the disc by wiping in a straight line from the inside to the outside of the disc.

Disc Storage

Be careful not to harm the disc because the data on these discs is highly vulnerable to the environment.

 
- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.

Maintenance of Cabinet


For safety reasons, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

Accessories

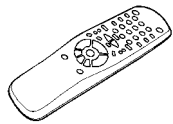


Remote Control

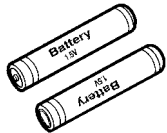 

Batteries for Remote Control (AA Size)



 Video/Audio Cable



S-Video Cable



User's Manual

Install Batteries in the Remote

- 1 Open the battery cover on the back of the remote.
- 2 Insert two AA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- 3 Replace the battery cover.

If remote doesn't operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

TABLE OF CONTENTS

General Features6 Disc Type and Characteristics7 Description8 • Front Panel Controls8	• Front Panel Display8 • Rear Panel9 Tour of the Remote Control10	SETUP
Choosing a Connection12 • Connection to an Audio System.....13	• Connection to a TV13	CONNECTIONS
Playing a Disc14 Using the Search & Skip Functions16 Using the Display Function17	Repeat Play18 Program Play & Random Play19	BASIC FUNCTIONS
Using the Disc View Function20 Selecting the Audio Language21 Selecting the Subtitle Language22	Changing the Camera Angle23 Using the Bookmark Function24 Using the Zoom and 3D Sound Functions25	ADVANCED FUNCTIONS
Using the Setup Menu26 Setting Up the Language Features27 Setting Up the Parental Control29	Setting Up the Audio Options30 Setting Up the Display Options31	CHANGING SETUP MENU
Controlling a TV with the Remote.....32 Troubleshooting Guide33	Specifications34 Warranty35	REFERENCE

Description-Front Panel

Description-Rear Panel

SETUP

Front Panel Controls

1 STANDBY / ON

- When the unit is first plugged in, the indicator lights. When STANDBY/ON is pressed on again, the light goes out and the player is turned on.

2 DISC TRAY

- Press OPEN/CLOSE to open and close the disc tray.

DISPLAY

- Operation indicators are displayed here.

OPEN/CLOSE

- Press to open and close the disc tray.

PLAY/PAUSE

- Begin or pause disc play.

STOP

- Stops disc play.

SKIP

- Use to skip a scene or music.

Front Panel Display

- 1 Angle indicator. You can select multiple angles of a scene recorded by different cameras.

- 2 Disc type indicators

- 3 Reverse playback / Pause / Forward playback

- 4 Lights when 3D surround is turned on.

- 5 DVD : Title number

- 6 DVD : Chapter number.

- 7 Video/Audio CD : Track number

- 8 Repeat play mode

- 9 Linear PCM audio output

- 10 Dolby Digital Disc

- 11 DTS (Digital Theater System) output

- 12 MPEG-2 Audio output

 
- 13 Displays various messages concerning operations such as PLAY, STOP, LOAD, RANDOM, ...

no DISC : No disc loaded.

OPEN : The disc tray is open.

LOAD : Player is loading disc information.

Tour of the Remote Control

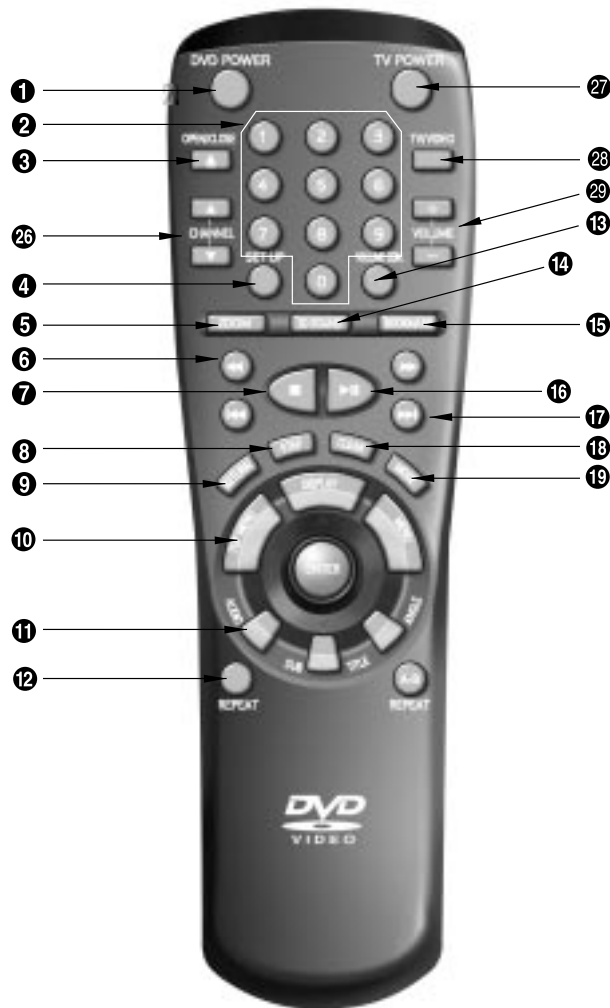

SETUP

Choosing a Connection

The following show examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player


- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to owner's manual of the additional components you are connecting for more information for those particular components.

Connection to an Audio System


Method 1



 
2ch Amplifier
Audio Input Jacks

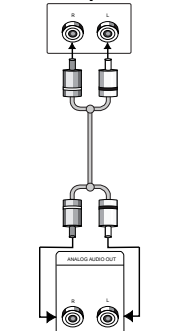

Method 2

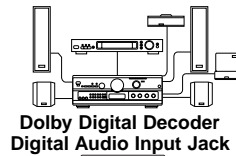 

 Dolby Digital Decoder
Digital Audio Input Jack

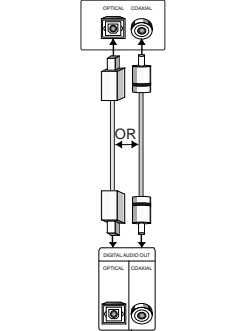

Analog Audio Out

Digital Audio Out

AUDIO

DVD

Choosing a Connection

Connection to a TV (For Video)


TV (Normal, Widescreen, Projection, etc..)

Method 1

Method 2

Method 3

 Basic Audio Good picture Better picture Best picture

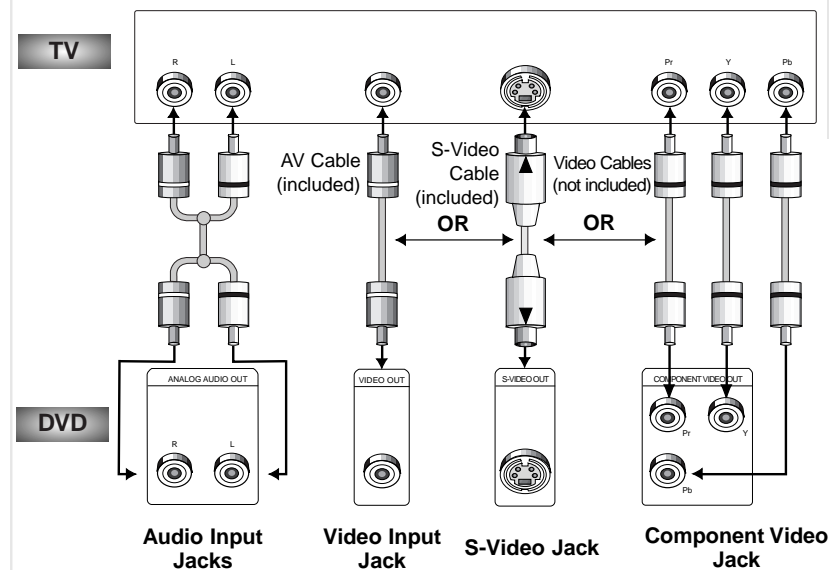

DVD

Audio Input
Jacks

Video Input
Jack

S-Video Jack

Component Video
Jack

- **Method 1** DVD Player + TV with Video Input Jack
- **Method 2** DVD Player + TV with S-Video Input Jack
(If S-Video is selected in the VIDEO OUT SELECT.)
- **Method 3** DVD Player + TV with Component Video Jacks
(If Y, Pb or Pr is selected in the VIDEO OUT SELECT.)

NOTE

- If Y, Pb or Pr is selected, S-Video may not work.
- If S-Video is selected, Y, Pb or Pr may not work.

SELECT MENU LANGUAGE

Press	1	for English
Touche	2	pour Français
Drucken	3	für Deutsch
Pulsar	4	para Español
Premere	5	per Italiano
Toets	6	voor Nederlands

Before Playback

- Turn on a TV and press the TV/VIDEO button to select video mode.
- Turn on your Audio System and select AUX, CD or DVD.
- Refer to your AUDIO User's Manual.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up :

If you want to select the language, press a NUMBER button. (This screen will only appear the very first time you plug in the player.)


Playback

- 1** Press the OPEN/CLOSE button.
The STANDBY indicator light goes out and the tray opens.
- 2** Place a disc gently into the tray with the disc's label facing up.
- 3** Press the PLAY/PAUSE button or OPEN/CLOSE button to close the disc tray.

RESUME function

When you stop disc play, the player remembers where you stopped, so when you press PLAY again, it will pick up where you left off (unless the disc is removed, the STOP button is pressed twice or the player is unplugged.).

NOTE

- If the player is left for 5 minutes in pause mode, it will stop.
- The power is automatically turned off after approximately 30 minutes have elapsed in the stop mode (auto power-off feature).
- If the player is left in the stop mode for more than one minute without any user interaction, a screen saver will be activated, and the TV screen will fade in and fade out repeatedly. Press PLAY button to resume normal play.
- This  icon indicates an invalid button press.

- 1** Stopping Playback
Press the STOP button during playback.
- 2** Removing Disc
Press the OPEN/CLOSE button.
- 3** Pausing Playback
Press the PLAY/PAUSE or STEP button on the remote during playback.
 - Screen stops, no sound.
 - To resume again, press PLAY/PAUSE button once again.
- 4** Step Motion Playback (Except CD)
Press the STEP button on the remote or turn JOG dial on the front of the DVD player during playback.
 - Each time the button is pressed, a new frame will appear.
 - No sound is heard during STEP mode.
 - Press PLAY/PAUSE to resume normal playback.(You can only perform step motion playback in the forward direction.)
- 5** Slow Motion Playback (Except CD)
Press the FWD or REV SEARCH button on the remote or turn the SHUTTLE dial on the front of the DVD player during PAUSE or STEP mode.
 - By pressing the SEARCH button, you can select slow motion playback for 1/2, 1/4 or 1/8 of normal speed.
 - No sound is heard during slow mode.
 - Press PLAY/PAUSE to resume normal playback.
 - When playing a VCD, the reverse slow motion playback will not work.

Using the Search & Skip Functions

During playback, you can search quickly through a chapter or track or use the skip function to jump to the next selection.

Searching through a Chapter or Track

1 Press the FWD or REV SEARCH button on the remote or turn the SHUTTLE dial on the front of the DVD player during PLAY mode.

- Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed(2X/4X/8X/16X/32X/normal speed, in order) on the DVD.
- Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed(4X/8X/normal speed in order) on VCD and CD.
- To return to normal speed playback, press the PLAY/PAUSE button.

Skipping Tracks

2 During playback, press the NEXT SKIP or BACK SKIP button.

- When playing a DVD, if you press the NEXT SKIP button, it moves to next chapter. If you press the BACK SKIP button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD 2.0 in MENU OFF mode, a VCD 1.1 or a CD, if you press the NEXT SKIP button, it moves to next track. If you press the BACK SKIP button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and you press the NEXT SKIP button, it moves forward 5 minutes. If you press the BACK SKIP button, it moves backward 5 minutes.
- When playing a VCD 2.0 in the MENU MODE or Track View function, if you press the NEXT SKIP button, it moves to the next MENU or the next Track View display. If you press the BACK SKIP button, it moves to the previous MENU or the previous Track View display. (See page 20.)

NOTE

- When in search mode (4X/8X/16X/32X) on a DVD or high-speed playback on a VCD, no sound will be heard.
- When 2X SCAN AUDIO is set to ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2.
- Depending on the disc, audio may not be heard when a disc is in 2X playback mode.

Using the Display Function

When Playing a DVD

1 During playback, press the DISPLAY button on the remote.

- Current title, chapter number and elapsed time will be displayed.
- Use the LEFT/RIGHT button to select a title or a chapter number. Use the UP/DOWN button or Number buttons to enter a different title or chapter number, then press the ENTER button.
- To enter the time from which you want to start, use the LEFT/RIGHT button to select, then use the Number buttons to enter the time. Then press the ENTER button.

2 Press the DISPLAY button on the remote twice.

- Current audio, subtitle and volume control will appear.
- To make the screen disappear, press the DISPLAY button again.

When Playing a CD/VCD

1 During playback, press the DISPLAY button on the remote.

- Current track number, elapsed time and volume control will be displayed.
- Use the LEFT/RIGHT button to select a track. Use the UP/DOWN button or Number buttons to enter a different track number, then press the ENTER button.
- To enter the time from which you want to start, use the LEFT/RIGHT button to select, then use the Number buttons to enter the time. Press the ENTER button.
- To make the screen disappear, press the DISPLAY button again.



NOTE

What is a Chapter?

Each Title on a DVD can be divided into chapters (similar to tracks on an audio CD).

 
What is a Title?

A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.


Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc (VCD/CD only).

DVD

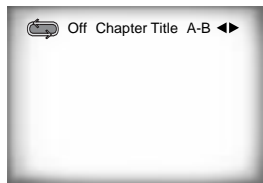

VCD/CD

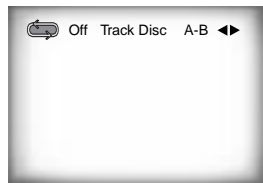 

When playing a DVD

- 1 Press the REPEAT button on the remote. Repeat screen appears.
- 2 Select Chapter, Title or A-B using the LEFT/RIGHT button.

- A-B Repeat

- Press the REPEAT button. Select A-B on screen with the LEFT/RIGHT button. Or press the A-B button on the remote.
- Press ENTER at the point where you want the repeat play to start (A). The B is automatically highlighted.
- Press ENTER at the point where you want the repeat play to stop (B).
- The A-B Repeat that you set plays until you turn Repeat off.

- 3 Press ENTER.

- 4 To return to normal playback press REPEAT again, then press the LEFT/RIGHT button to select Off and press ENTER.

Program Play & Random Play

Program Playback (DVD/VCD/CD)

- 1 Press the MODE button.
- 2 Use the LEFT/RIGHT button to select PROGRAM. Press the ENTER button.
- 3 Use the LEFT/RIGHT button to select the first chapter (or track) to add to the program. Press the ENTER button. The selection numbers appear in the Program Order box.
- 4 Press the PLAY/PAUSE button. The disc will be played back in programmed order.

 
 


NOTE


NOTE

- DVD repeats playback by chapter or title, CD and VCD repeat playback by disc or track.
- Depending on the disc, the Repeat function may not work.
- If the title or track is completed before marking the end (B), the end of title or track becomes B automatically.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.

Using the Disc View Function

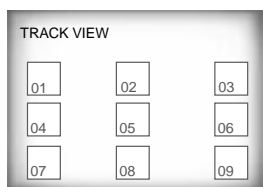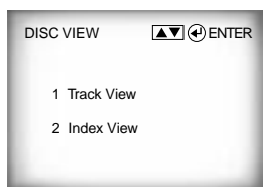

(example)

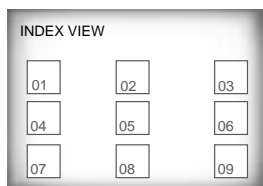 

(example)

Track View (VCD)

Displays the beginning view of each track and the track number.

- 1 During playback, press the TOP MENU button.
- 2 Press the UP/DOWN button to select TRACK VIEW. Press the ENTER button.
- 3 Select the desired view by pressing the UP/DOWN or LEFT/RIGHT buttons.
- 4 Press the ENTER button.

Index View (VCD)

Displays the equally divided 9 views of the current playing track.

 
- 1 During playback, press the TOP MENU button.
- 2 Press UP/DOWN button to select INDEX VIEW. Press the ENTER button.
- 3 Select the desired view by pressing UP/DOWN or LEFT/RIGHT buttons.
- 4 Press the ENTER button.

NOTE

- In stop mode on VCD, press the TOP MENU button and the TRACK VIEW will be displayed.
- When pressing the TOP MENU button with a DVD; the disc's TITLE MENU function comes up. A disc must have at least two titles for the TITLE MENU function to work.
- When pressing the TOP MENU button with a CD; the unit enters the INTRO mode. INTRO lets you listen to the beginning of each track for about 10 seconds.

Selecting the Audio Language

You can select a desired language quickly and easily with the AUDIO button.



(example)

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 8 audio languages.
- **How to have the same audio language come up whenever you play back a DVD;** Refer to "Setting Up the Language Features" on page 28.

Using the AUDIO Button

- 1 Press the AUDIO button.
- 2 Use the UP/DOWN button to select the desired language on a DVD.
- The audio and subtitle languages are represented by abbreviations.
- 3 Use the UP/DOWN button to select STEREO, R CHANNEL or L CHANNEL. (On VCD/CD)

Using the MENU Button

When playing a DVD

- 1 Press the MENU button.
- 2 Use the UP/DOWN button to select AUDIO information.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select 'ENGLISH'.
- 5 Press the ENTER button.

When playing a VCD

In disc version 2.0, the MENU button works as a conversion switch between MENU ON and MENU OFF mode. When playing a VCD 1.1 or CD, the MENU button will not work.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE button.



Using the SUBTITLE button

- 1 Press the SUBTITLE button.
- 2 Use the UP/DOWN button to select the desired subtitle language.
- 3 Use the LEFT/RIGHT button to determine whether or not the subtitle will be displayed.

 
- Initially, the subtitling will not appear on screen.
- The audio and subtitle languages are represented by abbreviations.

Using the MENU button

- 1 Press the MENU button.
- 2 Use the UP/DOWN button to select SUBTITLE information.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select the desired language.
- 5 Press the ENTER button.

When playing a VCD

In disc version 2.0, the MENU button works as a conversion switch between MENU ON and MENU OFF mode.
When playing a VCD 1.1 or CD, the MENU button will not work.



(example)

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- **How to have the same subtitle language come up whenever you play back a DVD;** Refer to "Setting Up the Language Features" on page 28.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can select the Angle function.

Using the ANGLE button



(example)

Check to see if an 'ANGLE ([ANGLE])' mark is present at the upper right hand corner of the screen.

- 1 When an 'ANGLE' mark is shown, press the ANGLE button.
- 2 Use the UP/DOWN button to select the desired screen angle. Then press the ENTER button.
- 3 To turn off the display, press the ANGLE button again.

 
Using the Master Volume Control Function

Press the DISPLAY button twice. Use the UP/DOWN button to select a suitable volume.

- Master Volume Control function lets you adjust the volume of the player's output. This is useful for matching the player's output level to other equipment in your system.
- Master Volume Control function on CD titles with DTS will not work under VOLUME : 96 level.
- When the DIGITAL OUTPUT is set to BITSTREAM in the SETUP MENU, the Volume Control function will not work.

Using the Bookmark Function

The Bookmark function lets you select parts of a DVD or VCD (MENU OFF mode) so that you can quickly find the section at a later time.

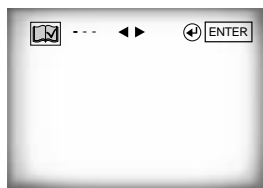

Using the Bookmark Function (DVD/VCD)

- 1 During playback, press the BOOK-MARK button on the remote. A marker will be displayed.
- 2 Use the LEFT/RIGHT button to move to the desired bookmark icon.
- 3 When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).
- 4 Press the BOOKMARK button to turn off the display.

Recalling a Marked Scene



- 1 During playback, press the BOOKMARK button on the remote.
- 2 Use the LEFT/RIGHT button to select a marked scene.
- 3 Press the PLAY/PAUSE button to skip to the marked scene.

Clearing a Bookmark

- 1 During playback, press the BOOK-MARK button on the remote.
- 2 Use the LEFT/RIGHT button to select the bookmark number you want to delete.
- 3 Press the CLEAR button to delete a bookmark number. Press the BOOKMARK button to turn off display.

NOTE

- Up to three scenes may be marked at the same time.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.
- Depending on the disc, the Bookmark function may not work.

Using the Zoom & 3D Sound Functions

Using the Zoom Function (DVD/VCD)

- 1 During playback or pause mode, press the ZOOM button on the remote. A square will be displayed on screen.
- 2 Use the UP/DOWN or LEFT/RIGHT button to select the part of the screen you want to zoom.
- 3 Press the ENTER button.

- During DVD playback, press ENTER to zoom in 2X/4X/normal in order.
- During VCD playback, press ENTER to zoom in 2X/normal in order.

Using the 3D Sound Function



NOTE

- 3D Sound is possible only on discs recorded using DOLBY SURROUND or DOLBY DIGITAL. However, some of these discs do not contain rear channel sound signals.
- Depending on the disc, the Zoom and 3D Sound function may not work.

The simulated surround effect (SPATIALIZER N-2-2) depends on the disc contents. If you connect the unit to your stereo system, you can enhance sound quality and produce a greater surround effect. This feature is useful when you are using the DVD player with a two channel stereo through the analog outputs. (Discs which are recorded with LPCM or DTS will not work. When the DIGITAL OUTPUT is set to BITSTREAM in the SETUP MENU, the 3D Sound function will not work.)

- 1 During playback, press the 3D SOUND button. The 3D SOUND mark will be displayed on screen. (Be sure the DIGITAL OUTPUT is set to PCM.)
- 2 Press the UP/DOWN button to turn the 3D Sound feature on or off.

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

SETUP MENU	
1 Player Menu	English
2 Disc Menu	English
3 Audio	English
4 Subtitle	Automatic
5 Parental	Unlocked
6 Audio Options	
7 Display Options	

1 With no disc playing, press the **SETUP** button on the remote.

1 PLAYER MENU : Setup of the Display Language (See page 27)

Use the Player preference menu to select the language for the player's on-screen displays.

2 DISC MENU : Setup of the Menu Language (See page 27)

Use the Menu preference menu to select the language you want a DVD's disc menu to be displayed in.

3 AUDIO : Setup of the Audio Language (See page 28)

Use the Audio preference menu to select the sound-track language.

4 SUBTITLE : Setup of the Subtitle Language (See page 28)

Use the Subtitle preference menu to select the language the disc's subtitles are to be displayed in.

5 PARENTAL : Setup of the Parental Level (See page 29)

Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.

6 AUDIO OPTIONS : Setup of the Audio Options (See page 30)

7 DISPLAY OPTIONS : Setup of the Display Options (See page 31)

Use to select which type of screen you want to watch and several display options.

2 Use the **UP/DOWN** button on the remote to access the different features.

3 Press the **ENTER** button to access the sub features.

To make the setup screen disappear after setting up, press the **SETUP** button again.

NOTE

Depending on the disc, some Setup Menu selections may not work.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, it will come up automatically every time you watch a movie.

e.g Setting up in ENGLISH.

SETUP MENU	
1 Player Menu	English
2 Disc Menu	English
3 Audio	English
4 Subtitle	AUTOMATIC
5 Parental	UNLOCKED
6 Audio Options	
7 Display Options	

PLAYER MENU LANGUAGE	
▶ 1	English
2	Francais
3	Deutsch
4	Español
5	Italiano
6	Nederlands

Using the Player Menu

1 With no disc playing, press the **SETUP** button.

2 Use the **UP/DOWN** button to select the **PLAYER MENU**.

3 Press the **ENTER** button.

4 Use the **UP/DOWN** button to select 'ENGLISH'.

5 Press the **ENTER** button.

- ENGLISH is selected and the screen returns to **SETUP MENU**.

- To make the **SETUP MENU** disappear, press the **RETURN** button.

e.g Setting up in ENGLISH.

DISC MENU LANGUAGE	
▶ 1	English
2	Francais
3	Deutsch
4	Español
5	Italiano
6	Nederlands
7	Others

Using the Disc Menu Language

This function changes the language only for the text on the disc menu screens.

1 With no disc playing, press the **SETUP** button.

2 Use the **UP/DOWN** button to select **DISC MENU**.

3 Press the **ENTER** button.

4 Use the **UP/DOWN** button to select 'ENGLISH'.

- Select "OTHERS" if the language you want is not listed.

5 Press the **ENTER** button.

- ENGLISH is selected and the screen returns to **SETUP MENU**.

Setting Up the Language Features



Using the Audio Language

- 1 With no disc playing, press the SETUP button.
- 2 Press the UP/DOWN button to move to AUDIO.
- 3 Press the ENTER button.
- 4 Press the UP/DOWN button to select 'ENGLISH'.
 - Select "ORIGINAL" if you want the default soundtrack language to be the original language the disc is recorded in.
 - Select "OTHERS" if the language you want is not listed.
- 5 Press the ENTER button.
 - ENGLISH is selected and the screen returns to SETUP MENU.



Using the Subtitle Language

 
- 1 With no disc playing, press the SETUP button.
- 2 Use the UP/DOWN button to select SUBTITLE.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select 'ENGLISH'.
 - Select "AUTOMATIC" if you want the subtitle language to be the same as the language selected as the audio preference.
 - Select "OTHERS" if the language you want is not listed. Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.
- 5 Press the ENTER button.
 - ENGLISH is selected and the screen returns to SETUP MENU.

NOTE

- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.

Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating - which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.



CHANGING
SETUP MENU

Setting Up the Audio Options

AUDIO OPTIONS	
1 Digital Output	PCM
2 DTS	Off
3 Dynamic Compression	On
4 2X Scan Audio	Off

RETURN ▲▼

1 With no disc playing, press the SETUP button.

2 Use the UP/DOWN button to select AUDIO OPTIONS. Then press the ENTER button.

3 Use the UP/DOWN button to select the desired item. Then press the LEFT/RIGHT button.

1 DIGITAL OUTPUT

1 PCM : Converts to PCM(2CH) 48kHz/16Bit audio. Select PCM when using the Analog Audio Outputs.

2 BITSTREAM : Converts to Dolby Digital BITSTREAM (5.1CH). Select BITSTREAM when using the Digital Audio Output.

NOTE : Be sure to select the correct Digital Output or no audio will be heard.

2 DTS

1 ON : Outputs DTS BITSTREAM via digital output only. Select DTS when connecting to a DTS DECODER.

2 OFF : Doesn't output digital signal.

3 DYNAMIC COMPRESSION

1 ON : To select dynamic compression.

2 OFF : To select the standard range.

4 2X SCAN AUDIO

1 ON : Turns 2X audio on.

2 OFF : Turns 2X audio off.

Though 2X SCAN AUDIO is ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2.

NOTE

• How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.

- Certain audio features of this product manufactured under a license from Desper Products, Inc. Spatializer® and circle-in-square device are trademarks owned by Desper Products, Inc.
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories Inc. All rights reserved.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Setting Up the Display Options

DISPLAY OPTIONS	
1 Tv Aspect	4:3 L-Box
2 Still Mode	Auto
3 Screen Messages	On
4 Front Display	Auto
5 Black Level	Off

RETURN ▲▼ ENTER

1 With no disc playing, press the SETUP button.

2 Use the UP/DOWN button to select DISPLAY OPTIONS. Then press the ENTER button.

3 Use the UP/DOWN button to select the desired item. Then press the LEFT/RIGHT button.

1 TV ASPECT

Depending on the type of television you have, you may want to adjust the screen setting (aspect ratio).

1 4:3 LETTER BOX :

Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.

2 4:3 PAN-SCAN :

Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)

3 16:9 WIDE :

You can view the full 16:9 picture on your widescreen TV.

2 STILL MODE

Prevent picture shaking in still mode and display small text clearer.

1 FIELD : Select this feature when the screen shakes in the AUTO mode.

2 FRAME : Select this feature when you want to see small letters more clearly in the AUTO mode.

3 AUTO : When selecting AUTO, FIELD/FRAME mode will be automatically converted.

3 SCREEN MESSAGES

Use to turn on-screen messages on or off.

4 FRONT DISPLAY

Adjust the brightness of the unit's front panel display.

1 BRIGHT : Makes the Front Panel Display bright.

2 DIM : Makes the Front Panel Display dim.

3 AUTO DIM : Makes the Front Panel Display dim automatically when playing a DVD.

5 BLACK LEVEL

Adjusts the brightness of the screen.

NOTE

• How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.

Controlling a TV with the Remote

The remote can also be set up to control most TVs. To program the remote, use the code that corresponds to your brand.



- 1 Turn on the TV
- 2 Point the DVD's remote at the TV.
- 3 While holding the TV POWER button down, enter the code for your brand.

e.g For Samsung D TVs

While holding down the TV button, enter 0.

TV Codes	
CODE	BRAND
0	SAMSUNG D
1	SAMSUNG F, LG A, LOEWE, PHILIPS, FINLUX A, YOKO, LOEWE OPTA A, MITSUBISHI A, PHONOLA A, RADIOLA A, SCHNEIDER
2	SAMSUNG A
3	SAMSUNG B
4	SAMSUNG C
5	SAMSUNG E
6	TOSHIBA A
7	PANASONIC A
8	GRUNDIG A, BLAUPUNKT, SIEMENS
9	SHARP A
SETUP	HITACHI A
DISPLAY	SANYO A, AKAI, FISHER
OPEN/CLOSE	HITACH B, SABA A, THOMSON A, NORDMENDE A
AUDIO	THOMSON B, SABA B, TELEFUNKEN A, NORDMENDE B, BRANDT, FERGUSON, PIONEER A, TELEAVIA, HITACH C
SUB TITLE	SONY A
DVD POWER	TOSHIBA B, SANYO B, SHARP B, SONY B, MITSUBISHI B
ANGLE	TOSHIBA C, GRUNDIG B, FINLUX B
TOP MENU	TOSHIBA D
MENU	TOSHIBA E
RETURN	PHILIPS A, PHONOLA B, RADIOLA B
REV SEARCH	TOSHIBA F, GRUNDIG C, CGE, IMPERIAL, MIVAR
REPEAT	SABA C, BANG&OLUFSEN, LOEWE OPTA B, BRIONVEGA, FINLUX C, FORMENTI, PHILIPS B, SINGER, SINUDYNE, METZ, WEGA, PHONOLA C, RADIOMARELLI
FWD SEARCH	NOKIA, PANASONIC B, SABA D, PIONEER B, REX, SELECO, SALORA
BACK SKIP	HITACHI D, NORDMENDE C, PANASONIC C, THOMSON C, SABA E, TELEFUNKEN B, CONTINENTAL EDISON
PLAY/PAUSE	PANASONIC D
NEXT SKIP	PANASONIC E
STOP	PANASONIC F
STEP	TELEFUNKEN C
CLEAR	MIVAL
MODE	LG B
A-B REPEAT	SHARP C
BOOKMARK	JVC

- 4 If the TV turns off, setup is complete.

Enter other codes of the same brand if the first code does not work.


- 5 To operate the TV, use the "TV Function Buttons" described on page 14.

NOTE

The remote may not be able to control every model TV of the brands listed.

Troubleshooting Guide

Before requesting service (troubleshooting)

Problem	Action	Page
No operations can be performed with remote.	<ul style="list-style-type: none"> Check the batteries in the remote. May need replacing. Operate the remote control at a distance of no more than 20 feet. Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try remote again. 	P4
Disc does not play.	<ul style="list-style-type: none"> Ensure that the disc is installed with the label side facing up. Check the region number of the DVD. This player cannot play CD-ROMs, DVD-ROMs, CD-R, etc. Insert a DVD, a VIDEO-CD or a CD. 	P7
5.1 channel sound is not being reproduced.	<ul style="list-style-type: none"> 5.1 channel sound is reproduced only when the following conditions are met : <ol style="list-style-type: none"> The DVD player is connected with the proper amplifier The disc is recorded with 5.1 channel sound. Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside. Check if your audio system is connected and working properly. 	P12-13
The  icon appears on screen.	<ul style="list-style-type: none"> The features or action cannot be completed at this time because: <ol style="list-style-type: none"> The DVD's software restricts it. The DVD's software doesn't support the feature (e.g., angles). The feature is not available at the moment. You've requested a title or chapter number or search time that is out of range. 	P16-19 P22-26
Disc Menu doesn't appear.	<ul style="list-style-type: none"> Check if the disc has a Menu. 	P21-22
Playback mode differs from the Setup Menu selection.	<ul style="list-style-type: none"> Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function. 	P26-31
The screen ratio cannot be changed.	<ul style="list-style-type: none"> The Screen Ratio is fixed on your DVDs. 	P31
No audio.	<ul style="list-style-type: none"> Make sure you have selected the correct Digital Output in the Audio Options Menu. 	P30
Forgot password	<ul style="list-style-type: none"> Press power on from a cold start with no disc in the unit. Press the STOP and PLAY buttons simultaneously on the front panel for three seconds. The Select Menu Language display will appear. Select the desired language button. Press the SETUP button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. Press ENTER and the Create Password display will appear. You can now set your rating level and change your password to a new number. 	P29
If you experience other problems.	<ul style="list-style-type: none"> Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again. If the problem still cannot be solved, please contact your nearest authorized service center. 	

Specifications

General	Power Requirements	AC 120 V, 60 Hz
	Power Consumption	17 W
	Weight	6.8 lbs
	Dimensions	W 16.9 in x D 11.0 in x H 3.5 in
	Operating Temperature Range	+41°F to +95°F
	Operating Humidity Range	10 % to 75 %
Disc	DVD (DIGITAL VERSATILE DISC)	Reading Speed : 11.45 ft/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 5" (COMPACT DISC)	Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 74 min.
	CD : 3 1/2" (COMPACT DISC)	Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 20 min.
	VCD : 5"	Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 74 min. (Video + Audio)
Video Output	Composite Video	2 channel : 1.0 Vp-p (75 Ω load) Y : 1.0 Vp-p (75 Ω load)
	Component Video	Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
	S-VIDEO	Luminance Signal : 1.0 Vp-p (75 Ω load) Chrominance Signal : 0.286 Vp-p (75 Ω load)
Audio Output	2 Channel	L(1/L), R(2/R)
	*Frequency Response	48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz
	*S/N Ratio	115 dB
	*Dynamic Range	105 dB
	*Total Harmonic Distortion	0.003 %

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

Warranty (for USA users only)

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS AMERICA, INC. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for the following limited warranty period:

One (1) Year Parts and Labor

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States, and does not include transportation, installation, removal or reinstallation. Warranty repairs must be performed by SAMSUNG's authorized service center. To receive warranty service, the original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge with new or reconditioned parts, if found to be defective during the limited warranty period specified above. The product must be returned during the warranty period with transportation charges prepaid to SAMSUNG's designated service center. Prior to returning any product for warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. SAMSUNG does not warrant uninterrupted or error-free operation of the product. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; applications and uses for which this product was not intended; failures or problems which are caused by products or equipment not supplied by SAMSUNG; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; improper connection with any peripheral; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating instructions, customer adjustments, maintenance and environmental instructions that are covered and prescribed in the instruction book; use of non-SAMSUNG or unauthorized parts, supplies, accessories or equipment which damage this product or result in service problems; failures or problems due to incompatibility with other equipment.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT,

REFERENCE

Warranty (for Canada users only)

LIMITED WARRANTY TO ORIGINAL PURCHASER

REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

SAMSUNG ELECTRONICS AMERICA, INC. - CONSUMER ELECTRONICS CUSTOMER SERVICE
1 SAMSUNG PLACE, LEDGEWOOD, NJ 07852
Tel: 973-691-6200, Fax: 973-691-6201
1-800-SAMSUNG (1-800-726-7864)
www.sosimple.com

Samsung Electronics Canada Inc.(SECA), warrants that this product is free from defective material and workmanship.

SECA further warrants that if this product falls to operate properly within the specified warranty period and the failure is due to improper workmanship or defective materials, SECA will repair or replace the product at its option.

All warranty repairs must be performed by a SECA Authorized Service Center. (The name and address of the location nearest you can be obtained by calling toll free: 1- 800- SAMSUNG)

LABOR

One year (Carry- in)

PARTS

One year

On carry-in models, transportation to and from the service center is the customer's responsibility.

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to the authorized service center at the time service is requested.

EXCLUSIONS (WHAT IS NOT COVERED)

This warranty does not cover damage due to accident, fire, flood and/ or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use or damage that occurs in shipping. Exterior and interior finish, lamps, glass are not covered under this warranty. Customer adjustments which are explained in the instruction manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in Canada.