

# Welcome

## Quick start guide

**1**

Connect

**2**

Install

**3**


Enjoy

**PHILIPS**


# What's in the box



Handset

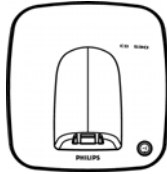

Base station

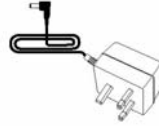

Power supply for base station



Line cord



2 AAA rechargeable batteries



Battery door



User Guide



Quick Start Guide



Warranty card

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.



In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

**WARNING** Always use the cables and batteries that came with your phone.

# 1 Connect

## Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity sockets.
2. Connect the line cord and the power cable to proper connector at the back of the base station.

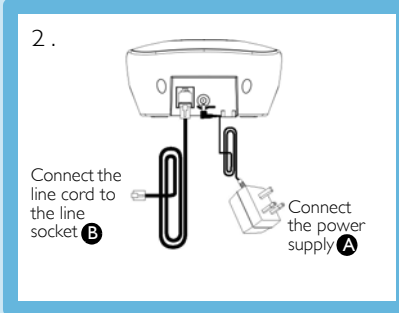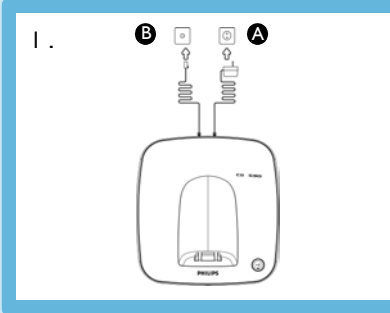


3. Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.

# 2 Install

## Insert batteries and charge

### Insert batteries

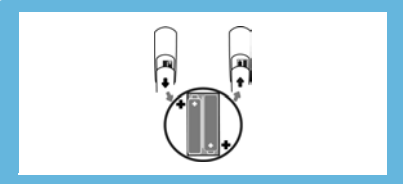

### Charge handset for 24 hours




### Set date and time

1. Press MENU.
2. Scroll to **Clock & Alarm** and press SELECT.
3. Press SELECT to enter **Set Date/Time**.
4. Enter current time (HH:MM) and current date (DD/MM/YY) and press SELECT.


Now, you are ready to use your phone.

# 3 Enjoy


## Make a call

Enter the phone number and press .

OR

Press  and enter the phone number.

## Answer a call

When the phone rings, press  key.

 

 
 

 

 
## End a call

Press  key.

 

 
 
 
 
 


 
## Adjust earpiece volume during a call

Press  to select from <VOLUME 1> to <VOLUME 5>.


 

 
 
 

## Set the ring melody

1. Press  MENU, scroll  to **Personal Set** and press  SELECT, press  SELECT to enter **Handset Tones**, scroll  to **Ring Melody** and press  SELECT.
2. Scroll  to your desired melody to play the melody.
3. Press  SELECT to set the ring melody.  
A confirmation beep is emitted and the screen returns to previous menu.


## Store a contact in the phonebook


1. Press  MENU, scroll  to **Phonebook** and press  SELECT, press  SELECT to enter **New Entry**.
2. Enter the name of the contact (maximum 12 characters) and press  OK.
3. Enter the number (maximum 24 digits) and press  OK.
4. Enter the SMS Box number and press  OK. (The default SMS Box is 0. To modify, press  CLEAR and then enter the number (0 to 9).)
5. Scroll  to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press  SELECT to confirm.  
A long confirmation beep tone is emitted.

## Access the phonebook


1. Press  in stand-by mode or press  MENU, scroll  to **Phonebook** and press  SELECT, scroll  to **List Entry** and press  SELECT.
2. Press  to browse the phonebook.

### Switch the handset On/Off



Press and hold  key for 5 seconds to switch off the handset in stand-by mode.

 


 






Short press  key to switch on the handset again.

### Keypad lock/unlock

Press and hold  key for 2 seconds to lock and unlock keypad in stand-by mode.


### Paging

1. Press  key on the base until the handset starts to ring.
2. Once the handset is retrieved, press  to end the paging.

| Press   | To   |
|---|--|
|    | Enter the main menu from stand-by mode.<br>Select the function displayed on the handset screen directly above it.<br>Activate mute function during a call.   |
|    | Go to redial list from stand-by mode.<br>Select the function displayed on the handset screen directly above it.  |
|    | Answer an incoming external or internal call.<br>Insert R for operator services when on the line.  |
|    | Hang up a call.<br><i>Long press</i> from menu browsing to return to stand-by mode, short press to return to previous menu.<br><i>Long press</i> in stand-by mode to switch off the handset, short press to switch on the handset again. |
|    | Access call log from stand-by mode.<br>Scroll up a menu list or go to the previous phonebook or call log record.<br>Increase earpiece volume during a call.<br>Go to the previous character in editing mode.                             |
|  | Access phonebook from stand-by mode.<br>Scroll down a menu list or go to the next phonebook or call log record.<br>Decrease earpiece volume during a call.<br>Go to the next character in editing mode.                                  |
|  | Initiate an internal call.   |
|  | Answer an incoming call in handsfree mode.<br>Activate and deactivate the loudspeaker during a call.   |
|  | Dial # in stand-by mode.<br><i>Long press</i> to mute the ringer in stand-by mode.<br>Insert a pause in dialling mode.<br>Switch between upper and lower case in editing mode.   |
|  | Dial * in stand-by mode.<br><i>Long press</i> to activate and deactivate keypad lock.  |

# Troubleshooting

For more information, please refer to p.51 of CD530 user manual and p.59 of CD535 user manual.

| Problem  | Solution   |
|--|--|
| <ul style="list-style-type: none"><li>• No dialling tone</li></ul>   | <ul style="list-style-type: none"><li>• Check the connections</li><li>• Charge the batteries for at least 24 hours</li><li>• Use the line cable provided</li></ul>       |
| <ul style="list-style-type: none"><li>• Poor audio quality</li></ul>   | <ul style="list-style-type: none"><li>• Move closer to the base station</li><li>• Move the base station at least one metre away from any electrical appliances</li></ul> |
| <ul style="list-style-type: none"><li>• The  icon does not appear</li></ul> | <ul style="list-style-type: none"><li>• Check connections</li><li>• Move closer to the base station</li></ul>  |
| <ul style="list-style-type: none"><li>• Caller Line Identification (CLI) service does not work</li></ul>   | <ul style="list-style-type: none"><li>• Check your subscription with your network operator</li></ul>   |

## Need help?

### User Manual

Refer to the User Manual that is supplied with your CD530/535.

### Online help

[www.p4c.philips.com](http://www.p4c.philips.com)



Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.  
2006 © Koninklijke Philips Electronics N.V. All rights reserved.

[www.philips.com](http://www.philips.com)

3111 285 26381