PowerMate® ES Series System Board Configuration

Jumper Settings

| Jumper S | ettings | |
|----------------------------|--------------------------------------|--|
| USB Keyboard Wakeup | JP2 3 2 1 | Factory setting. Disables system wakeup by USB keyboard. |
| Keyboard at Power On | JP1 000 1 2 3 | Factory setting. Disables keyboard at power on. |
| | JP1 | Enables keyboard at power on. |
| Save to RAM | JP3 | Factory setting. Enables Suspend mode Save to RAM (STR) function. |
| USB Port Selection | JP13 3 2 1 000 000 6 5 4 | Factory setting.JP13Disables frontEnables front3 2 1USB port andUSB port andImage: Comparison of the set of the |
| CMOS Clear | JP19 1 2 3 | Factory setting. Maintains system board configuration in CMOS RAM with onboard battery. |
| | | Clears CMOS while system power is off. Return jumper to pins 2 and 3 before powering system on. |
| Caution: | | nt damage to the system board, aring CMOS while power is on. |
| BIOS Recovery | JP15 0 1 2 0 3 | Factory setting. Sets the system for normal operation. The BIOS uses current configuration information and passwords at power on. |
| Clear Caution BIOS | | To enable BIOS recovery for a corrupted system, remove the jumper. Wait 10 seconds. Replace the jumper on pins 1 and 2. |
| | JP15 1 2 3 | Restores Safe BIOS settings as the default BIOS settings and loads the BIOS Setup at power on. |
| | | |

Website: www.nec-computers.com Technical Support: 800-632-4525

A WARNING

Turn off and unplug the system unit before adding options or changing jumper settings.

Note: See your *PowerMate ES Series User's Guide* for detailed option installation information.

Memory Upgrade

- Maximum memory supported: 512 MB; minimum memory required: 32 MB.
- Memory type and size can vary between sockets.
- System supports 168-pin, 100-MHz non-ECC SDRAM modules in 32-MB, 64-MB, 128-MB, and 256-MB configurations.
 Use NEC memory upgrade kits for the best compatibility with your system. For memory compatibility information, call Technical Support.
- Single- or double-sided DIMMS are supported.
- No jumper setting required.

Processor Upgrade

See your user's guide for detailed processor upgrade information.

