

OR Put the handset on the base station or charger to end the call.

- 4.4 Adjust Volume There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for the earpiece volume.
- During a call:
- Press <UP/DOWN> to select volume 1-5. The current setting is shown When you end the call, the setting will remain at the last selected level 4.5 Mute a Call You can talk to someone nearby without letting the caller hear you during a call.
- During a call: Press <C/MUTE> to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you. Press <C/MUTE> again to unmute the microphone.
- 4.6 Turn off the Handset Ringer

In idle, pres and hold <HASH/#> to turn off the handset ringer. The "RINGER OFF" icon is displayed on the LCD. Note: The display will still flash the Call icon and show CALL or the Caller Display number, when there is an incoming call, even if the ringer is turned off To turn the ringer back on, press and hold <HASH/#> again.

4.7 Turn on the Keypad Lock

- In idle, press and hold <STAR[#]> to turn on the keypad lock, and the "KEY LOCK" icon is displayed on the LCD.
- Note: You can still use <TALK ON> to answer a call when the handset is ringing. To turn the keypad lock off, press and hold <STAR/*> again.
- 4.8 Redial the last number
- You can redial any of the 5 last numbers called. If you have stored a name in phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.
- 4.8.1 Redial a Number from the Redial List
- Press <REDIAL> to access the redial list.
 Note: If the redial list entry shows a name, press <Hash/#> to view the number of this entry. 2. Press <UP/DOWN> to browse the redial list.
- Press <TALK ON> to dial to the selected redial number.
 Note: If there are no numbers in the redial list, the display shows "EMPTY"
 - 11

- Press <MENU/OK> to show ADD TO PB.
- Press <MENU/OK> and then enter the name you want to use in the
- phonebook. Press <MENU/OK> and then modify the number, if necessary.
- Press <MENU/OK> and then modify the number, if necessary.
 Press <MENU/OK> to show <MELODY 1>.
 Press <UP/DOWN> to browse the ringtone list. The respective ringtone will be played when browsing the ringtone list. (Note: the selected melody will only be played if you subscribe to Caller Display and the incoming number matches the stored number.)
 Press <MENU/OK> to confirm, and the entry will be stored.
- 4.8.3 Delete a Redial Number
- Follow Steps 1 and 2 in section 4.8.1
- Press <MENU/OK> and <UP/DOWN> to select DELETE. Press <MENU/OK> to confirm, and the entry will be delete
- 4.8.4 Delete all Redial List entries

- Follow Steps 1 and 2 in section 4.8.1. Press <MENU/OK> and <UP/DOWN> to select **DELETE ALL** Press <MENU/OK> to display <CONFIRM?>. Press <MENU/OK> to confirm. All entries will be deleted and the display will show <EMPTY>.

4.9 Find the Handset

You can locate the handset by pressing <FIND> on the base station. All the handsets registered to the base will produce the paging tone and show "PAGING" on the display. You can stop the paging by pressing <TALKON>/ <TALK OFF> /<C/MUTE> on any handset or <FIND> on the base again Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.10 Make an Internal Call (Multi - handset versions only)

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

- Note: If only one handset is registered to the base station, when <C/MUTE> is pressed, it will display "NOT POSSIBLE"
 - 12

TABLE OF CONTENTS

- 1 IMPORTANT SAFETY INSTRUCTIONS 2 INSTALLING YOUR PHONE. 2.1 CONNECTING THE BASE STATION 2.2 INSTALLING AND CHARGING THE BATTERIES. 3 GETTING TO KNOW YOUR PHONE. HANDSET OVERVIEW. BASE STATION WITH TELEPHONE ANSWERING MACHINE (TAM) CONTROL . DISPLAY ICONS AND SYMBOLS. TEXT AND DIGIT ENTRY TABLE... 4 USING YOUR PHONE . MAKE A CALL UIRECT DIALLING
 UIRECT DIALLING
 CALL FROM THE OHONEBOOK
 CALL TROM THE CALL LIST(ONLY AVAILABLE WITH CALLER DISPLAY)
 CALL TROM THE REDIAL LIST
 ANSWER A CALL
 END A CALL
 END A CALL END A CALL ADJUST EARPIECE VOLUME. MUTE A CALL TURN OFF HANDSET RINGER TURN ON THE KEYPAD LOCK REDIAL THE LAST NUMBER HE LAST NUMBER A NUMBER FROM THE REDIAL LIST REDIAL NUMBER INTO THE PHONEBOOK A REDIAL NUMBER ALL REDIAL LIST ENTRIES 4.10.2 CALL ALL HANDSETS. 4.10.3 TRANSFER AN EXTERNAL CALL TO ANOTHER HANDSET. 4.10.4 MAKE A 3-WAY CONFERENCE CALL.
- 5 PRIVATE PHONEBOOK ADD A NEW PHONEBOOK ENTRY SEARCH A PHONEBOOK ENTRY. 5.4 EDIT A PHONEBOOK ENTRY... 5.5 DELETE A PHONEBOOK ENTRY... 5.6 DELETE ALL PHONEBOOK ENTR 5.7 CHECK THE PHONEBOOK USA

Base Station with Telephone Answeri AGE LED Dn when TAM is ON off when TAM is OFF is when new ges received ming call. ress to se the playback e, or the base ringer e during incoming	ng Machine (TAM) Control TAM ON/OFF () Press to turn on the answering machine. Press again to turn off the answering machine. A+ Press to increase the playback Volume, or the base ringer volume during incoming ringing.
ACKWARD 4 to repeat playing rent message from	PLAY/STOP ►/■ Press to play the message Press to stop the message playback
ginning. twice to skip back previous message.	SKIP FORWARD Press to skip the current message and play the next
TE X once to delete essage during playback dle: Press and hold te all the old messages.	FIND THO Press to find your handset. It will ring for approximately 60 seconds

3.3 Display Icons and Symbols

The LCD display gives you information on the current status of the telephone



- Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
- Steady when an intercom call is in progress. Flashes when there is an incoming internal call.
- Indicates a call is in progress on that handset.
- Indicates that your answering machine (TAM) is on and flashes when there is a new message.
- 4.10.1 Intercom Another Handset

 - In idle mode, press <C/MUTE> and all the other registered handset numbers will display, along with a "9".
 Enter the number of the handset that you want to call, or press the <9 > key to call all handsets. The called handsets.
 The called handset rings and <TALK ON> must be pressed on that handset to establish the intercom call.

 - to establish the intercom call. Note: If only two handsets are registered to the base station, pressing <C/MUTE> will call the other handset immediately. Note: If there is an external call while you are on an intercom call, you'll hear warning beeps, and you have to end the intercom call, before you can answer the external call.

4.10.2 Call All Handsets
1. In idle mode, press <C/MUTE> and the registered handsets will display. 2. Press the < 9 > key to ring to all registered handsets

4.10.3 Transfer an External Call to another handset

- During an external call: Press <MENU/OK> to show INTERCOM.
- Press <MENU/OK> to show all the other registered handset numbers plus "9".
- Enter the number for the handset you want to transfer the call to.
- The external call is put on hold automatically and the called handset Press <TALK ON> on the called handset to establish an internal call.
- Press <TALK OFF> on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
- The external call is transferred to the called handset. Note: If the other handset has not answered the intercom call, you can stop the intercom and return to the external call by pressing <TALK OFF>
- 4.10.4 Make a 3-way Conference Call
- The conference call feature allows one external call to be shared with two The three parties can share the conversation and no additional network

subscription is required During an external call:


- Follow Steps 1 to 4 in section 4.10.3. Press and hold <STAR / * > on the calling handset to establish the conference call call. Either handset can exit the conference by pressing <TALK OFF>, leaving the other handset still connected to the external call. 13

6 CALLER DISPLAY (NETWORK DEPENDENT) VIEW THE CALL LIST..... STORE A CALL LIST NUMBER INTO THE PHONEBOOK.. DELETE AN ENTRY IN THE CALL LIST... DELETE ALL CALL LIST ENTRIES

Remote Card

.10

8.5

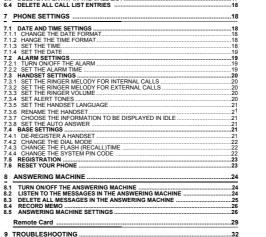

- Indicates that the handset ringer is switched off

2

- Steady when an alarm is set. Flashes when the alarm is sounding.
- Indicates that the keypad is locked.

or cancel the current action

5 PRIVATE PHONEBOOK

5.1 Add a New Phonebook Entry

5.2 Search a Phonebook Entry

5.3 View a Phonebook Entry

your phonebook entry. 6. Press <MENU/OK> to store the phonebook entry.

press <MENU/OK> to access the phonebook.

In idle:

3.4 Menu Structure

10 DECLARATION OF CONFORMITY ...

11 GUARANTEE AND SERVICE

- oo Indicates when you have a new Voice Mail message (This is a Caller Display service and is not usually available from UK network providers.)
- Indicates when the battery is fully charged.
- Whole icon flashes when the battery is charging. Internal block icon flashes when the battery is in final charging stage. Indicates when the battery needs charging.
- Flashes when low battery power level is detected.
- Indicates when there are more characters or numbers in front of those being displayed
- Indicates when there are more characters or numbers after those being displayed.
- LEFT SOFT KEY function. Press to access the main menu.
- OK LEFT SOFT KEY function. Press to confirm the current selection \star Indicates a new TAM message is playing or a new Call List entry is being
- displayed.
- Indicates you can scroll up / down the menu items / Phonebook list Redial list / Call List

In idle mode, press <MENU/OK> to go to CALL LIST, the first option in the

8

Character provide phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (Note: the different ringtones only play if you subscribe to Caller Display and the incoming number matches the stored number.) Phonebook entries are stored alphabetically by name.

1. Press <MENU/OK> and <UP/DOWN> to select PHONEBOOK and then

1. Press <a href="https://www.initialized-communication-c

Press <MENU/OK> and <UP/DOWN> to select PHONEBOOK and then

Enter the first letter of the name using the alphanumeric keys(e.g. if it begins with C, press the 2 key three times), and then <UP/DOWN> to scroll to the entry you want.

Press <MENU/OK> and <UP/DOWN> to select PHONEBOOK and then

4 Press <MENU/OK> and <UP/DOWN> to review the name number and

14

press <MENU/OK> to access the phonebook. Press <UP/DOWN> to select the desired phonebook entry.

3. Press <MENU/OK> and <UP/DOWN> to select VIEW.

menu list. Press <UP> or <DOWN> to go to other options in the menu list.

Press <MENU / OK> to enter a sub-menu or function.

Press <C / MUTE> to go back to the previous leve Refer to the following for the menu structure.

- RIGHT SOFT KEY function. Press to start an intercom call.
- SRIGHT SOFT KEY function. Press to go back to the previous menu level RICKI second the function. C RIGHT SOFT KEY function. Press to clear a character, stop the alarm, or mute/unmute the microphone during a call.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the

Read and understand all the instructions.

risk of fire or electric shock.

- Follow all warnings and interinstructions marked on the product.
 Follow all warnings and instructions marked on the product.
 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Keep your phone away from hot, humid conditions or strong sunlight.
- and don't let it get wet or use this product near water (for exam a bath tub, kitchen sink, swimming pool).
- 5) Do not overload wall outlets and extension cords as this can result in the
- 6) Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions: • When the power supply cord or plug is damaged or frayed.
- If the product does not operate normally by following the operating instructions.
 If the product has been dropped and the cabinet has been damaged.
 If the product exhibits a distinct change in performance.
- 7) NEVER use your phone outdoors during a thunderstorm-unplug the
- base from the telephone line and the mains socket when there are st in your area. Damage caused by I ightning is not covered by the gua Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities
- 10) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
- Do not use third party charging bays. Damage may be caused to the batteries. 12) Please ensure the batteries are inserted in the correct polarity.
- Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

<IIP/DOWN>

Alphanumeric Editing (For phonebook name editing and real

&

 Key Press
 1st
 2nd
 3rd
 4th
 5th
 6th
 7th
 8th

 1
 space
 1
 <t

 3
 D
 E
 F
 3

 4
 G
 H
 I
 4

 5
 J
 K
 L
 5

 6
 M
 N
 O
 6

 7
 P
 Q
 R
 S
 7

8 T U V 8 9 W X Y Z 9

5.4 Edit a Phonebook Entry

5.5 Delete a Phonebook Entry

5.6 Delete all Phonebook entries

5.7 Check the Phonebook Usage

total 20 available spaces.

show <FMPTY>.

In idle:

3.5 Text and Digit Entry Table

a short pause

3.5.1 Character Set

Key Pr	ss <menu< th=""><th></th><th></th><th></th><th></th><th><up <="" th=""><th></th><th></th><th>UP/ DWN></th></up></th></menu<>					<up <="" th=""><th></th><th></th><th>UP/ DWN></th></up>			UP/ DWN>
Main Menu	CALL LIST	PHONEBOOK	BS SETTINGS	HS SETTINGS	REGISTRAT	TION	DEFAULT	ANS. MACHIN	ΙE
Sub menu		Shows EMPTY or the first phonebook Entry. Then <0K> for: ADD PB STATUS or VIEW EDIT DELETE DELETE ALL PB STATUS	BS RINGER RING VOLUME DELETE HS DIAL MODE FLASH TIME CHANGE PIN	ALARM RING SETUP TONE SETUP LANGUAGE RENAME HS HS DISPLAY AUTO ANSWER DATE & TIME	PIN?		PIN?	MSG PLAYBAC DELETE ALL MEMO TAM ON/OFF TAM SETTINGS ANSWER TAM LANC OGM SET ANSWER RECORD REMOTE COMPRES BS SCRE	MODE SUAGE TINGS DELAY TIME ACC SSION ENING

The following table shows you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset. In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips: 1. Once a character is selected, the cursor will move to the next position after

a short pause. You can move the cursor within the text with the <UP/DOWN> keys to amend the text entry. Press <C/MUTE> to delete the last character. Press and hold <C/MUTE> to delete the entire text string.

ming handset)			Number Editing (For phone number editing,date/time editing)
1	9th	10th	
			1
			2
			3
			4
			5
			6
			7
			8
1			9
			0, or P (Pause) if press and hold
			*
			#

Note: There are some different characters if the handset language is changed (7.3.5).

Press <MENU/OK> and <UP/DOWN> to select PHONEBOOK and then

- press <MENU/OK> to access the phonebook. 2. Press <UP/DOWN> to select the desired phonebook entry.
- Press <MENU/OK> and <UP/DOWN> to select EDIT
- Press <MENU/OK> to display the current name
 Edit the name and press <MENU/OK>.
- Edit the number and press <MENU/OK>
- Press <UP/DOWN> to select the ringtone and press <MENU/OK> to confirm.
- Press <MENU/OK> and <UP/DOWN> to select PHONEBOOK and then press <MENU/OK> to access the phonebook.
- Press <UP/DOWN> to select the desired phonebook entry Press <MENU/OK> and <UP/DOWN> to select DELETE.
- Press <MENU/OK> to confirm, and the entry will be de
- Press <MENU/OK> and <UP/DOWN> to select PHONEBOOK and then press <MENU/OK> to access the phonebook.
- Press <MENU/OK> and <UP/DOWN> to select DELETE ALL.
- Press <MENU/OK> to display <CONFIRM?>.
 Press <MENU/OK> to confirm. All entries will be deleted and the display will
- You can check how many phonebook entries are stored in your handset and how many phonebook entries are available for you to store in the phonebook. 1. Press <MENU/OK> and <UP/DOWN> to select PHONEBOOK and then press <MENU/OK> to access the phore
- Press <MENU/OK> and <UP/DOWN> to select PB STATUS.

15

Press <MENU/OK> to display how much of the phonebook is being used for example <14/20 USED> means 14 entries are stored out of the

Package contents The package contains the following items

- 1 Handset 1 Base station 1 Mains power adapter
- Telephone line cord · 2 AAA rechargeable batteries
- 1 User manual

Note: If you have a Twin, Triple or Quad system, you will also have the requisite extra handset(s) and batteries, and a charger pod for each extra handset.

Connection and conditions for use:

Connection and conditions for use: You can connect your phone to a direct exchange line (DEL) on a local exchange with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX. Do not connect as an extension to a payphone. The ringer equivalence numbers (REN) of all equipment (phones, fax machines, modems, ect.) connected to an exchange line must not add up to more than 4, otherwise one or more of them may not ring and/or answer calls correctly. The phone has a PEN of 1 unless

phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

Handset - Base Connection

1) When purchased, all handsets are already registered to the base unit and should link to it when they are all powered up.

2) To use your cordless handset and base unit together, you must be able to establish a radio link between them. The signal between the handset and the base is to 300 metres outdoors or 50 metres indoors. Be aware that:

> Any large metal object, such as a refrigerator, mirror or filing cabinet, between the handset and the base unit may block the radio signal.

Other solid structures, like walls, may reduce the signal strength.
 Other electrical equipment may cause interference and/or affect the range

3) Do not place close to another telephone, a TV or audio equipment - it may cause

4) Out of Range warning. If you hear a warning tone during a call, and/or the sound

4 USING YOUR PHONE

4.1 Make a Call 4.1.1 Preparatory Dialling

Enter the phone number and press <TALK ON> to connect to the line and dial the number. When entering the number, if you make a mistake, press <C/MUTE> to delete digits.

4.1.2 Direct Dialling Press <TALK ON> to connect to the line and then enter the phone number (Note: if you enter a wrong digit you cannot correct it with the <C/MUTE> key.)

4.1.3 Call from the phonebook Press <MENU/OK>, <DOWN> and then <MENU/OK> again to access the phonebook and press <UP/DOWN> to select the desired phonebook entry. Press <TALK ON> to dial out the selected phonebook entry.

Note: The alphanumeric keys provide a short-cut to find entries beginning with the corresponding letters.

4.1.4 Call from the Call List (only available with Caller Display) Press <UP> to access the Call List and press <UP/DOWN> to select the desired

Call List entry. Press <TALK ON> to dial out the selected Call List entry. Note: You can also access the Call List by pressing <MENU/OK> twice

415 Call from the redial list

Press <REDIAL> to access the redial list and press <UP/DOWN> to select the desired redial number. Press <TALK ON> to dial out the selected redial number.

4.1.6 Call timer

Your handset automatically times the duration of every call. The call timer is displayed as soon as you answer a call or 15 seconds after dialling and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).

4.2 Answer a Call

- If the handset is not on the charging cradle: When the phone rings, press <TALK ON> to answer a call. Note: If AUTO ANSWER is set to ON, then lifting the handset off the base or charger will answer the call automatically, and no buttons need to be pressed.

10

 $\omega N \rightarrow$

Veva Rem Key See Note y in your re e default cod e the User Gu et in User Gu PIN should fc PIN is entere automatically yu can also te: If your ansv the remote a You can then (Default Remc 1520 ote system Rey Gu 0 use pera <u>d</u> 15 the figure fig figure figure figure figure figure figure figure figure figure f 00000. 8.5.9. st be er without codes ŝ tion any 14 I <u>9</u> times s of the s o off, the OGM the 4 nsecu hov PIN te th <u>.</u>. đ side phone êly stil set press Ren l playing Remote the line 0 of this will ente Inato ***** y, and the Access will be r er into De ģ sec

6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry. If the call is from someone who withheld their number, e.g. by dialling 14 "WITHHELD" will display.

If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, "OUT OF AREA" will display.

If you've got new Caller Display records, the handset will display "X NEW CALLS" in standby mode. The New Calls indication will remain until all the new call records have been viewed

6.1 View the Call List

All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. An nanswered calls which have not been viewed are marked with a <*> icon at the centre of the bottom line of the display.

- Press <UP> to access the call list
- 9. Press <UP/IDWN> to select the desired entry.
 9. Press <UP/IDWN> to select
- Press <MENU/OK>, <UP/DOWN> to show DETAILS, and then <MENU/OK> to display the date and time of the call. Press <MENU/OK> to go back to the previous screen.
- 6.2 Store a Call List Number into the Phonebook
- Store a Call List runner more than the second secon

17

- Edit the number if necessary. Press <MENU/OK> and <UP/DOWN> to select the ringtone. Press <MENU/OK> to store the phonebook entry and return to the calls list.
- 6.3 Delete an entry in the Call List

Follow Steps 1 and 2 in Section 6.1.
 Press <MENU/OK> and <UP/DOWN> to select DELETE.
 Press <MENU/OK> to confirm.

7.5 Registration

IMPORTANT: When you purchase a phone system, all handsets are already registered to your base, so you do not need to register them Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit. with each handset's number (1 to 5) shown on its display. (Note: each handse can only be registered to one base.

To register a new handset to your base:

- Press and hold <FIND> on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed

within this time. 2. Press <MENU/OK> to display PIN?-----. 3. Press <MENU/OK> to display PIN?----. 4. Enter the 4-digit system PIN (default 0000). 5. Press <MENU/OK> to confirm, and the display will show SEARCHING. If the handset registration is successful, you will hear a confirmation tone and the <antenna icon> will stop flashing.

The handset will automatically be allocated the next available handset number This handset number is shown in the handset display in standby mode. If the handsetregistration is unsuccessful, the https://www.standby.com will still flash and the display will return to REGISTER, so you will need to repeat the registra


7.6 Reset Your Phone

You can reset your phone to the default settings . After a reset, all your personal settings, call list entries, redial list entries, and answering machine messages will be deleted but your phonebook remains unchanged.

- Press <MENU/OK> and <UP/DOWN> to select **DEFAULT**. Press <MENU/OK> to display PIN?----
- Enter the 4-digit system PIN (default 0000)

4. Press <MENU/OK> to confirm, and the phone will be reset to its default
5. Press <MENU/OK> to confirm, and the phone will be reset to its default

23

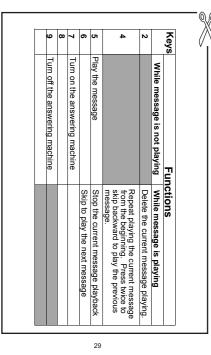

PHONE SETTINGS

7.1.1 Change the Date Format

7.1.2 Change the Time Format

Press <MENU/OK> and <UP/DC (12 HR or 24 HR).
 Press <MENU/OK> to confirm.
 7.1.3 Set the Time

8 ANSWERING MACHINE

nessages before any new ones can be recorded.

8.1 Turn On/Off the Answering Machine

handset LCD.

5 Press <MENU/OK> to com

updated by the network when you receive an incoming cal

- Detect an Can tak tentures Follow Steps 1 and 2 in Section 6.1. Press <MENU/OK> to select DELETE ALL. Press <MENU/OK> to toplay <CONFIRM?>. Press <MENU/OK> to confirm. All entries will be deleted and the display will show

our phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

7.1 Date and Time Settings If you subscribe to Caller Display the time and date settings will be automatically

The Caller Display service only sends the month and date, not the year, so you

Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS. Press <MENU/OK> and <UP/DOWN> to select DATE & TIME. Press <MENU/OK> to show DATE FORMAT. Press <MENU/OK> and <UP/DOWN> to select your desired date format

Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS. Press <MENU/OK> and <UP/DOWN> to select DATE & TIME. Press <MENU/OK> and <UP/DOWN> to select SET TIME. Press <MENU/OK> and then enter the time information in 24 hour format.

Press <MENU/OK> to confirm.
 Note: If the time has been set before, the current time will display, otherwise, "HH:MM" will display.

18

Your phone includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within

calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone. If the answering machine memory is full, the Handset will display TAM FULL alternately with the handsets name or time, depending on the handset standby display mode set (see section 7.3.7), and you will have to delete some memorane here no were non-see the secretion.

Some answering machine functions can be operated from the base, including

You can turn the answering machine on or off using the handset. When the answering machine is set to ON, calls will be answered after the

set answer delay and the caller can then leave you a message. When the answering machine is set to OFF, calls will be answered after 14

rings and the answer only message will be played to your callers. They will not be able to leave you a message.

Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE. Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE. Press <MENU/OK> and <UP/DOWN> to select AM ON/OFF. Press <MENU/OK> to confirm.

If answering machine is set to ON, <TAM ON icon> displays on the

8.2 Listen to the Messages in the Answering Machine

Press <MENU/OK> to showt MSG PLAYBACK.

8.5.8 Change the Compression Rate

rate.
 Press <MENU/OK> to confirm.

8.5.9 Activate Remote Access

(Default 0000).

unauthorised access of your answering machine

Press <MENU/OK> to confirm the new PIN.

ote access on or off respectively

to prevent any remote access at all.

Press <MENU/OK> to confirm

8.5.9.1 Change the 4-Digit Remote Access PIN

handset LCD. > If answering machine is set to OFF, <TAM ON icon> will not display on the

When new messages are recorded on the answering machine, the <TAM icon-flashes on the handset display until all the new messages are played. After a new message is played it will be saved as an old message automatically unless it is deleted.

Press <MENU/OK> to start message playback through the earpiece and the screen displays the date and time information of the message received.

Three different compression rates (HIGH, MEDIUM and LOW) are provided for you to select different quality levels of recording incoming message. The lower the compression rate, the higher the recording quality level attained, but the

shorter the total recording time available. (LOW=7 minutes, MEDIUM=10 minutes, HIGH=15 minutes approx).

Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE. Press <MENU/OK> and <UP/DOWN> to select AM SETTINGS. Press <MENU/OK> and <UP/DOWN> to select COMPRESSION Press <MENU/OK> and <UP/DOWN> to select ComPRESSION Press <MENU/OK> and <UP/DOWN> to select your desired com

Your phone lets you check your messages, or otherwise operate your

The 4-digit remote access PIN code is used to prevent other people from

Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE.

Press <MENU/OK> and <UP/DOWN> to select TAM SETTINGS. Press <MENU/OK> and <UP/DOWN> to select CHANGE PIN.

Press <MENU/OK> to display PIN? ----, and then enter the current PIN

Press <MENU/OK> to display NEW PIN? ----, and then enter your new 4-digit PIN code.

Press <MENU/OK> to display CONFIRM? ----, and then enter your new 4-digit PIN code again.

Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, you must enter the new system PIN at step 5 again.

8.5.9.2 Activate or Deactivate the Remote Access To allow remote access this option must be turned ON, but you can turn it OFF

prevent any remote access at all. Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE.

Press <MENU/OK> and <UP/DOWN> to select TAM SETTINGS.

Press <MENU/OK> and <UP/DOWN> to select ON or OFF to turn the

30

Press <MENU/OK> and <UP/DOWN> to select REMOTE ACC.

answering machine, by calling the answering machine when you are away from home and then dialling a 4-digit remote access PIN from a tone-dialling phone.

Old messages will be played after all new messages are played completely

Press <MENU/OK> and <UP/DOWN> to select ANS, MACHINE,

3.2 Base Stauon win rooms, details of button operations. The answering machine can also be controlled and set up using the handset menu functions, as below.

Playing messages and turning the answering machine on or off. See section "3.2 Base Station with Telephone Answering Machine (TAM) Control" for further

Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS. Press <MENU/OK> and <UP/DOWN> to select DATE & TIME. Press <MENU/OK> and <UP/DOWN> to select TIME FORMAT. Press <MENU/OK> and <UP/DOWN> to select your desired time to

- Press <MENU/OK> and then enter the date inform in the format you set in Section 7.1.1.
 - B. Press MENU/OK to confirm.
 Note: If the date has been set before, the current date will display, otherwise "DD-MM-YY" will display.

7.1.4 Set the Date

*DO-MM-YY will display.
7.2 Alarm Settings
You can set an alarm time on this phone. When an alarm is set, the <ALARM lcon> is shown on the handset display. When the alarm time is reached, the <ALARM lcon> and *ALARM Ion> fash on the handset display and the alarm tone rings for 45 seconds. You can press any key to disable the alarm. If the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold <TALK OFF> while the alarm is sounding, to stop the alarm and turn off the snooze function. Note:

A key press will still disable the alarm even if the handset keypad is locked

Press <MENU//OK> and <UP/DOWN> to select HS SETTINGS

Press <MENU/OK> and <UP/DOWN> to select DATE & TIME Press <MENU/OK> and <UP/DOWN> to select SET DATE.

- When the alarm inigation addate the alarm over in the indirect keyped is looked when the alarm rolume level is the same as the settings of the handset ringer volume. If the handset ringer is set to VOLUME OFF, the alarm still sounds at VOLUME 1 level.
- at VOLUME 1 level. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds.
- **TALK OFF>** to disable the alarm, the display will revert to the call duration. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.
- 7.2.1 Turn on/off the Alarm
- Press <MENU/OK> to she watering of the starting of the second sec
- rress <MIENU/UK> to show ALARM.
 Press <MENU/UK> and <UP/IOWN> to select ON/OFF.
 Press <MENU/OK> to confirm.
 Note: If ON is selected, you will be asked to set the alarm time.
- 7.2. Set the Alarm Time (if Alarm time is set to be ON)
 1. Follow Steps 1 to 4 in Section 7.2.1.
 2. Enter the alarm time in 24 hour format.
 3. Press -OK> to display "SNOOZE".

- Press <OK> and <UP/DOWN> to select snooze ON or OFF.
 Press <OK> to confirm.
- Note: A <STAR icon> is placed at the centre of the bottom of the handset display to indicate that it is a new message. When a message has been played, the <STAR icon> will disappear and will

19

- Not be shown when you listen to this message again. Note: If there are no messages, the handset display will briefly show "00-00 00-00" then return to MSG PLAYBACK.
- During message playback, press </P> or <DOWN> to increase or decrease the message playback volume respectively.
- Press <MENU/OK> and <UP/DOWN> to select STOP, FORWARD,
- PREVIOUS. DELETE to perform the following functions during message playback
- STOP: Stop the current message playback and return to the ANS. MACHINE menu. FORWARD: Skip to play the next message. The date and time information
- FORWARD: Skip to play the next message. The date and time information of the next message will display if there is another message. PREVIOUS: Repeat playing the current message from the beginning. The date and time information of the current message will display. DELETE: Delete the current message and the next message will be played. Note: Alternatively, you can use the following shortcut keys to control different
- operations during message playback. Press <key 5> to stop message playback. Press <key 5> to once to restart the current message from the beginning. Press twice to skip backward to play the previous message. Press <Key 6> to skip forward to play the next message.
- Press <Key 2> to delete the current message being played
- 8.3 Delete All Messages in the Answering Machine
- Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE. Press <MENU/OK> and <UP/DOWN> to select DELETE ALL.
- Press <MENU/OK> to display CONFIRM? Press <MENU/OK> to delete all old messages.

8.5.9.3 Access Your Answering Machine Remotely

Note: If there are no more messages in the answering machine, "EMPTY "will display and return back to ANS. MACHINE menu.

25

You can ring your phone from another tone-dialling phone to switch the

answering machine on or off, and/or listen to your messages remotely.

Iswering machine on or oit, and/or listen to your messages remotely. Place a call from a tone-dialling phone to your phone. When the answering machine answers the call and starts playing the OGM, press the <* > key. The OGM will stop playing. Enter the 4-digit Remote Access PIN (default PIN is 0000). You will hear a single confirmation beep if the PIN is accepted, and you then need to press 5 to start playing any messages.

Note: The ² must be entered while the OGM is still playing, and the 4-digit PIN should be follow without any delays. Note: If the 4-digit Remote Access PIN is entered incorrectly you will hear three error beeps, and you can try again, but if it happens three times.

 Keys
 While message is not playing
 While message is playing

 2
 Delete the current message playing

Note: If your answering machine is switched off, the phone will enter into the

You can then enter the <KEY *> and the 4-digit remote access PIN (Default) Remote Access PIN is 0000) to activate the remote access feature.

When your answering machine memory is full and the answer mode is set to

Answer & Record, the answer mode will change to Answer Only automatically It will change back to Answer & Record mode automatically after some

31

remote access mode after 14 rings and play the Answer Only OGM.

Functions

Stop the cu

Repeat playing the current message from the beginning.Press twice to skip backward to play the previous message

Skip to play the next message

Stop the current message playback

sage playback

consecutively, the line will be released automatically. 4. Press the following keys to carry out your desired function.

5 Play the message 6

7 Turn on the answering machine

8 9 Turn off the answering machine

7.3 Handset Settings

- 7.3.1 Set the Ringer Melody for Internal Calls 1. Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS.
- Press <MENU/0K> and <UP/DOWN> to select **RING SETUP** Press <MENU/0K> to show INT **RING** Press <MENU/0K> and <UP/DOWN> to select the melody you want to hear
- - for interse switching and so internet to the second state of the s 5. Press <MENU/OK> to confirm. 7.3.2 Set the Ringer Melody for External Calls

- Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS Press <MENU/OK> and <UP/DOWN> to select RING SETUP.
- Press <MENU/OK> and <UP/DOWN> to select EXT RING. Press <MENU/OK> and <UP/DOWN> to select the melody you want to hear
- for external calls. Note: The respective melody will be played while browsing the ringtone lis 5. Press <MENU/OK> to confirm
- 7.3.3 Set the Ringer Volume
- Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS Press <MENU/OK> and <UP/DOWN> to select RING SETUP.

- Press <MENU/OK> and <UP/DOWN> to select RING VOLUME.
 Press <MENU/OK> and <UP/DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including VOLUME OFF). Note: The respective ringer volume will be played during your selection. If VOLUME OFF is selected, the <Ringer Off> icon will be displayed.
- Press <MENU/OK> to confirm

8.4 Record Mem

settings of your answering machine

TROUBLESHOOTING

8.5.1 Set the Answer Mode

prompted to call back later

heen deleted

Problem

Vhen connect to a P o and/or wrong conr fter dialling.

ne call does not work.

Inswering Machin

The caller cannot leave

cannot operate the

message or listening to messages, the unit rings and recording stops

Technical Support

If the fault persists

o display.

- 7.3.4 Set Alert Tones Three different alert tones are set on by default, but can be turned off, if desired. Key Tone - a single beep is emitted when you press a key. Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.
- Out of Range Tone emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.
- . Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS
- Press <MENU/OK> and <UP/DOWN> to select TONE SETUR
- Press <MENU/OK> and <UP/DOWN> to select KEY TONE / BATTERY TONE / OUT OF RANGE.
- Press <MENU/OK> and <UP/DOWN> to turn on or off these tones Press <MENU/OK> to confirm.

20

You can record your memo message for another user. When you record a memo, the message can be played back in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE. Press <MENU/OK> and <UP/DOWN> to select MEMO. Press <MENU/OK> to start memo recording and "RECORDING" is

displayed.
 Press <MENU/OK> to stop memo recording. The memo will play back for you to check. Press <MENU/OK> or leave the memo to finish playing, to save the message.

8.5 Answering Machine Settings You can use the TAM SETTINGS menu through the handset to change the

Press <C/MUTE> to stop memo recording without saving and return back to ANS. MACHINE menu.

6.5.1 Set the Answer mode By default, the answer mode is set in ANS & REC mode which allows callers to leave a message. This mode can be changed to ANSWER ONLY which does not allow callers to leave a message. In that case, your callers will be executed to call back leave.

When your answering machine memory is full and the answer mode is in ANS

& REC, the answer mode will change to ANSWER ONLY automatically. It will return to ANS & REC mode automatically after some messages have

The answering machine announces the outgoing message when it answers There is a pre-set OGM for each of ANS & REC mode or ANSWER ONLY

Intel is a pre-set OGM tol earlie to ANS & REC mode of ANSWER OU mode, which can only be in English or French (Francais) on this model 1. Press -MENU/OK> and <UP/DOWN> to select ANS. MACHINE. 2. Press -MENU/OK> and <UP/DOWN> to select ANS ETTINGS. 3. Press -MENU/OK> and <UP/DOWN> to select TAM LANGUAGE. 4. Press <MENU/OK> and <UP/DOWN> to select your desired OGM I 5. Press -MENU/OK> to confirm.

26

ctions | Innlu

a. Check the connections. Unplug and plug back in the mains. Check that the telephone cord has been plugged into the base station and the phone socket.

Station and the prome source. Check the base station plug and

Use the original telephone line

Check your Subscription with network or change the dial mode

urn on the answering machine.

Turn on the answering machine

hange to ANS & REC mode

If you forget the remote access code, reset to the default setting Press each key firmly.

ry again using a touch tone ph

nswer the incoming call nd try again to record yo

ert the dialling pr

Reduce the range.

echarge battery

Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE

1. Press <hr/>
ENEUVIOK> and

UPress <hr/>
ENEUVIOK> and

UPress <hr/>
ENEUVIOK> to show ANSWER MODE.
3. Press <hr/>
MENU/OK> to show ANSWER MODE.
4. Press <hr/>
MENU/OK> and <UP/DOWN> to select ANS & REC or ANSWER ONLY.
5. Press <hr/>
MENU/OK> to confirm.

8.5.2 Set the Outgoing Message (OGM) Language

Causes

the base station is not plugged in. The adapter cord is not plugged in correctly in the base station.

range. Base station not

. The answering machine is turned off.

You are entering the

eys too quickly. ou are using a pulse

call is being received

wrong remo You are pre

of the functions may be limited when used in PBX systems

ssage memory is full. SWER ONLY mode is

sing the dia

This telephone is not equipped with a grounding function, and therefore some

Disconnect all other instruments connected to the same line as the phone system and try to make a call. Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket.

32

ervice not ac

The answerin turned off.

restored automatically.

saving the personal OGM.

8.5.4.1 Playback the OGM

8.5.4.2 Delete a Personalised OGN

Note: If the n

Radio Spectrum:

Electrical Safety:

Manufacturer / Importer (signature of authorized person)

Notes for battery disposal

7.4 Base Settings

Press <MENU/OK> to confirm 7.3.6 Rename the Handset

7.3.8 Set the Auto Answer

7.4.1 De-register a Handset

7.3.5 Set the Handset Language 1. Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS. 2. Press <MENU/OK> and <UP/DOWN> to select LANGUAGE. 3. Press <MENU/OK> and <UP/DOWN> to select the desired language

Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS

1. Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS
 2. Press <MENU/OK> and <UP/DOWN> to select RENAME HS.
 3. Press <MENU/OK> and change the name of your handset, using <C/MUTE> to
 delete letters and the alphanumeric keys to enter up to 10 letters for the name.
 4. Press <MENU/OK> confirm.
 7.3.7 Choose the Information to be Displayed in Idle
 You can choose to display time or handset name in your idle screen.
 1. Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS.
 2. Press <MENU/OK> and <UP/DOWN> to select HS DISPLAY.
 3. Press <MENU/OK> and <UP/DOWN> to select HS DISPLAY.
 4. Press <MENU/OK> to confirm.
 2. Press <MENU/OK> to confirm.

- So the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.
 Press <MENU/OK> and <UP/DOWN> to select HS SETTINGS.
 Press <MENU/OK> and <UP/DOWN> to select AUTO ANSWER.
 Press <MENU/OK> and <UP/DOWN> to turn on or off the auto answer feature 4. Press <MENU/OK> and <UP/DOWN> to turn on or off the auto answer feature

- This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced. You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to Hor minimized to a build be a build by a station A de-registered handset will have the antenna icon flashing and "REGISTER" on the display. Note: You cannot de-register the handset that you are currently using. 1. Press
- Press <MENU/OK> and <UP/DOWN> to select DS JETTING Press <MENU/OK> and <UP/DOWN> to select DELETE HS. Press <MENU/OK> and the display shows "PIN?----".
- Enter the 4-digit system PIN.
 Press <MENU/OK> and the first handset number is displayed
- 6. Press CUP/DOWN+ to scroll through the list of registered handsets and select the number of the handset you want to de-registere.
 7. Press CHENU/OK+ to confirm, and the chosen handset will be de-registered.

21

8.5.3 Record Your Own Outgoing Message (OGM) You can record your own OGM for ANS & REC mode or ANSWER ONLY mode When you record your own OGM, it will be used when the answering machine answers the call. If your personal OGM is deleted, the pre-set OGM will be

Press <MENU/OK> and <UP/DOWN> to select ANS MACHINE

Press <MENU/OK> and <UP/DOWN> to select TAM SETTINGS. Press <MENU/OK> and <UP/DOWN> to select OGM SETTINGS. ss <MENU/OK> and <UP/DOWN> to select ANS & REC or

Press <MENU/OK> and <UP/DUVIN> to Select AND a NEW of ANSWER ONLY.
 Press <MENU/OK> and <UP/DOWN> to select RECORD MESS.
 Press <MENU/OK> to start recording your personal OGM and "RECORDING is displayed on the screen.
 Press <MENU/OK> to stop and save your personal OGM. Your newly saved DOW with Euclementality.

OGM will playback automatically. Alternatively, press <C/MUTE> to return to the previous screen without

8.5.4 Playback and Delete the Outgoing Message (OGM) You can playback your own personal OGM or the pre-set OGM for ANS & REC mode or ANSWER ONLY mode and choose to delete your personal OGM during playback and record a new one whenever you want Please note that pre-set OGM cannot be deleted.

Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE. Press <MENU/OK> and <UP/DOWN> to select ANS ETTINGS. Press <MENU/OK> and <UP/DOWN> to select CAM SETTINGS. Press <MENU/OK> and <UP/DOWN> to select CAM SETTINGS. Press <MENU/OK> and <UP/DOWN> to select ANS & REC or ANSIVER ONLY

ANSWER ONLY. Press <MENU/OK> and <UP/DOWN> to select PLAYBACK.

Press <MENU/OK> and <UP/DOWN> to select PLATBACK.
 Press <MENU/OK> to playback your current OGM and "PLAYING OGM" is displayed on the screen.
 Press <MENU/OK> to stop the OGM playback and return to the previous

Note: If a personal OGM has not been recorded, the pre-set OGM will be

 Repeat Steps 1 to 6 in Section 8.5.4.1
 Press <C/MUTE> while the OGM is playing to delete your personal OGM and turn to the previous menu and the pre-set OGM is restored autom: 1 f the pre-set OGM is playing, you are not allowed to delete it, so sing <C/MUTE> will just stop the playback and return to the previou ous menu

Try makinga call. If this works, the line is OK.

If the call does not work, and you are using a **two-way socket adapter**, remove it and plug a telephone directly into the socket. If the call now works, the adapter

10 DECLARATION OF CONFORMITY

DECLARATION OF CONFORMIT
We the manufacturer / Importer : Binatone Telecom Pic, 1 Apsley Way London, NW2 7HF.
 Declare under our sole responsibility that the following product
Type of equipment: Digital cordless telephone
Model Name: Veva 1520 Series
Country of Origin: China
Brand: Binatone
Complex with the essential burnetcrips requirements of R&TTE Directive 1990/6//C on

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to Radio Spectrum Matters, the Council Directive 2004/108/EC on the approximation of the laws of the Member

Statesrelating to *electromagnetic compatibility* (*EWC*) and the taws of the Me Statesrelating to *electromagnetic compatibility* (*EWC*) and the teuropean Comm Directive 2008/95/EC relating to *Electrical Safety*. Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III to Directive 1999/55/EC and the following standard:

EN 301406: V2.1.1(2009-07) EN 301489-6:V1.3.1(2008-08 EN 301489-1:V1.8.1(2008-04 EN 60950-1:2006+A1: 2009

> 5 Dec 2010 Dat

33

The conformity to the requirements is validated by the **(f** symbol.

The contormity to the requirements is validated by the *C* symbol. **NOTE**: In compliance with Directive 2002/96/EC, when you purchase a product that comes with the symbol shown on the right, you are required to dispose of electrical and electronic equipment by separate waste collection and you cannot dispose of the product as normal waste. This equipment and all its components, subsystems and consumable materials

formed an integral part of this product and when you decide to dispose of them you have to takethem to a local recycling centre for appropriate waste disposal, in compliance with the current regulations. Details about the location of these centres can be obtained from

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please be aware of the local rules on separate collection of batteries. The correct disposal of batteries helps protect the environment and prevent health hazards.

7.4.2 Change the dial mode

7.4.2 Change the dial mode
 You should normally leave the dialling mode at its default setting of TONE (also called DTMF) unless the phone is connected to an old exchange that only recognises PULSE dialling is set, you can press the * key to switch to TONE dialling for the rest of that call.
 Press <MENU/OK> and <UP/DOWN> to select BS SETTINGS.
 Press <MENU/OK> and <UP/DOWN> to select DIAL MODE.
 Press <MENU/OK> and <UP/DOWN> to select TONE or PULSE (The current setting is indicated by an asterisk to the right).

- (The current setting is indicated by an asterisk to the right) Press <MENU/OK> to confirm.
- 7.4.3 Change the Flash (Recall) Time

You may need to change the recall (fleach) time if your phone is connected to a PBX. The recall time options are SHORT (the default value of 100ms), MEDIUM (300ms) or LONG (600ms). 1. Press <MENU/OK> and <UP/DOWN> to select BS SETTINGS.

- Press <MENU/OK> and <UP/DOWN> to select FLASH TIME. Press <MENU/OK> and <UP/DOWN> to select your desired flash time
- SHORE MEDIUM End on Some to solve your dealed management (SHORE, MEDIUM, LONG, with the current setting indicated by and asterisk to the right).
 4. Press

7.4.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

- Press </ENU/OK> and </P/DOWN> to select BS SETTINGS. Press </ENU/OK> and </P/DOWN> to select CHANGE PIN. Press </ENU/OK> and the display shows PIN? ---. Enter the old system PIN.

- Press <MENU/OK> to display NEW PIN?---- , and enter your new 4-digit
- Press <MENU/OK> to display CONFIRM?---- , and enter your new 4-digit system PIN again. Note: If the new PIN entered in Step 6 is not the same as the new system PIN

red in Step 5, you must enter the new system PIN at step 5 aga Press <MENU/OK> to confirm

22

8.5.5 Set the Answer Delay You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or TIME SAVER. If Time Saver is set the answering machine two to eight rings or TIME SAVER. If Time Saver is set the answering machine will answer after 4 rings if there are no new messages, or after 2 rings if there is a new message, so if you call in and you don't get an answer after 2 or 3 rings, you can hang up and save on call charges. 1. Press <MENU/OK> and <UP/DOWN> to select **ANS. MACHINE.** 2. Press <MENU/OK> and <UP/DOWN> to select **TAM SETTINGS.** 3. Press <MENU/OK> and <UP/DOWN> to select **TAM SETTINGS.** 4. Press <MENU/OK> and <UP/DOWN> to select from 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS or TIME SAVER. 5. Press <MENU/OK> to confirm.

8.5.6 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time for each incoming message to be 60, 120, 180 seconds or unlimited up to the total recording time remaining on the answer machine.
1. Press <MENU/OK> and <UP/DOWN> to select ANS. MACHINE

- Press <MENU/OK> and <UP/DOWN> to select **TAMS. IMACHINE** Press <MENU/OK> and <UP/DOWN> to select **TAM SETTINGS.** Press <MENU/OK> and <UP/DOWN> to select **RECORD TIME.** Press <MENU/OK> and <UP/DOWN> to select from 60 S, 120 S, 180 S or
- UNLIMITED
- 5. Press <MENU/OK> to confirm.

8.5.7 Call Screening When the answering machine is on and takes a call, you can listen to the caller leaving a message. You can then identify the caller and decide whether to take the call in person

the call in person. If the answering machine is set to ON, when there is an incoming message, it will automatically be played through the base station, but you also have the option to listen through the handset which will display "SCREENING?" 1. Press <MENU/OK> to start call screening. Any handset can listen to who is leaving the message and decide whether to pick up the call or not. 2. The handset will display "SCREENING".

- You can adjust the earpiece volume by pressing <UP or DOWN>
- OR 3. Press_<C/MUTE> to return to previous screen and you cannot hear the

recording. At any time if you want to pick up the call, you can press <TALK ON> and the message recording will be stopped automatically. If the answering machine is in the process of recording, the message already stored will be

28

11 PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 Year This product is guaranteed against inatinateduming detects for a period of This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store. If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd 489 - 499 Avebury Boulevard Central Milton Keynes MK9 2NW