## Dell<sup>™</sup> 2300MP Projector

Safety Instructions (Read before connecting the projector) About Your Projector Installation Using Your Projector Troubleshooting Specifications Regulatory Notices Contacting Dell

## Notes, Notices, and Cautions

**NOTE:** A NOTE indicates important information that helps you make better use of your projector.

**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

# Information in this document is subject to change without notice. ©2004 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc.; *DLP* and *Texas Instruments* are trademarks of Texas Instruments Corporation; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation; *Macintosh* is a registered trademark of Apple Computer, Inc.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

## **Restrictions and Disclaimers**

The information contained in this document, including all instructions, cautions, and regulatory approvals and certifications, is based upon statements provided to Dell by the manufacturer and has not been independently verified or tested by Dell. Dell disclaims all liability in connection with any deficiencies in such information.

All statements or claims regarding the properties, capabilities, speeds, or qualifications of the part referenced in this document are made by the manufacturer and not by Dell. Dell specifically disclaims any knowledge of the accuracy, completeness, or substantiation for any such statements.

July 2004 Rev. A00

#### Back to Contents Page

## Safety Instructions: Dell<sup>™</sup> 2300MP Projector



Use the following safety guidelines to help protect your projector from potential damage and to ensure your own personal safety:

- To reduce the risk of fire from the intense light emitted by the lens, do not put any object in front of or near the lens during operation.
- Use Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or Federal Laws. Or contact the electronic industries alliance: www.eiae.org for more information.
- The surface beneath the projector might be hot with use. Be careful in handling the unit.
- The lamp becomes very hot with use. Do not attempt to replace the lamp after use until the projector has been allowed to cool down for at least 30 minutes, and follow all instructions in "<u>Changing the</u> <u>Lamp</u>."
- Do not touch the bulb or the lamp glass at any time. The bulb may explode due to improper handling, including the touching of the bulb or the lamp glass.
- Remove lens cap before turning on projector. Failure to do so may cause the lens cap to reach high temperatures.
- To avoid damaging the projector and lamp, allow the cooling fan to run for 2 minutes before turning off the projector.
- Do not block the ventilation slots and openings on the projector.
- Disconnect the power cord from the electrical outlet if the projector is not used for a long period of time.
- Do not use the projector in an extremely hot, cold, or humid environment.
- · Do not use the projector in areas susceptible to excessive dust and dirt.
- Do not use the projector near any appliance that generates a strong magnetic field.
- Do not place the projector in direct sunlight.
- Do not look into the lens while the projector is on; the bright light may hurt your eyes.
- To reduce the risk of fire or electric shock, do not expose the projector to rain or moisture.
- To prevent electric shock, do not open or disassemble the projector further than what is needed for lamp replacement.
- To avoid damaging the projector, ensure that the zoom lens and elevator foot are fully retracted before moving the projector or placing the projector in its carrying case.
- Turn off the projector and disconnect it from the electrical outlet before cleaning it. Use a soft cloth moistened with mild detergent to clean the display housing. Do not use abrasive cleaners, waxes, or solvents.

Safety Instructions: Dell 2300MP Projector

Back to Contents Page

About Your Projector: Dell 2300MP Projector

#### Back to Contents Page

## About Your Projector: Dell<sup>™</sup> 2300MP Projector

- Features
- Equipment
- Main Unit
- Control Panel
- Connection Ports
- Remote Control

#### Features


- □ Single chip 0.7" Texas Instruments DLP<sup>™</sup> technology
- High contrast, double data rate (DDR) digital micro mirror device
- □ True XGA, 1024 x 768 addressable pixels
- 4.7 lbs (2.14 kgs) lightweight compact design
- 2300 ANSI lumens brightness (Max)
- 2000:1 full on / full off contrast ratio
- 1.2x manual zoom lens
- Built in 2W speaker
- Auto image re-sizing (Auto-Sync) to 1024 x 768 full screen with scaling compression compatibility for UXGA, SXGA+, SXGA, XGA, SVGA, VGA, MAC
- Preset and user defined video modes for optimum video and graphic settings
- Self-diagnostic for video troubleshooting
- State-of-the-art motion adaptive hardware deinterlacing with 3:2 and 2:2 pull down
- 200-watt user-replaceable UHP 2000-hour lamp
- Eco Mode allows end user to extend lamp life to 2500 hours by reducing the lamp wattage and brightness
- Full connectivity Includes PC (VGA), S-Video, Composite Video, Component Video and RS-232 connectors
- Monitor loop through to connect to PC monitor
- Compatibility with Macintosh® computers
- Compatibility with NTSC, NTSC4.43, PAL, PAL-M, PAL-N, SECAM, and HDTV (1080i, 720p, 576i/p, 480i/p)
- User-friendly, multi-language on-screen display (OSD)
- Advanced electronic keystone correction
- User-friendly control panel with backlight
- Remote control and Dell drop-tested carrying case included

\*Based on ANSI/NAPM IT7.228-1997 tests of 100 units, June 2004, with average ANSI Lumens 2100. Bulb brightness degrades with usage. Dell recommends replacing your bulb after 2000 hours usage.

#### Equipment


Your projector comes with all the items shown below. Ensure that you have all the items, and <u>contact Dell</u> if anything is missing.

About Your Projector: Dell 2300MP Projector

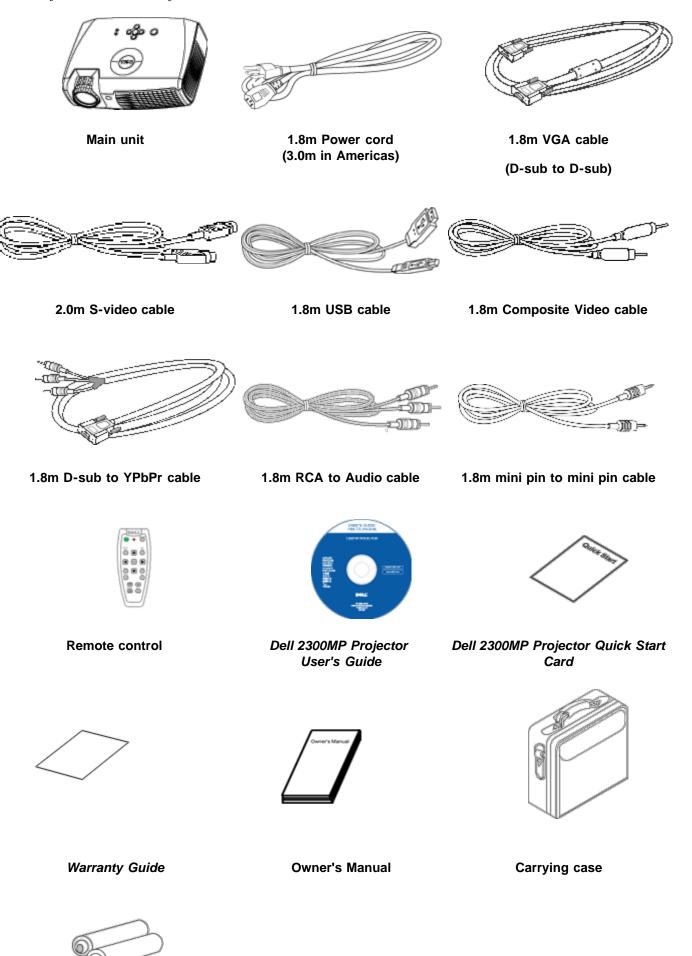


## Batteries (2)


### Main Unit

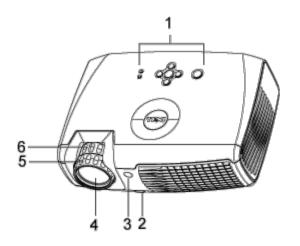

1	Control panel			
2	Elevator button			
3	Remote control receiver			
4	Lens			
5	Focus ring			
6	Zoom tab			


## **Control Panel**

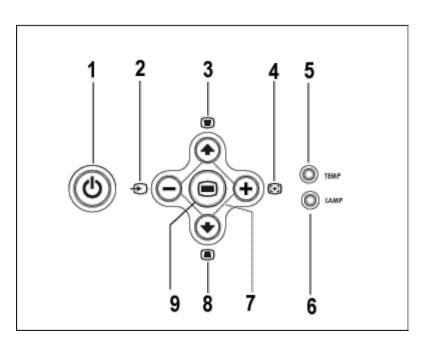

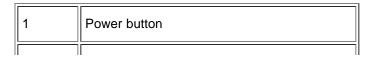


2	Source			
3	Keystone adjustment			
4	Resync			
5	Temperature warning light			
6	Lamp warning light			
7	Four directional keys			
8	Keystone adjustment			
9	Menu			

#### **Connection Ports**

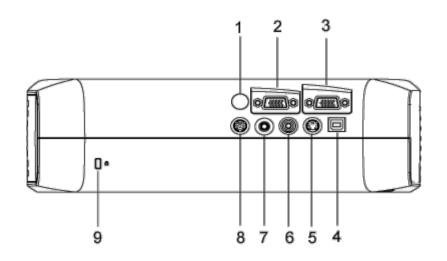

1	IR receiver			
2	VGA out (monitor loop-through)			
3	VGA in (D-sub) connector			
4	USB connector			
5	S-video connector			
6	Composite video connector			
7	Audio input connector			
8	RS232 connector			
9	Kensington lock hole			

## **Remote Control**

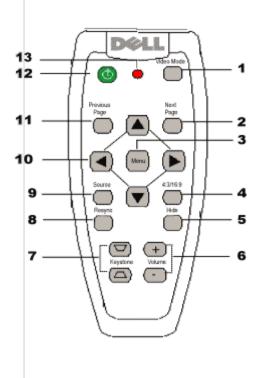

1	Video Mode button			
2	Next Page button (page down)			
3	Menu button			
4	4:3/16:9 (aspect ratio) button			
5	Hide button			
6	Volume button			
7	Keystone Correction button			
8	Resync button			
9	Source button			
10	Four Direction buttons			
11	Previous Page button (page up)			
12	Power button			
13	Light			

**Battery Disposal:** Your projector remote control uses zinc-manganese batteries. If you need to replace the batteries, see your *Dell 2300MP Projector Quick Start Card*.

Do not dispose of used batteries along with household waste. Contact your local waste



disposal agency for the address of the nearest battery deposit site.

Back to Contents Page

## Back to Contents Page Installation: Dell<sup>™</sup> 2300MP Projector

Connecting the Projector


Powering On/Off the Projector

Adjusting the Projected Image

Changing the Lamp


## **Connecting the Projector**

## A. To Computer

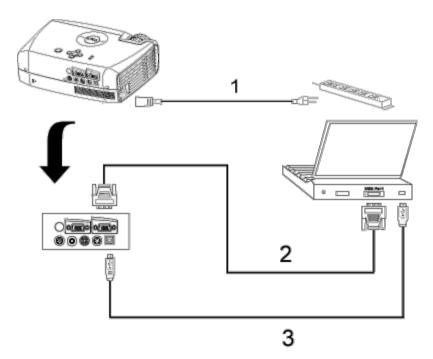


1	Power cord			
2	D-sub to D-sub cable			
3	USB to USB cable			

- **B. To DVD Player:** There are three possible methods of connecting to a DVD player.
- 1. Connecting with component cable:

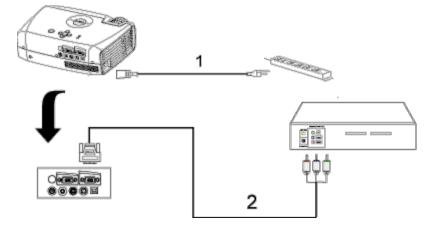

1	Power cord			
2	D-sub to HDTV/Component cable			


## 2. Connecting with S-video cable:

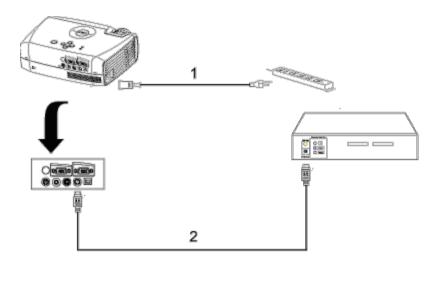

1	Power cord	
2	S-video cable	

## 3. Connecting with composite cable:

Installation: Dell 2300MP Projector

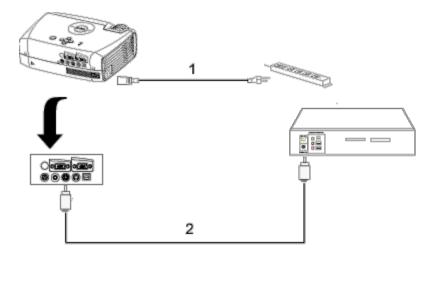


1	Power cord
2	Composite video cable


#### **C. Professional Installation Options:**

Installation for wired RS232 remote control: There are two possible ways to connect with RS232 cable.

1a) Connection with PC:

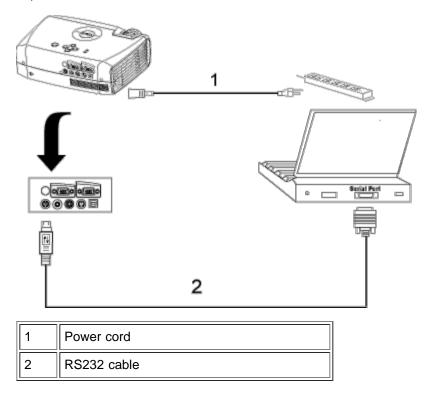

1b) Connection with Commercial RS232 control box:

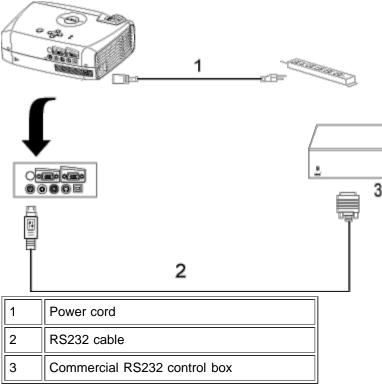

Note: RS232 cable not provided by Dell. Consult professional installer for cable and RS232 remote control software. Refer to RS232 pin assignment and commands.


#### Powering On/Off the Projector

Powering On the Projector



**NOTE:** Turn on the projector before you turn on the source.

- 1. Ensure that the lens cap has been removed.
- 2. Ensure that the power cord and appropriate signal cable(s) are securely connected. The power button light will blink green.
- 3. Press the power button to turn on the projector. The Dell logo will be displayed for 30 seconds.
- 4. Turn on your source (computer, notebook, DVD, etc.). The projector automatically detects your source.
- If the "Searching for signal..." message appears on the screen, ensure that the appropriate signal cable(s) are securely connected.
- If you are connecting multiple sources to the projector simultaneously, press the Source button on the remote control or control panel to select the desired source.

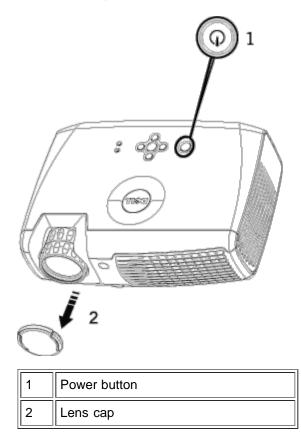

#### Powering Off the Projector

DO NOT UNPLUG THE PROJECTOR BEFORE PROPERLY SHUTTING DOWN USING THE FOLLOWING STEPS.

- Powering off procedures
- 1. Press the power button to turn off the projector.
- 2. Press the power button again. The cooling fans continue to operate for 90 seconds.
- 3. If the LAMP light is solid orange, replace the lamp.
- 4. If the **TEMP** light is solid orange, the projector has overheated. The display automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, <u>contact Dell</u>.
- 5. If the **TEMP** light is blinking orange, a projector fan has failed and the projector will automatically shut down. If this problem persists, <u>contact Dell</u>.
- 6. Disconnect the power cord from the electrical outlet and the projector.
- 7. If you press the power button while the projector is running, the "Power Off the Lamp?" message appears on the screen. To clear the message, press any button on the control panel or ignore the message; the message will disappear after 5 seconds.

#### Adjusting the Projected Image

Adjusting the Projector Height

To raise the projector:


- 1. Press the elevator button.
- 2. Raise the projector to the desired display angle, and then release the button to lock the elevator foot into position.

Installation: Dell 2300MP Projector

3. Use the tilt adjustment wheel to fine-tune the display angle.

To lower the projector:

- 1. Press the elevator button.
- 2. Lower the projector, and then release the button to lock the elevator foot into position.

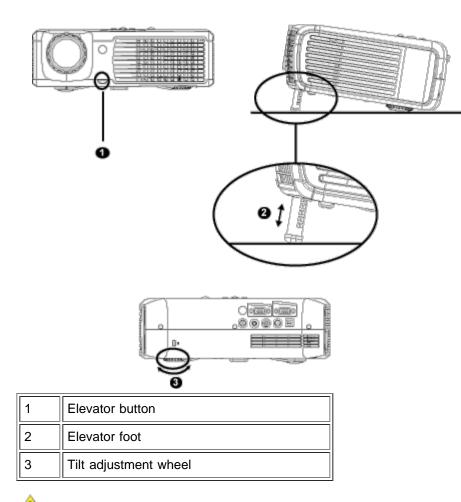


**CAUTION:** To avoid damaging the projector, ensure that the zoom lens and elevator foot are fully retracted before moving the projector or placing the projector in its carrying case.

#### Adjusting the Projector Zoom and Focus


1. Rotate the zoom tab to zoom in and out.

2. Rotate the focus ring until the image is clear. The projector focuses at distances from 3.9 ft to 39.4ft (1.2 m to 12 m).

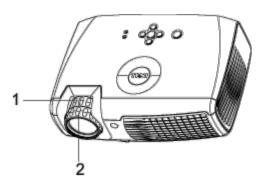

1	Zoom tab
2	Focus ring

## Adjusting Projection Image Size

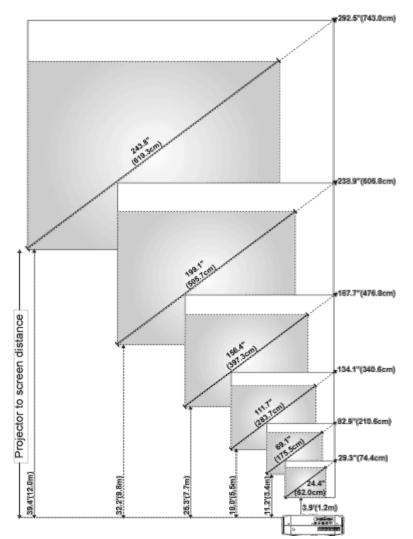

Screen	Max.	29.3" (74.4cm)	82.9" (210.6cm)	134.1" (340.6cm)	187.7" (476.8cm)	238.9" (606.8cm)	292.5" (743.0cm)
(Diagonal)	Min.	24.4" (62.0cm)	69.1" (175.5cm)	111.7" (283.7cm)	156.4" (397.3cm)	199.1" (505.7cm)	243.8" (619.3cm)
	Max.	23.4"X17.6"	66.3"X49.7"	107.3"X80.4"	150.2"X112.6"	191.1"X143.3"	234.0"X175.5"
Screen Size	(WxH)	(59.4cmX44.7cm)	(168.4cmX126.2cm)	(272.5cmX204.2cm)	(381.5cmX286.0cm)	(485.4cmX364.0cm)	(594.4cmX445.8cm)
	Min.	19.5"X14.6"	55.3"X41.4"	89.4"X67.0"	125.1"X93.9"	159.3"X119.5"	195.0"X146.3"
	(WxH)	(49.5cmX37.1cm)	(140.5cmX105.2cm)	(227.1cmX170.2cm)	(317.8cmX238.5cm)	(404.6cmX303.5cm)	(495.3cmX371.6cm)
Distan	се	3.9'(1.2m)	11.2'(3.4m)	18.0'(5.5m)	25.3'(7.7m)	32.2'(9.8m)	39.4'(12.0m)
* This graph	* This graph is for user reference only.						

### Changing the Lamp

Replace the lamp when you see "Lamp is approaching the end of its useful life in full power operation. Replacement suggested!" message on the screen by carefully following these instructions. If this problem persists, <u>contact Dell</u>.


**CAUTION:** The lamp becomes very hot with in use. Do not attempt to replace the lamp after use until the projector has been allowed to cool down for at least 30 minutes.

#### Lamp Changing Procedure:

- 1. Turn off the projector and disconnect the power cord.
- 2. Let the projector cool for at least 30 minutes.
- 3. Loosen the 2 screws that secure the lamp cover, and remove the cover.
- 4. Loosen the 2 screws that secure the lamp.
- 5. Pull up the lamp by its metal handle.
- 6. Reverse steps 1 through 5 to install the new lamp.
- Reset the lamp by usage time selecting the left Lamp Reset icon in the OSD <u>Management</u> tab.

**NOTE:** Dell may require that lamps replaced under warranty be returned to Dell. Otherwise, contact your local waste disposal agency for the address of the nearest deposit site.

**NOTE:** The lamp contains mercury. Disposal of this material may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

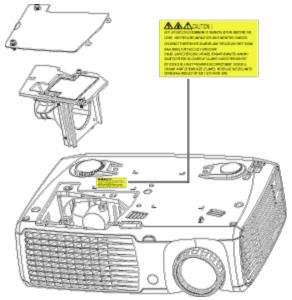


**CAUTION:** Do not touch the bulb or the lamp glass at any time. The bulb may explode due to improper handling, including the touching of the bulb or the lamp glass.

Back to Contents Page

## Back to Contents Page Using Your Projector: Dell™ 2300MP Projector

<u>Control Panel</u>
 <u>Remote Control</u>
 <u>On-Screen Display</u>

## **Control Panel**

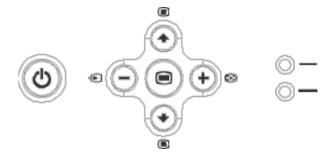

#### Power

See "Powering On/Off the Projector."

#### Volume

Increase or decrease the speaker volume.

#### Video Mode

Switch the display mode within PC Mode, Movie Mode, Game Mode, sRGB Mode, User Mode per your preference.

### Source

Press 🔁 to step through Analog RGB, Composite, Component-i, S-video, and Analog YPbPr sources when multiple sources are connected to the projector.

### Resync

Press **T** to synchronize the projector to the input source. **Resync** will not operate if the <u>OSD</u> (On-Screen Display) is displayed.

### Menu

Press (a) to activate the OSD. Use the directional keys and Menu button to navigate through the OSD.

### **Four Directional Keys**

The four directional keys () () (-) (+) can be used to toggle through the tabs in the <u>OSD</u>.

### **Keystone Adjustment**

Press projector. (±16 degrees)

## **Remote Control**



#### Power

See "Power On/Off the Projector."

#### Source

Press the **Source** button to switch between Analog RGB, Digital RGB, Composite, Component-i, S-video, and Analog YPbPr sources.

#### Resync

Press **Resync** to synchronize the projector to the input source. **Resync** will not operate if the <u>OSD</u> (On-Screen Display) is displayed.

#### **Directional Keys**

Use ( ) or ( ) to select OSD items, use "left" and "right" button to make adjustments.

#### Hide

Press Hide button to hide the image, press again to resume display of the image.

#### Video Mode

The Dell 2300MP Micro-projector has preset configurations that are optimized for displaying data (PC Graphics) or video (movies, games, etc.). Press Video Mode button to toggle between PC mode, Movie mode, Game Mode, sRGB, or User mode (for user to setup and save preferred settings). Pressing the Video Mode button once will show the current display mode. Pressing the Video Mode button again will switch between modes.

#### **Previous Page**

Press the Previous Page button to step to previous page.

#### **Next Page**

Press the Next Page button to step to next page.

#### Menu

Press the Menu button to activate the OSD. Use the directional keys and Menu button to navigate through the OSD.

Using Your Projector: Dell 2300MP Projector

#### 4:3/16:9

Press 4:3/16:9 button to switch aspect ratio 1:1, 16:9, 4:3 as described below.

#### Volume +/-

Press the Vol+ button to increase the volume, press the Vol- button to reduce the volume.

#### Keystone

Adjusts image distortion caused by tilting the projector. (±16 degrees)

## **On-Screen Display**

- The projector has a multi-language On-Screen Display (OSD) that can be displayed with or without an input source present.
- The OSD allows you to make image adjustments and change a variety of settings. If the source is a computer, the OSD allows changes to the Computer Image tab. When using a video source, the OSD allows changes to the Video Image tab. The projector automatically detects the source.
- When the OSD is on the screen, press or to navigate through the OSD tabs.
   Example: All Images--> Computer Image--> Audio--> Management--> Language--> Factory Reset. To make a selection in a tab, press on keypad or "Menu" on remote controller.
- Press (a) or (b) to make a selection and adjust the settings by pressing (c) or (c) on keypad or Left and Right button on the remote controller. When an item is selected, the color of the item will change to dark gray.
- To exit the OSD, go to "Exit" tab and press (a) button on keypad or "Menu" on remote controller.



#### All Images Menu

DØLL	2300MP					
All Images						
Brightness	A * 🚺					
	) <b>—</b> — () 📶					
	🐮 🚥 👘 🚺 📶					
	b					
	V —— 🛆 🗾					
Aspect Ratio	9 🖓 8 💶					
Video Mode PC	Movie Game sRGB User					
White Intensity	() 🚥 🔿 🥫					
	Q 🗕 — 🔾 🧰 👘					
	<i>\$</i>					
Analog RGB Resolution : 1024x768 / 60 Hz						

#### Brightness


Adjust the brightness of the image.



• Press  $\overleftarrow{\bullet}$  to lighten the image.

#### Contrast

Control the degree of difference between the brightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.

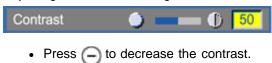

• Press  $(\overline{+})$  to increase the contrast.

#### Color Temp.



Adjust the color temperature. With the higher temperature, the screen looks more blue; with the lower temperature, the screen looks more red. User mode activates the values in the "color setting" menu.

#### **Color Setting**



	Color Setting	
Red		50
Green		50
Blue		50
Exit	<i>🐥</i>	

This mode allows for manual adjustment of red, green, and blue color settings. Modifying these values will automatically change the color temperature to "user".

#### Keystone



Adjusts image distortion caused by tilting the projector. (±16 degrees)

#### Aspect Ratio



Select this function to fit 1:1, 16:9 or 4:3 aspect ratio. In order to use the 1:1 aspect ratio, the input must be a computer signal (through VGA cable) less than XGA (1024 x 768), component 576p/ 480i / 480p, S-Video, or Video (composite). If the input signal is a computer signal greater than XGA or component 1080i / 720p, only 16:9 or 4:3 aspect ratio will be available. When an icon is selected, the color of the icon will change to dark blue.

1:1: The input source will be displayed without scaling.

**16:9**: The input source will be displayed in wide screen mode (16:9). The source will be scaled to fit the width of the screen.

4:3: The input source will be scaled to fit the screen.

#### Video Mode



Select this function to optimize the display image for home use (**Movie Mode** or **Game Mode**), conference use (**PC Mode**) or as user preferable settings (**User Mode**), or use **sRGB** mode for more accurate color representation. When an icon is selected, the color of the icon will change to dark blue. Adjusting the settings of **White Intensity** or **Degamma** tab, will select **User Mode** automatically.

#### White Intensity

White Intensity can be adjusted between 0 and 10.

White Intensity 🌓 🚃 🍏 5

Using Your Projector: Dell 2300MP Projector

- Setting 10 will maximize the brightness.
- Setting 0 will maximize color reproduction quality.

#### Degamma



**Degamma** can be adjusted between 1 and 4. Default setting is 3 (Recommended). Adjustment of the setting will change the color performance of the display.


#### Audio Menu



DØLL		2300MP			
Audio					
Volume	<b>«</b> –		50		
Mute	1.64	1.50			
Exit	42				
Analog RGB Resolution: 1024 x 7687 60Hz					

Audio

Volume

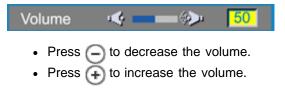


Mute



- Select the left icon to mute the volume.
- Select the right icon to un-mute the volume.

#### Management Menu



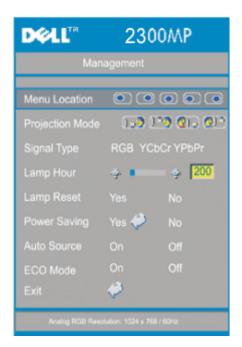

#### Management

### **Menu Location**



Select the location of the OSD on the screen.

#### **Projection Mode**

Projection Mode 🛛 💷 💷

- **The default setting**.

The projector reverses the image so you can project from behind a translucent screen.

- **Imp** Front Projection-Ceiling Mount The projector turns the image upside down for ceiling-mounted projection.
- Rear Projection-Ceiling Mount The projector simultaneously reverses and turns the image upside down. You can project from behind a translucent screen with a ceiling-mounted projection.

### Signal Type



Manually select signal type RGB, YCbCr, YPbPr.

#### Lamp Hour



Display operating hours since lamp timer reset.

#### Lamp Reset



Use this function only after a new lamp is installed in the projector. Select the left **Lamp Reset** icon (light bulb and arrow under the icon), and press the **Enter** button to reset the lamp timer.


#### **Power Saving Menu**



#### **Power Saving**

Use this function to select the power saving delay period. Press "Yes" to go into the "set time" sub menu.

#### Set Time (Min)

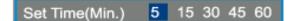

Set the power saving delay period as you prefer. When the projector is not receiving an input signal for the selected period of time, the projector will automatically enter power saving mode, and turn off the lamp. After a one-minute cooling period, the projector will turn back on with detection of an input signal or by pressing the "Power" button. After two hours the projector will turn off and must be turned on by pressing the power button on the control panel or remote.

#### Auto Source




The projector will always automatically search for available input signals when **Auto Source** is **On**, which is the default setting. Press the **Source** button with **Auto Source On** to automatically search for the next available input signal. Selecting **Off** will lock on the current input source. Set **Auto-Source** to **Off** to step through the different input signals manually.

#### Eco Mode



- Select **On** to operate the projector in lower power (150 Watts) for providing longer lamp life and quiter operation with dimmer luminance output on the screen.
- Select Off to resume the operation in normal power (200 Watts).

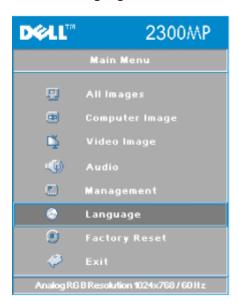

#### Language Menu



#### Language

#### Language

Press ( $\mathbf{A}$ ) or ( $\mathbf{A}$ ) to select the preferred language.


#### **Factory Reset Menu**




#### **Factory Reset**

Select **Yes** to reset the projector to its factory default settings. Reset items include both computer image and video image settings.

#### **Computer Image Menu**

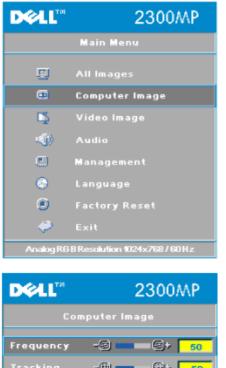

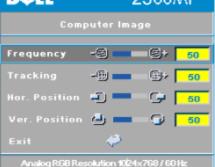

#### **Computer Image-**

**W** NOTE: This menu is only available with a computer input signal connected.

## Frequency



Change the display data clock frequency to match the frequency of your computer graphics card. If you see a vertical flickering bar, use the frequency control to minimize the bars. This is a coarse adjustment.





Synchronize the phase of the signal of the display with that of the graphic card. If you experience an unstable or flickering image, use the **Tracking** function to correct it. This is a fine adjustment.

**W** NOTE: Adjust the **Frequency** first and then the **Tracking**.

#### Hor. Position (Horizontal Position)



- Press to move the image to the left.
- Press (+) to move the image to the right.

#### Ver. Position (Vertical Position)



- Press to move the image down.
- Press (+) to move the image up.

#### Video Image Menu



#### Video Image-

W NOTE: This menu is only available with S-video, Video (composite) signal connected.

#### Saturation



Adjust a video image from black and white to fully saturated color.

- Press (-) to decrease the amount of color in the image.
- Press (+) to increase the amount of color in the image.

#### Sharpness



Adjust the sharpness of the image.

- Press (-) to decrease the sharpness.
- Press (+) to increase the sharpness.

#### Tint



Adjust the color balance of red and green.

- Press (-) to increase the amount of green in the image.

Back to Contents Page

Troubleshooting: Dell 2300MP Projector

## Back to Contents Page Troubleshooting: Dell<sup>™</sup> 2300MP Projector

- No image appears on the screen
- Partial, scrolling, or incorrectly displayed image
- The screen does not display your presentation
- Image is unstable or flickering
- Image has vertical flickering bar
- Image color is not correct
- Image is out of focus
- The image is stretched when displaying 16:9 DVD
- Image is reversed
- Lamp is burned out or makes a popping sound
- Self-diagnostic for video
- The remote control is not operating smoothly or operating in very limited range

If you experience problems with your projector, see the following troubleshooting tips. If the problem persists, <u>contact</u> <u>Dell</u>.

#### No image appears on the screen

- Ensure that the lens cap is removed and the projector turned on.
- Ensure the external graphics port is enabled. If you are using a Dell portable computer, press *m m*. For other computers, consult your owner's manual.
- Ensure that all the cables are securely connected as described in "<u>Connecting the</u> <u>Projector</u>."
- Ensure that the pins of the connectors are not bent or broken.
- Ensure that the lamp is securely installed (see "Changing the Lamp").
- Run "Self-diagnostic test" (see "<u>Self-diagnostic for video</u>") for preliminary diagnostic on projection problem for video. Ensure that the colors of the test pattern are correct.

#### Partial, scrolling, or incorrectly displayed image

- Press the Resync button on the remote control or the control panel.
- If you are using a Dell portable computer (for other computers consult your owner's manual):
  - 1. Set the resolution of the computer to XGA (1024 x 768):

1a) Right click on the unused portion of your Windows desktop-» Properties-» Settings tab.

1b) Verify the "Screen area" slide bar is set to 1024x 768 pixels for the external

monitor port.

- 2. Press Im Office.
- If you experience difficulty in changing resolutions or your monitor freezes, restart all the equipment and the projector.

#### The screen does not display your presentation

If you are using a Dell portable computer, press mail in the second secon

#### Image is unstable or flickering

• Adjust the tracking in the OSD Computer Image tab.

#### Image has vertical flickering bar

• Adjust the frequency in the OSD Computer Image tab.

#### Image color is not correct

- If your graphic card output signal is "sync on Green", and you would like to display VGA at 60Hz signal, please go into "OSD--> Management --> Signal Type" and select "RGB".
- Run "Self-diagnostic test" (see " <u>Self-diagnostic for video</u> ") for preliminary diagnostic on image color problem. Ensure that the colors of the test pattern are correct.

#### Image is out of focus

- Adjust the focus ring on the projector lens.
- Ensure that the projection screen is within the required distance from the projector (3.9ft [1.2m] to 39.4ft [12m]).

### The image is stretched when displaying 16:9 DVD

The projector automatically detects 16:9 DVD and adjusts the aspect ratio to full screen with a 4:3 (letter-box) default setting.

If the image is still stretched, adjust the aspect ratio as follows:

- If you are playing a 16:9 DVD, select 4:3 aspect ratio type on your DVD player if capable.
- If you cannot select 4:3 aspect ratio type on your DVD player, select 4:3 aspect ratio in the "All Images" menu within the OSD function.

#### Image is reversed

• Select Management from the OSD and adjust the projection mode.

#### Lamp is burned out or makes a popping sound

• When the lamp reaches its end of life, it may burn out and may make a loud popping sound. If this occurs, the projector will not turn back on, and will display "Lamp Defective" in the LCD display until the lamp is replaced. To replace the lamp, see "<u>Changing the Lamp</u>".

#### Self-diagnostic for video

• Dell 2300MP Projector provides self-diagnostic test of the projector video display (for Video,

S-video, Component-i). Use this advanced feature for preliminary self-diagnostic on your projector when encountering a display problem for video.

- After turning on the projector, press "+" and "-" buttons on the control panel simultaneously and release the buttons when screen goes blank.
- Press "+" and "-" buttons again to exit the diagnostic mode.
- While in Self-diagnostic mode, the screen will run a seven-color-cycle test as following: "Red--> Green--> Blue--> White--> Watchet Blue--> Dark Green--> Yellow." Ensure that the colors of the test pattern are correct. Contact Dell if the colors are not displayed correctly.

#### The remote control is not operating smoothly or operating in very limited range

The battery may be low. If so, replace with 2 new AA batteries.

Back to Contents Page

## Back to Contents Page

# Specifications: Dell<sup>™</sup> 2300MP Projector


Light Valve	Single-chip DLP™ DDR (double data rate) technology
Brightness Contrast Ratio	2300 ANSI Lumens (Max) 2000:1 Typical (Full On/Full Off)
Uniformity	80% Typical (Japan Standard - JBMA)
Lamp	200-watt user-replaceable UHP 2000-hour lamp(up to 2500
Lamp	hours in eco mode)
Number of Pixels	1024 x 768 (XGA)
Displayable Color	16.7M colors
Color Wheel Speed	100~127.5Hz(2X)
Projection Lens	F/2.4~2.65, f=28.04~33.59mm with 1.2x manual zoom lens
Projection Screen Size	24.4-292.5 inches (diagonal)
Projection Distance	3.9~39.4 ft (1.2m–12m)
Video Compatibility	NTSC, NTSC 4.43, PAL, PAL-M, PAL-N, SECAM, and HDTV (1080i, 720p, 576i/p, 480i/p) compatibility
	Composite video, Component video and S-video capability
H. Frequency	15kHz-70kHz (Analog)
V. Frequency	56Hz-85Hz (Analog)
Power Supply	Universal 100-240V AC 50-60Hz with PFC input
Power Consumption	250 Watts full power (typical) , 190 Watts in eco mode
Audio	1 speaker, 2 Watts RMS
Noise Level	36dB(A) Full-on mode, 33dB(A) Eco-mode
Weight	4.7 lbs (2.14 kgs)
Dimensions (W x H x D)	External 10.91 x 8.13 x 3.64 ± 0.04 inches (277 x 206.5 x 92.5 ± 1mm)
Environmental	Operating temperature: 5°C–35°C (41°F–95°F) Humidity: 80% maximum
	Storage temperature: -20°C to 60°C (-4°F to 140°F) Humidity: 80% maximum
Regulatory	FCC, CE, VCCI, UL, cUL, TüV- GS, ICES-003, MIC, C-Tick, GOST, CCC, PSB, NOM, TüV-S/Argentina
I/O Connectors	Power: AC power input socket
	Computer input: one D-sub for analog/component, HDTV input signals
	Computer output: one 15-pin D-sub
	Video input: one composite video RCA and one S-video
	video input. one composite video NOA and one 5-video

USB input: one USB connector

Audio input: one phone jack (diameter 3.5mm)

One mini-DIN RS232 for wired remote projector control from  $\ensuremath{\mathsf{PC}}$ 

#### **RS232 Pin Assignment**

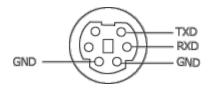

#### RS232 Protocol

Communication Settings

Connection settings	Value
Baud Rate:	19200
Data Bits:	8
Parity	None
Stop Bits	1

### • Control command Syntax (From PC to Projector)

[H][AC][SoP][CRC][ID][SoM][COMMAND]

• Example: power on the projector

Enter the following code: 0xBE 0xEF 0x10 0x05 0x00 0xC7 0xBF 0x11 0x11 0x01 0x00 0x02

Control Commands List

Control Commands List	Address Code (BYTE)	Size of the Payload (WORD)	CRC16 for the entire packet (WORD)	MsG ID (WORD)	MsG size (WORD)	Command code (BYTE)	Command Description
			0xffc6			0x01	Power
			0xbfc7			0x02	Menu
			0x7e07			0x03	Up
			0x3fc5			0x04	Down
			0xfe05			0x05	Left
			0xbe04			0x06	Right
			0x7fc4			0x07	Resync
			0x3fc0			0x08	Source
			0xfe00			0x09	Volume+
		ĺ	0xbe01			0x0A	Volume-
		ĺ	0xffc3			0x0D	Mute
		ĺ	0xbfc2			0x0E	Freeze
		ĺ	0x7e02			0x0F	Hide
		ĺ	0x3fca			0x10	Video Mode
		Ì	0x7fcb			0x13	V. Keystone Up
			0x3e09			0x14	V. Keystone Down
0xefbe	0x10 0	x0005	C	)x1111	0x0001		

file:///Cl/Venkat%20Shared/Projectors/2300MP/EN/specs.htm[11/30/2012 2:18:59 PM]

Specifications: Dell 2300MP Projector

0x7e08	0x17	Aspect ratio (4:3/16:9)
0x3e0c	0x18	Power OFF
Oxffcc	0x19	Source-VGA Analog
0xbfcd	0x1A	Source-VGA YPbPr (480p/576p/720p/1080i)
0x7e0d	0x1B	Source-VGA YCbCr (480i/576i)
0xbe1f	0x22	Source-S-Video
0x7fdf	0x23	Source-Composite
0xbfd9	0x2A	ECO Mode ON
0x7e19	0x2B	ECO Mode OFF
0x3fdb	0x2C	Auto Source ON
0xfe1b	0x2D	Auto Source OFF
0xbe1a	0x2E	Factory Reset
0x7fda	0x2F	Lamp Hour
0x3e12	0x30	Firmware Version
0x7e46	0xFF	System status

## **Compatibility Modes**

		(ANALOG)		
Mode	Resolution	V. Frequency	H. Frequency	
		(Hz)	(KHz)	
VGA	640X350	70	31.5	
VGA	640X350	85	37.9	
VGA	640X400	85	37.9	
VGA	640X480	60	31.5	
VGA	640X480	72	37.9	
VGA	640X480	75	37.5	
VGA	640X480	85	43.3	
VGA	720X400	70	31.5	
VGA	720X400	85	37.9	
SVGA	800X600	56	35.2	
SVGA	800X600	60	37.9	
SVGA	800X600	72	48.1	
SVGA	800X600	75	46.9	
SVGA	800X600	85	53.7	
XGA	1024X768	60	48.4	
XGA	1024X768	70	56.5	
XGA	1024X768	75	60	
XGA	1024X768	85	68.7	
*SXGA	1280X1024	60	63.98	
*SXGA	1280X1024	75	79.98	
*SXGA+	1400X1050	60	63.98	
*UXGA	1600x1200	60	75	
MAC LC13*	640X480	66.66	34.98	
MAC II 13*	640X480	66.68	35	
MAC 16*	832X624	74.55	49.725	
MAC 19*	1024X768	75	60.24	

*MAC	1152X870	75.06	68.68	
MAC G4	640X480	60	31.35	
IMAC DV	1024X768	75	60	
* Compressed computer image.				

Back to Contents Page

## Regulatory Notices: Dell<sup>™</sup> 2300MP Projector

- Federal Communications Commission (FCC) Notice (U.S. Only)
- FCC Declaration of Conformity
- CE Declaration of Conformity for a Class B Digital Device
- Canadian Regulatory Information (Canada Only)
- EN 55022 Compliance (Czech Republic Only)
- VCCI Class 2 Notice (Japan Only)
- MIC Notice (South Korea Only)
- Polish Center for Testing and Certification Notice
- NOM Information (Mexico Only)
- Regulatory Listing

## Federal Communications Commission (FCC) Notice (U.S. Only)

• NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesired operation.

**Instructions to Users:** This equipment complies with the requirements of FCC (Federal Communication Commission) equipment provided that the following conditions are met.

- 1. Power cable: Shielded power cable must be used.
- 2. Video inputs: The input signal amplitude must not exceed the specified level.

# **•** NOTICE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC Declaration of Conformity

According to 47 CFR, Part 15 of the FCC Rules \* For the following named product:

DLP Projector 2300MP/DELL	CHC7229		
* Manufactured at:		Operation is subject to the following 1. This device may not cause ha 2. This device must accept any	armful interference, and
* FCC Rules: * Test site at:		Tested to comply with FCC part 15, Advance Data Technology Corporati No.81-1, Lu Liao Keng, 9 Ling, Wu Hsien, Taiwan Coretronic Corporation	
* Responsible Part Compliance:	y for Product	No 11, Li Hsing Rd, Science-Based Tel: 886-3-5772000 Fax: 886-3-579	
* Manufacturer Info	ormation:	Coretronic Corporation No 11, Li Hsing Rd, Science-Based Industrial Park, Hsinchu, 300, Taiwan Hsinchu, July 01, 2004	RD Center Technology Engineering Associate Vice President July 01, 2004 Mr. Vincent Lin

### **CE Declaration of Conformity for a Class B Digital Device**

Directives to which conformity is declared: EMC Directives 89/336/EEC and Amending Directive 92/31/EEC And Low Voltage Directive 73/23/EEC Standards to which conformity is declared EN55022: 1998+A1:2000, Class B; EN55024: 1998+A1:2001; EN60950: 2000; EN61000-3-2: 2000; EN61000-3-3: 1995+A1:2001 Manufacturer's Name: Coretronic Corporation Manufacturer's Name: Coretronic Corporation Manufacturer's Address: No 11, Li Hsing Rd, Science-Based Industrial Park, Hsinchu, Taiwan Importer's Address: Dell Products Europe BV Raheen Industrial Estate, Limerick, Ireland Type of Equipment: DLP Projector Model Number(s): 2300MP

Reference Report Number: Previously Declared Models: I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and standards. Hsinchu, Taiwan

vincent L-

July 01, 2004

Mr. Vincent Lin

Head of RD Center

### Canadian Regulatory Information (Canada Only)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Note that Industry Canada regulations provided, that changes or modifications not expressly approved by Dell Inc. could void your authority to operate this equipment.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numerique de la classe B respecte toutes les exigences du Reglement sur le materiel brouilleur du Canada.

• Canada RSS-210/CNR210 (RF Remote Controller)

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

```
This Class B digital apparatus complies with Canada RSS-210.
Cet appareil numérique de la classe B est conforme à la norme CNR-210 du Canada.
```

The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

### EN 55022 Compliance (Czech Republic Only)

This device belongs to Class B devices as described in EN 55022, unless it is specifically stated that it is a Class A device on the specification label. The following applies to devices in Class A of EN 55022 (radius of protection up to 30 meters). The user of the device is obliged to take all steps necessary to remove sources of interference to telecommunication or other devices.

Pokud není na typovém štitku počítače uvcdeno, že spadá do třídy A podle EN 55022, spadá automaticky do třidy B podle EN 55022. Pro zařízení zařazená do třídy A (ochranné pásmo 30m) podle EN 55022 platí následující. Dojde-lí k rušení telekomunikačních nebo jinych zařízení, je uživatel povinen provést taková opatření, aby rušení odstranil.

## VCCI Class 2 Notice (Japan Only)

This equipment complies with the limits for a Class 2 digital device (devices used in or adjacent to a residential environment) and conforms to the standards for information technology equipment that are set by the Voluntary Control Council for Interference for preventing radio frequency interference in residential areas.




**Class B ITE** 

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の 基準に基づくクラス B 情報技術装置です。この装置は家庭環境で 使用することを目的としていますが、ラジオやテレビジョン受信機 に近接して使用されると、受信障害を引き起こすことがあります。 取扱説明書に従って正しい取り扱いをしてください。

### MIC Notice (South Korea Only)

**B** Class Device

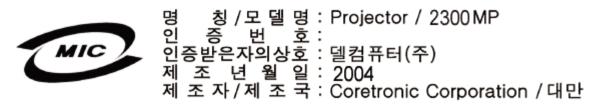

기종별	사용자 안내문	
B급 기기 (가정용 정보통신기기)	이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역 <b>에서는 물론 모든 지역에</b> 서 사용할 수 있습니다.	

Please note that this device has been approved for non-business purposes and may be used in any environment, including residential areas.

## **Polish Center for Testing and Certification Notice**

The equipment should draw power from a socket with an attached protection circuit (a three-prong socket). All equipment that works together (computer, monitor, printer, and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/T-42107 and PN-89/E-06251.

# Wymagania Polskiego Centrum Badań i Certyfikacji

Urządzenie powinno być zasilane z gniazda z przyłączonym obwodem ochronnym (gniazdo z kołkiem). Współpracujące ze sobą urządzenia (komputer, monitor, drukarka) powinny być zasilane z tego samego źródła.

Instalacja elektryczna pomieszczenia powinna zawierać w przewodzie fazowym rezerwową ochronę przed zwarciami, w postaci bezpiecznika o wartości znamionowej nie większej niż 16A (amperów).

W celu całkowitego wyłączenia urządzenia z sieci zasilania, należy wyjąć wtyczkę ka bla zasilającego z gniazdka, które powinno znajdować się w pobliżu urządzenia i być łatwo dostępne.

Znak bezpieczeństwa "B" potwierdza zgodność urządzenia z wymaganiami bezpieczeństwa użytkowania zawartymi w PN-93/T-42107 i PN-EN 55022:1996.

Jeźeli na tabliczce znamionowej umieszczono informację, źe urządzenie jest klasy A, to oznacza to, że urządzenie w środowisku mieszkalnym może powodować zaklócenia radioelektryczne. W takich przypadkach można żądać od jego użytkownika zastosowania odpowiednich środków zaradczych.

## Pozostałe instrukcje bezpieczeństwa

- Nie należy używać wtyczek adapterowych lub usuwać kołka obwodu ochronnego z wtyczki. Jeżeli konieczne jest użycie przedłużacza to należy użyć przedłużacza 3-żyłowego z prawidłowo połączonym przewodem ochronnym.
- System komputerowy należy zabezpieczyć przed nagłymi, chwilowymi wzrostami lub spadkami napięcia, używając eliminatora przepięć, urządzenia dopasowującego lub bezzakłóceniowego źródła zasilania.
- Należy upewnić się, aby nic nie leżało na kablach systemu komputerowego, oraz aby kable nie były umieszczone w miejscu, gdzie można byłoby na nie nadeptywać lub potykać się o nie.
- Nie należy rozlewać napojów ani innych płynów na system komputerowy.
- Nie należy wpychać żadnych przedmiotów do otworów systemu komputerowego, gdyż może to spowodować pożar lub porażenie prądem, poprzez zwarcie elementów wewnętrznych.
- System komputerowy powinien znajdować się z dala od grzejników i źródeł ciepła. Ponadto, nie należy blokować otworów wentylacyjnych. Należy unikać kładzenia luźnych papierów pod komputer oraz umieszczania komputera w ciasnym miejscu bez możliwości cyrkulacji powietrza wokół niego.

## NOM Information (Mexico Only)

The following information is provided on the device(s) described in this document in compliance with the requirements of the official Mexican standards (NOM)

Exporter:	Dell Inc. One Dell Way Round Rock, TX 78682
Importer:	Dell Computer de México, Paseo de la Reforma 2620, 11th Floor Col. Lomas Altas México DF

Regulatory Notices: Dell 2300MP Projector

	CP 11950
Ship to:	Dell Computer de Mexico, S.A. de C.V. al Cuidado de Kuehne & Nagel de México S. de R.I., Avenida Soles No. 55 Col. Peñon de los Baños, 15520 Mexico, D.F.
Supply voltage:	> 100–240 VAC
Frequency:	50–60 Hz
Current consumption:	3 A

### **Regulatory Listing**

### Safety Certifications:

- UL 60950
- cUL
- NOM
- CE Mark--EN60950: 2000
- IEC 60950:1999
- TüV GS
- GOST
- CCC
- PSB
- TüV-S
- TüV-S/Argentina

#### **EMC Certifications:**

- FCC Part 15 Class B
- CE Mark--EN55022:1998+A1: 2000 Class B, EN55024: 1998+A1:2001, EN61000-3-2: 2000, EN61000-3-3:1995\_A1: 2001
- ICES-003
- C-Tick
- VCCI Class B ITE
- MIC

Back to Contents Page

### Back to Contents Page

## **Contacting Dell**

#### To contact Dell electronically, you can access the following websites:

- www.dell.com
- support.dell.com (technical support)
- premiersupport.dell.com (technical support for educational, government, healthcare, and medium/large business customers, including Premier, Platinum, and Gold customers)

For specific web address for your country, find the appropriate country section in the table below.

NOTE: Toll-free numbers are for use within the country for which they are listed.

When you need to contact Dell, use the electronic addresses, telephone numbers, and codes provided in the following table. If you need assistance in determining which codes to use, contact a local or an international operator.

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-mail Address	Area Code	Local Numbers,and Toll-Free Numbers
Anguilla	General Support	<u> </u>	toll free:800-335-0031
Antigua and Barbuda	General Support		1-800-805-5924
Argentina (Buenos Aires)	Technical Support and Customer Care		toll free: 0800 444 0733
International Access Code:00 Country Code:54	Sales		toll free: 0810 444 3355
City Code:11	Tech Support Fax	11	4515-7139
	Customer Care Fax	11	4515-7138
	Website: www.dell.com.ar		toll-free:800-1578
Aruba	General Support		
Australia (Sydney)	E-mail (Australia): au_tech_support@dell.com		
International Access	E-mail (New Zealand): nz_tech_support@dell.com		
Code:0011	Home and Small Business		1-300-65-55-33
Country Code:61	Government and Business		toll free: 1-800-633- 559
City Code:2	Preferred Accounts Division (PAD)		toll free: 1-800-060- 889
	Customer Care		toll free: 1-800-819- 339
	Corporate Sales		toll free: 1-800-808- 385
	Transaction Sales		toll free: 1-800-808- 312
	Fax		toll free: 1-800-818- 341

Contacting Dell

Austria (Vienna)	Switchboard	01	491 040
International Access	Home/Small Business Sales	01	795676-02
Code:900	Home/Small Business Fax	01	795676-05
Country Code:43	Home/Small Business Customer Care	01	795676-03
City Code:1	Preferred Accounts/Corporate Customer Care		0660-8056
,	Home/Small Business Technical Support	01	795676-04
	Preferred Accounts/Corporate Technical Support		0660-8779
	Website: support.euro.dell.com		
	E-mail: tech_support_central_europe@dell.com		
Bahamas	General Support		toll-free:1-866-278- 6818
Barbados	General Support		1-800-534-3142
Belgium (Brussels)	Technical Support	02	481 92 88
International Access Code:00	Customer Care	02	481 91 19
Country Code:32	Home/Small Business Sales		toll free: 0800 16884
	Corporate Sales	02	481 91 00
City Code:2	Fax	02	481 92 99
	Switchboard	02	481 91 00
	Website: support.euro.dell.com		_
	E-mail: tech_be@dell.com		_
	E-mail for French Speaking Customers: support.euro.dell.com/be/fr/emaildell/		
Bermuda	General Support		1-800-890-0748
Bolivia	General Support		toll free: 800-10-023
Brazil	Customer Support, Technical Support		toll free: 0800 90 3355
International Access Code:00	Technical Support Fax	51	481-5470
Country Code:55	Customer Care Fax	51	481-5480
City Code:51	Sales		toll free: 0800 90 3390
	Website: www.dell.com/br		
British Virgin Islands	General Support		toll-free:1-866-278- 6820
Brunei	General Support	604	633 4966
Country Code:673	Customer Service (Penang, Malaysia)	604	633 4949
	Transaction Sales (Penang, Malaysia)	604	633 4955
Canada (North York, Ontario)	Automated Order-Status System		toll free: 1-800-433- 9014
International Access Code:011	AutoTech (Automated technical support)		toll free: 1-800-247- 9362
	Customer Care Home & Home Office & Small Business		1-800-847-4096

Contacting Dell

	Government (100+ Employees)	
	Technical Support Home & Home Office & Small Business	1-800-847-4096
	Technical Support Medium, Large, Commercial, Government (100+ Employees)	1-800-387-5757
	Sales (direct-from outside Toronto)	1-800-387-5752
	Sales (direct-from within Toronto)	416-758-2200
	Sales (federal government, education, and medical)	1-800-567-7542
	Tech Fax	toll free: 1-800-950- 1329
Cayman Islands	General Support	1-800-805-7541
Chile (Santiago)	Sales, Customer Support, and Technical Support	toll free: 1230-020-
Country Code:56		4823
City Code:2		
China (Xiamen)	Tech Support website: support.ap.dell.com/china	
Country Code:86	Tech Support E-mail: cn_support@dell.com	
City Code:592	Tech Support Fax	818-1350
City Code.592	Projector Technical Support Phone	toll free: 800 858 2920
	Customer Experience	toll free: 800 858 2060
	Home and Small Business	toll free: 800 858 2222
	Preferred Accounts Division	toll free: 800 858 2062
	Large Corporate Accounts North	toll free: 800 858 2999
	Large Corporate Accounts North Government and Education	toll free: 800 858 2955
	Large Corporate Accounts East	toll free: 800 858 2020
	Large Corporate Accounts East Government and Education	toll free: 800 858 2669
	Large Corporate Accounts Queue Team	toll free: 800 858 2572
	Large Corporate Accounts South	toll free: 800 858 2355
	Large Corporate Accounts West	toll free: 800 858 2811
	Large Corporate Accounts GCP	toll free: 800 858 2055
	Large Corporate Account Key Accounts	toll-free:800-858- 2628
	Large Corporate Accounts Spare Parts	toll free: 800-858 2621

Contacting Dell

Colombia	General Support		980-9-15-3978
Costa Rica	General Support		0800-012-0435
Czech Republic (Prague)	Technical Support	02	22 83 27 27
International Access Code:00	Customer Care	02	22 83 27 11
Country Code:420	Fax	02	22 83 27 14
-	TechFax	02	22 83 27 28
City Code:2	Switchboard	02	22 83 27 11
	Website: support.euro.dell.com		
	E-mail: czech_dell@dell.com		
Denmark (Horsholm)	Technical Support		70230182
International Access Code:00	Customer Care(Relational)		70230184
Country Code:45	Home/Small Business Customer Care		32875505
Country Code.45	Switchboard (Relational)		32871200
	Fax Switchboard (Relational)		32871201
	Switchboard (Home/Small Business)		32875000
	Fax Switchboard (Home/Small Business)		32875001
	Website: support.euro.dell.com		
	E-mail Support (portable computers): den_nbk_support@dell.com		
	E-mail Support (desktop computers): den_support@dell.com		
	E-mail Support (servers): Nordic_server_support@dell.com		
Dominica	General Support		toll free: 1-866-278 6821
Dominican Republic	General Support		toll free: 1-800-156 1588
Ecuador	General Support		toll-free 999-119
El Salvador	General Support		01-889-753-0777
Finland (Helsinki)	Technical Support	09	253 313 60
International Access	Technical Support Fax	09	253 313 81
Code:990	Relational Customer Care	09	253 313 38
Country Code:358	Home/Small Business Customer Care	09	693 791 94
City Code:9	Fax	09	253 313 99
	Switchboard	09	253 313 00
	Website: support.euro.dell.com		
	E-mail: fin_support@dell.com		
France (Paris) (Montpellier)	Home and Small Business		
International Access Code:00	Technical Support	0825	387 270
	Customer Care	0825	823 833
Country Code:33	Switchboard	0825	004700
City Code:(1)(4)	Switchboard (calls from outside of France)	_	99 75 40 00

Contacting Dell

	Sales	0825	004 700
	Fax (calls from outside of France)	04	99 75 40 001
	Website: support.euro.dell.com		
	E-mail: support.euro.dell.com/fr/fr/emaildell/		
	Corporate		
	Technical Support	0825	004 719
	Customer Care	0825	338 339
	Fax	01	55 94 71 01
	Switchboard	01	55 94 71 00
	Sales	01	55 94 71 00
Germany (Langen)	Technical Support	06103	766-7200
International Access Code:00 Country Code:49	Home/Small Business Customer Care		0180-5-224 400
Country Code.49	Global Segment Customer Care	06103	766-9570
	Preferred Accounts Customer Care	06103	766-9420
	Large Accounts Customer Care	06103	766-9560
	Public Accounts Customer Care	06103	766-9555
	Switchboard	06103	766-7000
	Website: support.euro.dell.com	1	]
	E-mail: tech_support_central_europe@dell.com	1	]
Grenada	General Support		toll free:1-866-540- 3355
Guatemala	General Support		1-800-999-0136
Guyana	General Support		toll free:1-877-440- 6511
Hong Kong	Technical Support (Dimension™ and Inspiron™ )		296-93188
International Access Code:001	Technical Support (OptiPlex <sup>™</sup> , Latitude <sup>™</sup> , and Dell Precision <sup>™</sup> )		296-93191
Country Code:852	Customer Service (non-technical, post-sales issues)		800-93-8291
	Transaction Sales		toll free: 800 96 4109
	Large Corporate Accounts HK		toll free: 800 96 4108
	Large Corporate Accounts GCP HK		toll free: 800 90 3708
India	Technical Support		1600-33-8045
	Sales		1600-33-8044
Ireland (Cherrywood)	Ireland Technical Support	1850	543 543
International Access Code:16	UK Technical Support (dial within UK only)	1870	908 0800
	Home User Customer Care	01	204 4095
Country Code:353	Small Business Customer Care	01	204 4444
	Corporate Customer Care	01	204 4003
	UK Customer Care (dial number within UK only)	0870	906 0010
	Ireland Sales	01	204 4444
	UK Sales (dial within UK only)	0870	907 4000

	Sales Fax	01	204 0144
	Fax	01	204 5960
	Switchboard	01	204 4444
	Website: support.euro.dell.com		
	E-mail: dell_direct_support@dell.com	1	
Italy (Milan)	Home and Small Business		
International Access Code:00	Technical Support	02	577 826 90
	Customer Care	02	696 821 14
Country Code:39	Fax	02	696 821 13
City Code:2	Switchboard	02	696 821 12
	Website: support.euro.dell.com		
	E-mail: support.euro.dell.com/it/it/emaildell/		
	Corporate		
	Technical Support	02	577 826 90
	Customer Care	02	577 825 55
	Fax	02	577 035 30
	Switchboard	02	577 821
	Website: support.euro.dell.com		
	E-mail: support.euro.dell.com/it/it/emaildell/		
Jamaica	General Support (dial from within Jamaica only)		1-800-404-9205
Japan (Kawasaki)	Web site: support.jp.dell.com		
nternational Access Code:001	Technical Support	44	toll free: 0120-981- 690
	Technical Support Outside of Japan	44	556-3468
Country Code:81	Customer Care	44	556-4240
Korea (Seoul)	Technical Support		toll free: 080-200- 3800
nternational Access Code:001	Sales		toll free: 080-200- 3600
Country Code:82 City Code:2	Customer Service (Penang, Malaysia)		toll free: 604-633- 4949
Sity Code.2	Customer Service (Seoul, Korea)	1	080-200-3800
	Fax	1	2194-6202
	Switchboard	1	2194-6000
Latin America	Customer Technical Support (Austin, Texas, U.S.A.)	512	728-4093
	Customer Service (Austin, Texas, U.S.A.)	512	728-3619
	Fax (Technical Support and Customer Service) (Austin, Texas, U.S.A.)	512	728-3883
	Sales (Austin, Texas, U.S.A.)	512	728-4397
	Sales Fax (Austin, Texas, U.S.A.)	512	728-4600 or 728- 3772
Luxembourg International	Technical Support (Brussels, Belgium)	02	481 92 88

Contacting Dell

Access Code:00 Country Code:352	Home/Small Business Sales (Brussels, Belgium)	L	toll free: 080016884
	Corporate Sales (Brussels, Belgium)	02	481 91 00
	Customer Care (Brussels, Belgium)	02	481 91 19
	Switchboard (Brussels, Belgium)	02	481 91 00
	Fax (Brussels, Belgium)	02	481 92 99
	Website: support.euro.dell.com		
	E-mail: tech_be@dell.com		
Масао	Technical Support		toll free: 0800 582
Country Code:853	Customer Service (Penang, Malaysia)		604 633 4949
	Transaction Sales		toll free: 0800 581
Malaysia (Penang)	Technical Support		toll free: 1 800 888 298
International Access Code:00	Customer Service	4	633 4949
Country Code:60 City Code: 4	Transaction Sales		toll free: 1 800 888 202
	Corporate Sales		toll free: 1 800 888 213
Mexico International Access Code:00	Customer Technical Support		001-877-384-8979 o 001-877-269-3383
Country Code:52	Sales		50-81-8800 or 01- 800-888-3355
	Customer Service		001-877-384-8979 o 001-877-269-3383
	Main		50-81-8800 or 01- 800-888-3355
Montserrat	General Support		toll free:1-866-278- 6822
Netherlands Antilles	General Support		001-800-882-1519
Netherlands (Amsterdam)	Technical Support	20	674 4500
International Access Code:00	Home/Small and Medium Business	20	674 5500
	Home/Small and Medium Business Fax	20	674 4775
Country Code:31 City Code:20	Home/Small and Medium Business Customer Care	20	674 4200
	Corporate	20	674 5000
	Corporate Fax	20	674 4779
	Corporate Customer Care	20	674 4325
	Website: support.euro.dell.com		
	E-mail: support.euro.dell.com/nl/nl/emaildell/		
New Zealand	E-mail (New Zealand): nz_tech_support@dell.com		
	E-mail (Australia): au_tech_support@dell.com		
	Home and Small Business		0800 446 255
	Government and Business		0800 444 617
	Sales		0800 441 567

Contacting Dell

	Fax		0800 441 566
Nicaragua	General Support		001-800-220-1006
Norway (Lysaker)	Technical Support		671 16882
International Access Code:00	Relational Customer Care		671 17514
Country Code:47	Home/Small Business Customer Care		231 62298
	Switchboard		671 16800
	Fax Switchboard		671 16865
	Website: support.euro.dell.com		
	E-mail Support (portable computers): nor_nbk_support@dell.com		
	E-mail Support (desktop computers): nor_support@dell.com		
	E-mail Support (servers): nordic_server_support@dell.com		
Panama	General Support		001-800-507-0962
Peru	General Support		0800-50-669
Poland (Warsaw)	Customer Service Phone	22	57 95 700
International Access	Customer Care	22	57 95 999
Code:011	Sales	22	57 95 750
Country Code:48	Switchboard	22	57 95 999
	Customer Service Fax	22	57 95 806
	Reception Desk Fax	22	57 95 998
	Website: support.euro.dell.com		
	E-mail: pl_support_tech@dell.com	1	
Portugal	Technical Support	35	800 834 077
International Access Code:00	Customer Care		800 300 415 or 800 834 075
Country Code:35	Sales		800 300 410 or 800 300 411 or 800 300 412 or 121 422 07 1
	Fax	35	121 424 01 12
	E-mail: support.euro.dell.com/es/es/emaildell/		
Puerto Rico	General Support	1	1-800-805-7545
St. Kitts and Nevis	General Support		toll free:1-877-441- 4731
St. Lucia	General Support		1-800-882-1521
St. Vincent and the Grenadines	General Support		toll free:1-877-441- 4740
Singapore (Singapore)	Technical Support		toll free: 800 6011 051
International Access Code:005	Customer Service (Penang, Malaysia)	604	633 4949
Country Code:65	Transaction Sales		toll free: 800 6011 054

	Corporate Sales		toll free: 800 6011 053
South Africa (Johannesburg)	Technical Support	011	709 7710
	Customer Care	011	709 7707
International Access Code:09/091	Sales	011	709 7700
	Fax	011	706 0495
Country Code:27	Switchboard	011	709 7700
City Code:11	Website: support.euro.dell.com		
	E-mail: dell_za_support@dell.com		
Southeast Asian/Pacific Countries	Customer Technical Support, Customer Service, and Sales (Penang, Malaysia)	604	633-4810
Spain (Madrid)	Home and Small Business		
International Access Code:00	Technical Support	91	902 100 130
Country Code:34	Customer Care	91	902 118 540
City Code:91	Sales	91	902 118 541
	Switchboard	91	902 118 541
	Fax	91	902 118 539
	Website: support.euro.dell.com		
	E-mail: support.euro.dell.com/es/es/emaildell/		
	Corporate		
	Technical Support	91	902 100 130
	Customer Care	91	902 118 546
	Switchboard	91	722 92 00
	Fax	91	722 95 83
	Website: support.euro.dell.com		
	E-mail: support.euro.dell.com/es/es/emaildell/		
Sweden (Upplands Vasby)	Technical Support	08	590 05 199
International Access Code:00 Country Code:46 City Code:8	Relational Customer Care	08	590 05 642
-	Home/Small Business Customer Care	08	587 70 527
	Employee Purchase Program (EPP) Support		20 140 14 44
	Fax Technical Support	08	590 05 594
	Sales	08	590 05 185
	Website: support.euro.dell.com		
	E-mail: swe_support@dell.com		
	E-mail Support for Latitude™ and Inspiron™: Swe-nbk_kats@dell.com		
	E-mail Support for OptiPlex: Swe_kats@dell.com		
	E-mail Support for Servers: nordic_server_support@dell.com		
Switzerland (Geneva)	Technical Support (Home and Small Business)	22	0844 811 411

Contacting Dell

International Access Code:00	Technical Support (Corporate)	22	0844 822 844
Country Code:41	Customer Care (Home and Small Business)	22	0848 802 202
-	Customer Care(Corporate)		0848 821 721
City Code:22	Switchboard	22	799 01 01
	Fax	22	799 01 90
	Website: support.euro.dell.com		
	E-mail:swisstech@dell.com		
	E-mail for French-speaking HSB and Corporate Customers: support.euro.dell.com/ch/fr/emaildell/		
Taiwan	Technical Support (portable and desktop computers)		toll free: 00801 86 1011
International Access Code:002	Technical Support (Servers)		toll free: 0080 60 1256
Country Code:886	Transaction Sales		toll free:0800 651 22 or 0800 33 556
	Corporate Sales		toll free: 0080 651 227/ 0800 33 555
Thailand	Technical Support		toll free: 088 006 00
International Access	Customer Service (Penang, Malaysia)	604	633 4949
Code:001 Country Code:66	Sales		toll free: 088 006 00
Trinidad and Tobago	General Support		1-800-805-8035
Turks and Caicos Islands	General Support		toll free:1-866-540- 3355
U.K. (Bracknell)	Technical Support (Corporate/Preferred Accounts/PAD [1000+ employees])	0870	908 0500
International Access Code:44	Technical Support (Direct/PAD and general)	0870	908 0800
Country Code:44	Global Accounts Customer Care	01344	373 185 or 373 186
	Corporate Customer Care	0870	908 0500
	Preferred Accounts (500-5000 employees) Customer Care	01344	373 196
	Central Government Customer Care	01344	373 193
	Local Government & Education Customer Care	01344	373 199
	Health Customer Care	01344	373 194
	Home/Small Business Sales	0870	907 4000
	Home/Small Business Customer Care	0870	906 0010
	Corporate/Public Sector Sales	01344	860 456
	Website: support.euro.dell.com		
	Customer Care website: dell.co.uk/lca/customerservices		
	E-mail: dell_direct_support@dell.com		
Uruguay	General Support		toll free:000-413-598 2521

U.S.A. (Austin, Texas) International Access Code:011 Country Code:1	Automated Order-Status System	toll free: 1-800-433- 9014
	AutoTech (portable and desktop computers)	toll free: 1-800-247- 9362
	Projectors Technical Support	toll free: 1-877-459- 7298
	Customer Service	toll free: 1-800-624- 9897
	Dell Sales	toll free: 1-800-289- 3355 or toll free: 1- 800-879-3355
	Dell Outlet Store (Dell refurbished computers)	toll free: 1-888-798- 7561
	Software and Peripherals Sales	toll free: 1-800-671- 3355
	Spare Parts Sales	toll free: 1-800-357- 3355
	Extended Service and Warranty Sales	toll free: 1-800-247- 4618
	Fax	toll free: 1-800-727- 8320
	Dell Services for the Deaf, Hard-of-Hearing, or Speech-Impaired	toll free: 1-877- DELLTTY (1-877- 335-5889)
U.S. Virgin Islands	General Support	1-877-673-3355
Venezuela	General Support	8001-3605

Back to Contents Page