

 
# DISH® Receiver Setup for SK-1000




The following instructions assume that the TRAV'LER® antenna has found and locked onto satellites 110°, 119° and 129°. There should be an asterisk next to 110°, 119°, and 129° on the TRAV'LER interface.

The following instructions are based on a ViP® 211 receiver. If your receiver differs from the options shown, you may need to consult your receiver manual. The wording and display used in your receiver may differ slightly.

**For Help, Call 1-800-788-4417**

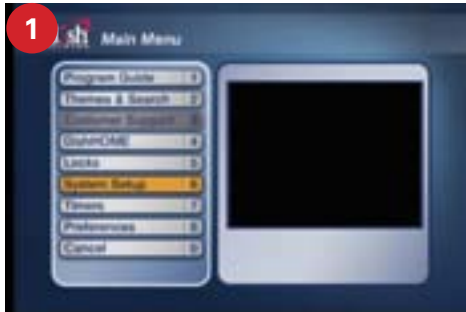

1 Press **Menu** on your remote. Select option 6, **System Setup**.

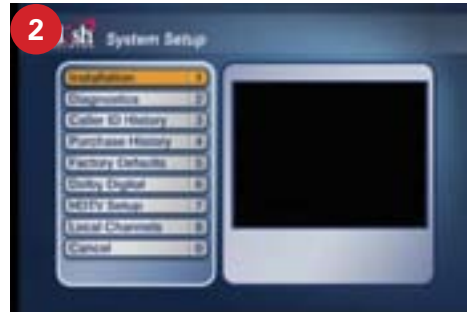


2 Select option 1, **Installation**.



3 Select option 1, **Point Dish**.



4 Select **Check Switch**.

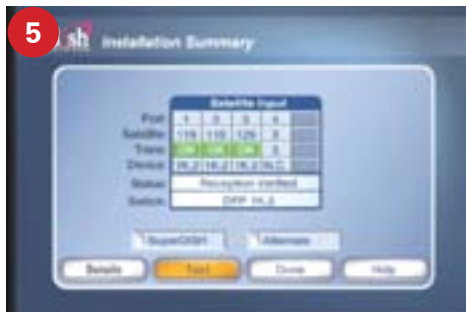

5 If your receiver is showing a switch type of DPP1K.2, then a check switch test is not necessary. In that case, skip to step 7 to complete DISH receiver setup.

If it is of any other type other than DPP1K.2, then check that there are no checkmarks by SuperDISH or Alternate, and select **Test**.



6 Verify that the check switch resulted in a switch type of DPP 1K.2 and that there is a green OK status on Satellite 110, 119 & 129.



7 Press **Cancel** four times to exit the receiver menu.

The receiver setup is now complete.