



# **ADG-530**

## **Hot Surface Ignition (HSI) System**

### **Technical Manual**

---

**American Dryer Corporation**  
88 Currant Road  
Fall River MA 02720-4781  
Telephone: (508) 678-9000 / Fax: (508) 678-9447  
E-mail: [techsupport@amdry.com](mailto:techsupport@amdry.com)

## **Retain This Manual In A Safe Place For Future Reference**

American Dryer Corporation products embody advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble-free operation.

*ONLY properly licensed technicians should service this equipment.*

**OBSERVE ALL SAFETY PRECAUTIONS** displayed on the equipment or specified in the installation/operator's manual included with the dryer.

### **THE HSI MODULE IS NOT FIELD REPAIRABLE** **and** **THE HSI GAS VALVE IS NOT FIELD REPAIRABLE**

We have tried to make this manual as complete as possible and hope you will find it useful. ADC reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models.

**WARNING: UNDER NO CIRCUMSTANCES should the door switch or the heat circuit devices ever be disabled.**

**WARNING: The dryer *must never* be operated with any of the back guards, outer tops, or service panels removed. PERSONAL INJURY or FIRE COULD RESULT.**

**NOTE:** The wiring diagram for the dryer is located on the right wall, inside the Left Coin Panel area.

Replacement parts can be obtained from your distributor or the ADC factory. When ordering replacement parts from the factory, you can FAX your order to ADC at (508) 678-9447 or telephone your orders directly to the ADC Parts Department at (508) 678-9010. Please specify the dryer **model number** and **serial number** in addition to the **part number** and **part description**, so that your order is processed accurately and promptly.

The illustrations on the following pages may not depict your particular dryer exactly. The illustrations are a composite of the various dryer models. Be sure to check the descriptions of the parts thoroughly before ordering.

INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE USER SMELLS GAS MUST BE POSTED IN A PROMINENT LOCATION. THE INSTRUCTIONS TO BE POSTED SHALL BE OBTAINED FROM THE LOCAL GAS SUPPLIER.

# GAS “HOT SURFACE IGNITION” (HSI) SYSTEM

MODEL TRITON 2465 (ADC Part No. 128974) 50/60 Hz TYPE ONLY

## PRODUCT INFORMATION and TROUBLESHOOTING GUIDE

**NOTE:** Failure to read and follow **ALL** instructions and information included in this manual carefully before operating and/or servicing this system, **COULD CAUSE PERSONAL INJURY and/or PROPERTY DAMAGE.**

**IMPORTANT:** We have tried to make this manual as complete as possible and hope you will find it useful. However, since the time of this printing, some information contained herein may have been updated.

ADC RESERVES THE RIGHT TO MAKE CHANGES FROM TIME TO TIME, WITHOUT NOTICE or OBLIGATION IN PRICES, SPECIFICATIONS, COLORS, and MATERIALS, and TO CHANGE or DISCONTINUE MODELS or PARTS.

## Table of Contents

<b>A. INTRODUCTION .....</b>	<b>2</b>
<b>B. GENERAL SYSTEM INFORMATION .....</b>	<b>2 thru 5</b>
HSI System Components/Functions .....	2
Failure To Light - LOCKOUT .....	2 and 3
Flame Failure Reignition .....	3 and 4
System (basic) Electrical Ratings/Specifications .....	4
<b>C. HSI (Hot Surface Ignition) SYSTEM OPERATION .....</b>	<b>5 thru 7</b>
HSI System Operation .....	5 and 6
HSI System Operation (Flow Chart) .....	6
Normal Operation (summary) .....	7
<b>D. TROUBLESHOOTING .....</b>	<b>7 thru 13</b>
Test Equipment .....	8
HSI Troubleshooting Terms (definitions) .....	8 and 9
Troubleshooting/System Diagnosis (detailed) .....	9 thru 13
<b>E. PARTS LIST (basic) .....</b>	<b>14 and 15</b>

## A. INTRODUCTION

The Hot Surface Ignition (HSI) System operates at 24 VAC and is a discrete component based gas ignition control (HSI module) system which utilizes a Hot Surface Ignitor as an ignition source. Safe proof of flame is accomplished through flame rectification.

The HSI module has a diagnostic LED (light emitting diode) indicating light which simplifies troubleshooting in the event of a fault.

Other Features...


- 24 VAC microprocessor based HSI control
- System diagnostic L.E.D. (light emitting diode)
- Automatic reset one (1) hour after lockout
- Multiple tries
- Custom pre-purge and inter-purge timing
- Remote and local sensing
- Flame sense test pins
- Software conforms to "UL 1998" requirements
- Design certified to ANSI Z21.20 and CAN/CSA C22.2 No. 199-M89

## B. GENERAL SYSTEM INFORMATION

### 1. HOT SURFACE IGNITION (HSI) SYSTEM COMPONENTS/FUNCTIONS:

- a. The HSI MODULE is designed to be the "controller" of the HSI system. When activated by the dryer's controls, this module constantly monitors and controls the functions of the HSI system (i.e., ignitor activation, gas valve on/off functions, flame verification, etc.), can be operated at either 50 Hz or 60 Hz; and has self diagnostic capabilities.

The L.E.D. (indicator light) on the HSI module simplifies the troubleshooting procedure in the event of a fault within the HSI system. If the LED on the HSI module *does not* blink constantly, then the system is functioning properly. A "red" L.E.D. (LOCKOUT MODE) indicates that ignition flame *has not* been confirmed. Refer to the *TROUBLESHOOTING SECTION* of this manual for specific diagnostic information.

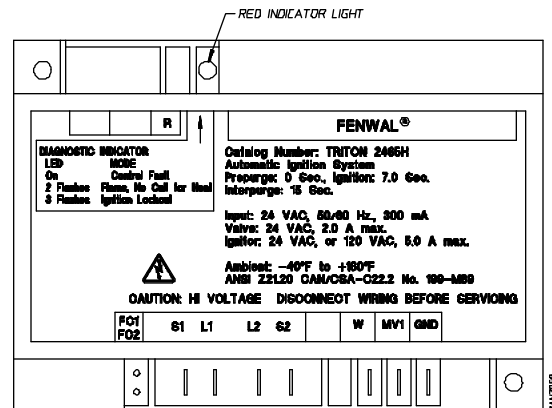

Hot Surface Ignition (HSI) Module

#### 1) Failure To Light - LOCKOUT

- a) Should the main burner fail to light, or if a flame is not detected during the first trial for ignition period, the gas valve is de-energized and the HSI module goes through an inter-purge delay before another ignition attempt. The control will attempt two (2) additional ignition trials before going into LOCKOUT and the gas valve will be de-energized immediately.

- (1) Recovery from LOCKOUT requires a manual reset by either resetting the thermostat or removing the 24 VAC from the HSI module for a period of five (5) seconds.
- (2) If the microprocessor (computer) is still calling for heat after one (1) hour, the HSI module will automatically reset and attempt to ignite the burner again.

## 2) Flame Failure Reignition

- a) If the established flame signal is lost while the burner is operating, the HSI module will respond within 0.8 seconds. The gas valve is de-energized, the HSI module resets and starts a new ignition sequence in an attempt to relight the burner. If the burner *does not* light, the HSI module will de-energize the gas valve. The HSI module will make two (2) more attempts to relight the burner. If the burner *does not* relight, the HSI module will go into LOCKOUT. If flame is reestablished, normal operation resumes.


**IMPORTANT: The HSI MODULE is a precision instrument, and *should be* handled carefully. ROUGH HANDLING or DISTORTING COMPONENTS COULD CAUSE THE MODULE TO MALFUNCTION.**

**WARNING: THE HSI MODULE IS NOT FIELD REPAIRABLE.**

**NOTE:** To reset the HSI MODULE if it is in the LOCKOUT MODE, open and close the main door then restart the dryer. If the module repeatedly goes into LOCKOUT, refer to the *TROUBLESHOOTING SECTION* of this manual.

- b) The 24 VAC TRANSFORMER is designed to step down the operating (primary) voltage of the dryer from 120 VAC, 208 VAC, or 240 VAC to the 24 VAC (secondary voltage) which is necessary to operate the HSI system and in some cases the controls of the dryer.

The 24 VAC TRANSFORMER has multi-primary taps which allow for one (1) transformer to be used for any voltage application including...120 volt, 208 volt, or 240 volt. Refer to the *SERVICE INFORMATION SECTION* of this manual for specific transformer/wiring termination information.

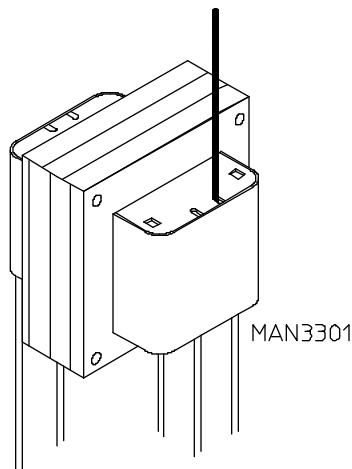


24 VAC Transformer

- c. The HOT SURFACE IGNITOR/FLAME SENSOR ASSEMBLY is located in the burner flame area and is used to ignite the gas by the use of a HOT SURFACE IGNITOR. To provide feedback information to the HSI module a FLAME SENSOR is used to determine whether the burner flame is evident (on).

The HOT SURFACE IGNITOR is a silicon carbide ignitor that upon application of 24 VAC will glow bright orange for the inter-purge time period. The proper location of the silicon carbide ignitor is very important to achieve optimum system performance for both ignition and flame sensing.


After the inter-purge period the gas valve will open.

Upon ignition, the resistance in the flame sensor electrode changes and the information is sent to the HSI module via the sensor probe lead connection to the module. Once the resistance is changed and sensed, the HSI module will sustain the gas flow (provide 24 VAC power to the gas valve).

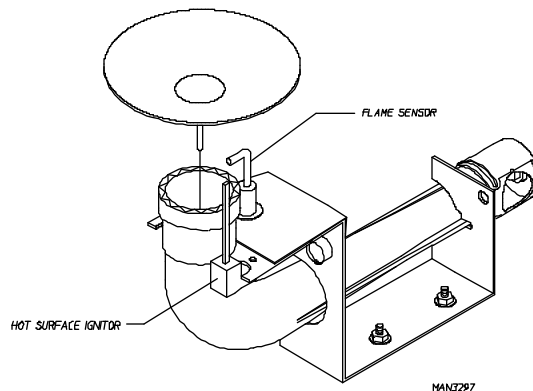

Upshot Burner Tube  
with Hot Surface Ignitor (HSI)/Flame Sensor Assembly

- d. The HSI 24 VAC GAS VALVE(s) used are of the redundant type which means the gas valve is actually two gas valves in one; one in series with the other. This is a safety feature which provides protection against gas flow in the event of a failure of one of the valves to seat properly. Other features are that the gas valves have a manual shut off, a pressure tap outlet, and are designed for easy conversion to regulated L.P. gas.

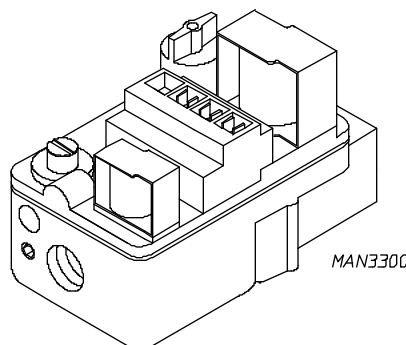

36E Redundant Gas Valve

**WARNING: THE HSI GAS VALVES ARE NOT FIELD REPAIRABLE.**

**IMPORTANT: THERE ARE NO PARTS AVAILABLE FOR FIELD REPAIR. Replace gas valve only with *exact* model and/or type number as noted on gas valve.**

## 2. SYSTEM (basic) ELECTRICAL RATINGS/SPECIFICATIONS

INPUT POWER	CONTROL: 18-30 VAC 50/60 Hz
INPUT CURRENT DRAIN	300 mA @ 24 VAC with GAS VALVE RELAY ENERGIZED (control only)
GAS VALVE RATING	2.0A @ 24 VAC
OPERATING TEMPERATURE	0 °F (fahrenheit) to 160 °F (fahrenheit) 0 °C (celsius) to 71 °C (celsius)
FLAME SENSITIVITY	.7µA minimum
FLAME FAILURE RESPONSE TIME	0.8 seconds maximum
TYPE of GASES	NATURAL, L.P. (liquid propane), or manufactured
SIZE (length x width x height)	4.23" x 3.23" x 1.63" (with cover) 10.75 cm x 8.21 cm x 3.97 cm (with cover)
WEIGHT	5 ounces (nominal) 145 grams (nominal)
ENCLOSURE	GRAY (Noryl N-190) FIRE RETARDENT PLASTIC
TRIES FOR IGNITION	three (3)
TRIAL FOR IGNITION PERIOD	4 seconds
INTER-PURGE	3.5 seconds

## C. HSI (Hot Surface Ignition) SYSTEM OPERATION


### 1. HSI SYSTEM OPERATION

- a. The HSI Module's "**red**" indicator light will light for up to approximately five (5) seconds (self check routine).

If the HSI Module's "**red**" indicator light stays on or flashes continuously, then the HSI module is wired incorrectly or has failed.

- b. Start the drying cycle.


- c. The Hot Surface Ignitor will turn on. After approximately four (4) seconds the Hot Surface Ignitor will shut off and the gas valve will be energized. *The flame should now be established.*

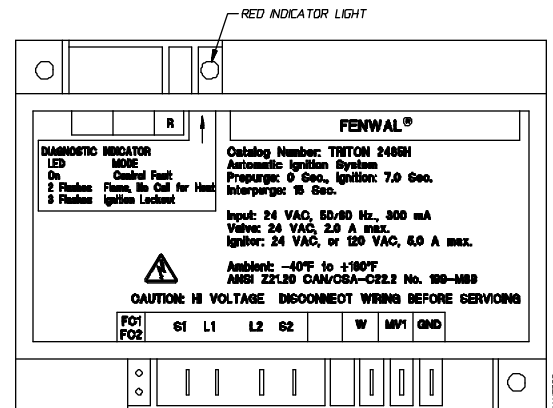

- d. With the burner flame on, remove the flame sensor wire from the *S2 terminal* of the HSI module. *The burner flame must shut off immediately.*
- e. Stop the drying cycle, with the Flame Sensor removed, restart the drying cycle.

- f. The Hot Surface Ignitor will turn on and after approximately four (4) seconds the Hot Surface Ignitor will shut off. The Gas Valve will be energized and a burner flame *should be evident* for approximately seven (7) seconds and then shut off.
- g. The HSI Module will attempt two (2) additional ignition trials after which the HSI Module will LOCKOUT and the "red" indicator light *will flash 3 blinks, wait one (1) second, and then keep flashing 3 blinks continuously until the HSI Module is reset manually.*
- h. Functional check of the HSI (Hot Surface Ignition) Module is complete.

2. HSI SYSTEM OPERATION (Flow Chart)

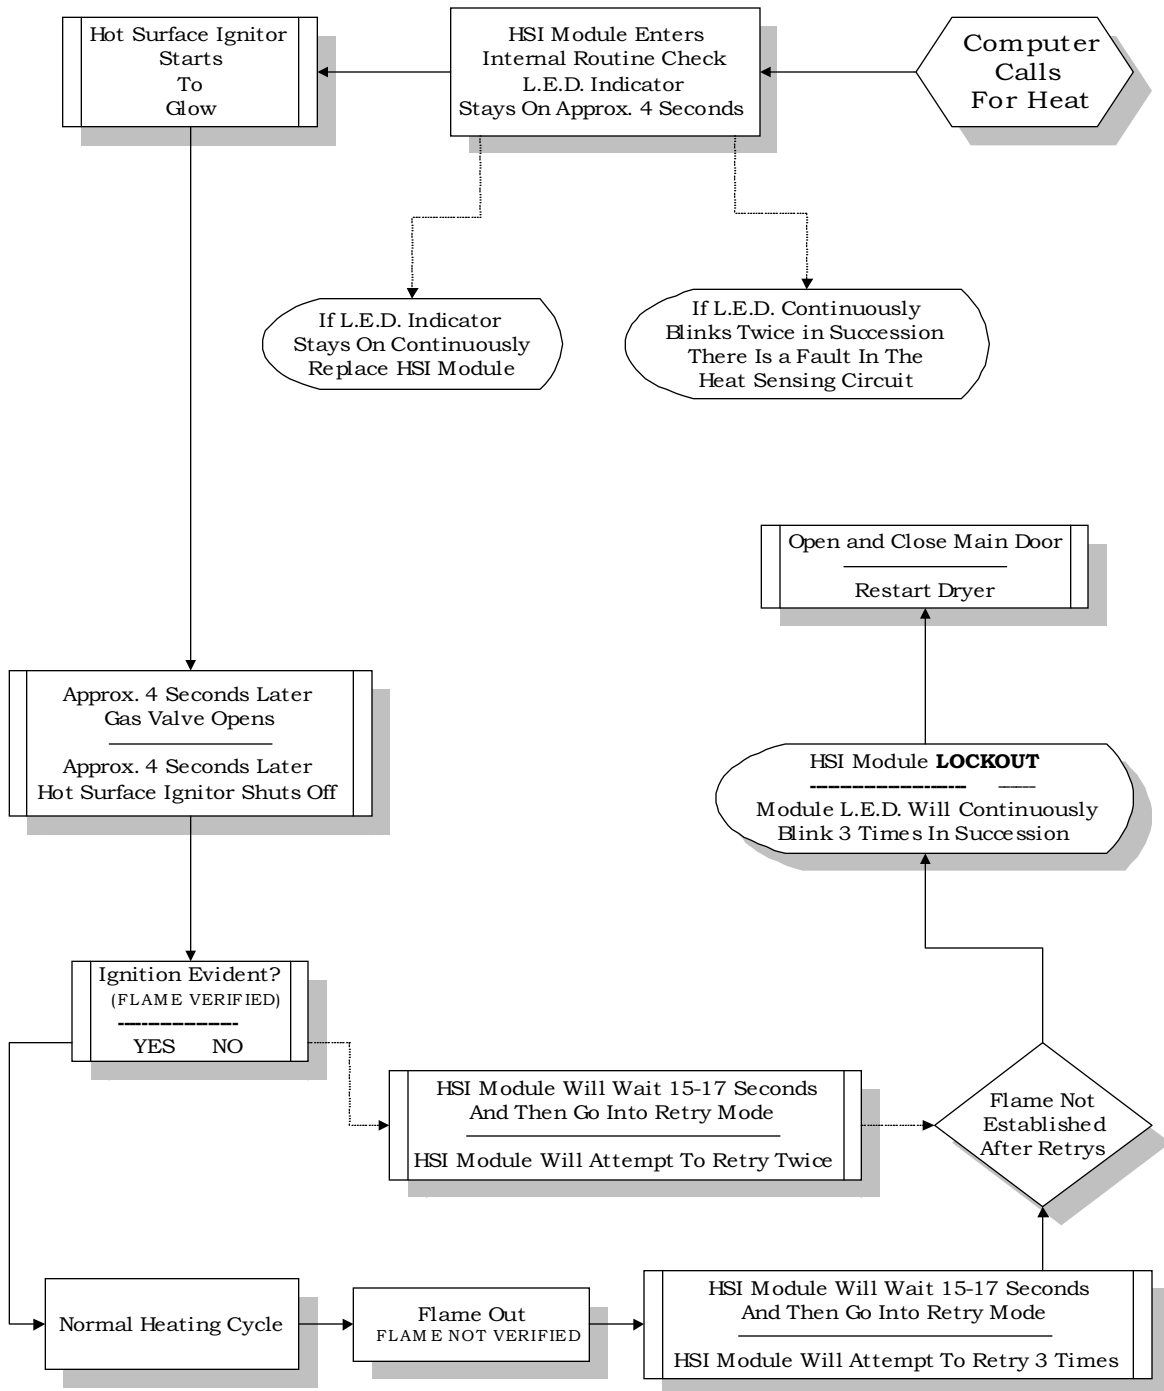



### 3. NORMAL OPERATION (summary)

When a signal is received from the thermostat supplying 24 volts to the *W terminal* of the HSI module, the control will reset, perform a self check routine, flash the diagnostic L.E.D. for up to four (4) seconds and a pre-purge delay begins. Following the inter-purge period, the Hot Surface Ignitor is activated and the Gas Valve is energized for the trial for ignition period. When a flame is detected during the trial for ignition, the Hot Surface Ignitor is deactivated and the Gas Valve remains energized. The thermostat and main burner flame are constantly monitored to assure the system continues to operate properly. When the thermostat/micro processor controller (computer) is satisfied and the demand for heat ends, the Gas Valve is de-energized immediately.

Should the main burner fail to light, or a flame *is not* detected during the first trial for ignition period, the Gas Valve is de-energized and the HSI Module (controller) goes through an inter-purge delay before another ignition cycle is attempted. The HSI Module will attempt two (2) additional ignition trials before going into LOCKOUT and the Gas Valve relay will be de-energized immediately.

Recovery from LOCKOUT requires a manual reset by either resetting the thermostat or removing the 24 volts for a period of five (5) seconds.


If the computer is still calling for heat after one (1) hour the HSI Module (controller) will automatically reset and attempt to ignite the burner again.

## D. TROUBLESHOOTING

The troubleshooting information provided in this manual is intended for use only by QUALIFIED SERVICE TECHNICIANS. Observe **ALL** safety precautions displayed on the equipment or specified in the Installation/Operator's Manual included with the dryer.

**IMPORTANT: UNDER NO CIRCUMSTANCES SHOULD ANY SAFETY OR HEAT CIRCUIT DEVICE EVER BE DISABLED.**

The following troubleshooting guide provides systematic procedures for isolating equipment problems, and again, is intended for use by a QUALIFIED SERVICE TECHNICIAN.

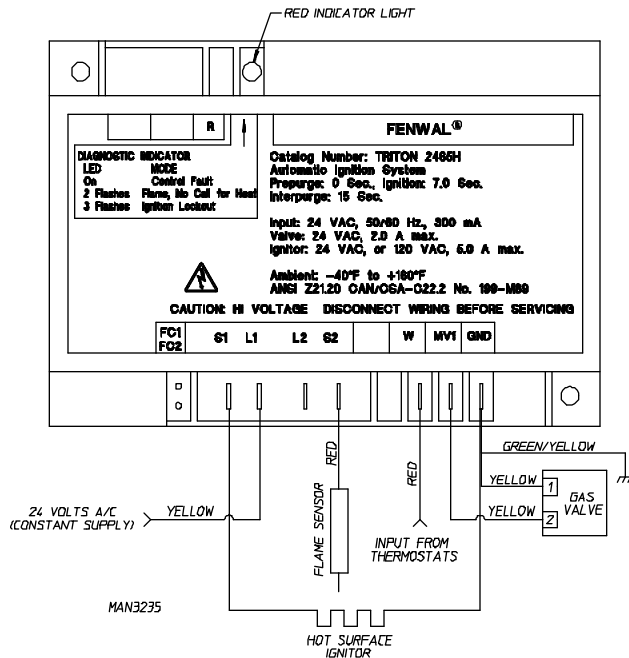


## TEST EQUIPMENT

The following pieces of test equipment will be required to troubleshoot this system with minimal time and effort.


### MANOMETER

Used to measure gas pressure in inches of water column (W.C.)  
Available from **ADC** - Part No. 122804

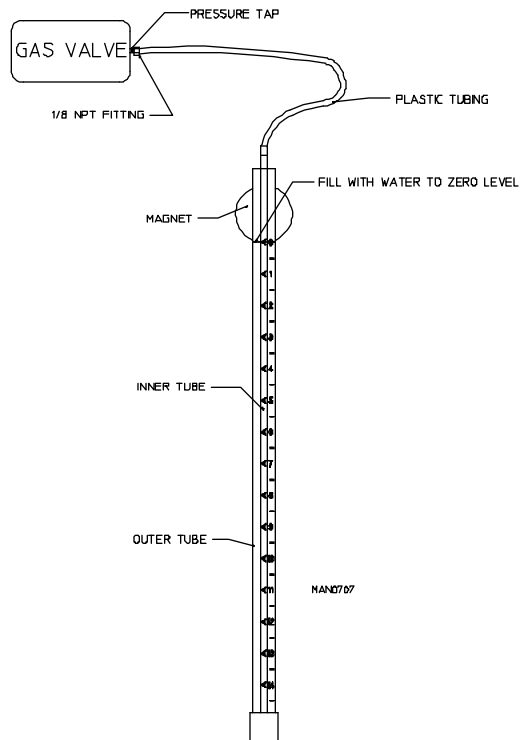

### MULTIMETER/VOLTMETER

For measuring voltage and/or amperage

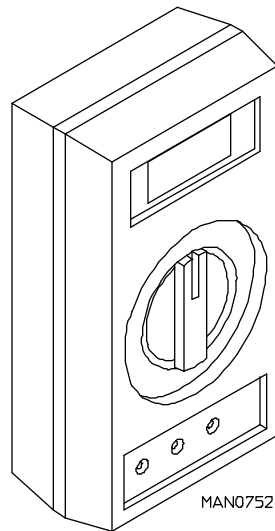

## 1. HSI (Hot Surface Ignition) TROUBLESHOOTING TERMS (definitions)

- a. INTERNAL CONTROL FAILURE - HSI module "red" L.E.D. (light emitting diode) indicator light stays on continuously. This indicates

- f. **FLAME SENSOR FAULT** - if there is a problem/fault within the flame sensing circuit or the Flame Probe, the “red” L.E.D. (light emitting diode) indicator light flashes 2 blinks (i.e., FLAME SENSOR FAULT) continuously until the problem/fault is corrected (fixed) or until the HSI Module is reset manually.

## 2. TROUBLESHOOTING/SYSTEM DIAGNOSIS (detailed)


TROUBLESHOOTING (Service Checks)	
SYMPTOM	Cause
1. No L.E.D. INDICATOR LIGHT	A. MISWIRED B. TRANSFORMER BAD (24 volts) C. FUSE/CIRCUIT BREAKER BAD D. HSI MODULE BAD
2. GAS VALVE ON - NO HOT SURFACE IGNITOR	A. DEFECTIVE HOT SURFACE IGNITOR B. MISWIRED C. HSI MODULE BAD (check voltage at Hot Surface Ignitor)
3. HOT SURFACE IGNITOR ON - NO GAS VALVE	A. GAS VALVE COIL OPEN B. OPEN GAS VALVE WIRE (MVI or GND) C. HSI MODULE BAD (check for voltage between MVI and GND)
4. FLAME OKAY FOR T.F.I. (TRIAL FOR IGNITION) No FLAME AFTER T.F.I.	A. DEFECTIVE HOT SURFACE IGNITOR B. S2 WIRE BAD C. POOR GROUND (GND) AT BURNER D. POOR FLAME (check flame current)

### a. System Diagnosis

#### 1) Gas Pressure

A gas pressure test *should be* taken at the gas valve pressure tap provided on every gas valve to assure that the water column (W.C.) pressure is correct and consistent.

There are two (2) types of devices used to measure water column (W.C.) pressure. They are the spring/mechanical type gauge and the water column test gauge (manometer). The use of the spring/mechanical type of gauges is **NOT RECOMMENDED** because they are very easily damaged and they *are not* always accurate. The preferred type of gauge is the manometer because it is a simple device to use and is highly accurate. A manometer is simply a glass or transparent plastic tube with a scale graduated in inches. When it is filled with water and pressure is applied, the water in the tube rises, showing the exact water column (W.C.) pressure.

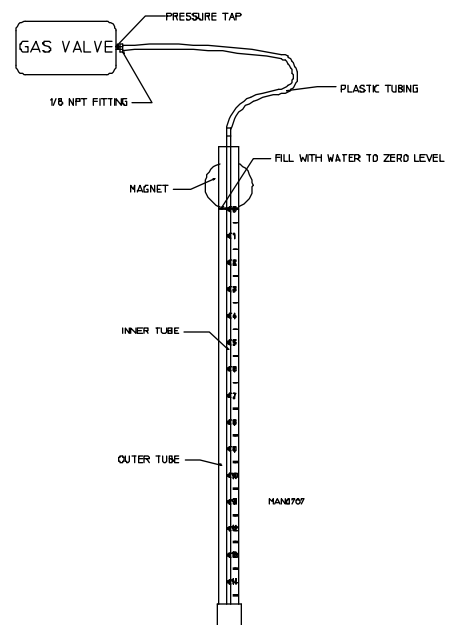

**WARNING: Test all connections for leaks by brushing on a soapy water solution. NEVER TEST FOR LEAKS WITH A FLAME!!!**

- a) Connect water column test gauge (manometer) to the gas valve tap (1/8" N.P.T.).

- b) Start the dryer ... with the burner on, the correct water column (W.C.) reading in inches *should be*:

Natural Gas ..... 3.5 - 4 inches W.C.  
 L.P. (liquid propane) Gas ..... 10.5 - 11 inches W.C.

When a gas dryer is first started (during initial time of installation/start-up), it has a tendency not to ignite on the first ignition attempt. This is due to the fact that the gas supply piping is filled with air, so it may take a few minutes for the air to be purged from the supply lines. During this purge period, there may be insufficient gas pressure for ignition, which might cause the HSI module to go into the LOCK-OUT MODE (the L.E.D. will LIGHT "RED" CONTINUOUSLY).

**NOTE:** During the purge period, check to be sure that **ALL** gas shut-off valves are open.

**NOTE:** To reset the HSI MODULE if it is in the LOCKOUT MODE, open and close the main door then restart the dryer.

2) Flame Sensor


a) Flame Sensor Fault Code

The HSI Module is equipped with a diagnostic circuit that detects a fault in the Flame Sensor Probe or any related circuits in the internal circuits in the HSI module. When a fault is detected, the "red" L.E.D. (light emitting diode) indicator light will flash 2 blinks. To clear this code either discontinue power to the dryer/HSI Module or replace the FLAME PROBE or HSI MODULE.

b) Flame Sensor Current Check

Flame current is the current which passes through the flame from the Flame Sensor to ground (GND). The minimum flame current necessary to keep the HSI system from LOCK-OUT is .7 microamps. To measure flame current, connect an analog D.C. (direct current) microammeter to the FC1/FC2 terminals (refer to the adjoining illustration).

**The meter should read .7 microamps or higher.** If the meter reads below "0" on the scale, then the meter leads are reversed. Disconnect power and reconnect the meter leads for proper polarity.

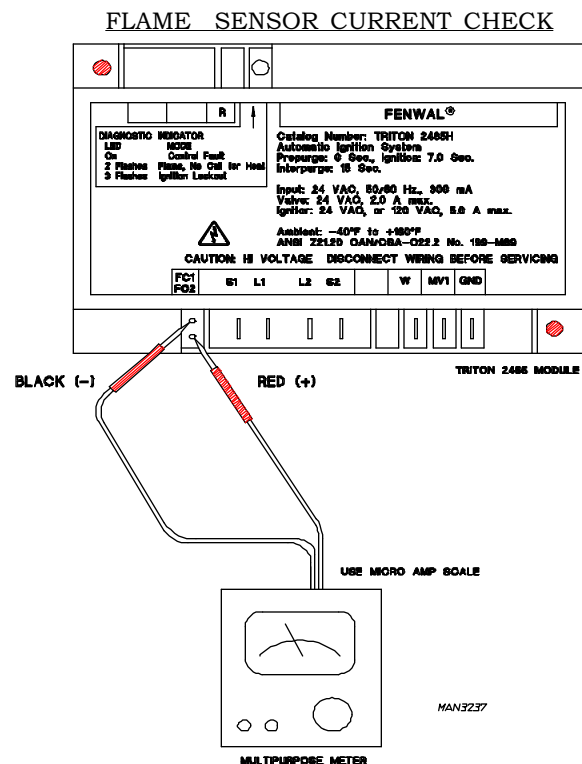

c) Flame Failure “Reignition”

If the established flame signal is lost while the burner is operating, the HSI module (controller) will respond within 0.8 seconds. The gas valve will be de-energized, the HSI module resets and starts a new ignition sequence in an attempt to relight the burner. If the burner *does not* light, the HSI module will de-energize the gas valve. The HSI module will make two (2) more attempts to relight the burner. If the burner *does not* relight the HSI module will go into the LOCKOUT MODE. If the flame is reestablished, normal operation resumes.

d) Fault Conditions

FAULT CONDITION INDICATIONS	
<i>ERROR MODE</i>	<i>L.E.D. INDICATION</i>
<i>INTERNAL HSI MODULE FAILURE</i>	<i>STEADY ON</i>
<i>FLAME SENSOR FAULT</i>	<i>2 FLASHES</i>
<i>IGNITION LOCKOUT</i>	<i>3 FLASHES</i>

The “red” L.E.D. (light emitting diode) will flash on for a 1/4 second, then off for a 1/4 second during a fault condition. The pause between the fault codes is three (3) seconds.


**NOTE:** To reset the HSI MODULE if it is in the LOCKOUT MODE or the FLAME SENSOR FAULT MODE, open and close the main door then restart the dryer.

3) HSI (Hot Surface Ignition) Module

The HSI module (controller) utilizes a microprocessor to continually and safely monitor , analyze, and control the proper operation of the gas burner. Additional features consist of L.E.D. diagnostics, automatic one (1) hour reset, multiple tries, and flame current testing pins highlight the HSI module benefits.

The terminal designation that are listed below correspond to the designations on the bottom portion of the HSI module (as shown from left to right).

TERMINAL DESIGNATIONS	
<i>FC1/FC2</i> .....	<i>FLAME SENSOR CURRENT CHECK POINTS</i>
<i>S1</i> .....	<i>IGNITOR</i>
<i>L1</i> .....	<i>24 VOLT INPUT (HOT)</i>
<i>L2</i> .....	<i>NOT USED (NEUTRAL - 120V INPUT ONLY)</i>
<i>S2</i> .....	<i>IGNITOR REMOTE SENSOR/FLAME SENSOR</i>
<i>W</i> .....	<i>THERMOSTAT INPUT</i>
<i>MVI</i> .....	<i>MAIN VALVE POWER</i>
<i>GND</i> .....	<i>System Ground</i>

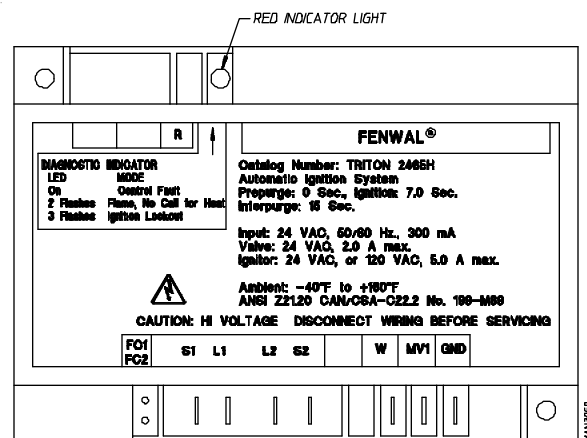

#### 4) HSI (Hot Surface Ignition) 24 VAC Transformer

The HSI transformer is designed to step down the operating voltage of the dryer to 24 VAC to operate the HSI module. This transformer, like all transformers, is two (2) sided:

##### a) Primary Side

This is the incoming voltage side - 120 VAC, 208 VAC, 240 VAC - of transformer.

##### b) Secondary Side

This is the step down side - 24 VAC - of the transformer.

**WARNING: 208 VAC and 230/240 VAC ARE NOT THE SAME. ALL** voltage connections *should be* checked and confirmed according to the wiring diagram provided with the individual dryer. Any damage done to dryer components due to improper voltage connections will automatically **VOID THE WARRANTY.**

**IMPORTANT:** The ADC Service Department *must be* contacted prior to any wiring change and/or conversion because, depending on the change/conversion required, some parts may have to be added, deleted, or changed. When contacting the ADC Service Department they *must be* given the correct **model number** and **serial number** of the dryer(s).

**NOTE:** Any wiring change(s) and/or conversion(s) *should be* by a **QUALIFIED ELECTRICAL TECHNICIAN.**

#### (1) Transformer Wiring

There are six (6) color-coded wires coming from the 24 VAC Transformer. There are four (4) wires coming from the primary (incoming) voltage side of the transformer. Their application and color-coding are as follows:

##### (a) For 120 VAC application ONLY;


- 1 - The **BLACK** and **WHITE** wires are used.
- 2 - The **Red** and **Blue** wires are capped off individually.

##### (b) For 208 VAC application ONLY;

- 1 - The **BLACK** and **BLUE** wires are used.
- 2 - The **Red** and **White** wires are capped off individually.

##### (c) For 240 VAC application ONLY;

- 1 - The **BLACK** and **RED** wires are used.
- 2 - The **White** and **Blue** wires are capped off individually.

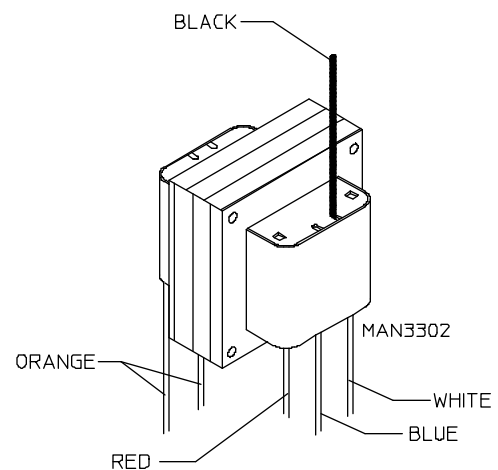

There are **two (2) ORANGE** wires coming from the secondary (step down) side of the transformer;

(d) One (1) **ORANGE** wire is connected to the GND (ground) termination.

(e) One (1) **ORANGE** wire supplies the 24 VAC signal for the control and/or HSI system circuit. (Refer to the specific wiring diagram with the dryer for connection point.)

4) HSI (Hot Surface Ignition) 24 VAC Redundant Gas Valve

**IMPORTANT:** The HSI 24 VAC Redundant Gas Valve **contain no serviceable parts.**  
**REPLACEMENT COILS ARE NOT AVAILABLE.**


**IMPORTANT:** **THERE ARE NO PARTS AVAILABLE FOR FIELD REPAIR.** Replace gas valve only with *exact* model and/or type number as noted on gas valve.

a) The redundant gas valve utilize 24 VAC, which is provided by the HSI module.

(1) To check the resistance value;

(a) Disconnect the terminations at the gas valve from the HSI module.

**WARNING:** When taking ohm readings, the terminations from the HSI module *must be* disconnected/removed, otherwise, the readings obtained will be incorrect and/or erroneous.

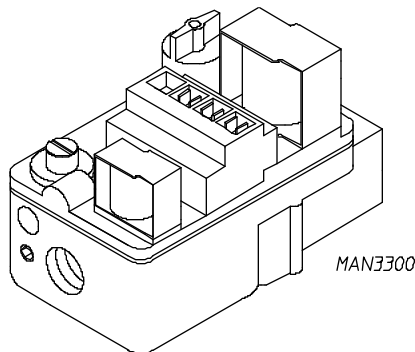

36E Redundant Gas Valve

(2) With a meter (either a multimeter or ohmmeter) set on the 200 ohm position, place the meter leads across:

(a) Terminals 1 and 2...the reading *should be* approximately 96 ohms +/- 5 ohms.

(b) Terminals 2 and 3...the reading *should be* approximately 96 ohms +/- 5 ohms also.

(3) If, after checking the resistance values on the gas valve it is determined that the ohm readings do not approximate the ohm values listed above (96 ohms [+/- 5 ohms] for both readings respectively), then, the gas valve *must be* replaced.


## E. PARTS LIST (basic)

When ordering replacement parts from the factory, please specify **model number** and **serial number** in addition to the **part number** and **part description** of the dryer so that your order can be processed accurately and promptly. The information and illustrations listed here *may not* depict your particular dryer/part exactly. This information and/or illustrations are a composite of the HSI SYSTEM. Be sure to check the part description thoroughly before ordering any part.


ADC PART NUMBER	DESCRIPTION
128918	FLAME SENSOR ASSEMBLY
128927	HSI 24 VAC REDUNDANT GAS VALVE (36E01-204)
128974	HSI MODULE
881479	HOT SURFACE IGNITOR
881495	HSI 24 VAC TRANSFORMER




# HSI (Hot Surface Ignition) SYSTEM COMPONENTS

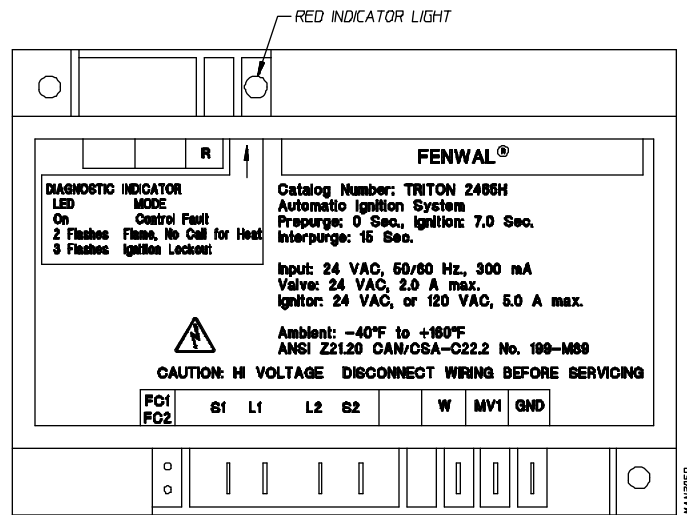


Hot Surface Ignition (HSI) Module

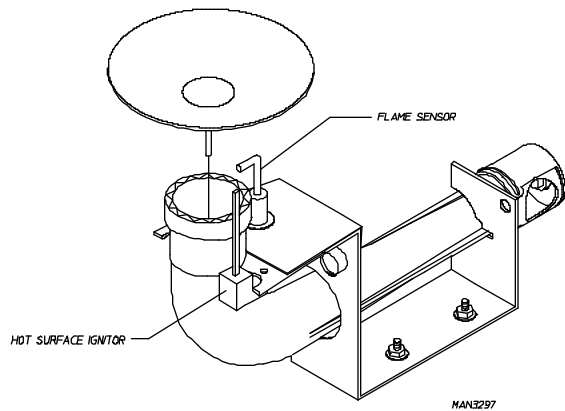

**Upshot Burner Tube  
with  
Hot Surface Ignitor (HSI)/Flame Sensor  
Assembly**

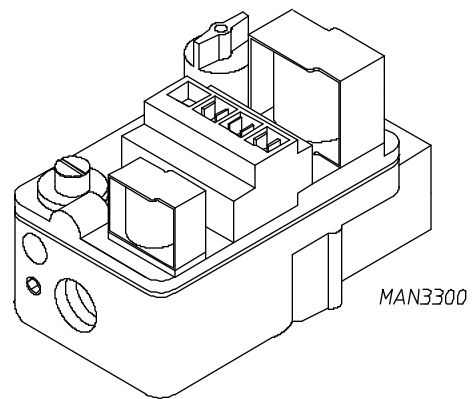

**36E  
24 VAC Redundant Gas Valve**

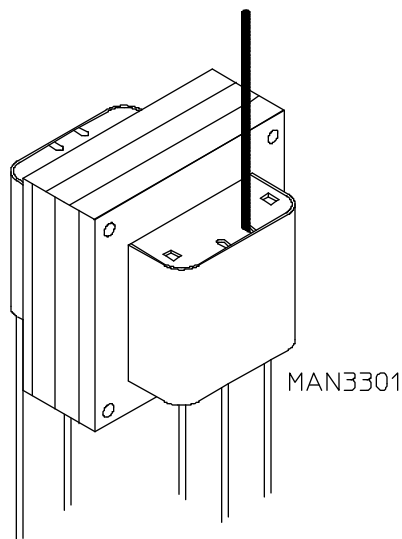

**24 VAC Transformer**

