

Customer Service Hours
Monday - Friday 9:00AM - 11:00PM (EST) 1-800-481-3676 or 718-416-1917
Saturday 9:00AM - 10:00PM (EST) 1-800-710-3252
Sunday 9:00AM - 11:00PM (EST) 1-800-727-3592
Or Send E-Mail to: CustomerService@cobycorp.com techsupport@cobycorp.com

Important Safety Instruction

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
Disconnect the apparatus from the mains if it is not in use.

Please study this manual carefully and always keep it available. There are, however, some installation and operation precautions which you should be aware of.

- Read these instructions.
- Keep these instructions.
- Read all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Maintain well ventilated conditions around the product. Do not put product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including electric fans) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounded type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and at the points where they exit from the apparatus. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the points where they exit from the product.
- Only use attachments or accessories specified by the manufacturer. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Handle all wiring in a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is frayed, liquid has been spilled on or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Unplug the apparatus during lightning storms or when unused for long periods of time. Unplug from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges.
- Power removal: This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products designed to operate from battery power, or other sources, refer to the operating instructions.
- Overheating: Do not obstruct cooling outlets, ventilation ports, or integral convenience receptacles as this can result in a risk of fire or electric shock.

Safety Precautions



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of unshielded "hazardous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.
- WARNING:** To reduce the risk of fire or electric shock, do not expose the apparatus to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.
- CAUTION:** To prevent electric shock, match wide blade plug with wide slot, and fully insert. This Digital Video Disc Player employs a laser system. To prevent direct exposure to the laser beam, do not try to open the enclosure. When open and the mirrors are defocused, visible laser radiation is present.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. **DO NOT STARE INTO BEAM.**
- FOC NOTICE:** The equipment emits both visible and laser beams with the laser of Class II digital disc. Focus with the FCC Rules Part 15. This laser, an assigned grade responsible practice against harmful interference in residential installation. The equipment generates, uses, and can radiate radio frequency energy and may interfere with radio communications if not installed and used in accordance with the instructions may cause harmful interference to radio communication.

NOTE 1: Main plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during the product use.


NOTE 2: The warning label is located on the bottom enclosure of the apparatus.

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	Page
SAFETY INFORMATION	
TABLE OF CONTENTS	
UNPACKING	1
NOTE ON DISC	2
VIEWS OF THE MAIN UNIT	3, 4
VIEWS OF THE REMOTE CONTROL	5
CONNECTORS	6
CONNECTORS Connecting to a TV	7
CONNECTORS Connecting to a Headset/Power Connection to AC Adapter/Power Connection to DC Car Cord	7
CONNECTORS Connecting to a Battery Pack	8
FUNCTION BUTTONS	9
SETUP MENU	15-17
CUSTOM SETUP	17
TROUBLE SHOOTING	18
SPECIFICATIONS	19

Unpacking

Please make sure the following items are included with your DVD player. If any items are missing, contact your dealer.

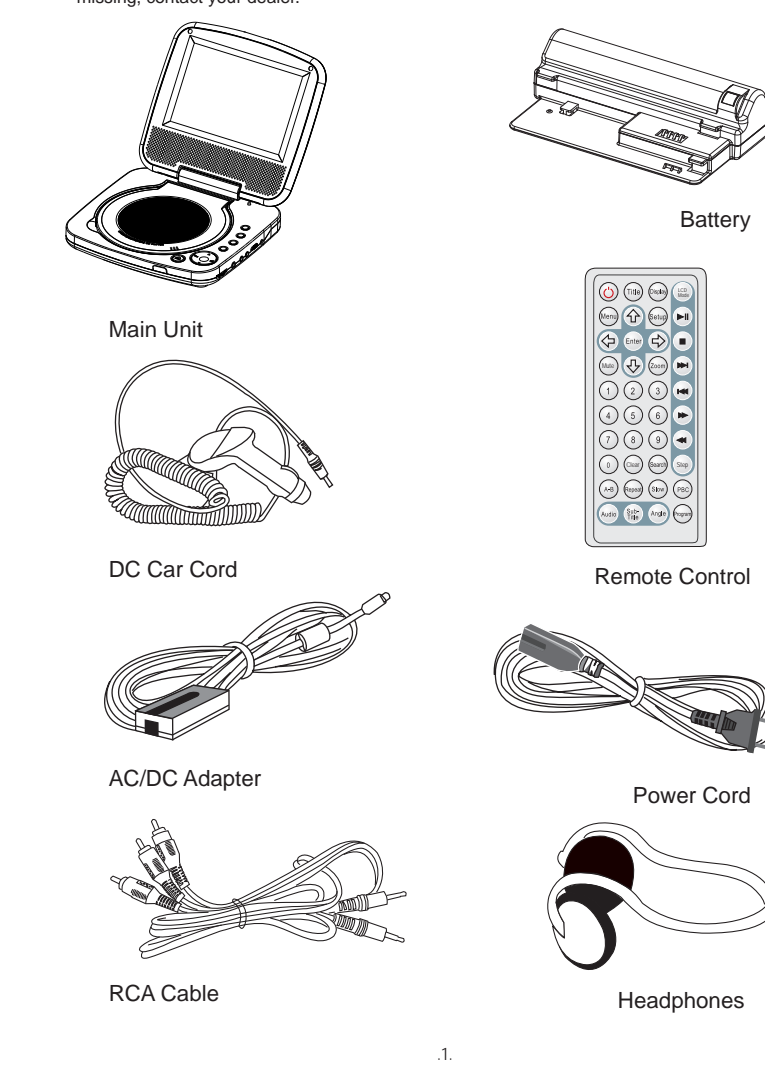

Note on Disc

The DVD player can play back the following discs.

Disc	Disc	Disc	Disc	Disc	Disc
UD-Video (DVD-Video)	Audio (MP3)	CD-DA	CD-R	CD-RW	CD-R
CD	Audio	UD-Video	Video Disc		
MP3	Audio	UD-Video	Video Disc		
PGC	UD-Video	Video Disc	Video Disc		


In addition, we sell a plug-in LED or LCD that can be used with an MP3 file. You can connect this other than those listed above (CD-ROM, CD-Extra, CD-i, and DVD discs can not be played on the DVD player).

Care of Disc
Video discs contain high-density compressed data that needs proper handling. Hold the disc with fingers, near the disc's outer edge and/or the center spindle hole. Do not touch the disc surface.


Store discs in cabinet vertically, and in dry condition. Prevent exposure to:
• Direct sunlight
• Heat or exhaust from a heating device.
• Extreme humidity.

Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently and radially from center toward the outer edge. Do not use benzene, acetone, chemical solvents or waxes when cleaning. Such cleaning fluids will permanently damage the disc surface.


Views of the Main Unit

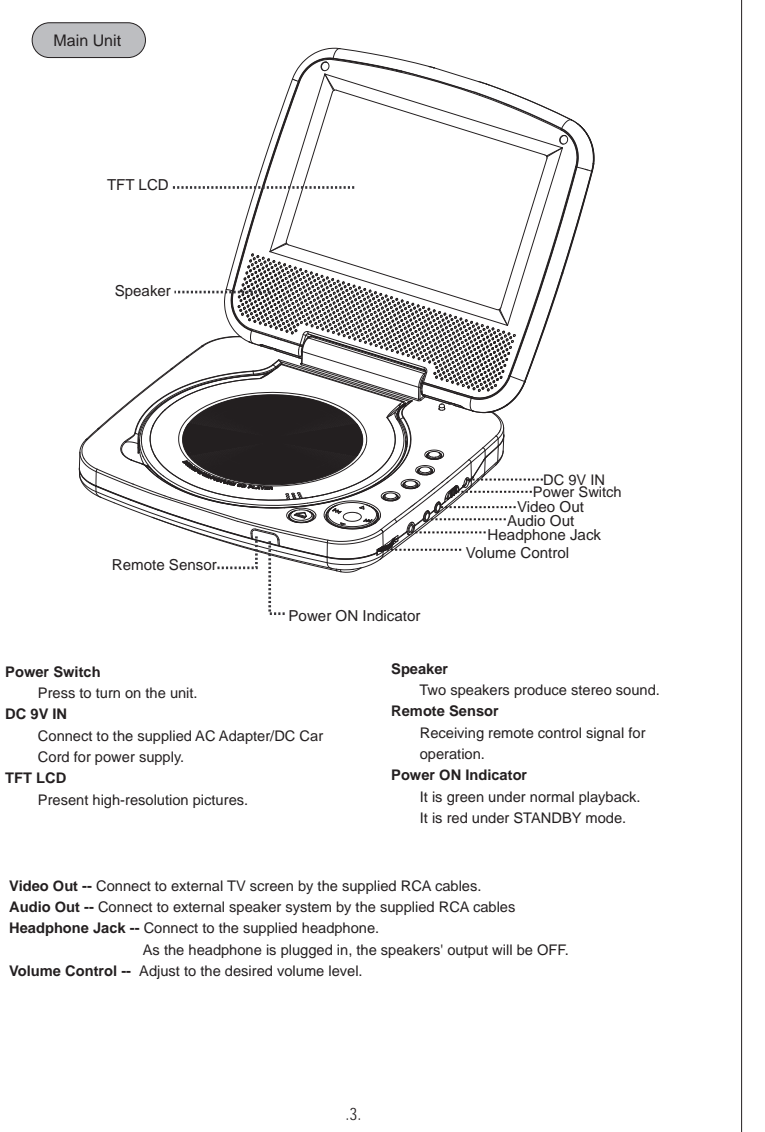


Views of the Main Unit

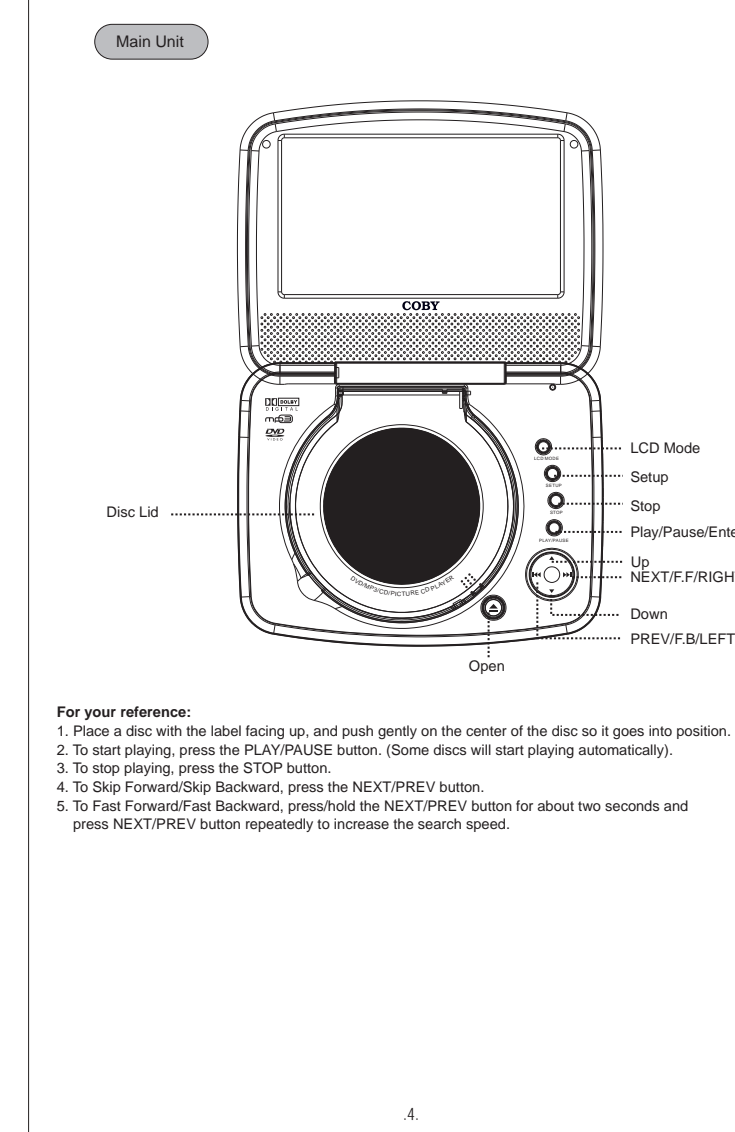


Views of the Remote Control

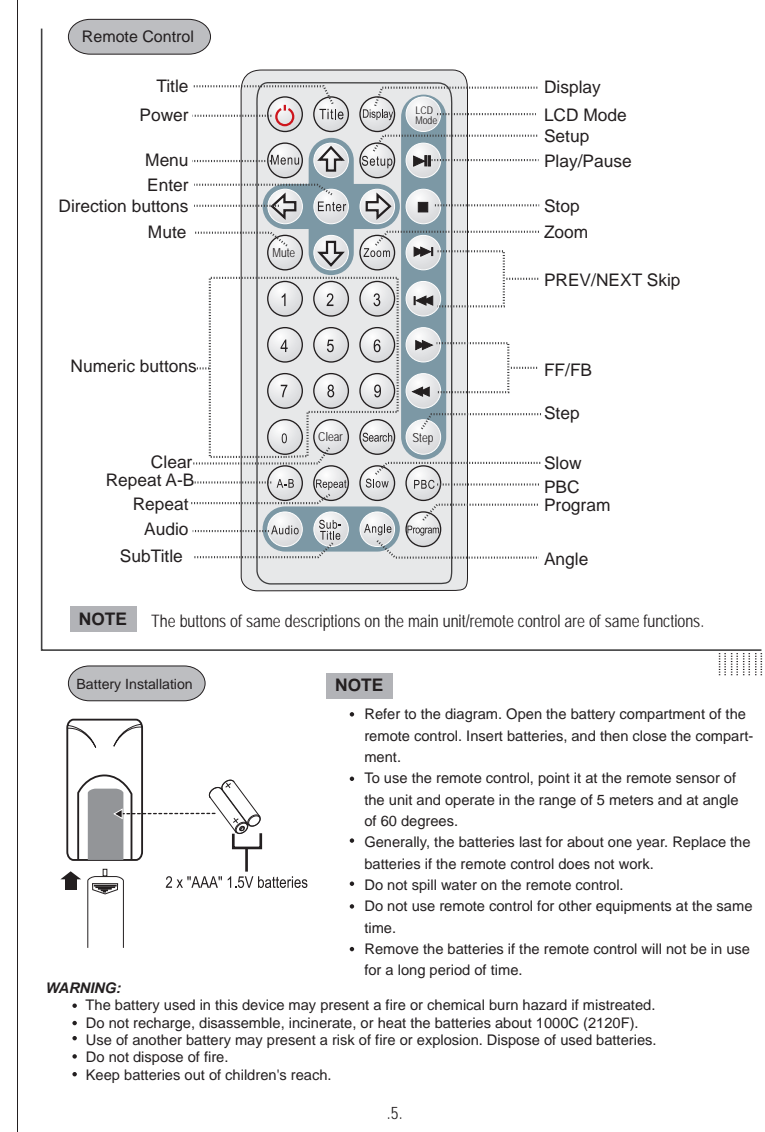


Connections

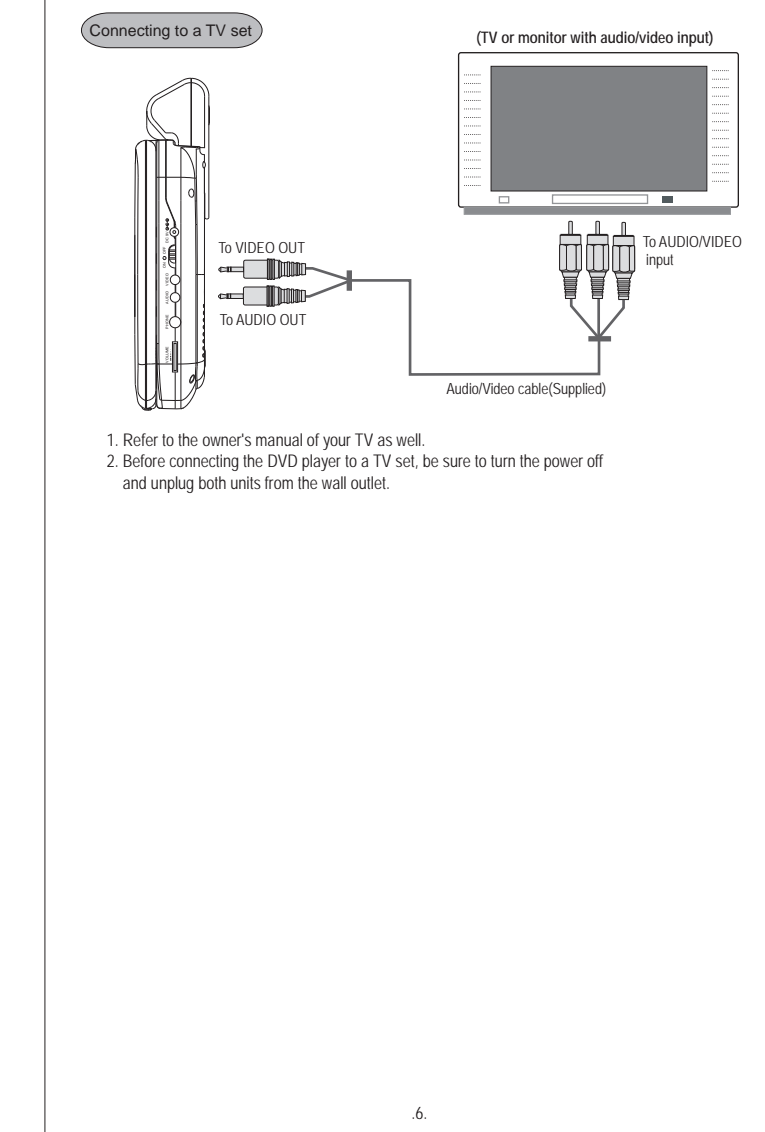


Connections

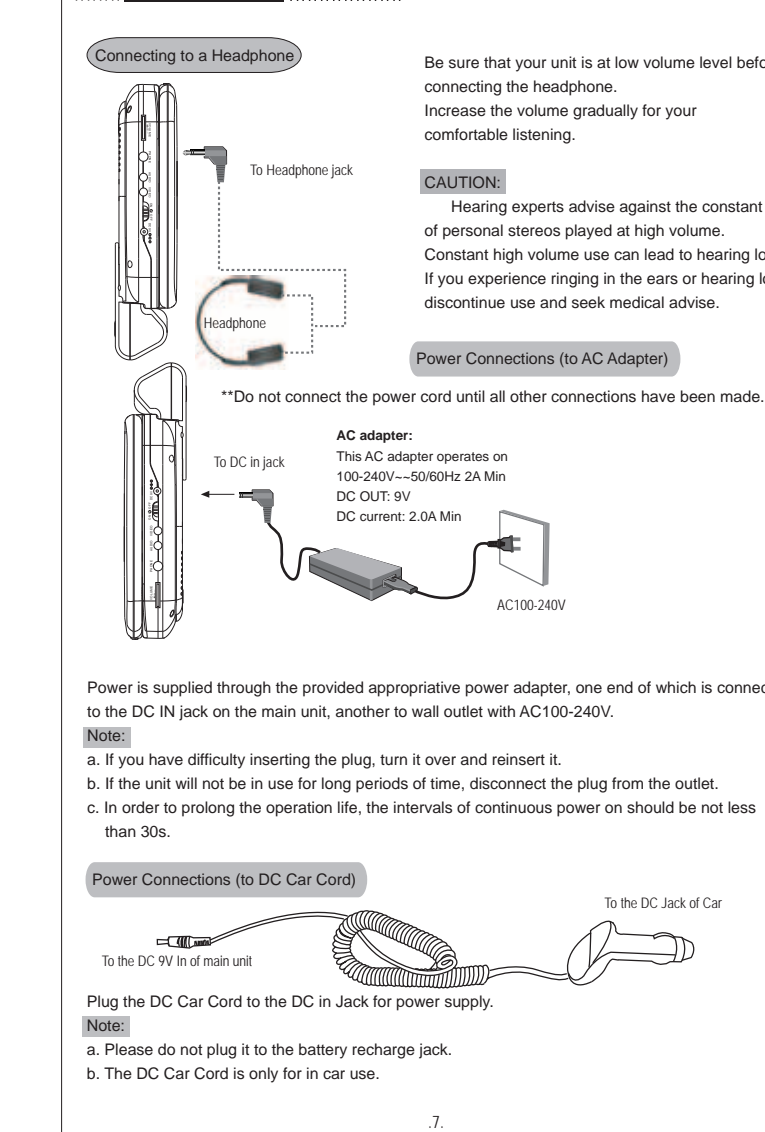


Connections

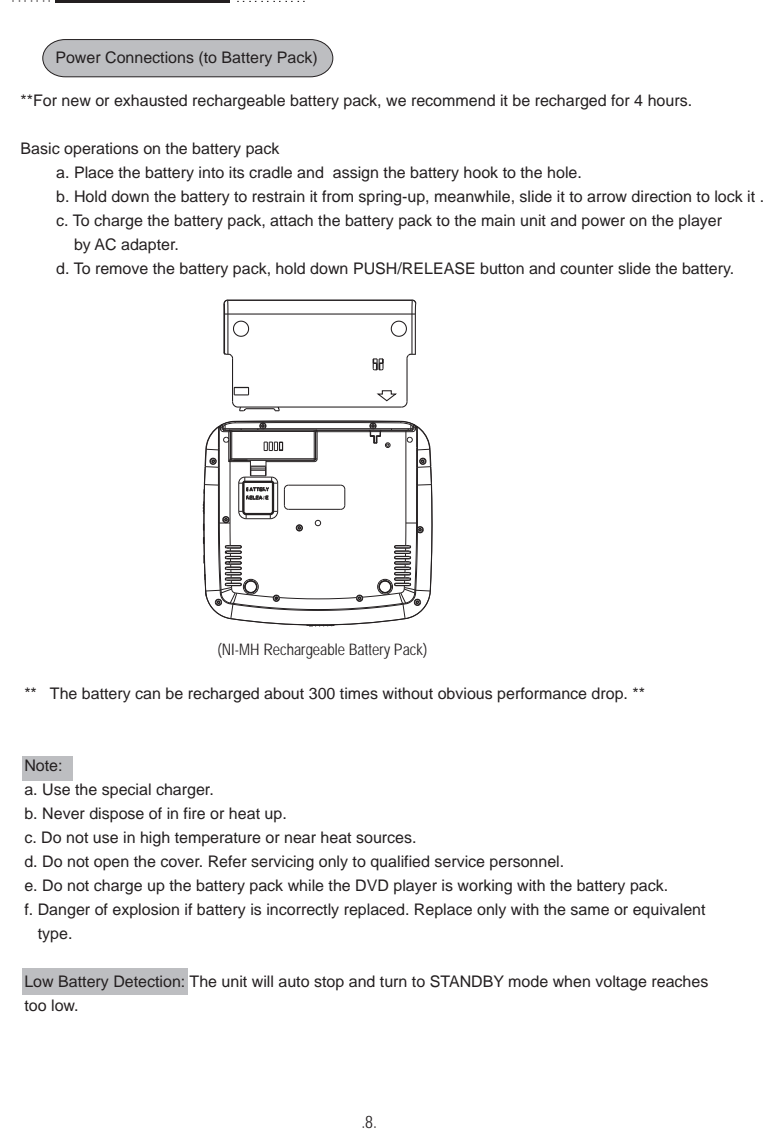


Function Buttons

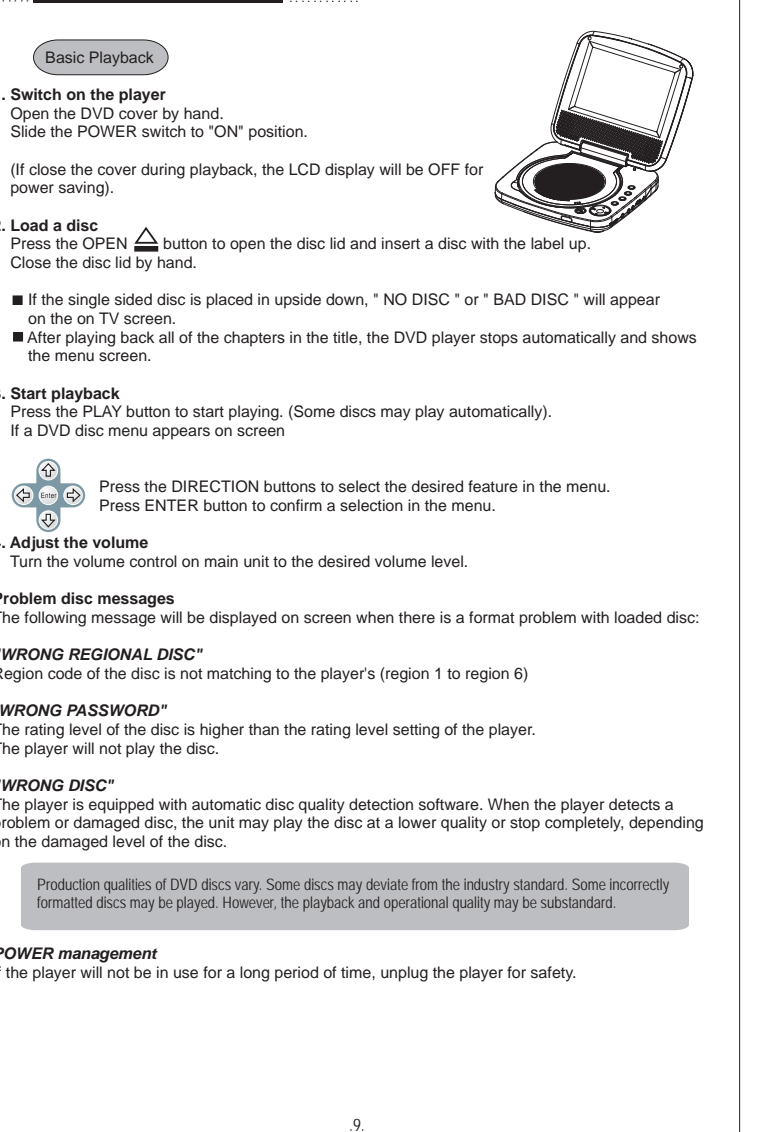


Function Buttons

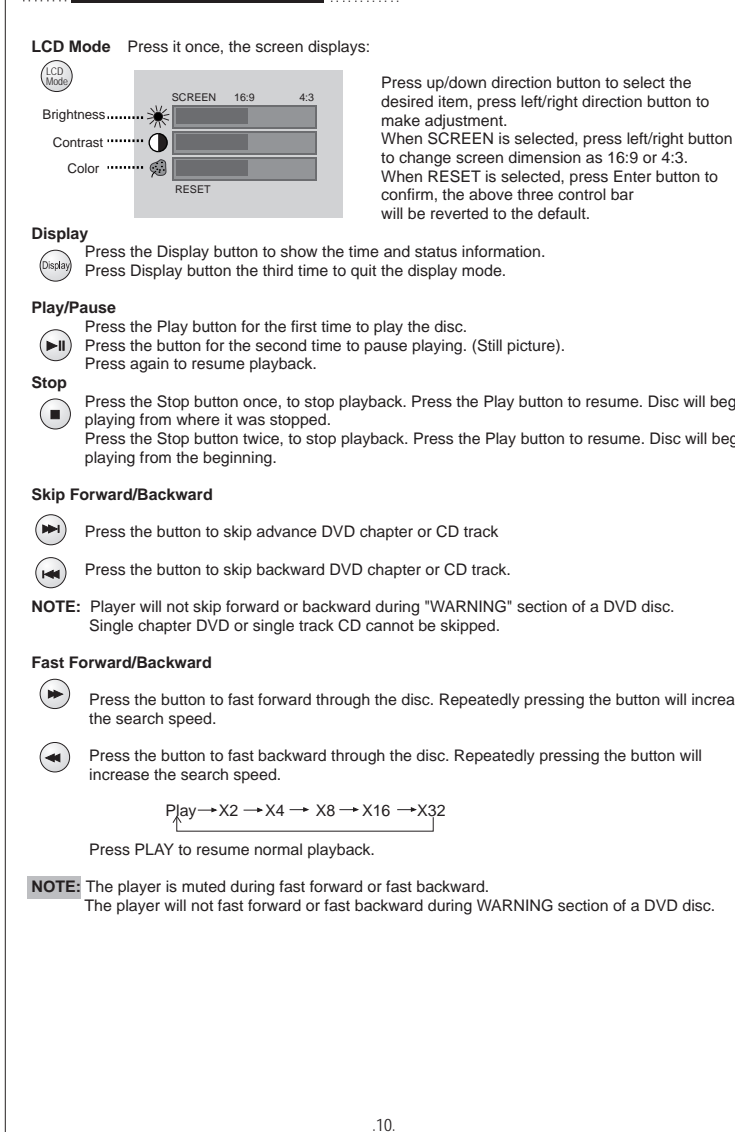


Function Buttons

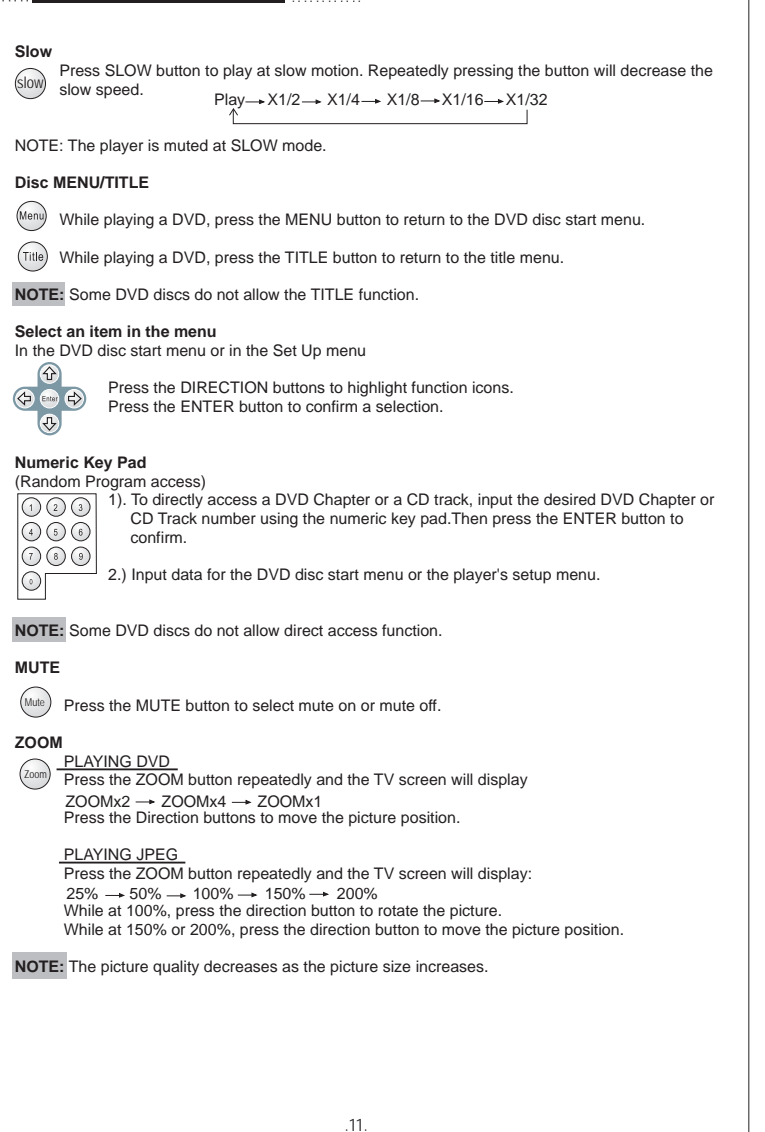


Function Buttons

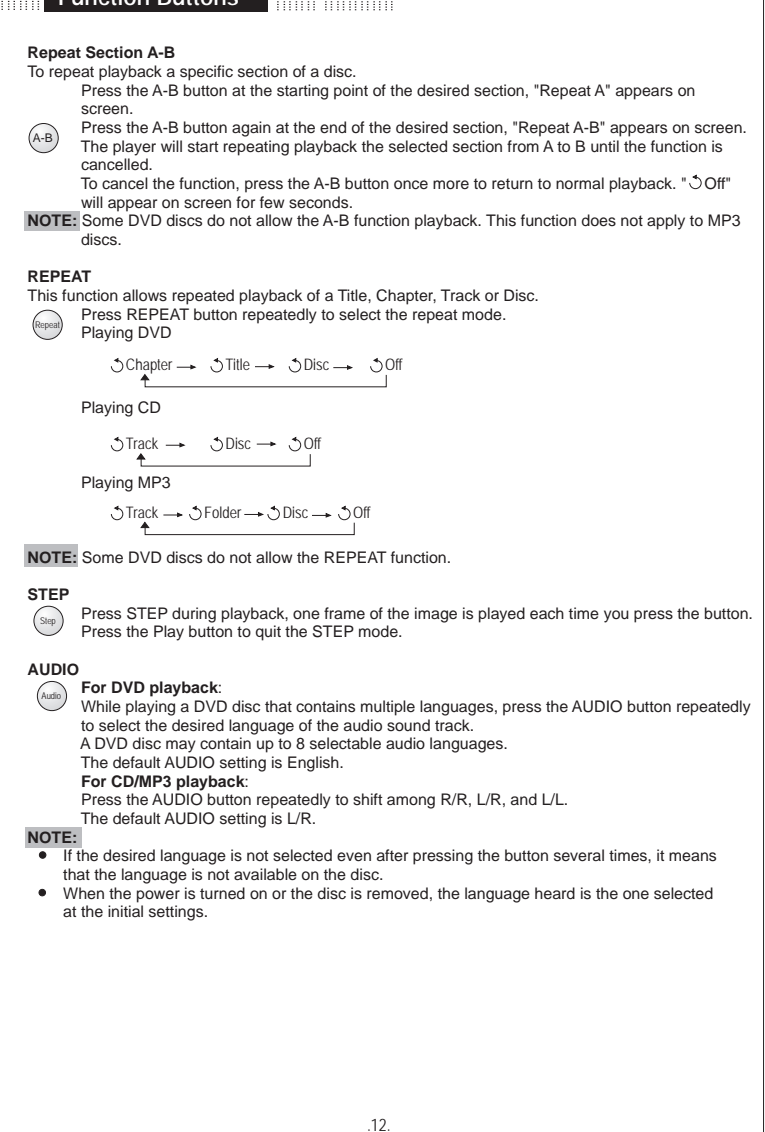


Function Buttons

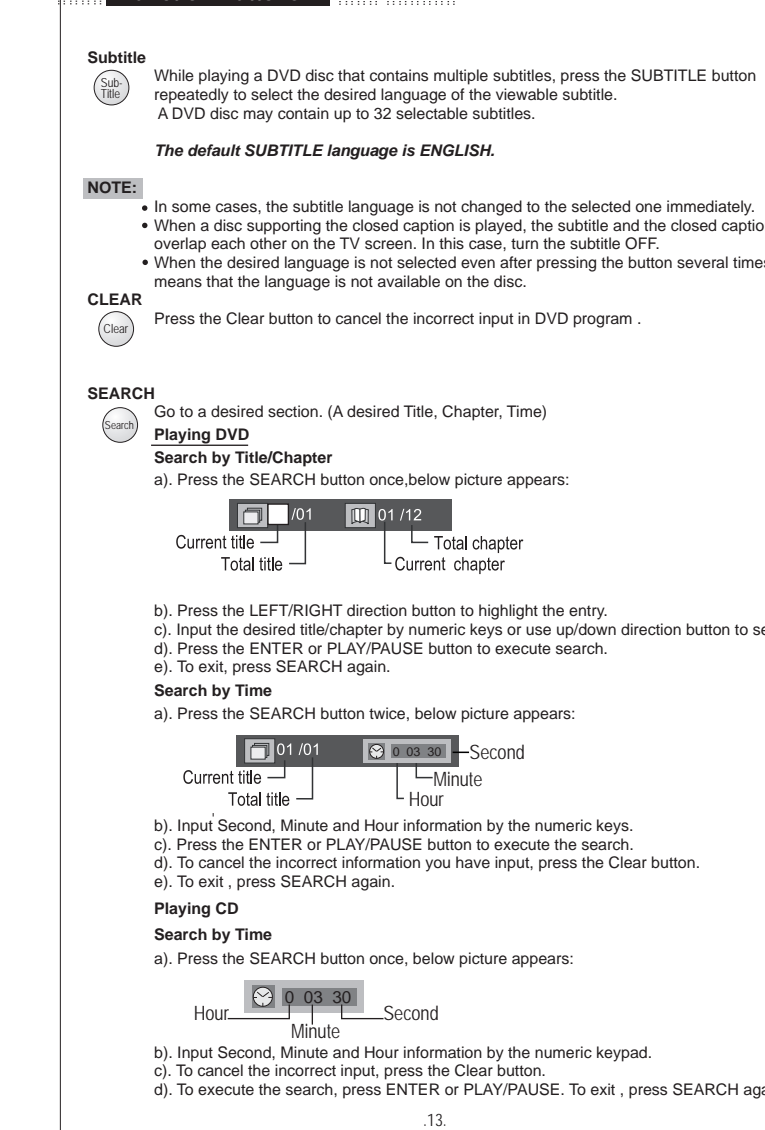


Function Buttons

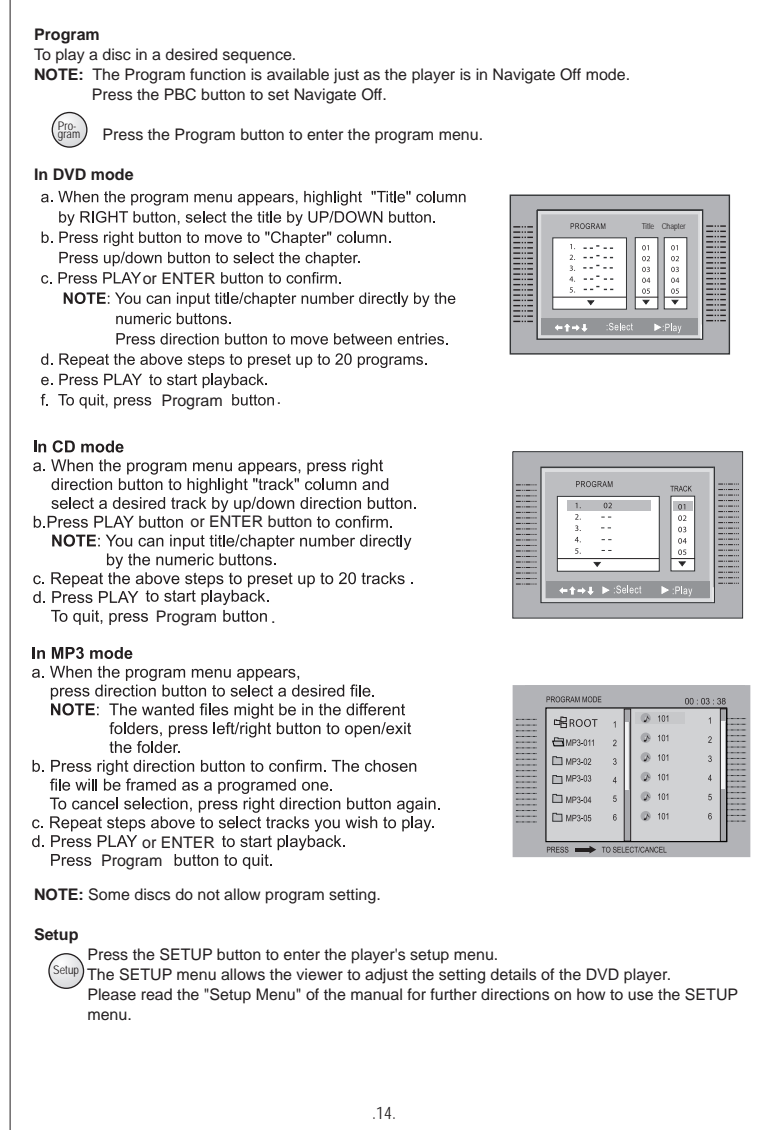


Setup Menu

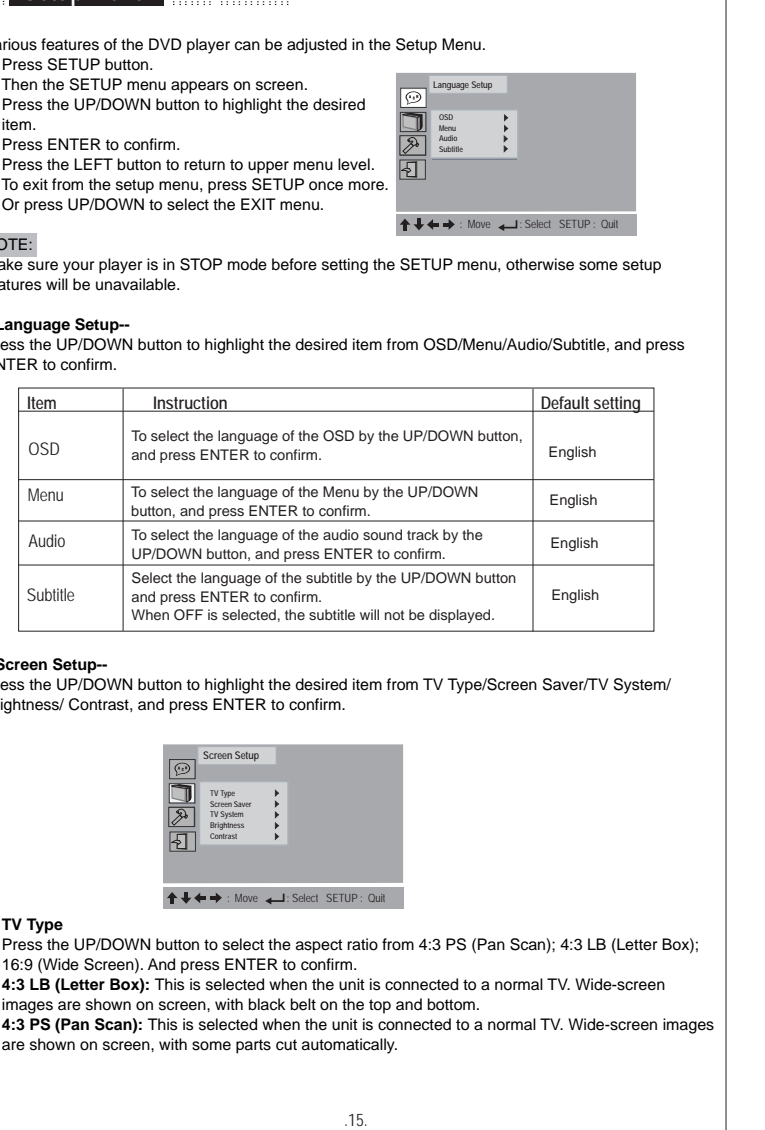

Setup Menu

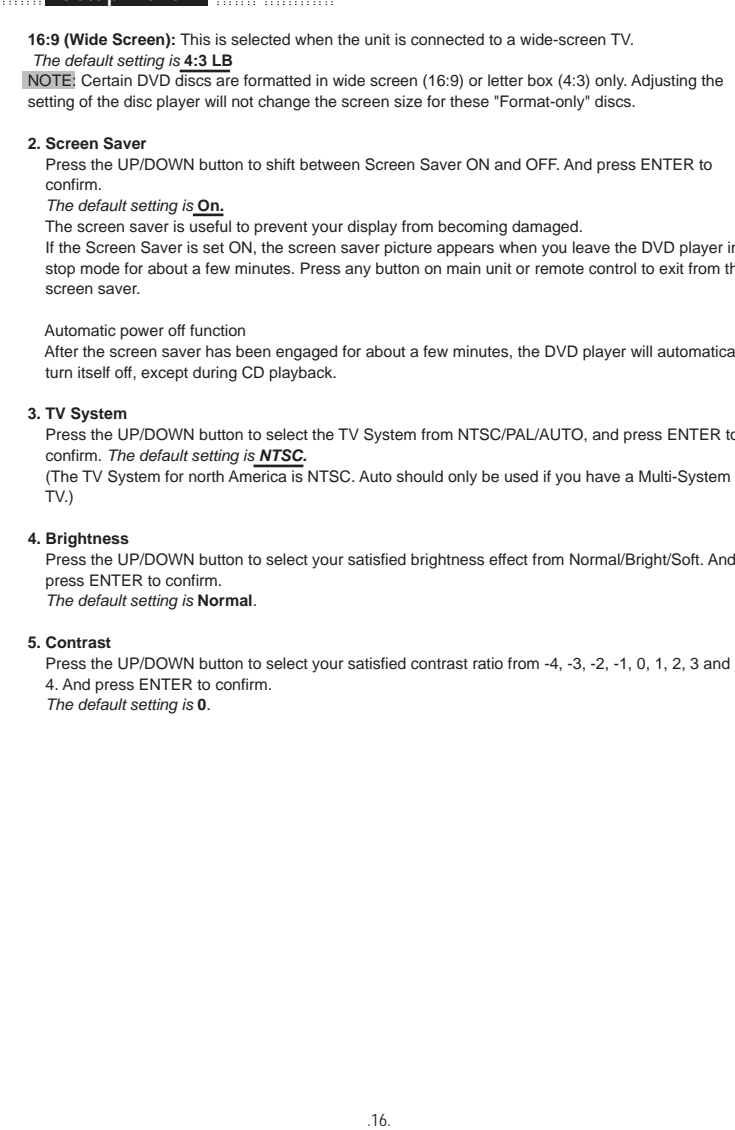

Setup Menu

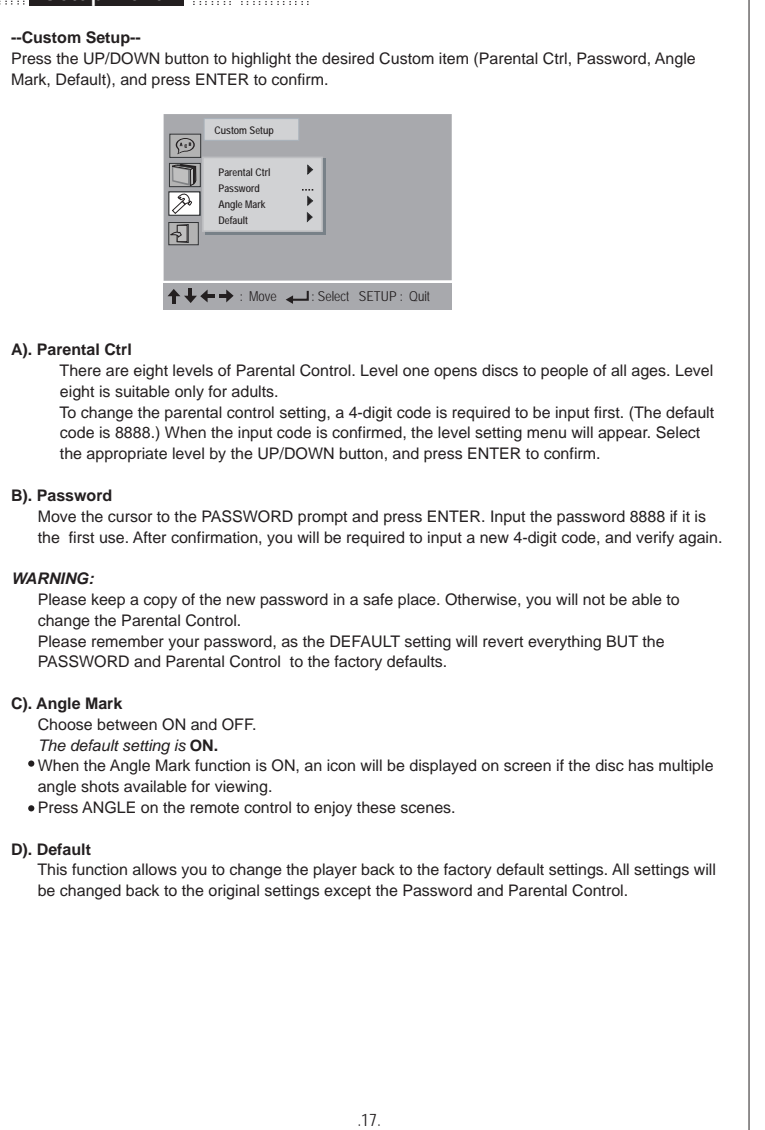

Trouble Shooting

Symptom	Check and Action
No power	1. Make sure the unit has been powered on manually. 2. Check the power cord is properly connected to the power outlet. 3. Make sure the battery pack is fully charged.
No sound or picture	1. Check the TV set has been powered on and correctly set to the correct channel. 2. Check the TV set and audio system connections are correct. 3. Check the audio system is properly connected to the DVD player. 4. Check the TV set and audio system connections are correct. 5. Check the TV set and audio system connections are correct. 6. Check the TV set and audio system connections are correct.
No picture or distorted picture	1. Check the TV set has been powered on and correctly set to the correct channel. 2. Check the TV set and audio system connections are correct. 3. Check the audio system is properly connected to the DVD player. 4. Check the TV set and audio system connections are correct. 5. Check the TV set and audio system connections are correct. 6. Check the TV set and audio system connections are correct.
No sound or sound repeat or no picture	1. Check the TV set and audio system connections are correct. 2. Check the TV set and audio system connections are correct. 3. Check the audio system is properly connected to the DVD player. 4. Check the TV set and audio system connections are correct. 5. Check the TV set and audio system connections are correct. 6. Check the TV set and audio system connections are correct.
Audio not heard	1. Check the TV set and audio system connections are correct. 2. Check the TV set and audio system connections are correct. 3. Check the audio system is properly connected to the DVD player. 4. Check the TV set and audio system connections are correct. 5. Check the TV set and audio system connections are correct. 6. Check the TV set and audio system connections are correct.
Multimedia	Should the player display a malfunction, unplug the player for 30 minutes. After that, power on the player and the remote control should reset the player.

Specification

Power supply	DC 5V (2xAAA battery) (RECOMMEND)
Power consumption	—
Signal system	NTSC
Video output	1.0Vp-p (p-p), 75ohm, Negative sync, 3.5 mm mini jack x1
Audio output	1.5Vrms (0.1V, 90ohm), 3.5 mm mini jack x1
Language control	3.5 mm mini jack x1
Signal Matrix (colorburst)	900H typical
Dynamic range (audio)	90dB typical
Power size	7.6x118x110
Resolution	480i/576i (24/30) EDGAL Pixels
Laser	Wavelength: 655 nm
Operating conditions	Temperature: 0°C to 35°C, Operation status: Horizontal
Dimensions	183x118x110mm (Main Unit & Box)
Weight	675g (Main Unit & Box)