



GXP2010 Enterprise SIP Phone Quick Installation Guide

Part Number: 418-02004-10
Document Version Number: 1.0



Grandstream Networks, Inc., 1297 Beacon St., 2nd Flr, Brookline, MA 02446 USA
Tel: (617) 566-9300, FAX: (617) 249-1987

www.grandstream.com

Last updated on April 1, 2008

GXP2010 IP Phone Quick Installation Guide

WARNING: ⚠ Please DO NOT power cycle the GXP2010 when LED lights are flashing during system boot up or firmware upgrade. You may corrupt firmware images and cause the unit to malfunction.

WARNING: ⚠ Use only the power adapter included in the GXP2010 package. Using an alternative non-qualified power adapter may possibly damage the unit.

Overview

The new GXP2010 Key System IP phone has a new sleek design and delivers excellent call quality and enterprise grade feature set that includes advanced XML capabilities, multi-party conferencing, multi-language support, presence and BLF (busy lamp field), security protection, automated provisioning, and broad compatibility with leading SIP platforms. The GXP2010 offers 4 lines, 18 programmable keys, 3 dynamic context-sensitive XML soft keys, dual switched 10M/100Mbps auto-sensing Ethernet ports with integrated PoE, and a large high-resolution backlit LCD display. As with all models in the GXP Series, this model supports comprehensive voice codecs and SRTP for privacy protection.

Equipment Packaging - Unpack and check all accessories.


The GXP2010 phone package contains

1. One GXP2010 Main Case
2. One Handset
3. One Phone Cord
4. One Universal Power Adaptor
5. One Ethernet Cable
6. One Phone Stand
7. Two Wall Mount Spacers

Connect the GXP2010 Enterprise IP Phone

Please use the equipment included in the packaging. Using any other power source may damage the product.

1. Connect the handset and main phone case with the phone cord.
2. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable.
3. Connect the 5V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet.
4. The LCD will display provisioning or firmware upgrade information. Before continuing, wait for the date/time display to show up.
5. Using the phone embedded web server or keypad configuration menu, you can further configure the phone using either a static IP or DHCP.

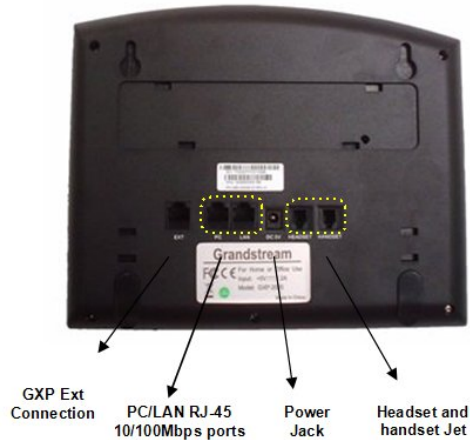

Wall Mount

GXP2010 can be wall mounted. For proper wall mounting please place the two wall-mount spacers into the proper holes on the bottom of the GXP2010 as show below:

Figure 2: Attach the wall-mount spacers to the GXP2010



To position the phone on the wall, place two fixed hangers on the wall, hang the back of the phone on the fixed hangers.

Figure 3: Location of the fixed hangers on GXP2010



To use the handset, pull out the tab (extension downward) from the handset cradle, rotate the tab and plug it back into the slot with the extension up to hold the handset.

Figure 4: Placing tab for mounting phone to wall



Configuring the GXP2010 using a Web Browser

1. If DHCP is enabled in your network, the phone’s IP address will be displayed.
2. Type the phone’s IP address in your PC browser.
3. The default administrator password is “**admin**”; the default end-user password is “**123**”.

To configure the phone via the web browser, you will need the following information:

1. IP address, subnet mask and gateway IP if using static IP.
2. SIP server and/or Outbound Proxy FQDN or IP address.
3. User subscriber information: User ID, Authentication ID, Password (provided by your VoIP service provider).
4. GXP2010 supports “Plug-n-Call” if your ITSP (Internet Telephony Service Provider) provides this automatic provisioning service. Ensure the phone has an internet connection (either DHCP or static IP in your internet ready network), then power up the phone.
5. Please contact your ITSP for additional settings that may be necessary to configure the phone.

Configure the GXP2010 using the Keypad

1. Make sure the phone is idle.
2. Press the “OK” button to enter the keypad MENU to configure the phone.
3. Follow MENU options to configure the basic features of the phone – for example: the IP address if using a static IP. For details, please check GXP Series User Manual.

Using the Keypad

1. To enter the MENU, press round MENU button.
2. Navigate the menu by using the UP/DOWN and LEFT/RIGHT.
3. Press the round MENU button to confirm a menu selection.
4. To delete an entry by pressing the MUTE button.
5. The phone automatically exits MENU mode with an incoming call, the phone is off-hook or the MENU mode if left idle for 20 seconds.

GXP2010 Key Pad Configuration Menu

Call History	Displays histories of incoming, dialed and missed calls.
Status	Displays the network status, account statuses, software version and MAC-address of the phone.
Phone Book	Displays the phonebook.
Instant Messages	Goes to Instant Messages if the Presence is supported by the service provider or PBX
Direct IP call	Displays the IP-call options menu.

Preference	Displays user preference sub-menu, such as ring tone, ring volume, customized XML idle screen or logo.
Config	Display configuration sub-menu, such as Network, SIP account, audio codec, firmware upgrade path and method and Factory Reset function, etc.
Factory Functions	Extra diagnostic tools reside here.
Reboot	Makes the phone reboot itself.
Exit	Exit from this menu.

Grandstream Networks, Inc. Corporate Headquarters	
www.grandstream.com info@grandstream.com	1297 Beacon Street, 2 nd Floor, Brookline, MA USA 02446 Tel : +1 (617) 566 – 9300 Fax: +1 (617) 247 – 1987

About Grandstream Networks

Grandstream Networks, Inc. is an award-winning designer and manufacturer of next generation IP voice & video products for broadband networks. Grandstream's products deliver superb sound and picture quality, rich telephony features, full compliance with industry standards, and broad interoperability with most service providers and 3rd party SIP based VoIP products. Grandstream is consistently recognized in the VoIP industry for their innovation, affordability and superior value in their products. Grandstream Networks is a private company headquartered in Brookline, MA with offices in Los Angeles, Dallas and China. For more information, please visit www.grandstream.com.



Declaration of Conformity for GXP2010

Grandstream Networks, Inc., 1297 Beacon St., 2nd Flr, Brookline, MA 02446 USA
Tel: (617) 566-9300, FAX: (617) 249-1987

www.grandstream.com

Last updated on April 1, 2008

**Konformitätserklärung gemäß dem Gesetz über Funkanlagen und
Telekommunikationsendeinrichtungen (FTEG) und der Richtlinie 1999/5/EG (R&TTE)**

Declaration of Conformity in accordance with the Radio and Telecommunications Terminal
Equipment Act (FTEG) and Directive 1999/5/EC (R&TTE Directive)

Hersteller /Verantwortliche Person / The manufacturer / responsible person

Manufacturer: **Grandstream Networks, Inc.**
5th Floor, R2-A Building,
South District of Hi-Tech Industrial Park,
Shenzhen, P.R.China, P.C. 518057

Responsible Laboratory: **Bay Area Compliance Lab Corp. ShenZhen**
Suite C, 41-D Electronics Science & Technology Building,
No. 2070 Shennanzhong Rd ShenZhen,
Guandong 518031, P.R. China
Tel: (755) 83296449
Fax: (755) 83273756

erklärt, dass das Produkt/ declares that the product:

Series: GXP 2010

Model: GXP 2010

Attestation Number: RSZ07092902-1, RSZ07092902-2

Date of Issue: October 18, 2007

Type (ggf. Anlagenkonfiguration mit Angabe der Module):

Type (if applicable, configuration including the modules)

Telekommunikations(Tk-)endeinrichtung
Telecommunications terminal equipment

Funkanlage
Radio equipment

Telecommunication via Voice over IP (VoIP)

Verwendungszweck
Intended purpose

Geräteklasse
Equipment class

bei bestimmungsgemäßer Verwendung den grundlegenden Anforderungen des § 3 und den
übrigen einschlägigen Bestimmungen des FTEG (Artikel 3 der R&TTE) entspricht.
complies with the essential requirements of §3 and the other relevant provisions of the FTEG
(Article 3 of the R&TTE Directive), when used for its intended purpose.

Gesundheit und Sicherheit gemäß § 3 (1) 1. (Artikel 3 (1) a))
Health and safety requirements pursuant to § 3 (1) 1. (Article 3(1) a))

angewendete harmonisierte Normen ... Einhaltung der grundlegenden Anforderungen auf

Harmonised standards applied...

ndere Art und Weise (hierzu verwendete Standards/Spezifikationen) ...
Other means of proving conformity with the essential requirements (standards/specifications used)...

Schutzanforderungen in Bezug auf die elektromagn. Verträglichkeit § 3 (1) 2, Artikel 3 (1) b))
Protection requirements concerning electromagnetic compatibility § 3(1)(2), (Article 3(1)(b))

angewendete harmonisierte Normen
Harmonised standards applied...

Einhaltung der grundlegenden Anforderungen auf andere Art und Weise (hierzu verwendete Standards/Spezifikationen)...
Other means of proving conformity with the essential requirements (standards/specifications used)...

EN 55022: 1998+A1:2000+A2:2003 Class B
EN 55024: 1998+A1:2001+A2:2003
EN 61000-3-2:2000+A2:2005
EN 61000-3-3:1995+A1:2001+A2:2005

Maßnahmen zur effizienten Nutzung des Funkfrequenzspektrums
Measures for the efficient use of the radio frequency spectrum

Non-applicable

Luftschnittstelle bei § 3 Funkanlagen gemäß (2) (Artikel 3(2))
Air interface of the radio systems pursuant to § 3(2) (Article 3(2))

angewendete harmonisierte
Harmonised standards applied

Normen Einhaltung der grundlegenden Anforderungen auf andere Art und Weise (hierzu verwendete Standards/Schnittstellenbeschreibungen)...

Non-applicable

Other means of proving conformity with the essential requirements (standards/interface specifications used)...

Anschrift/Address
Grandstream Networks, Inc.
1297 Beacon St 2nd Flr
Brookline, MA 02446 USA

+ TK-Nr./Phone, fax, e-mail
Tel: +1 (617) 566-9300 x 804
Fax: +1 (617) 249-1987
info@grandstream.com

Ort, Datum
Place & date of issue

Name und Unterschrift
Name and signature



Brookline, MA, USA January 23, 2008

Bruce G. MacAloney, Vice President