


SUBWOOFER & SATELLITE SPEAKERS



Changing Entertainment. Again.


INPUT CONNECTIONS

Before you begin, make sure that the subwoofer is turned off and unplugged. Connect your A/V receiver to the subwoofer input as shown.

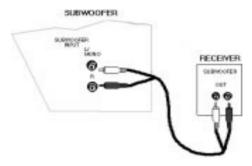


NOTE: A receiver with a single output should be connected to the input labeled L/MONO.

The subwoofer can also be connected directly to a TV. The subwoofer input should be connected to a TV output that is volume controlled, such as the Hi Fi output. If the TV has only one output, the connection should be made to the L/MONO input on the subwoofer. (Refer to your TV instruction manual for further information.)

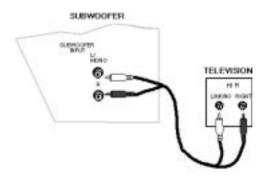

If your A/V Receiver or TV does not have a suitable output, you can connect the subwoofer by using the speaker terminals as shown. Make sure that the"+" and "-" terminals are correctly connected. Make sure that you do not have both the Subwoofer input and the Speaker inputs connected at the same time.

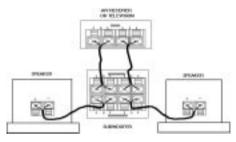

CONTROLS AND ADJUSTMENTS

Your subwoofer contains the following control to give you maximum flexibility in usage:

 BASS LEVEL. Sets the loudness of the subwoofer signal to equal the sound of the main speakers.

Subwoofer placement in the room is relatively unimportant. The subwoofer is magnetically shielded, so you can place it beside the television, or anywhere you choose in the room.

After you have placed and connected the subwoofer, complete the following adjustment procedures to obtain maximum performance:

- 1. Turn on the POWER Switch (the red LED is activated).
- Set your receiver or TV to a program featuring a male voice (such as a news broadcast).
- Adjust the bass level control so that you can just hear the subwoofer bass sounds. A setting that is too high will make the voice sound unnatural.

Your subwoofer is now matched to your A/V system and should only need to be adjusted if you change room location or change the location of your main speakers.

Your satellite speakers may be wall mounted vertically with a #8 expanding anchor using the mounting panel located on the back of your speakers.

RCA SPEAKER SYSTEM LIMITED WARRANTY

What your warranty covers:

· Any defect in materials or workmanship.

For how long after your purchase:

- · One-Year for labor and parts.
- The warranty period for rental speaker(s) begins with the first rental.

What we will do:

- Pay any Authorized RCA Audio Servicenter the labor charges to repair your speaker(s).
- Pay any Authorized RCA Audio Servicenter for the new or, at our option, refurbished replacement parts required to repair your speaker(s).

How you get service:

- Take your speaker(s) to any Authorized RCA Audio Servicenter of the RCA Service Company. To identify your nearest Authorized RCA Audio Servicenter, ask your dealer, look in the Yellow Pages or call 1-800-336-1900.
- Show the service technician your evidence of purchase date or first rental.
- Pick up your speaker(s) when repairs are completed.

What your warranty does not cover:

- Customer instruction. Your Owner's Manual clearly describes how to install, adjust and operate your speaker(s). Any additional information should be obtained from your dealer.
- Installation and related adjustments.

- Signal reception problems.
- · Damage from misuse or neglect.
- Speakers which have been modified or incorporated into other products or are used for institutional or other commercial purposes.
- Speakers serviced or purchased outside the USA.
- Acts of God, such as, but not limited to lightning damage.

Product Registration:

 Please complete and mail the Product Registration Card packed with your speaker(s). It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

 This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

If you purchased your speakers outside of the USA:

• This warranty does not apply. Contact your dealer for warranty information.

MODEL NO

SERIAL NO.

PURCHASE DATE

DEALER

