 


# Fold<sup>N</sup>Go<sup>®</sup>

Lullaby Center

## Instruction Manual

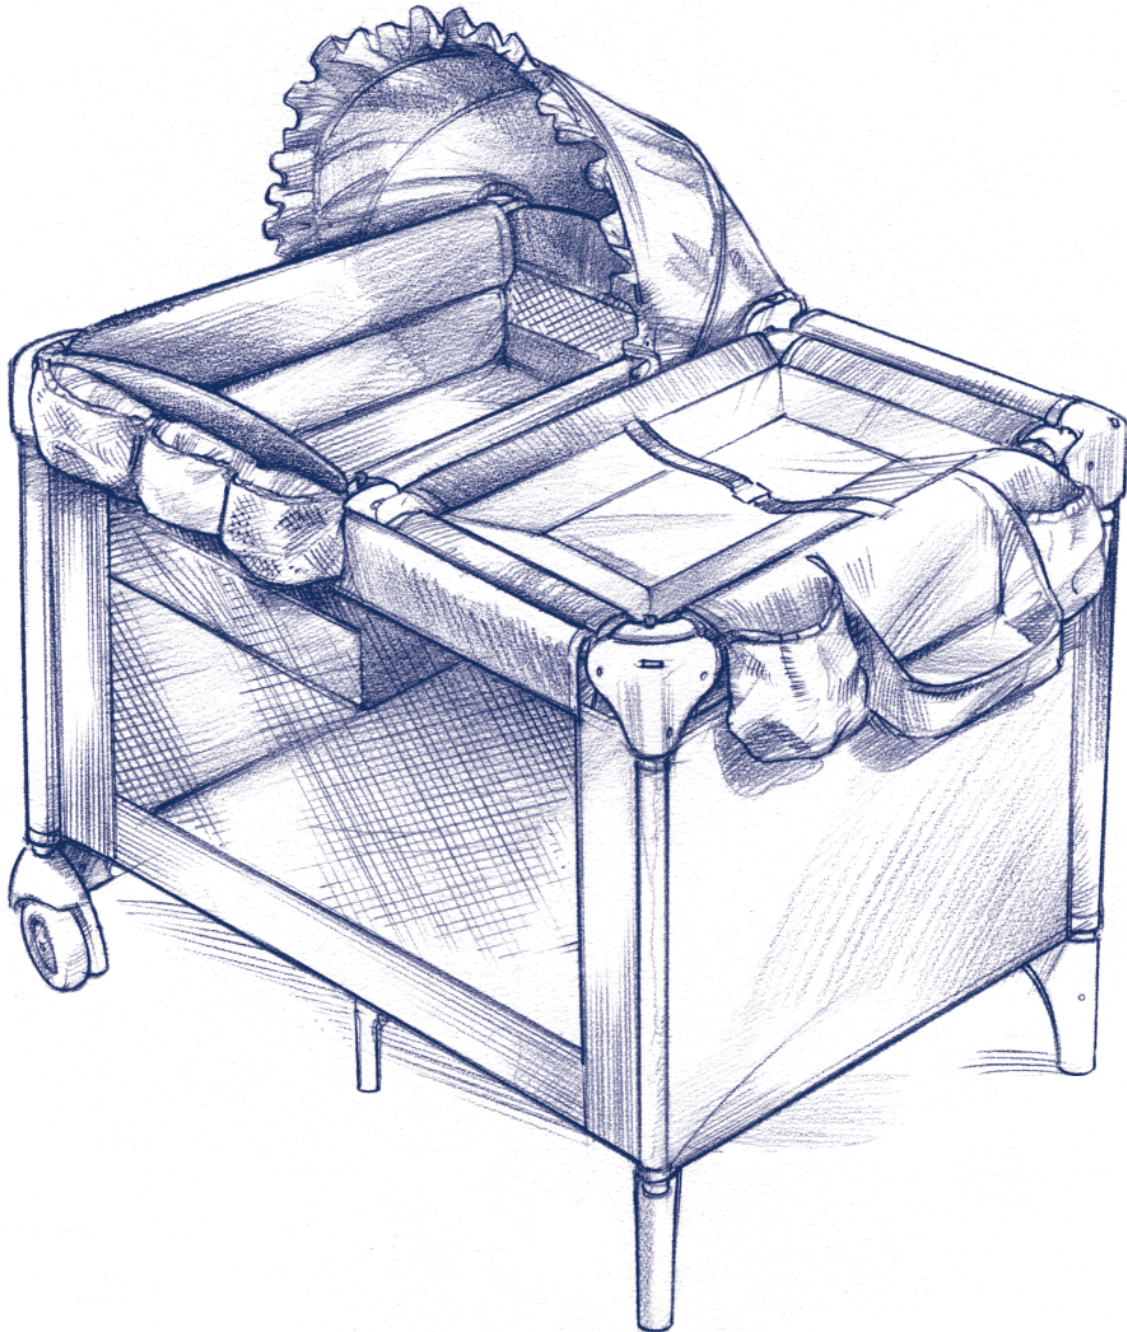

**Do not use this product until  
you read and understand  
these instructions.**

English PM-1647AA 6/00

**Century**<sup>®</sup>

DEDICATED TO QUALITY

# IMPORTANT INFORMATION

## Table of Contents

### Page:

#### 1 Important Information

#### 2 Warnings

#### 3 Assembly and Use

Playard

Bassinet

Changer

#### 7 Folding and Storing

Changer

Bassinet

Playard

#### 9 Maintenance

Cleaning

#### 9 Replacement Parts

## Need Help?

If you should have any problems with this product, *call toll-free 1-800-837-4044 from anywhere in the U.S. or Canada or fax at 1-610-286-4555.*

Or write us at: Century Products  
P.O. Box 100  
Elverson, PA 19520-9974  
Attention: Customer Service Department

Please have the following information available. See label on bottom tubing of Playard.

Model Number: \_\_\_\_\_

Manufacture Date: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

## Safety First Checklist

- ✓ Read and understand instruction manual before assembling and using Fold'N Go Lullaby Center.
- ✓ Do not use in any vehicle.
- ✓ Never leave child unattended.
- ✓ Use with only one (1) child at a time.
- ✓ Do not use bassinet as a car bed.
- ✓ Do not use bassinet if infant can push up on hands and knees or sit unassisted.
- ✓ Do not carry bassinet with child in it.
- ✓ Do not move or fold Playard with child in it.
- ✓ Do not add padding or other objects inside Playard which may permit child to climb out or cause a suffocation hazard.
- ✓ Do not use accessories other than those provided by Century.

## Weight, Height and Activity Limits

Bassinet and Changer:

Maximum Weight: 8.2 kg (18 lbs.)

Maximum Height: 63.5 cm (25 inches)

Activity: Discontinue use if child can push up on hands and knees or sit unassisted.

Playard:

Maximum Weight: 14 kg (30 lbs.)

Maximum Height: 89 cm (35 inches)

Activity: Discontinue use if child can climb out of Playard.

*Save instruction manual  
for future reference.*

 


## **WARNINGS**


**Failure to follow all warnings and instructions could result in serious injury or death.**

- **Never leave child unattended. Always keep child in view.**
- **This product is intended for use by one child at a time.**
- **Bassinet, Changer and/or Playard, including side rails, *MUST* be fully erected prior to use.**
- **Keep product away from stoves, heaters, campfires, fireplaces and other hazards which can burn or cause injury to child.**
- **DO NOT use accessories other than those provided by Century.**
- **Strings can cause strangulation. DO NOT place items with a string around a child's neck (such as hood strings, pacifier cords, etc.). DO NOT suspend strings over product or attach strings to toys.**
- **DO NOT place product near a window where cords from blinds or drapes can strangle child.**
- **DO NOT use product in a motor vehicle. Serious injury or death could result from a sudden stop or accident.**

# ASSEMBLY and USE

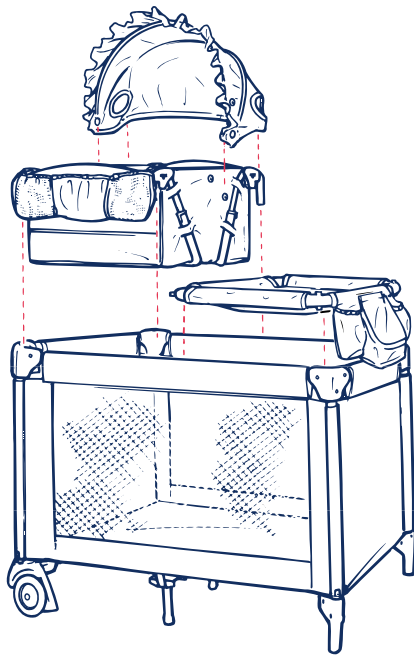

- 2 Stand Playard on legs and wheels and unfasten **Floorboard Attachment Straps**.

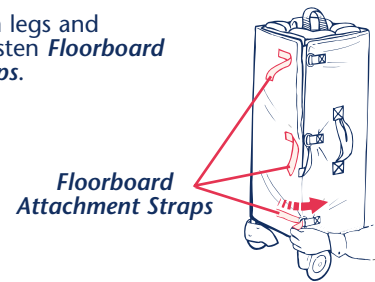


- 3 Separate Playard legs to approximately 60 cm (2 feet) apart.



- 4 Pull up on **Top Rails** until all "click" and lock.

**IMPORTANT:** Floor loop **MUST** remain raised at least 45.7 cm (18 inches) in order for rails to lock.

**NOTE:** Test by pushing down on each top rail to be sure they are locked.

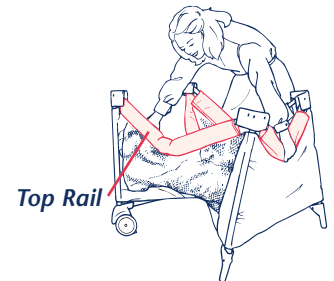

## Playard


### **WARNING**

Avoid serious injury or death:


- Use Playard for a child who is unable to climb out of Playard and weighs less than 14 kg (30 lbs.) and is less than 89 cm (35 inches) tall.
- **DO NOT** use Playard without floorboard being properly secured to Playard floor.
- **DO NOT** add padding or objects inside Playard that will permit child to climb out.
- **DO NOT** move or fold Playard with child in it.
- **SUFFOCATION HAZARD:** To help prevent suffocation from entrapment, use only floorboard provided by Century. **NEVER** use additional mattress or padding.

### **WARNING**

All top rails **MUST** be straight and locked in position or child may become entrapped and suffocate.

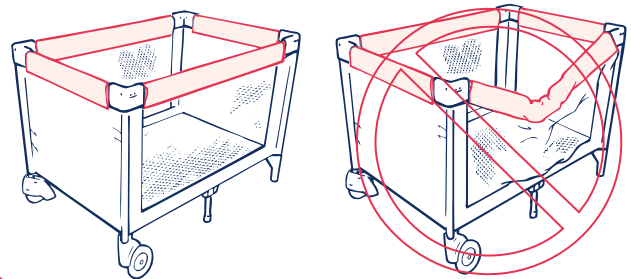


- 1 Pull travel bag up and over top of Playard.

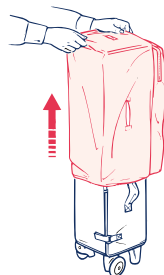


- 5 Push down on center of Playard floor until it is flat and **locks** into position.

**NOTE:** Locking action is automatic.

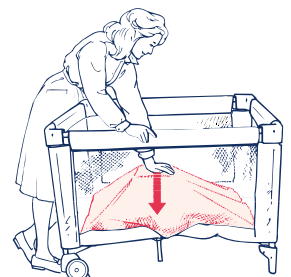


# ASSEMBLY and USE continued

**HINT:** It may be necessary to lift end of Playard to push center down.

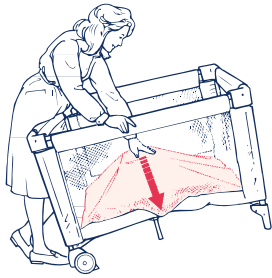


6 Place floorboard in Playard with padded side facing up.

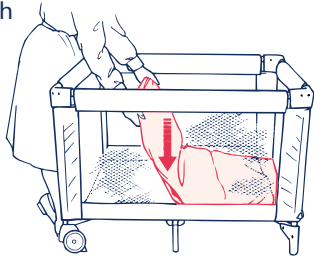


**NOTE:** DO NOT install floorboard if using bassinet. Go to bassinet assembly section.

7 Secure ends of floorboard to Playard by passing **Attachment Straps** through holes in bottom of Playard floor and securing to underside of Playard.

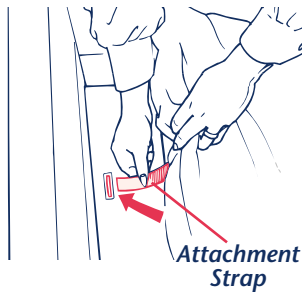

## WARNING

To prevent child from suffocating, attachment straps **MUST** be secured to underside of Playard.

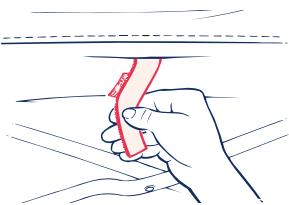

**Playard assembly is now complete and ready to use.**


## Bassinet

### WARNING


Avoid serious injury or death:

- Use bassinet with infant who weighs less than 8.2 kg (18 lbs.) and is less than 63.5 cm (25 inches) tall.
- **DO NOT** use without floorboard being properly placed in bassinet.
- Discontinue use of bassinet if infant can push up on hands and knees or sit unassisted.
- **DO NOT** carry bassinet with infant in it.
- **DO NOT** use as a car bed.
- **DO NOT** use infant canopy as a sunshade.
- **SUFFOCATION HAZARD:** To help prevent suffocation from entrapment, use only floorboard provided by Century. **NEVER** use additional mattress or padding.


1 Lay bassinet on flat surface and spread open.

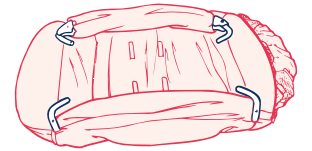


2 Rotate and extend four (4) **Hooks** until they "click" in place.

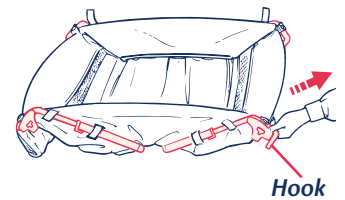

3 If floorboard is installed in Playard, remove floorboard.

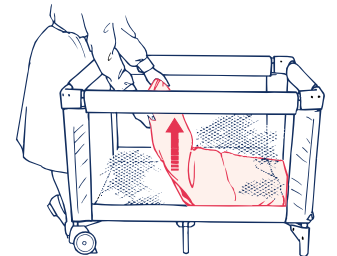


4 Fold **Floorboard** into "W" shape and place in center of bassinet.

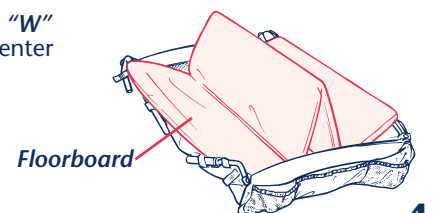




# ASSEMBLY and USE continued


- 5 Insert one side of floorboard under **Pocket** on side of bassinet.

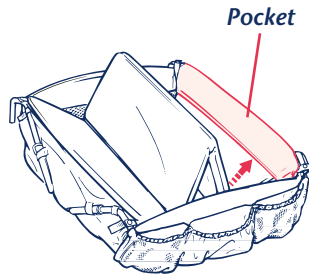

- 6 Pull **Pocket** down over floorboard to hold floorboard in place.  
Repeat steps 5 and 6 for other side of floorboard.

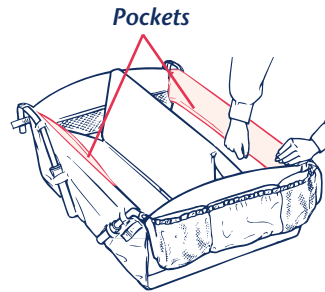


- 7 Push down on center of floorboard to flatten.

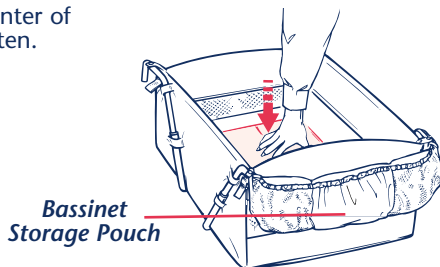


- 8 Slide opening in infant canopy over hooks making sure canopy goes completely over plastic.

**NOTE:** Infant canopy attaches to end of bassinet opposite storage pouch.

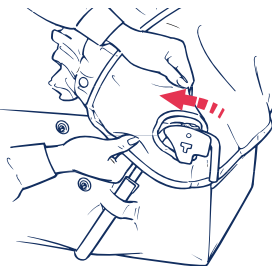

- 9 Fasten lower snaps on infant canopy ends to lower snaps on bassinet.

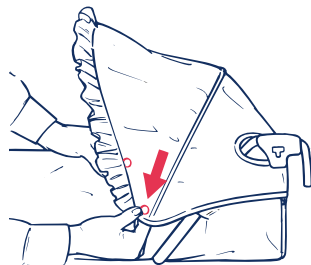

- 10 To adjust infant canopy, rotate canopy frame forward or backward to desired location.

To hold canopy in full forward position, fasten upper snaps on infant canopy to upper snaps on bassinet.

5

**CAUTION:** DO NOT place supplies weighing more than 2.3 kg (5 lbs.) in bassinet storage pouch.


**Bassinet assembly is now complete.**

- Bassinet can be used *with* or *without* changer.
- Bassinet can be used *with* or *without* Playard.
- Bassinet can be used *with* or *without* infant canopy.

## To use bassinet with Playard:

- 1 Place bassinet in Playard so that hooks go over long rails with "T-Slots" facing center of Playard.


**NOTE:** "T-Slots" **MUST** face center of Playard when using with changer.

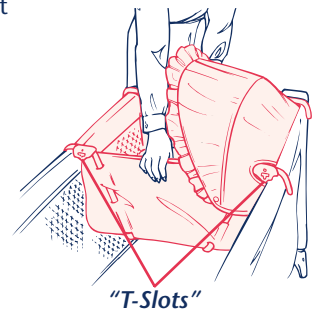

- 2 Secure bassinet to Playard:

- Pass **Attachment Strap** through opening in corner of side panel of Playard.
- Fasten strap to outside of Playard.

Repeat for other strap.

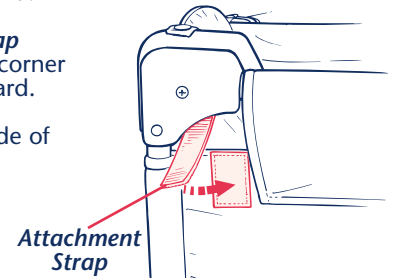

**Bassinet is now ready for use with Playard.**

## To use bassinet without Playard:



### WARNING

**Prevent falls and suffocation:**

- Use only on a surface that is flat, level and stable.
- Keep bassinet away from surface edges.

- 1 Set bassinet on flat and stable surface that will keep floorboard level so child will not roll into corner or side of bassinet resulting in breathing difficulties.

- 2 Keep at least 30.5 cm (12 inches) away from surface edges and stay within reach of child. Child's wiggling and rocking may cause bassinet to move and possibly fall off surfaces.

# ASSEMBLY and USE continued

## Changer


Changer can only be used when bassinet is installed in Playard.

### **WARNING**

Avoid serious injury or death:


- Always use restraint belt to prevent falls.
- Use changer with infant who weighs less than 8.2 kg (18 lbs.) and is less than 63.5 cm (25 inches) tall.
- Discontinue use of changer if infant can push up on hands and knees or sit unassisted.
- **DO NOT** carry changer with infant in it.

1 Lay changer on flat surface.

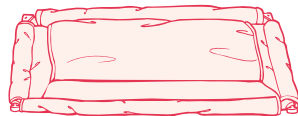


2 Grasp middle of each long side and gently pull apart until short sides "click" and lock in place.


**NOTE:** Make sure changer sides are fully extended and locked.

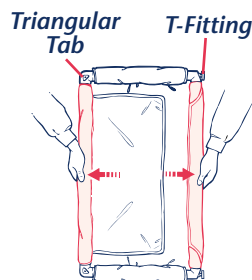

3 With vinyl side facing up, insert two (2) "T-Fittings" on changer into "T-Slots" in bassinet and push down to secure.

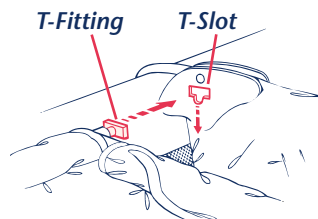


4 Push *Triangular Tabs* into *Triangular Holes* in Playard corners.

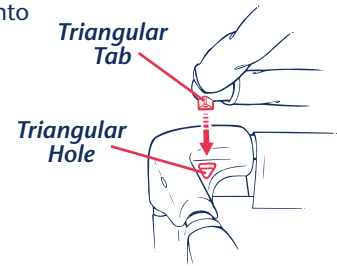


5 Secure changer to Playard:

- Pass *Attachment Strap* through opening in corner of side panel of Playard.
- Fasten strap to outside of Playard.

Repeat for other strap.

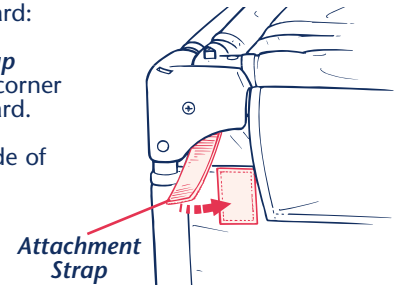

6 Unfold *Changer Storage Area* so it hangs over top rail.

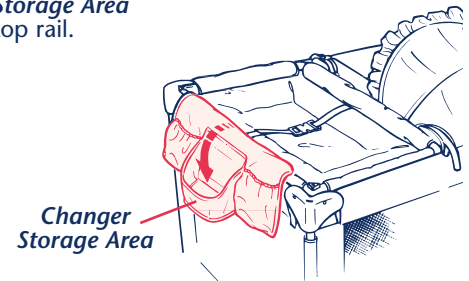

**CAUTION:** DO NOT place supplies weighing more than 2.3 kg (5 lbs.) in changer storage area.


**Changer is now ready for use.**

# FOLDING and STORING


## Changer

1 Unfasten both attachment straps.


2 Unhook "T-Fittings" from "T-Slots" by pulling up slightly on long side closest to bassinet, then pull changer away from bassinet.

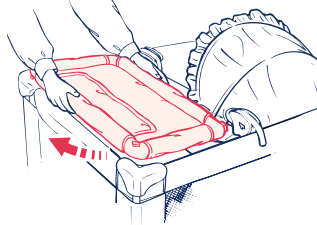

3 Grasp short sides and feel for release buttons in center of short sides.

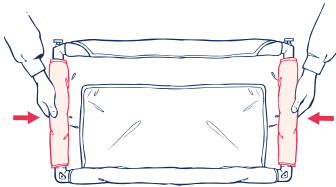


4 Press buttons on each side and push closed.

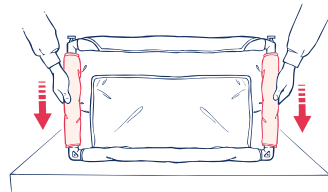

5 Place changer in pocket of travel bag.




3 Unsnap infant canopy from sides of bassinet.

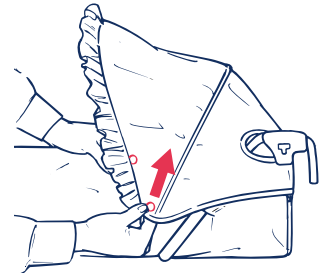


4 Slide opening in infant canopy off hook.


Fold infant canopy and place in pocket of travel bag.

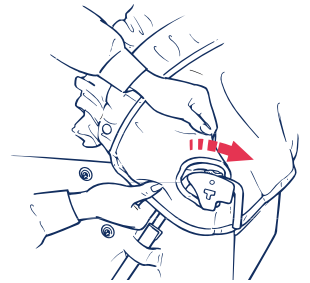

5 Remove floorboard from bassinet.

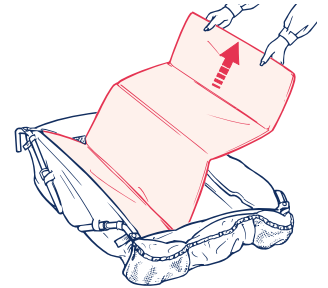

6 Press release buttons on each hook and push hook into larger tube.

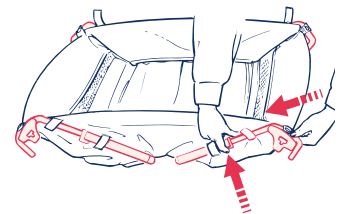

7 Rotate hooks to center of bassinet.



8 Fold bassinet.


9 Place bassinet in pocket of travel bag.



## Bassinet

1 Unfasten both attachment straps.

2 Remove bassinet from Playard.

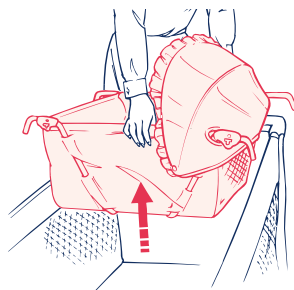

**IMPORTANT:** If continuing to use Playard, be sure to properly secure floorboard in Playard.




# FOLDING and STORING continued



## Playard

1 To remove floorboard:

- Unfasten attachment straps.
- Remove floorboard and set aside.

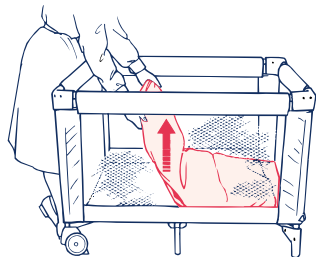

2 Lift **Floor Handle**, rotate counterclockwise to unlock floor and pull up, approximately 45.7 cm (18 inches).

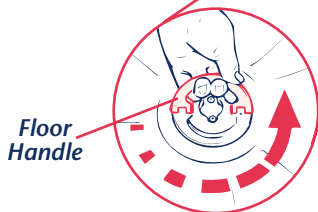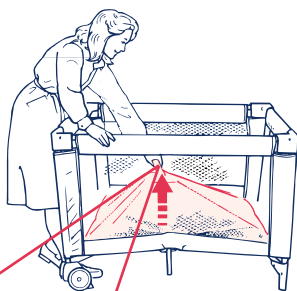


3 To fold top rails:

- Pull up on top rail slightly.
- Squeeze **Release Button** on bottom of top rail and push rail down. (Release buttons are identified by printed arrows.)

Repeat for other sides.

**NOTE:**

- If rails are difficult to unlock, raise center of floor higher and squeeze **Release Button** again.
- If only one side of rail folds, squeeze **Release Button** again to fully fold.

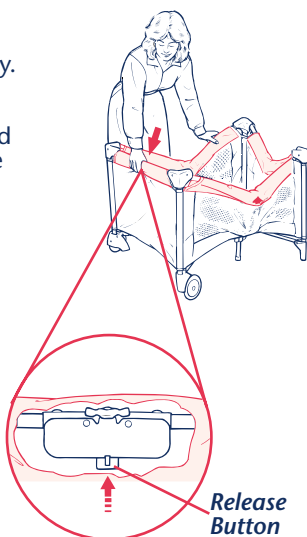


4 Gather Playard frame together while pulling up on **Floor Loop**.




5 Wrap floorboard around Playard frame with padding facing in.

**NOTE:** Floorboard **Handle** **MUST** be aligned with wheels as shown.

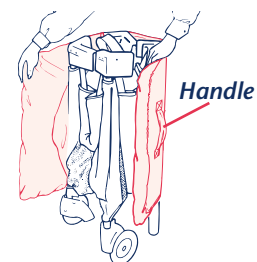

6 Secure **Attachment Straps** by threading through loops on end of floorboard and folding back onto itself.

**NOTE:** Make sure floorboard is positioned above wheels.

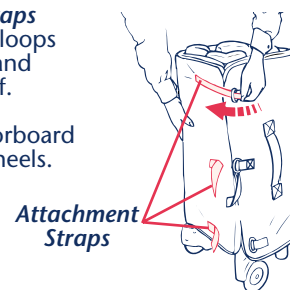


7 Position travel bag over Playard so **Handle** comes through **Opening** in side of bag.

Pull travel bag over Playard.

Pull **Floor Loop** through opening on top of travel bag.

**NOTE:** To prevent rubbing, make sure travel bag is positioned above wheels.

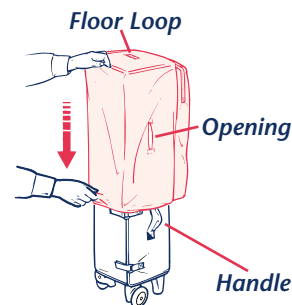

# MAINTENANCE

## Cleaning

### Infant Canopy

- Hand wash, warm water, mild detergent, drip dry.

 
### Playard, Bassinet, Changer, Floorboard and Travel Bag

- Surface wash with mild detergent and water, air dry.
- Quickly clean up any spills with warm soapy water.

# REPLACEMENT PARTS


Parts (Model 10-765-XXX-01)	Price	Quantity	Total
-----------------------------	-------	----------	-------

**A.** Travel Bag

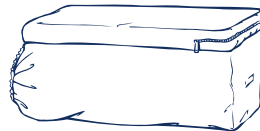

US \$ 10.00 x \_\_\_\_\_ = \$ \_\_\_\_\_  
(CAN \$ 15.50)

 **B.** Padded Floorboard

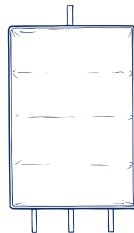

US \$ 25.00 x \_\_\_\_\_ = \$ \_\_\_\_\_  
(CAN \$ 38.75)

**C.** Instruction Manual



FREE x \_\_\_\_\_ = FREE

**NOTE:** Prices subject to change.

Total Parts \$ \_\_\_\_\_

# REPLACEMENT PARTS ORDER FORM

Total Parts \$ \_\_\_\_\_  
 Sales Tax \$ \_\_\_\_\_  
 Shipping & Handling \$ \_\_\_\_\_  
 Outside Continental USA \$ \_\_\_\_\_  
 Total \$ \_\_\_\_\_

### Sales Tax

- **California, Illinois, Indiana, Maryland and New York** Residents Add Sales & Applicable Local Taxes
- **Ohio** Residents Add 5.75% Sales Tax
- **Pennsylvania** Residents Add 6% Sales Tax except for **Philadelphia** and **Allegheny Counties** add 7% Sales Tax
- **South Carolina** Residents Add 5% Sales Tax

### Shipping & Handling

US \$ 0.01 to \$ 9.99 = US \$ 3.00  
 (CAN \$ 0.01 to \$ 15.49 = CAN \$ 4.75)  
 US \$ 10.00 and over = US \$ 5.00  
 (CAN \$ 15.50 and over = CAN \$ 7.75)

### Outside Continental USA

Add: US \$ 10.00  
 (CAN \$ 15.50)

*We must have this information to process your order: see label on bottom tubing of Playard.*

Model No.: \_\_\_\_\_

Manufacture Date: \_\_\_\_\_

Please make checks payable to **CENTURY PRODUCTS** or charge to **VISA, MASTERCARD** or **DISCOVER**.

Orders outside USA **Must** use credit card.

**NOTE:** If requested color is not available, a similar color will be substituted.

Cardholder's Name: \_\_\_\_\_

Card Number: \_\_\_\_\_

Card Exp. Date: \_\_\_\_\_

Check enclosed for \$ \_\_\_\_\_

### SHIP TO:

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_ Zip: \_\_\_\_\_

Telephone No.:( \_\_\_\_\_ ) \_\_\_\_\_

**MAIL BOTH PAGES OF ORDER TO:**

**CENTURY PRODUCTS**  
**P.O. BOX 100**  
**ELVERSON, PA 19520-9974**  
**ATTENTION: CUSTOMER SERVICE DEPARTMENT**

**FAX BOTH PAGES OF ORDER TO:**

**(610) 286-4555**



# Remember

**We are here to help you!**

**For immediate help, call our Customer Service Department at 1-800-837-4044 from anywhere in the U.S. or Canada or fax at 1-610-286-4555.**

