

Printed in China

LW4039001



Power Supply and Tape Cassette

Remove the cassette cover by pressing the

Remove the cassette cover by pressing the

above indicated area. Slide the front cover

• Make sure that the power is turned off when

LCD Display & Keyboard

**DECO MODE key** 

Preview kev

Character key

Num Lock key

Print key

Shift kev

Caps key

The LCD shows one row of 12 characters; however, you can enter up to 80 characters in length.

back and lift up from machine.

replacing the faceplate.

If a tape cassette is already installed, remove it by

pulling it straight up. Also, if batteries are already

• Make sure that the power is turned off when

Changeable Faceplates

replacing batteries or tape cassettes

above indicated area.

## Introduction

With your PT-90, you can create labels for any application. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colors.

Read this manual carefully before starting and keep the manual in a handy place for future reference. The contents of this guide and the specifications of this product are subject to change without notice.

### **FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause narmful interference, and (2) this device must accept any interference eceived, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
   Increase the separation between the equipment and receiver.
   Consult the dealer or an experienced radio/TV technician for help.
- Important

  Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment

Insert four new AAA alkaline batteries

the correct directions.

using brand new ones.

The PT-90 comes with a variety of different faceplates - enabling users to customize the machine. To change the faceplates, follow the steps below

(LR03), making sure that their poles point in

· Always replace all four batteries at the same time

Remove the inserted faceplate, and then

• Be sure to remove the protective film from the front

• Do not insert more than one faceplate at a time. If the

faceplate inserted, the faceplates may get wrinkled

or the front cover will not be able to be closed firmly

front cover is forcedly closed with more than one

replace it with another one.

side of the faceplate before replacing.

Shadow

Vertical

Frame

Label Length

Cursor key

Cursor key

- Shift key

- Backspace key

Ptouch In Power key

injury, electric shock, damage, overheating, abnormal odors or smoking. Do not use the machine in places of high humidity such as

**Safety Precautions** 

▲ Warning

Follow these guidelines to avoid the risk of fire, burn,

- bathrooms.
  Do not swallow the cutter stopper. Do not get the machine wet, such as by handling it with wet hands
- or spilling beverages on to it.

  Do not disassemble or modify the P-touch labeler/batteries
- · Do not use metallic objects, such as tweezers or a metallic pen when changing the batteries.

  • Do not throw the batteries into fire or expose to heat.
- Remove batteries immediately and stop using the machine if you notice abnormal odor, heat, discoloration, deformation or anything unusual while using or storing it.

### ▲ Caution Follow these guidelines to avoid personal injury, liquid

## leakage, burn and heat.

End of tape

snaps into place.

- Do not touch the edge of the cutter near the print head · Remove the batteries if you do not intend to use P-touch labeler for an extended period of time.
- When power is disconnected for more than three minutes, all text, format settings and any text files stored in the memory will be Do not use old and new batteries together or mix alkaline batteries with other type batteries, or set the positive and negative end in the
- wrong position.
- Do not drop or hit the P-touch labeler.
  Do not press hard on the LCD display.
- . Do not put your finger between the covers when you close the back

Insert a tape cassette, making sure that it

Make sure that the end of the tape feeds under the

· Use only Brother M tapes with this machine.

## **General Precautions**

- . Depending on the location, material, and environmental conditions the label may unpeel or become irremovable, the color of the label may change or be transferred to other objects. Before applying the
- label, check the environmental condition and the material.

  Do not use the P-touch labeler in any way or for any purpose not described in this guide. Doing so may result in accidents or damage
- Use only Brother M tapes with this machine. Do not use tapes that do not have the **##** mark.

  Only use a soft, dry cloth to clean the labeler; never use alcohol or other organic solvents.
- Use a soft wipe to clean the print head: never touch the print head.
- Do not put any foreign objects into the tape exit slot, etc.
   Do not place the P-touch labeler/battery in direct sunlight or rain, near heaters or other hot appliances, in any location exposed to
- extremely high or low temperatures (e.g. on the dashboard or in the back of your car), high humidity, or dusty locations. · Do not apply excessive pressure to the cutter lever. Do not try to print if the cassette is empty; it will damage the print

Insert the two hooks at the bottom of the

it snaps into place (2).

cassette cover into the slots on the machine

(1), and then close the cover securely until

After you have installed the tape, feed the tape (see

- Do not pull the tape while printing or feeding; it will damage the tape and machine.

  • Any data stored in memory will be lost due to failure or repair of the
- P-touch labeler, or if the battery expires.

- **1.** Enter the text for the first line and press  $\iint$ .
- $\bullet$  Do not press  $\hfill$  after the second line; otherwise "Line

Display	Label image
Å∧	ahe
abc+def_	def

Example: Entering 🏗





8

• Pictographs are displayed on the LCD display with the corresponding alphabet and number of the Pictograph table. For the Pictograph table and Pictograph List, refer

**▶** Entering Accented Characters



A - (7 + Accent) + (Accent) / (1 + ) Accented Characters Accented Characters

Α	ÁÀÂÄÆÃĄÅĀĂ	a	ı	á à â ä æ ã ą å ā ă
С	ÇČĆ	C	:	çčć
D	ĎĐ	С		đđđ
Е	ÉÈÊĘĚĖĒ	e		éèêëęěėē
G	ĢĞ	ç		ģğ
Ι	[]][][[]	i		111111
K	Ķ	k		ķ
L	ŁĹĻĽ	ı		łĺļľ
N	ÑŇŃŅ	r		ñňńņ
0	ÓÒÔØÖÕŒŐ	C	,	óòôøöõœő
R	ŘŔŖ	ı		řŕŗ
S	ŠŚŞŞß	S	Ī	šśşşß
Т	ŤŢÞ	t		ťţþ
U	Ú Ù Û Ü Ų Ů Ū Ű	ι	ı	մ ù û ü ų ů ū ű
Υ	ÝΫ	У		ýÿ
Z	ŽŹŻ	Z		žźż
_		_	_	

- To cancel operations, press (BS)
- · The order of accented characters differs by the selected LCD language.

### ► To Clear ( [Fn] + ( ) ) By pressing $\ensuremath{\text{@}}$ , the letters will be deleted one by one.

(B)



To delete all text and settings:

Shift + (®) → (■) [Txt&Format] []



Shift + (®) → (■) [Text Only] []

You can reset the P-touch labeler when you want to initialize the settings, or in the event that the P-touch is not working properly

Resetting the P-touch

Press (6) to turn off the power.

**Printing Labels** 

You can preview the text before printing

mm), then returns to the original text.

underline/frame or any additional features

• The LCD shows the whole text and the label length (inch/

The machine will feed 1.0" of tape, which may be needed

• To prevent damage to the tape, do not touch the cutter

• To cut off the label, push in the tape cutter lever on the

· Peel the printed label from backing and apply the label.

→ (4) ►) Set 1-9? 5

• You can also select the number of copies by entering with

This machine is equipped with a peeler that allows you to

1. Insert the label, with the printed surface facing down,

2. Fold back the label to the right and quickly pull out the

label. The end of the backing is separated from the

as far as possible into the built-in peeler.

lever while the message "Printing..." or "Feeding..." is

Only the text can be previewed, not the style, size.

► Text Preview

9

► Feeding (Tape Feed)

Shift + Print

when installing a new tape cassette

upper-left corner of the machine.

► Making Copies (Fn + (Print))

the Number Kevs

You can print up to 9 copies of each label

Fn → **( )** [Copies] [J

► Removing the Label Backing

easily remove the backing from labels.

Sulf

**▶** Printing

Print

 $\boldsymbol{2}$  While holding down (Shift) and  $\text{(R}^4$  , press (6) to turn on the power.


Release , and then release m and . The internal memory is reset, and all text, settings and stored files are cleared.

## DECO MODE

This function allows you to create unique labels by using some built-in templates. You can choose from 8 types of

Design	Label Image	Cooling
1	ABC ABC ABC ABC	
2	ABC ABC ABC ABC	
3	ABC ABC ABC ABC ABC ABC ABC ABC	
4	ABC ABC ABC ABC ABC	
5	ABC ABC ABC ABC	
6	ABC ABC ABC ABC ABC	✓
7	ABC ABC ABC ABC ABC ABC ABC ABC	✓
8	ABC ABC ABC ABC	<b>✓</b>

Example: Design 8 ABC ABC ABC ABC ABC

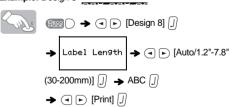

● NOTE

 Some Deco Mode formats may require cooling (indicated) on the above table). If the print head becomes too hot, your machine will stop printing and automatically start to cool down. The cool down time will be displayed. Once the print head is cool, printing will automatically continue. Do not touch the P-touch labeler while cooling • Only one line of text can be entered in DECO MODE.

• Depending on the selected format, the entire text entered

may not be printed. • The formats of the DECO MODE templates cannot be

 Symbols surrounded by a box in the Basic table are available in DECO MODE. For the Basic table, refer to

• To clear all the entered text, press (Shift) and (ISS).

"Clear?" is displayed. Press 🗍 to clear the text, or 📵 to cancel this operation.

 When you access DECO MODE, your most recently printed DECO MODE text and label length will be recalled. 

• To exit DECO MODE, press ( until the display returns to the text entry screen. You can also exit this mode by pressing • when [Print] is displayed, and selecting

• 1/2" (12mm) wide tape cassettes are recommended

when using the DECO MODE feature.

 The maximum label length is 7.8" (200mm) for DECO • When [Auto] is selected for [Label Length], the label will

automatically adjust to the correct length for printing the  $\bullet$  Press  $\mbox{$_{\!\!\text{\rm Spooce}}$}$  to return to [Auto] for [Label Length] mode.

## Saving Label Files

► Memory ( [Fn] + (U) )

You can save your original labels on to your machine. Up to three labels can be saved and recalled for printing at a later

-touch\_ → Fn → • File] [] To Save: → **( )** [Save] **( )** 

**●** To Print:  $\rightarrow \bigcirc$  [Print]  $\bigcirc$   $\rightarrow$ ◆1◆ P-touch

**To Open:** → **(a) ( (Dpen) ( () ( + (b) (c) (b) (b) (c) (b) (b) (c) (b) (c) (b) (c) (b) (c) (c)** 

**●** NOTE

If you try to store a label when there is already a label stored to that number, a message "Overwrite?" will appear. 

→ P-touch

→ 1 + P-touch

→ 1 +

## Symbols

The following symbols are available.

2 @ - & ~ \_ \ + - × ÷ ± = ✓ 6 → ← ↑ ↓ ® © 7 \$ ¢ € £ ¥  $|\alpha|\beta|\gamma|\delta|\mu|\Omega$ 0 1 2 3 4 5 3 ♠ ♥ ♡ ♦ ♦ ♣ ♣

Pictograph

1 2 3 4 5 6 7 3 📠 🖋 🖂 👄 🙎 🤣 🎜 (B) (B) (B) (D) (□) (□) **☼** 😘 🎡 ● 者 💝 🥬 🕶 🐷 🔌 😭 😭 🥍 **△** ♣ ₱ **4** % <u>▲</u> ≥ A B Ø 6 6 2 6 

• To display the next group, press (symbol)

• To cancel operations, press (BS)

• Symbols surrounded by a box in the Basic table are available in DECO MODE. • The rows of symbols (A to L) in the Pictograph table can

be selected by pressing the corresponding character.

## ► Printing the Pictograph List

(Symbol) → (■ [Print List] [] Label image

Brother M tape (width) 3/8" (9mm), 1/2" (12mm)

detailed info of tape variation.

please do not return your product to the store! After referring to the User's guide, if you still need assistance, call Brother Customer Service at: Voice: 1-877-BROTHER Web: www.brother-usa.com

Fax: 1-901-379-1210

If you need to locate a service center, please call 1-877-BROTHER or visit us at www.brother-usa.com

## A GAROGOT C SANDOS E E E

**Specifications** 

 $(W \times D \times H)$ (Approx.  $156 \times 111 \times 56.5$ mm) Approx. 0.6 lb. (Approx. 250 g) Weight:

Four AAA alkaline batteries (LR03)


See the attached "Supplies and Accessories Guide" for

Should you encounter any problems with your product,


## **▶** Error message Message Low Battery!

No Text!

data stored in the memory. You tried to enter a 3rd line by pressing

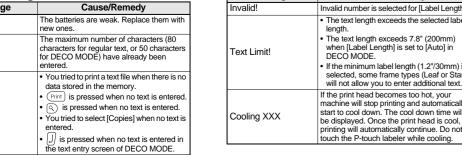

## The text length exceeds the selected lat The text length exceeds 7.8" (200mm) when [Label Length] is set to [Auto] in If the minimum label length (1.2"/30mm) i selected, some frame types (Leaf or Star will not allow you to enter additional text If the print head becomes too hot, your machine will stop printing and automatica

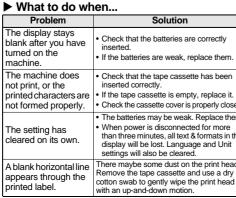

	Problem	Solution
ıtion	The machine has "locked up" (i.e., nothing	
ries are correctly	happens when a key is	Refer to "Resetting the P-touch".
eak, replace them.	pressed, even though the machine is on.)	
cassette has been	The power turns off when you try to print.	The batteries may be weak. Replace     Check that the batteries are correctly in
s empty, replace it. over is properly closed.	The tape does not feed properly or the	Check that the end of the tape feeds the tape guides.
e weak. Replace them. onnected for more	tape gets stuck inside the machine.	The cutter lever is used while printing not touch the cutter lever during printing
all text & formats in the anguage and Unit cleared.	All text and format settings need to be	Press ( while holding down ( shift)
ust on the print head. sette and use a dry	cleared to create a new label.	into Function mode and select $\gamma$ °.
wipe the print head motion.	To change language setting	Refer to "Initial Settings".

## Initial Settings

Start your machine. Supply power by using four AAA batteries, and then press 🔘 .

Insert the hooks on the front cover into the

slots on the machine, and slide back the

2 Set the language. The default setting is [English].

cover into place.

Fn → ● [Language] [] → 
→ [English/Español/Français/ Italiano/Nederlands/Norsk/Português/

Fn → **→** [Unit] [] • You can also display [Unit] by pressing [Fn] and [1]

Insert the two hooks at the bottom of the

cassette cover into the slots on the machine

(1), and then close the cover securely until

NOTE

3 Set the unit of measurement.

The default setting is [inch].

it snaps into place (②).

• The machine automatically turns off if no keys are pressed within five minutes.

## To cancel operations, press see "Resetting the P-touch".

Svenska/Dansk/Deutsch] • You can also display [Language] by pressing 🕞 and

# To initialize the P-touch labeler back to factory settings.

## inserted. s under ting. Do rinting.

, or go

## "Feeding") once and then push in the tape cutter lever

Press 🖪, use 🖜 to select a function under column [A], and then press 🗓. (The function can also be selected with the shortcut keys listed under column [C]. ( + o to )

Design	[A]	[B]	Label image	[C]
Size	Size	Large*1	J.SMITH	
Size	Size	Small	J.SMITH	Fn + @
		Normal*1	J.SMITH	
Width	Width	x2	J.SMITH	Fn + (W) <sup>2</sup>
		×1/2	J.SMITH	
		Normal*1	J.SMITH	
		Bold	J.SMITH	
		Outline	J.SMITH	
	Style	Shadow	HTIME.L	
Style		Italic	J.SMITH	Fn + E <sup>3</sup>
		Italic Bold	J.SMITH	
		Italic Outline	J.SMITH	
		Italic Shadow	J.SMITH	
		Vertical	¬ .ω≥−⊢I	
		Off* <sup>1</sup>	ABC	
		Underline	ABC	
		Round	ABC	
		Leaf	ABC ABC	
derline/Frame	Undl/Frame	Tile	<u>ABC</u>	Fn + R <sup>4</sup>
		Star	★ ABC ★	

\*2 You can select the length by entering the length with the Number Keys (a) ~ (p) . To return to [Auto], press (socoo).

Auto\*1/1.2" - 12.0" (30mm -

## Troubleshooting

# touch the P-touch labeler while cooling.

"locked up" (i.e., nothing happens when a key is pressed, even though the machine is on.)	Refer to "Resetting the P-touch".
The power turns off when you try to print.	The batteries may be weak. Replace     Check that the batteries are correctly instructions.
The tape does not feed properly or the tape gets stuck inside the machine.	Check that the end of the tape feeds the tape guides.     The cutter lever is used while printing not touch the cutter lever during printing the cutter lever during the cutter le
All text and format settings need to be cleared to create a new label.	Press $\textcircled{S}$ while holding down $\textcircled{S}$ into Function mode and select $\textcircled{\gamma}^{\delta}$ .
To change language setting	Refer to "Initial Settings".

## Entering Text and Symbols

## ► Switching Upper Case/Lower Case

Caps	
Upper case (Cops ON)	Lower case (Cops OFF)
ĂA	ĂA
ABCD_	abcd_
(A4B)	

# ABCD\_

## ► Entering Numbers

ntering Numbers					
July 1	Num -	>	(Q) (W) <sup>2</sup> (E) <sup>3</sup>		

intering Numbers					
(II)	Num	<b>→</b>	$\bigcirc$ $^{1}$ $\bigcirc$ $^{2}$ $\bigcirc$ $^{3}$		
lum Look	ON		Num Look OFF		

### Num Lock ON Num Lock OFF

## 123\_

## ► Making a Two Line Label

- 2. Enter the text for the second line and press Print
- Limit!" error message will appear. wide tape for two

<ul> <li>Use either 3/8" (9m line text.</li> </ul>	nm) or 1/2" (12mm) v
Display	Label image
ĂA	ahe

## **▶** Entering Symbols



## Designing Labels

Design	[A]	[B]	Label image	[C]
0:	Size	Large*1	J.SMITH	
Size		Small	J.SMITH	Fn + Q
		Normal*1	J.SMITH	
Width	Width	×2	J.SMITH	Fn + W
		×1/2	J.SMITH	
		Normal*1	J.SMITH	
		Bold	J.SMITH	
		Outline	J.SMITH	
		Shadow	J.SMITH	
Style	Style	Italic	J.SMITH	Fn + E
		Italic Bold	J.SMITH	
		Italic Outline	J.SMITH	
		Italic Shadow	J.SMITH	
		Vertical	¬ ·ω≥−⊢I	
		Off* <sup>1</sup>	ABC	
		Underline	ABC	
		Round	ABC	
		Leaf	ABC ABC	
lerline/Frame	Undl/Frame	Tile	ABC .	Fn + R
		Star	★ <u>ABC</u> ★	
		Heart	V ABC Y	

\*1 Default setting. To return to the default setting, press (Space)

ABC

The label is printed with the specified length.

ABC