

V、 Trouble Shooting

Phenomenon	Reason
No picture and sound	AC adapter or automobile adapter is improperly connected. Powerswitch is off.
No sound	Audio volume is off or in "mute" condition. Press VOL+
Remote Control not working	Check Remote Control Battery and make sure it is installed correctly. Battery may not have power or signal is blocked.

Notice to Customers

- Press hard object from scratching LCD surface.
- **HIGH VOLTAGE INSIDE! Do NOT dismantle the unit for you own safety.**
- LCD may have a few color dots, which is common for the matrix display technology, and doesn't indicates defects or fault.

WARNING:
FOR YOUR SAFETY, PLEASE DON'T OPERATE
OR WATCH DISPLAY WHILE DRIVING.

Components or manufacturing process may be subject to change within the specification for improving purpose.

(B 060322 V2.0)

PYLE®
view
www.pyleaudio.com



PLVWR740

Please read this manual before operating

I、Installation Guide

- 1> This unit should be installed by a qualified service Technician.
- 2> This product is designed to operate with a 12V DC, negative ground battery system.
- 3> Disconnect the ground wire from the battery terminal prior to connecting the unit to the electrical system.
- 4> Please use accessories that come with this unit in order to avoid fire or electrical damage to it.




- | | |
|------------------------------|-----------------|
| ① Open button | ⑤ Right light |
| ② Left light control button | ⑦ Menu |
| ③ Right light control button | ⑨ Remote window |
| ④ Left light | ⑪ V1/V2 |
| ⑥ Analog decrease | |
| ⑧ Analog increase | |
| ⑩ Mode button | |
| ⑫ Power ON/OFF button | |

II、Performance Parameter

Panel size: 7"
Display mode: 16:9
System: NTSC/PAL
Power supply: DC 12V
Power consumption: 12W
Resolution: 480×RGB×234
Operation temperature: +5°C ~+40°C
Storage temperature: -5°C ~+75°C
Brightness: 300cd/m²
Contrast: 300:1
Built-in IR transmitter

III、Remote Control

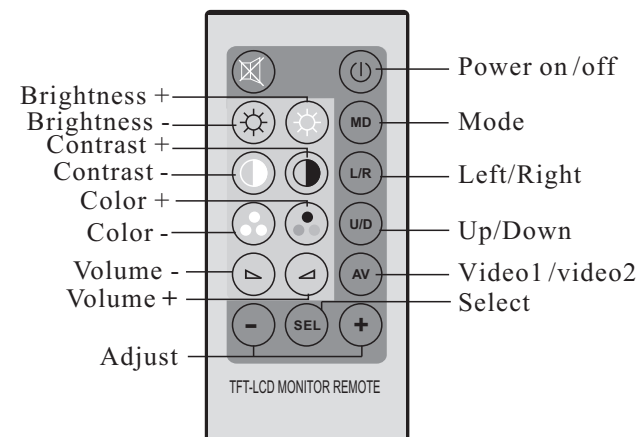

IV、Connection

