

marantz

CD Player **CD5005**

Quick Start Guide Kurzanleitung Guide de démarrage rapide Guida all'avvio rapido Guía de inicio rápido Beknopte handleiding Snabbstartsguide Краткое руководство пользователя Skrócona instrukcja obsługi DEUTSCH

ENGLISH

FRANÇAIS

ITALIANO

ESPAÑOL

NEDERLANDS

SVENSKA

РУССКИЙ

POLSKI

Welcome

Thank you for choosing a Marantz CD player. This guide provides step-by-step instructions for setting up your CD player.

Please do not return this unit to the store – call for assistance.

If you need help...:


1

If you need additional help in solving problems, contact Marantz customer service in your area.

For details, see the Marantz homepage. www.marantz.com

Before You Begin

What's In the Box

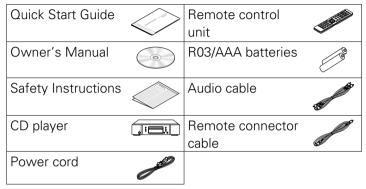

Í


These drawings are for illustrative purposes only and may not represent the actual product(s).

Setup


There are five steps to the setup process.

1 Install batteries in the remote control unit
2 Connect the CD player to the amplifier
3 Plug the power cord into a power outlet
4 Turn the CD player's power on
5 Begin CD playback

Install batteries in the remote control unit

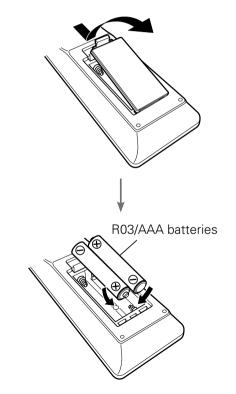


2 Connect the CD player to the amplifier

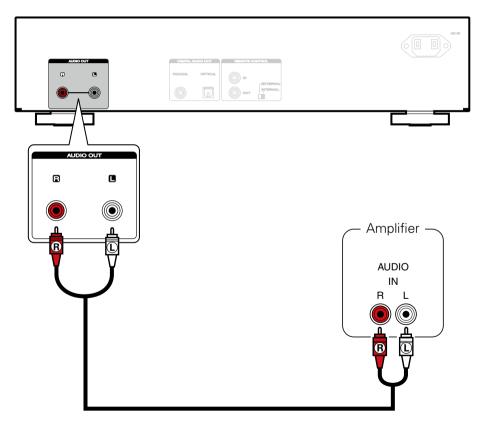


Plug the power cord into a power outlet



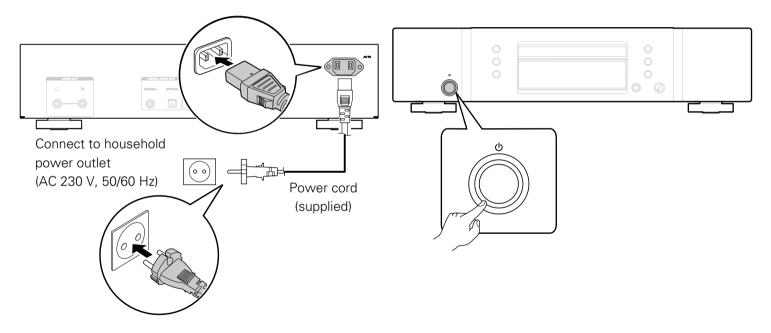



Play a CD

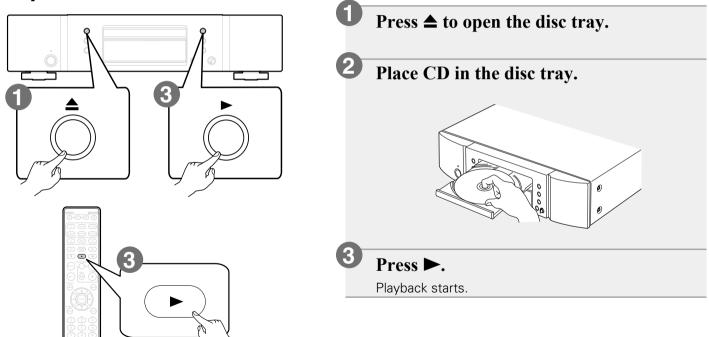

Owner's Manual

Please reference these manuals for more details about the setup and operation of the CD player and it's features.

Web Manual

To read it on your tablet or PC, please access to Web Manual site.

manuals.marantz.com/CD5005/EU/EN




This Web Manual is optimized for tablets and mobile devices.

Web Manual



PDF Manual

To read the owner's manual on your computer or to print it out, please open the included CD-ROM or select the "PDF Download" link from the Web Manual.

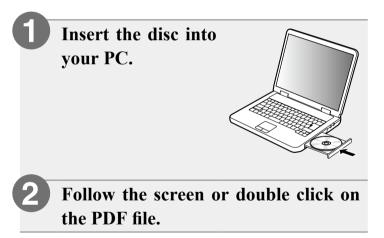

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

mapantz^{*} is a registered trademark.

D&M Holdings Inc. Printed in China 5411 11171 00AM