 




mellerware®

E X E C U T I V E

Bravissimo 2S Steam Station Iron

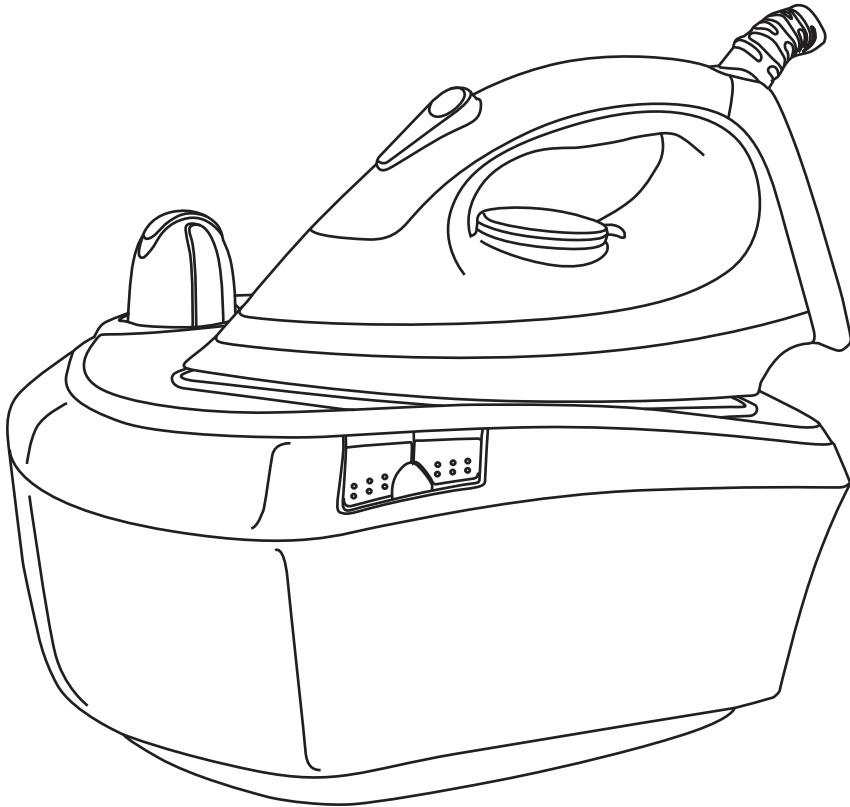

complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS



 
CE
2 YEAR
GUARANTEE

Model:
23805

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee



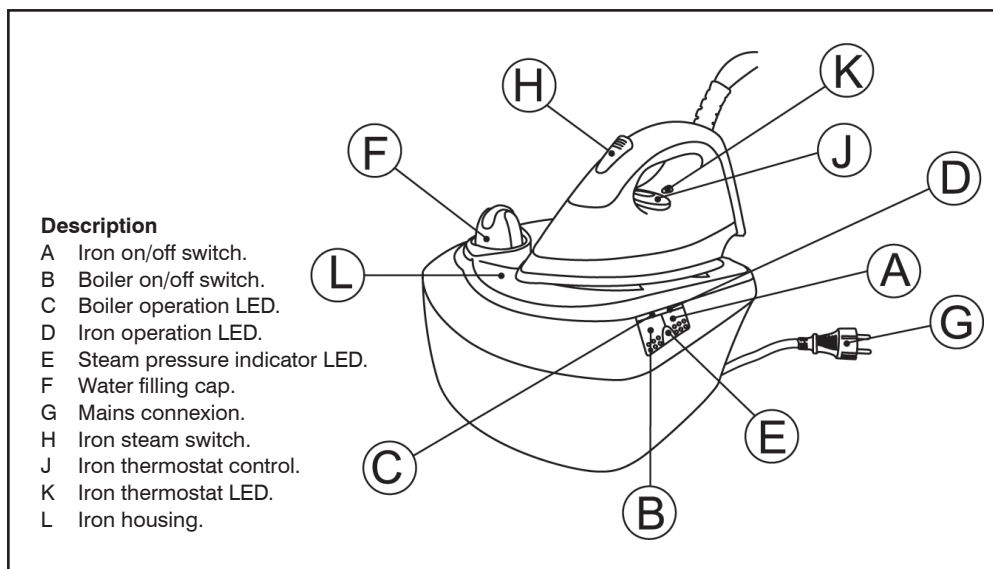

Tips and safety warnings

- Please read these instructions carefully before using the appliance and keep them for future reference.
- Unpack the appliance and check it is in perfect condition and working order.
- This device has been designed for household use, not for commercial use.
- Do not leave the appliance without supervision if you are not going to use it immediately. This will save energy and prolong the working life of the appliance.
- Keep the appliance out of the reach of children.
- The appliance must not be connected to the mains while the boiler is being filled (Fig. 1).
- Before connecting the appliance to the mains, ensure the supply voltage is the same as that marked on the appliance.
- The water filling inlet must not be open during operation.
- This appliance must be connected to an electrical socket with an earth connection.
- Any improper use or failure to comply with the instructions for use will invalidate the warranty and free the manufacturer from any liability concerning the appliance.
- IF THE IRON IS IN ITS HOUSING AT MAXIMUM TEMPERATURE FOR A LONG TIME, THIS MAY CAUSE ALTERATIONS TO ITS COLOUR, BUT THIS HAS NO EFFECT ON THE PROPER OPERATION OF THE APPLIANCE.

- The appliance must be used and placed on a flat, stable surface
- When placing the appliance on its support, make sure the surface on which the support is fitted is stable.
- Do not use the appliance if it has been dropped, if there are visible signs of damage or if it leaks.

Before using the appliance for the first time

This professional iron works with tap water. However, the use of distilled water is recommended in areas with a high lime level in the water. Some parts of the iron have been slightly greased. They can therefore give off steam on first use, but this steam will disappear after a short time.

Practical tips

- Keep the sole plate smooth, do not apply it to metallic objects (i.e., to the ironing-board, buttons, zips...).
- Fit the iron in its housing (L) for transport and storage, in order to improve its stability.
- To avoid burns, do not lean Bravissimo 2 Pro's iron on its back





Steam ironing

When you start to iron, proceed as follows:

- Unscrew the cap (F) and fill the boiler with water, using a jug (Fig. 1) (if you fill it with hot water, the appliance will be ready for use sooner).

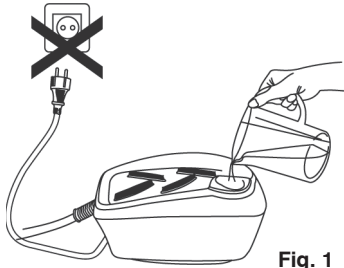 


Fig. 1

- Even if the boiler has a certain level of water, it is always recommended to fill it to the top for a longer range, thanks to its large 1l capacity.
- Carefully close the cap (F), screwing it to the end.
- Place the boiler on a flat, stable surface.
- Plug the appliance into the mains.
- Switch on the boiler and the iron by pressing the relevant switches (B) and (A). The corresponding LEDs will light (Fig. 2).

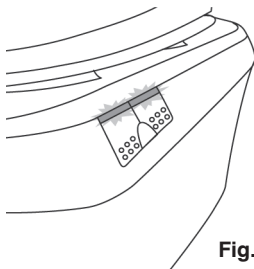 


Fig. 2

Thermostat Control Position	Fabric Type	Steam
•	Nylon, Silk	No
••	Wool	No
•••	Cotton, Linen	Yes

It is recommended not to use steam in the • and •• thermostat positions, as water could drip.

- Set the desired temperature with the thermostat control (J), depending on the type of cloth to be ironed (Fig. 3).

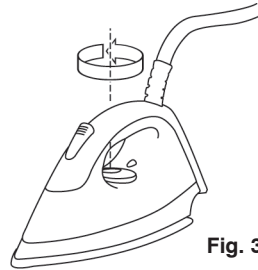 


Fig. 3

- The appliance will be ready for use when the pressure indicator LED (E) lights up (Fig. 4). While ironing, this LED (E) goes on and off automatically, this is normal.

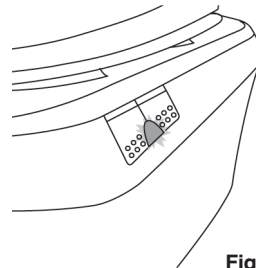 


Fig. 4

- By pressing the steam switch (H) you will get a constant steam jet (Fig. 5). The steam stops when you release the switch.

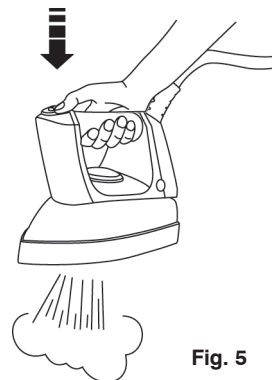 


Fig. 5





How to fill the boiler while ironing

To fill the boiler, proceed as follows:

- Eliminate steam pressure from inside the boiler by switching on the steam switch (H) (Fig. 5).
- Turn off the boiler (B) and iron (A) switches.
- Unplug the appliance from the mains.
- Carefully unscrew the cap (F) to let the residual steam out of the boiler.
- Wait for some minutes and carefully pour 1l of water into the boiler using a jug (Fig. 1).
- Carefully close the cap (F) again, screwing it to the end.

Vertical ironing

It is possible to iron hanging curtains, garments on their own hangers... (Fig. 6)

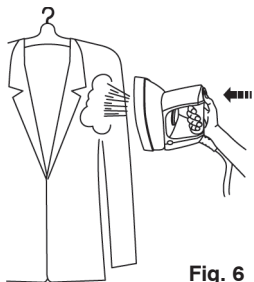 


Fig. 6

- Adjust the iron thermostat control (J) to the maximum temperature.
- Iron from top to bottom and press the iron steam switch (H).

Important: For cotton and linen clothes, it is recommended to put the base of the iron in contact with the fabric. For more delicate fabrics, it is recommended to keep the base of the iron at a distance of some centimetres.

Dry ironing

- Connect the professional iron to the mains.
- Turn on the iron switch (A).
- Set the iron temperature with the thermostat control (J), depending on the fabric to be ironed.

After each ironing

- Switch off the professional iron by pressing switches (B) and (A).
- Unplug the network connection cable (G) from the mains.

- Clean the base of the iron while it is still hot, using a damp cloth, after each use.
- The rest of the appliance can also be cleaned using a damp cloth. Never submerge the appliance in water or any other liquid, or hold it under a running tap. Do not use solvents or abrasive products to clean it.

Care and Cleaning

- Before cleaning the iron, ensure it is disconnected from the power supply and has completely cooled down.
- Deposits and other residues on the soleplate can be removed with a rough cloth soaked in a vinegar/water solution, or methylated spirits.
- The housing/body may be wiped with a damp cloth and then polished with a dry one.
- Do not use abrasives on the soleplate.
- Keep the soleplate smooth: avoid hard contact with metal objects.
- NOTE: Ironing dirty fabric or fabric not rinsed fully will result in the iron sticking and dirt accumulating on the bottom of the soleplate, as will a iron set at too high a temperature for the relevant fabric.





Trouble Shooting Guide

Problem	Reason	Action
Water drips from the holes on the base of the iron when turning on the steam switch (H).	Iron thermostat control (J) is set to the minimum position • / ••	Set the thermostat control to the steam zone •••
	The boiler is too full.	Remove some water.
	The boiler is in a tilted position.	Place it on a horizontal surface.
The iron does not heat and the LED (K) does not light up.	The switch (A) is "off".	Switch it to "on" (A)
	Iron thermostat control (J) set to the minimum position.	Adjust the thermostat control.
	Faulty power connection.	Check the power points.
No steam comes out when pressing the steam switch (H)	Empty boiler	Fill the boiler with water
	Switches (B) and (A) are "off"	Switch them on
Leak from the boiler filler cap	Cap (F) not properly closed	Let the boiler cool and screw the cap (F) to the end again
	Safety valve activated	Go to an authorised Technical Service Centre
The boiler cap (F) does not unscrew easily	There is steam remaining inside the boiler	Press the steam switch (H) to let the steam out





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

