




DIGITAL MULTIFUNCTIONAL SYSTEM

OPERATION MANUAL (for general information)

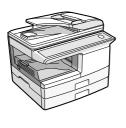

	Page
PREPARATIONS	9
LOADING PAPER	14
MAKING COPIES	20
CONVENIENT COPY	
FUNCTIONS	26
INSTALLING THE	
SOFTWARE	36
PRINTER/SCANNER	
FUNCTIONS	49
USER SETTINGS	54
ACCOUNT CONTROL	
SETTINGS	61
TROUBLESHOOTING	
AND MAINTENANCE	67
OPTIONAL EQUIPMENT.	86
APPENDIX	89

In some areas, the "POWER" switch positions are marked "I" and "O" on the copier instead of "ON" and "OFF".

If your copier is so marked, please read "I" for "ON" and " O " for "OFF".

Caution!

For a complete electrical disconnection, pull out the main plug. The socket-outlet shall be installed near the equipment and shall be easily accessible.

Shielded interface cables must be used with this equipment to maintain compliance with EMC regulations.

Do not make copies of anything which is prohibited from copying by law. The following items are normally prohibited from copying by national law. Other items may be prohibited by local law.

Money

Stamps

Bonds

Stocks

Bank drafts

Checks

Passports

Driver's licenses

CONTENTS

ENV	TIONS //IRONMENTAL INFORMATION RODUCTION N FEATURES	5 6
1	PREPARATIONS	
	PART NAMES CONNECTING THE POWER CORD POWER ON AND OFF	12
2	LOADING PAPER	
	PAPER LOADING THE PAPER TRAY BYPASS FEED (including special paper) CHANGING A TRAY'S PAPER SIZE SETTING.	15 17
3	MAKING COPIES	
	NORMAL COPYINGSELECTING THE TRAY	23 24
4	CONVENIENT COPY FUNCTIONS	
	AUTOMATIC TWO-SIDED COPYING	26 29 31
5	INSTALLING THE SOFTWARE	
	SOFTWARE	37 38
	SELLING OF BULLON MANAGER	40

6	PRINTER/SCANNER FUNCTIONS	
	USING THE PRINTER MODE	50
	BASIC PROCEDURE FOR PRINTING	
	USING THE SCANNER MODE	
	SCANNING USING THE KEYS ON THE MACHINE	
	SCANNING FROM YOUR COMPUTER	52
	OPERATION IN COPY, PRINTER, AND SCANNER MODES	
	HOW TO USE THE ONLINE MANUAL	53
7	USER SETTINGS	
	USER PROGRAMS	54
	SELECTING A SETTING FOR A USER PROGRAM	59
8	ACCOUNT CONTROL SETTINGS	
0	PREPARING FOR USING ACCOUNT CONTROL SETTINGS	61
	ACCOUNT NUMBER CONTROL	
	TOTAL PER ACCOUNT	
	COPYING WHEN AUDITING MODE IS ENABLED	
		00
9	TROUBLESHOOTING AND MAINTENANCE	
	DISPLAY MESSAGES	
	TROUBLESHOOTING THE MACHINE	
	PROBLEMS DURING SETUP OF THE SOFTWARE	
	MISFED REMOVAL	
	TONER CARTRIDGE REPLACEMENT	
	SCAN HEAD LOCKING SWITCH	
	MAINTENANCE REQUIRED	
	CLEANING THE MACHINE	
	TRANSFER CHARGER	
	MANOI EN ONANGEN	05
10	OPTIONAL EQUIPMENT	
	SYSTEM CONFIGURATION	86
	FACSIMILE EXPANSION KIT (AR-FX13)	
	NETWORK EXPANSION KIT (AR-NB2A)	
	REVERSING SINGLE PASS FEEDER (AR-RP9)	
	250-SHEET PAPER FEED UNIT (AR-D33)	87
11	APPENDIX	
	SPECIFICATIONS	89
	INDEX	94

CAUTIONS

Caution label on the machine

The label $(\bigwedge \bigwedge)$ in the fusing area of the machine indicates the following:

: Caution, risk of danger

Cautions on using the machine

Follow the cautions below when using this machine.

▲ Warning:

- The fusing area is hot. Exercise care in this area when removing misfed paper.
- Do not look directly at the light source. Doing so may damage your eyes.
- · Machine power must be turned off before installing any supplies.

(!) Caution:


- · Place the machine on a firm, level surface.
- . Do not install the machine in a humid or dusty location.
- When the machine is not used for a long time, for example for consecutive holidays, turn the power switch off and remove the power cord from the outlet.
- When moving the machine, be sure to turn the power switch off and remove the power cord from the outlet.
- Do not switch the machine rapidly on and off. After turning the machine off, wait 10 to 15 seconds before turning it back on.
- Do not cover the machine with a dust cover, cloth or plastic film while the power is
 on. Doing so may prevent heat radiation, damaging the machine.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The socket-outlet shall be installed near the machine and shall be easily accessible.

Important points when selecting an installation site

Do not install your machine in areas that are:

- · damp, humid, or very dusty
- · exposed to direct sunlight
- · poorly ventilated
- subject to extreme temperature or humidity changes, e.g., near an air conditioner or heater.

Be sure to allow the required space around the machine for servicing and proper ventilation.

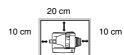

Cautions on handling the machine

Be careful in handling the machine as follows to maintain the performance of this machine.

Do not drop the machine, subject it to shock or strike it against any object. Store spare toner cartridges in a cool dry place without removing from the package before use.

· If they are exposed to direct sunlight or excessive heat, poor copies may result.

Do not touch the photoconductive drum (green portion).

· Scratches or smudges on the drum will cause dirty copies.

Trademark acknowledgements

- Microsoft®, Windows®, Windows® 98, Windows® Me, Windows® 2000, Windows® XP, Windows Vista® and Internet Explorer® are registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and other countries.
- · Macintosh is a trademark of Apple Inc., registered in the U.S. and other countries.
- IBM, PC/AT, and PowerPC are trademarks of International Business Machines Corporation.
- Adobe, the Adobe logo, Acrobat, the Adobe PDF logo, and Reader are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and others countries.
- · All other trademarks and copyrights are the property of their respective owners.

ENVIRONMENTAL INFORMATION



Products that have earned the ENERGY STAR® are designed to protect the environment through superior energy efficiency.

Laser information

Wave length	780 nm +15 nm	
	-10 nm	
Pulse times	12.88 μs ±12.88 ns/7 mm	
Output power	Max 0.2 mW	

At the production line, the output power of the scanner unit is adjusted to 0.18 MILLIWATT (Total Power) PLUS 5% and is maintained constant by the operation of the Automatic Power Control (APC).

Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This Digital Equipment is CLASS 1 LASER PRODUCT (IEC 60825-1 Edition 1.2-2001)

A small amount of ozone is produced within the unit during operation. The emission level is insufficient to cause any health hazard.

Note:The present recommended long term exposure limit for ozone is 0.1 ppm (0.2 mg/m²) calculated as an 8 hr. time-weighted average concentration. However, since the small amount that is emitted may have an objectionable odor, it is

advisable to place the unit in a ventilated area.

SOFTWARE LICENSE

The SOFTWARE LICENSE will appear when you install the software from the CD-ROM. By using all or any portion of the software on the CD-ROM or in the machine, you are agreeing to be bound by the terms of the SOFTWARE LICENSE.

INTRODUCTION



Some model may not be available in some countries.

Using the manual

This machine has been designed to provide convenient copying features in a minimum amount of office space and with maximum operational ease. To get full use of all machine features, be sure to familiarize yourself with this manual and the machine. For quick reference during machine use, keep this manual in a handy location.

About the operation manuals

The operation manuals for the machine are as follows:

Operation Manual (this manual)

Explains the machine and how to use it as a copier. Also explains how to install the software that allows the machine to be used as a printer and scanner for your computer.

Online Manual (on the accessory CD-ROM)

This manual explains the procedures for using the machine as a printer or a scanner.

Operation manual for fax (for the models with the AR-FX13 option)

This manual explains the procedures for using the machine as a fax.

Operation manual for the expansion network kit (for the models with the AR-NB2A option)

This manual explains the procedures for using the machine as a printer or a network scanner.

Conventions used in this manual and online manual

- The illustrations in this manual show the AR-M201. The appearance of your machine may be different depending on the model and options installed, however, the basic operations are the same.
- Where "AR-XXXX" appears in this manual, please substitute the name of your model for "XXXX". For the name of your model, see the operation panel on the machine.
- Illustrations of driver screens and other computer screens show the screens that appear in Windows XP Home Edition. Some of the names that appear in these illustrations may differ slightly from the screens that appear in other operating systems.
- The explanations in this manual assume that the person who will install the product and the users of the product have a working knowledge of Microsoft Windows.
- This operation manual refers to the Reversing Single Pass Feeder as the "RSPF".
- In this manual, the following icons are used to provide the user with information pertinent to the use of the machine.



Warns that injury may result if the contents of the warning are not properly followed.



Cautions that damage to the machine or one of its components may result if the contents of the caution are not properly followed.



Notes provide useful information on the specifications, functions, performance, and operation of the machine.

The display screens, messages, and key names shown in the manual may differ from those on the actual machine due to product improvements and modifications.

Explanation of illustration

Depending on the model you have and on the options installed, some of the illustrations in this manual may be different, however, the basic operations are the same.

Model	AR-M201	
Appearance	(With optional RSPF and 250-paper feed unit installed)	
Document cover/RSPF	Document cover (Standard) RSPF (Optional)	

MAIN FEATURES

High-speed laser copying

First-copy time*1 is only 8.0*2 seconds.

Copying speed is 20 copies per minute. This is ideal for business use and provides a big boost to workplace productivity.


*1 The first-copy time is measured after the power save indicator turns off following power on, using the document glass with the polygon rotating in the copy ready state and "LSU SETTING" set to ON in the user programs (A4, paper fed from paper tray).
*2 When user program 24 is set to OFF.

High-quality digital image

- · High-quality copying at 600 dpi is performed.
- In addition to automatic exposure adjustment, two original modes can be selected: "TEXT" for text-only originals, and "PHOTO" for photographs. The exposure can be adjusted to five levels in each mode.
- The photo mode copying function allows clear copying of delicate halftone original images such as monochrome photos and colour photos.

Enhanced copying features

- Zoom copies can be made from 25% to 400% in increments of 1%. (When the RSPF is being used, the zoom copy ratio range is 50% to 200%.)
- · Continuous copying of up to 99 copies is possible.
- Sets of output can be offset from each other for easy separation (offset function).
- Sorting by sets is possible without the need for a sorter or other special device (Sort copy).
- Includes convenient features such as margin shift, 2 IN 1 copy, and automatic twosided copying.

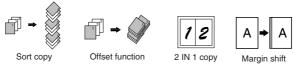

Scan once/Print many

The machine is equipped with a memory buffer allowing the machine to scan an
original once and make up to 99 copies of the scanned image. This improves
workflow, reduces operating noise from the machine and reduces wear and tear on
the scanning mechanism, which provides for a higher reliability.

LCD panel displays messages

 The LCD panel displays messages that show function settings and the status of the machine.

Laser printer function

 The accompanying printer driver can be installed to enable use of the machine as a printer.

Colour scanner function

 The accompanying scanner driver can be installed and the machine connected to a computer using a USB cable to enable use as a scanner.

Fax function (option)

 The optional Facsimile Expansion Kit can be installed to enable the machine to be used as a fax machine. (Facsimile Expansion Kit Operation Manual)

Network connection (option)


 The optional Network Expansion Kit can be installed to enable the machine to be used as a network printer and network scanner. (Network Expansion Kit Operation Manual)

Environment and people friendly design

- Preheat mode and auto power shut-off mode are provided to reduce power consumption when the machine is not in use.
- A universal design has been implemented in the product whereby the height of the operation panel and shape of the keys are designed to be usable by as many people as possible.

This chapter provides basic information that you should know before using the machine.

PART NAMES

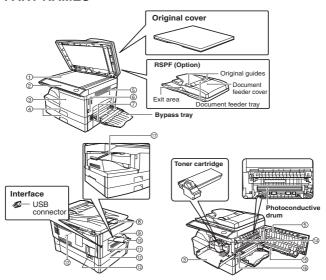


- Document glass
- ② Operation panel
- 3 Front cover
- Paper tray
- ⑤ Side cover
- 6 Side cover open button
- Bypass tray paper guides
- (8) Original output tray extension
- Paper output tray

- n Paper output tray extension
- (1) Power switch
- Handles
- Power cord socket
- (14) Fusing unit release lever
- (5) Transfer charger
- (f) Charger cleaner
- (f) Paper holder arm

Operation panel



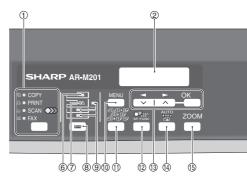

1) [MODE SELECT] key / Mode indicators

Press this key to select the mode. The indicator of the selected mode lights (copy, printer, scanner, fax mode indicators).

② Display

This shows messages indicating the machine status and any problems that occur, as well as user programs and function setting menus.

③ Numeric keys

Use these to enter the number of copies and other numerical settings.

The keys can also be used to select

The keys can also be used to select items in function setting menus.

④ [CLEAR] key (□)

Use this to clear the set number of copies, as well as cancel a job that is in progress. When a setting menu appears, use this key to move back to the previous menu level.

(5) Power save indicator

This lights up when the power save function is activated.

(6) RSPF indicator (Option)

This lights up when an original is placed in the RSPF.

7 Error indicator

This lights steadily or blinks when a paper misfeed or other error occurs.

⑧[TRAY SELECT] key (□)

Use to select the paper tray that has the desired paper for copying.

Tray location indicator

Indicates the selected paper tray. The indicator blinks when the tray is out of paper or is not closed properly.

10 [MENU] key

Press this key to configure a user program, to select the paper size for copying, to display the total count or to access account total functions.

[2-SIDED SCAN (@ pp)] key (AR-M200 only)

Press in copy mode to select one-sided or two-sided settings for the original and for the output.

(2) [E-SORT/SP.FUNC (SP. FUNC)] key
Press to select the sort function, 2 IN 1

Press to select the sort function, 2 IN 1 copy function, or margin shift function.


(③[◄] key (□), [►] key (□), [OK] key


Press the [

| left |

(4) [EXPOSURE (👺)] key

Use to switch from auto exposure adjustment to text mode or photo mode.

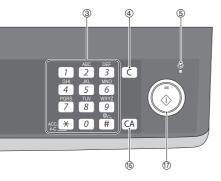

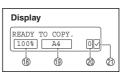

(5) [ZOOM] key

Press to select an enlargement or reduction ratio.

To select a preset ratio setting, press the [ZOOM] key and select the desired preset ratio. To select a ratio that is not preset, press the [ZOOM] key, select the preset ratio that is closest to the desired ratio, and then press the $[\!\!\!-\!\!\!\!-\!\!\!\!-]$ key $(\!\!\!\!-\!\!\!\!-)$ or $[\!\!\!\!-\!\!\!\!\!-]$ key $(\!\!\!\!-\!\!\!\!-)$) to increase or decrease the ratio in increments of 1%.

(I) [CLEAR ALL] key (CA)

This returns all functions to the default settings. When pressed in a setting menu, this returns the settings and display to the initial state.

(1) [START] key (() / Ready indicator The ready indicator lights up when

copying or scanning is possible. To begin copying, press the [START] key (().

The [START] key (() is also pressed to return to normal operation from auto power shut-off mode.

- (18) Shows the current copy ratio.
- (19) Shows the selected paper size.
- Shows the number of copies that has been entered with the numeric keys.
- ② A checkmark " \(\sigma\)" appears when the exposure has been changed, or when two-sided copying, sort, 2 IN 1, or margin shift is selected.


CONNECTING THE POWER CORD



If you use the machine in a country other than the country where the machine was purchased, you will need to make sure that your local power supply is compatible with your model. If you plug the machine into an incompatible power supply, irreparable damage to the machine will result.

1

Ensure that the power switch of the unit is in the OFF position. Insert the attached power cord into the power cord socket at the rear of the unit.

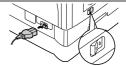

2

Plug the other end of the power cord into the nearest outlet.

() Caution


- Only insert the power cord into a properly grounded wall socket.
- Do not use extension cords or power strips.

POWER ON AND OFF

The power switch is located on the left side of the machine.

Power on

Turn the power switch to the "ON" position.

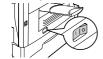

The ready indicator will light up and other indicators which show the initial settings of the display will also light up to indicate the ready condition. For the initial settings, see the "Initial settings" (below).

You can select copy settings and press the [START] key (\bigcirc) after the power switch is turned on. Copying will start automatically.

Language setting

The first time the power is turned on after shipment from the factory, a message will appear in English in the display prompting you to select the language. Select the language with the [◄] key (□) or [►] key (□) and then press the [OK] key. The language can also be changed in the user programs (p.57).

Initial settings

The machine reverts to the initial settings when it is first turned on, when the [CLEAR ALL] key ([CA]) is pressed, or when no keys are pressed for the preset "AUTO CLEAR" time following the end of a copy job. When the machine reverts to the initial settings, all settings and functions selected to that point are cancelled. The "AUTO CLEAR" can be changed in the user programs. (p.54)

When in the copy mode

SHARP AINIZED CONT. (1) 1 2 3 C

The main screen of copy mode appears.


Copy ratio: 100%, Exposure: Automatic Copy quantity: 0. All special copier modes: Off

Scanning unit (scan head)

When the machine is able to copy or scan (the ready indicator is on), the scanning unit is lit.

Power off

Make sure that the machine is not in operation and then turn the power switch to the "OFF" position.

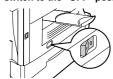

If the power switch is turned off while the machine is in operation, a misfeed may occur and the job that was in progress will be cancelled.

In cases where the machine will not be used for a long time, turn off the power switch and remove the power cord from the outlet.

Check the following to make sure the machine is not in operation:

- The ready indicator is lit. (Initial state)
- The power save indicator is lit. (prehéat mode or auto power shut-off mode)

Power save modes

Preheat mode

This function automatically switches the machine to a low power consumption state if the set duration of time elapses without the machine being used when the power is on. In this mode, the power save indicator lights up. Normal operation automatically resumes when a key on the operation panel is pressed, an original is placed, a print job is received.

Auto power shut-off mode

This function automatically switches the machine to a state that consumes even less power than preheat mode if the set duration of time elapses without the machine being used when the power is on. The power save indicator lights up, the display shows a message indicating that the machine is in auto power shut-off mode. To resume normal operation, press the [START] key () Normal operation also resumes automatically when a print job is received or scanning is begun from a computer. While in auto power shut-off mode, no keys (except the [START] key ()) can be used.



The preheat activation time and the auto power shut-off time can be changed with "PREHEAT MODE" and "AUTO SHUT-OFF TIME" in the user programs. It is suggested that you set times that are appropriate for your usage of the machine. (p.54, p.55)

Check original cover/RSPF open function

When enabled, this function may help prevent wasteful use of toner that occurs when the original cover/RSPF cover is not completely closed.

If the start () key is pressed when the original cover/RSPF cover is not completely closed, "CHECK ORIGINAL" will appear in the display and copying may not take place. If copying does not take place, copying can be performed by pressing the start () key again, however, the scan size set in "CHANGING A TRAY'S PAPER SIZE SETTING" (p.19) or "VALID COPY WIDTH" (program number 25) (p.57) will be used.

If the original cover/RSPF cover is completely closed after "CHECK ORIGINAL" appears, copying will take place at the normal size.

2 Chapter 2 LOADING PAPER

The tray location indicator will blink when there is no paper in the selected paper tray, or when the selected paper tray is not closed or is improperly closed.

PAPER

For best results, use only SHARP recommended paper.

Paper tray type	Paper type	Size	Weight	Capacity
Paper tray	Standard paper Recycled paper		56 g/m ² to 80 g/m ²	250 sheets *1 (The paper should not exceed the line on the tray)
Bypass tray	Standard paper Recycled paper	A6 to A4	56 g/m ² to 80 g/m ² 56 g/m ² to	50 sheets *1
	Thick paper			Load one sheet at a time in the bypass tray.
	Transparency film/Labels		128 g/m ² * ³	
	Envelopes *2	Monarch Commercial 9 Commercial 10		

^{*1} The number of sheets of paper that can be loaded varies depending on the weight of the paper.

^{*2} Do not use non-standard envelopes or envelopes that have metal clasps, plastic snappers, strings, windows, linings, self-adhesive strips, patches or synthetic materials. Do not use envelopes that are filled with air or envelopes that have labels or stamps attached. These will damage the machine.

 $^{^{*3}}$ When loading paper larger than A4 size, do not use paper of weight greater than 104 $_{\text{g}}/\text{m}^2$.

Special papers

Follow these guidelines when using special papers.

- Use SHARP recommended transparency film and label sheets. Using other than SHARP recommended paper may result in misfeeds or smudges on the output. If other than SHARP recommended media must be used, feed each sheet one at a time using the bypass tray (do not attempt continuous copying or printing).
- There are many varieties of special paper available on the market, and some cannot be used with this machine. Before using special paper, contact your authorised service representative.
- Before using other than SHARP recommended paper, make a test copy to see if the paper is suitable.

LOADING THE PAPER TRAY



Make sure that the paper is not torn, is free of dust, and has no wrinkles or curled edges.


1 Raise the handle of the paper tray and pull the paper tray out until it stops.



2 Fan the paper and insert it into the tray. Make sure that the edges go under the corner hooks.



- Do not load paper above the maximum height line (<u>* * *</u>).
 Exceeding the line will cause a paper misfeed.
- If the paper is not fanned, double-feeds or misfeeds may occur.
- Make sure the stack of paper is straight before loading it. When adding paper, take the remaining paper out and combine it into a single stack with the new paper.
- Make sure that all the paper in the stack is the same size and type.
- When loading paper, ensure that there is no space between the paper and the guide, and make sure that the guide is not set too narrow and causes the paper to bend. Incorrect loading will cause the paper to skew or misfeed.

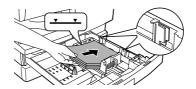



Gently push the paper tray back into the machine.



- If you loaded a different size of paper than was loaded previously in the tray, go to "CHANGING A TRAY'S PAPER SIZE SETTING" (p.19)
- When not using the machine for an extended period, remove all
 paper from the paper tray and store it in a dry place. If paper is left in
 the machine for an extended period, the paper will absorb moisture
 from the air, resulting in paper jams.


BYPASS FEED (including special paper)

The bypass tray can be used to feed standard paper, transparency film, labels, envelopes, and other special purpose paper.

Important points when inserting paper in the bypass tray

Up to 50 sheets of standard copy paper can be inserted in the bypass tray. (Capacity will vary depending on the type of paper loaded.)

Be sure to place envelopes horizontally as shown in the following diagram.

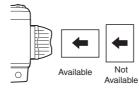

- When loading envelopes, make sure that they are straight and flat and do not have loosely glued construction flaps (not the closure flap).
- Special papers except SHARP recommended transparency film, labels, and envelopes must be fed one sheet at a time through the bypass tray.
- When adding paper, first remove any paper remaining in the tray, combine it with the paper to be added and then reload as a single stack. The paper to be added must be the same size and type as the paper already in the tray.
- Do not use paper that is smaller than the original. This may cause smudges or unclean images.
- Do not use paper that has already been printed on by a laser printer or plain paper fax machine. This may cause smudges or unclean images.

Envelopes

Do not use the following envelopes, as misfeeds will occur.

- Envelopes with metal tabs, clasps, strings, holes, or windows.
- Envelopes with rough fibers, carbon paper, or glossy surfaces.
- Envelopes with two or more flaps.
- Envelopes with tape, film, or paper attached to the flap.
- · Envelopes with a fold in the flap.
- · Envelopes with glue on the flap to be moistened for sealing.
- Envelopes with labels or stamps.
- · Envelopes that are slightly inflated with air.
- · Envelopes with glue protruding from the seal area.
- Envelopes with part of the seal area peeled off.
- Be sure to select com9, com10 or Monarch in the paper size setting of the printer driver. (For detailed information on the printer driver, refer to the online manual.)

Loading paper in the bypass tray



- · Paper must be fed narrow side first into the feed slot.
- Special papers such as transparency film, labels, and envelopes must be fed one sheet at a time through the bypass tray.
- When copying onto transparency film, remove each copy promptly.
 Do not let copies stack up.

Open the bypass tray and extend the tray.










To close the bypass tray, perform step 1 and then step 2 in the illustration and push the round projections at the right of the tray until they click.

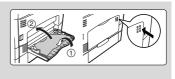

2 Set the bypass tray paper guides to the paper width. Insert the paper (print face down) all the way into the bypass tray.



3 Press the [TRAY SELECT] key () to select the bypass tray.

Note for loading thick paper

Confirm that user program 29 is set to "2 (HEAVY PAPER)" when using thick paper. (See page 57.)

CHANGING A TRAY'S PAPER SIZE SETTING

Follow these steps to change a tray's paper size setting.



- The paper size setting cannot be changed when the machine has stopped temporarily due to running out of paper or a misfeed.
- During printing (even in copy mode), the paper size setting cannot be changed.
- Press the [MENU] key.

 Press the [⊸] key (□) or [▶] key (□) until "PAPER SIZE" appears, and then press the [OK] key.
- Press the [◄] key (□) or [►] key (□) to select the tray, and then press the [OK] key.



Press the [◄] key (▽) or [►] key (▷) to select the paper size, and then press the [OK] key.


The paper size changes as follows each time the $[\blacktriangleleft]$ key $(\frown]$ or $[\blacktriangleright]$ key $(\frown]$ is pressed: "A4" \rightarrow "85" \rightarrow "8.5" \rightarrow "8.5x14" \rightarrow "8.5x13" \rightarrow "8.5x11" \rightarrow "5.5x8.5".



(Note

When you have finished configuring the tray's paper size setting, press the [MENU] key.

4 Squeeze the lock lever of the front guide and slide the front guide to match the width of the paper, and move the left guide to the appropriate slot as marked on the tray.

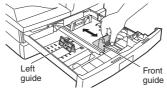

- The front guide is a slide-type guide. Grasp the locking knob on the guide and slide the guide to the indicator line of the paper to be loaded.
- The left guide is an insert-type guide. Remove it and then insert it at the indicator line of the paper to be loaded.

3 MAKING COPIES

This chapter explains basic copying functions.

NORMAL COPYING

Using the document glass



- . The document glass can scan up to a A4 original.
- When a copy is made, the edges will not be copied (image loss). For the image loss, see the "SPECIFICATIONS" (p.89).
- 1 Open the document cover/RSPF, and place the original face down on the document glass.

[How to place the original]

Align the original with the original scale and the centring (**>**) mark.



2 Gently close the document cover/RSPF.




4 Select the number of copies and other copy settings, and then press the [START] key (().



- To stop copying in the middle of a run, press the [CLEAR] key (C).
- For the copy settings, see pages 23 through 35.


Copying books or originals with folds or creases

Press down on the document cover/RSPF while copying as shown. If the document cover/RSPF is not completely closed, shadows may appear on the copy or it may be fuzzy. Straight originals with folds or creases well before placing.

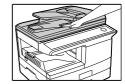

Removing the document cover

To copy large originals like newspapers, remove the document cover. To remove the cover, lift straight up as shown. To replace the cover, do the reverse. The RSPF cannot be removed.

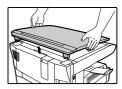

Using the RSPF



- Originals that are A5 to A4 and 56 g/m² to 90 g/m² can be used. A maximum of 30 pages can be placed at once.
- Straighten curled originals before placing them in the document feeder tray. Curled originals may cause misfeeds.
- Place originals horizontally.
- Before placing originals in the document feeder tray, be sure to remove any staples or paper clips from them.
- When a copy is made, the edges will not be copied (image loss).
 For the image loss, see the "SPECIFICATIONS" (p.89).
- When using the margin shift function, check the position of the margins carefully. (p.34)
- 1 Make sure that an original has not been left on the document glass.
- Adjust the original guides to the size of the originals.



3 Set the original(s) face up in the document feeder tray.

The RSPF indicator on the operation panel will light up. If this indicator does not light up, the originals are not properly set or the RSPF is not properly closed.



4 Select the number of copies and other copy settings, and then press the [START] key (().



- The default output mode for copying from the RSPF is sort mode (P.29), and a checkmark "\" will automatically appear in the display (P.11). If "SORT AUTO SELECT" is disabled in the user programs, the default output mode will be non-sort mode. (P.57)
- To stop copying in the middle of a run, press the [CLEAR] key (C).
- · For the copy settings, see pages 23 through 35.


Originals that cannot be used in the RSPF

The following originals cannot be used. These may cause misfeeds or smudging and unclear images.


- Transparencies, tracing paper, other transparent or translucent paper, and photographs.
- · Carbon paper, thermal paper.
- · Originals that are creased, folded, or torn.
- · Glued originals, cut-out originals.
- · Originals with binder holes.
- Originals printed using an ink ribbon (thermal transfer printing), originals on thermal transfer paper.

Original output tray extension

When placing an original of A4 paper size maximum, pull out the original output tray extension of the RSPF.

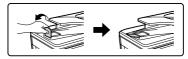


Capacity of paper output tray

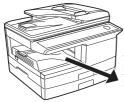

The paper output tray can hold a maximum of 200 pages. If more than 200 pages are allowed to accumulate, a paper jam may occur.

Paper output tray extension

When copying onto A4 paper size maximum, pull out the paper output tray extension.

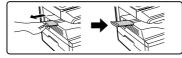

Paper holder arm


The paper output tray has a paper holder arm. The paper holder arm presses gently on the output paper to stack it (p.9).



After removing paper, if you need to return the paper to the paper output tray, lift up the paper holder arm and place the paper under the arm.

Setting the number of copies

Press the numeric keys to set the number of copies.

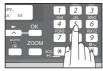

- The set number of copies appears in the display. A maximum of 99 copies can be set.
- If you wish to make only a single copy, copying is possible with the display showing "0".



If you enter the wrong number, press the [CLEAR] key (C) and enter the correct number.

SELECTING THE TRAY

Press the [TRAY SELECT] key (=).

Each time, you press the [TRAY SELECT] key (<a>), the location indicated by the tray location indicator changes in the following order: paper tray—lower paper tray (when the 250-sheet paper feed unit is installed.)—bypass tray.





The tray location indicator will blink when there is no paper in the paper tray, or when the tray is not closed or is improperly closed.

MAKING A COPY DARKER OR LIGHTER

Automatic exposure adjustment is initially enabled. This function automatically adjusts the copy image according to the original being copied. If you wish to select the exposure level yourself, follow the steps below. (Select from two original types and five exposure levels for each original type.) The exposure level used in automatic exposure adjustment can also be changed with "AE LEVEL ADJUST" in the user programs (p.56).

Original types

- AUTO Automatic exposure adjustment is enabled and the exposure is automatically adjusted according to the original being copied. The exposure is lowered for coloured areas and background shadows.
- TEXT...... The exposure is raised for light areas and lowered for dark backgrounds to make text easier to read.
- PHOTO ... Halftones in the photo are reproduced with greater clarity.
 - 1 Check the original and place the original(s).
 - Press the [EXPOSURE (***)] key to select the original type.

The original image type changes as follows each time the [EXPOSURE (\P)] key is pressed: "AUTO" (\P) \to "TEXT" (\P) \to "PHOTO" (\P).






To return to auto exposure adjustment, press the [EXPOSURE (#)] key until "AUTO" (AUTO) appears.

If needed, adjust the exposure level for TEXT ((·····)) or PHOTO (·····). For a darker image, press the [▶···] key (····). For a lighter image, press the [▶···] key (····).



- 4 Press the [OK] key.
- 5 Select the number of copies and any other copy settings, and then press the [START] key (().

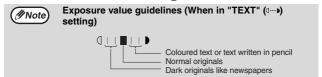

REDUCTION/ENLARGEMENT/ZOOM

Copies can be reduced down to 25% or enlarged up to 400%. (When the RSPF is being used, the zoom copy ratio range is 50% to 200%.) The [ZOOM] key can be pressed to quickly select a ratio from among eight preset ratios. In addition, the [◀] key (☒) can be pressed to select the ratio in increments of 1%.

- 1 Check the original and paper size, and place the original(s).
- 2 Press the [ZOOM] key.



Press the [ZOOM] key and/or [◄] key (□) or [▶] key (□) to select the desired copy ratio and then press the [OK] key.

Selecting a preset ratio

The preset ratios change as follows each time the [ZOOM] key is pressed:

"100%" \rightarrow "86%" \rightarrow "70%" \rightarrow "50%" \rightarrow "25%" \rightarrow "400%" \rightarrow "200%" \rightarrow "141%"



Fine adjustment of the ratio

The ratio can be adjusted from 25% to 400% in increments of 1%.

Use the $[\blacktriangleleft]$ key (\frown) or the $[\blacktriangleright]$ key (\frown) for fine adjustment.





- To return the ratio to 100%, press the [ZOOM] key until 100% appears.

The ratio will stop changing at each of the preset ratios. To continue changing the ratio, release the key and then hold it down again.

4 Select the number of copies and any other copy settings, and then press the [START] key (().

The copy will be delivered to the paper output tray.

Chapter 4 CONVENIENT COPY FUNCTIONS

AUTOMATIC TWO-SIDED COPYING

Two originals can be automatically copied onto both sides of a single sheet of paper. When the RSPF is used, two-sided copies of two-sided originals can easily be made.

	Original → Paper			Usable paper	
	One-sided original → Two sides				
Document glass		+		A5, B5, A4 • The bypass tray cannot be used.	
Depr	One-sided original → Two sides*	Two-sided original → One side*	Two-sided original → Two sides*	A5, B5, A4 • Special paper cannot be used. • The bypass tray can	
RSPF	*	+ 4	+	only be used when making one-sided copies from two- sided originals.	

^{*} When the RSPF is installed.

When performing automatic two-sided copying of one-sided originals, the orientation of the copied image can be selected according to the binding position of the paper.

SHORT EDGE: Select when binding the paper at the short edge.



(Paper orientation: Landscape) (Paper orientation: Portrait)

LONG EDGE: Select when binding the paper at the long edge.



(Paper orientation: Landscape) (Paper orientation: Portrait)

Using the document glass

- Place the original that you wish to copy onto the front side of the paper on the document glass and close the document cover/RSPF.
- Press the [2-SIDED COPY () key until "1 TO 2" appears, and then press the [OK] kev.



Press the $[\blacktriangleleft]$ key (\boxdot) or $[\blacktriangleright]$ key (\unrhd) to select the binding edge and then press the [OK] key.

Select "LONG EDGE" or "SHORT EDGE". The "LONG EDGE" and "SHORT EDGE" are shown in the illustration on the preceding page.



Select the number of copies and any other settings, and then press the [START] key (()).

"[START]: NEXT SCAN [#]: START PRINT" appears and the original is scanned into memory.


To immediately print the scanned image, press the [#] key.

Replace the original with the next original and close the RSPF, and then press the [START] key (().

Repeat step 5 until all originals have been scanned.

Copies will be output each time two originals have been scanned.

When the number of original pages is odd and "[START]: NEXT SCAN [#]: START

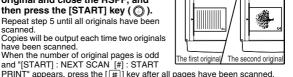



- · If you need to clear the data scanned into memory, press the [CLEAR] key (C). When the [CLEAR] key (C) is pressed, the number of copies setting is also cleared.
- To cancel automatic two-sided copying, press the [CLEAR ALL] key ([CA) or press the [2-SIDED COPY () key, select the "1 TO 1", and then press the [OK] key.
- If the special function sort mode was selected in step 4, copying will not begin until the [#] kev is pressed.

Using the RSPF

- 1 Place the original(s) in the RSPF. (p.21)
 - If you place an odd number of originals for one-sided to two-sided copying, the last page will be one-sided.
 - Press the [2-SIDED COPY () key*1 and select the two-sided copy mode that you wish to use.

The mode changes as follows each time you press the [2-SIDED COPY ((2019))] key*1: "1 TO 1", "1 TO 2", "2 TO 2", "2 TO 1"(2) "DO 1")



- "1 TO 2"*2: Two-sided copies from one-sided originals
- "2 TO 2"*2: Two-sided copies from two-sided originals
- "2 TO 1": One-sided copies from two-sided originals
 When the RSPF is installed.
 - *1 On the AR-M200, press the [2-SIDED SCAN] key. *2 AR-M201 only
- ____ 2 AH-W201 OHIY
- 3 Press the [OK] key.

If you selected "1 TO 2" in step 2, select "LONG EDGE" or "SHORT EDGE" and press the [OK] key. LONG EDGE and SHORT EDGE are shown in the illustration on page 26.

4 If you selected "2 TO 1" or "2 TO 2", press the [◄] key (□) or [▶] key (□) to select the original size and then press the [OK] key.

The following original sizes can be selected: "A4", "B5", "A5", "8.5x14", "8.5x13", "8.5x11", "5.5x8.5".



5 Select the number of copies and any other settings, and then press the [START] key (().

The copy will be delivered to the paper output tray.



To cancel automatic two-sided copying, press the [CLEAR ALL] key ((A) or press the [2-SIDED COPY ((CLEAR ALL) key, select the "1 TO 1", and then press the [OK] key.

SORT COPY

Copies of multiple original pages can be sorted into sets.



The number of pages that can be scanned varies depending on the original type (photo, text, etc.) and the amount of memory allocated to the printer. The amount of memory allocated to the printer can be changed with "MEM, FOR PRINTER" in the user programs, (p.56)



Sort copy

Using the document glass

- Place the first original, (p.20)
- Press the [E-SORT/SP.FUNC (!)] kev until "SORT" appears and then press the [OK] key.



Press the [◀] key (☑) to move "√" to the "ON" position and then press the [OK] kev.



- Select the number of copies and any other settings, and then press the [START] key (().
 - "[START]: NEXT SCAN [#]: START PRINT" appears and the original is scanned into memory.
- Replace the original with the next original, and then press the [START] kev (((a)).

Repeat step 5 until all originals have been scanned into memory.



To clear the data in memory, press the [CLEAR] key (C). When the [CLEAR] key (C) is pressed, the number of copies setting is also cleared.

When all originals have been scanned, press the [#] key. The copies are delivered to the paper output tray.



- To cancel the sort copy job, press the [CLEAR] key (C).
- To cancel sort copy mode, press the [CLEAR ALL] key (CA).

Using the RSPF



Place the originals. (p.21)



- If "SORT AUTO SELECT" is enabled in the user programs, the default output
 mode for copying from the RSPF is sort mode (p.57). In this case go directly
 to stee 4. A checkmark "\" "will automatically appear in the display (p.11).
- If "SORT AUTO SELECT" is disabled, the default output mode will be nonsort mode. Follow the steps below to select sort mode.
- 2 Press the [E-SORT/SP.FUNC (🍱)] key until "SORT" appears and then press the [OK] key.



Press the [◄] key (▽) to move "✓" to the "ON" position and then the [OK] key.



Select the number of copies and any other settings, and then press the [START] key ().

The copies are delivered to the paper output tray.



- To cancel the sort copy job, press the [CLEAR] key (C).
- To cancel sort copy mode, press the [CLEAR ALL] key ([CA]).

If the memory becomes full

- If the memory becomes full while scanning the originals, "MEMORY FULL, PRESS START TO RESUME" will appear in the display, and the machine will stop copying.
- To copy the originals that have been scanned up to that point, press the [START] key (
).
- To clear the data that has been scanned into memory, press the [CLEAR ALL] key (CA) or the [CLEAR] key (C).

Offset function during sort copy

The offset function shifts the position of each set of copies in the paper output tray for easy separation.

The offset function can be changed with "OFFSET FUNCTION" in the user programs. (p.55)



Offset function



When offset function is disabled

COPYING MULTIPLE ORIGINALS ONTO A SINGLE SHEET OF PAPER (2 IN 1 copy)

Multiple originals can be copied onto a single sheet of paper in a selected layout pattern.

This function is convenient for compiling multi-page reference materials into a compact format, or for providing an overview of all pages of a document on a single page.





Pattern 1

Pattern 2



- An appropriate ratio setting will be automatically selected based on the size of the originals, the size of the paper. When using the document glass, reduction is possible to 25%. When using the SPF/ RSPF, reduction is possible to 50%. Certain combinations of original size and paper size.
- 2 IN 1 copying cannot be used in combination with the margin shift copying.
- The 2 IN 1 layout pattern can be changed with "LAYOUT IN 2IN1" in the user programs (p.55).
- . The bypass tray cannot be used for 2 IN 1 copying.

Using the document glass

- 1 Place the first original. (p.20)
- 2 Press the [E-SORT/SP.FUNC (الله الله)] key until "2IN1" appears and then press the [OK] key.



3 Press the [◄] key (☑) to move "✓" to the "ON" position and then press the [OK] key.



4 Press the [-] key (\subseteq) or [-] key (\subseteq) to select the original size and then press the [OK] key.

The following original sizes can be selected: "A4", "B5", "A5", "8.5x14", "8.5x13", "8.5x11", "5.5x8.5".



5 Set the number of copies and any other settings, and then press the [START] key (().

"[START]: NEXT SCAN [#]: START PRINT" appears and the original is scanned into memory.

To immediately print the scanned image, press the [#] key.

6 Replace the original with the next original, and then press the [START] key (③).

Repeat step 6 until all originals have been scanned.
Copies will be output each time two originals have been scanned.
When the number of original pages is odd and "[START]: NEXT SCAN [#]:
START PRINT" appears, press the [#] key after all pages have been scanned.



- To clear the data in memory, press the [CLEAR] key (C).
 When the [CLEAR] key (C) is pressed, the number of copies setting is also cleared.
- To cancel 2 IN 1 copying, press the [CLEAR] key (C).
- To cancel 2 IN 1 copy mode, press the [CLEAR ALL] key (CA).

Using the /RSPF

- 1 Place the originals. (p.21)
- 2 Press the [E-SORT/SP.FUNC (🍱)] key until "2IN1" appears and then press the [OK] key.



3 Press the [◄] key (☑) to move "√" to the "ON" position and then press the [OK] key.



4 Press the [◄] key (▽) or [►] key (□) to select the original size and then press the [OK] key.

The following original sizes can be selected: "A4", "B5", "A5", "8.5x14", "8.5x13", "8.5x11", "5.5x8.5".



Select the number of copies and other settings, and press the [START] key (().

The copy is delivered to the paper output tray.




- To cancel 2 IN 1 copying, press the [CLEAR] key (C).
- To cancel 2 IN 1 copy mode, press the [CLEAR ALL] key (CA).

CREATING MARGINS WHEN COPYING

(Margin shift)

The margin shift function is used to automatically shift the text or image or the copy paper approximately 10 mm.

As shown below, LONG EDGE or SHORT EDGE can be selected.

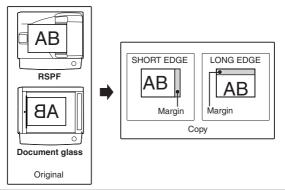



- . This feature cannot be used with the 2 IN 1 feature.
- The margin width can be changed with "MARGIN WIDTH" in the user programs. (p.55)
- Note that a margin is created by shifting the image, and thus if the image is shifted too far, the edge of the image may be cut off.
- 1 Place the original(s).
- 2 Press the [E-SORT/SP.FUNC (الله)] key until "MARGIN SHIFT" appears and then press the [OK] key.



3 Press the [◄] key (☑) to move "✓" to the "ON" position and then press the [OK] key.



4 Press the [◄] key (▽) or [►] key (□) to select the margin position and then press the [OK] key.

Select "LONG EDGE" or "SHORT EDGE". For the margin position, see the previous page.



5 Select the number of copies and other settings, and then press the [START] key (()).

The copy is delivered to the paper output tray.



- To cancel margin shift copying, press the [CLEAR] key (C).
- To cancel margin shift, press the [CLEAR ALL] key ((CA)).

5 INSTALLING THE SOFTWARE

This chapter explains how to install and configure the software that is required for the printer and scanner functions of the machine. The procedure for viewing the Online Manual is also explained.



- The screen images in this manual are mainly for Windows XP. With other versions of Windows, some screen images may be different from those in this manual.
- This manual refers to the CD-ROM that accompanied the machine simply as "CD-ROM".

SOFTWARE

The CD-ROM that accompanies the machine contains the following software:

MFP driver

Printer driver

The printer driver enables you to use the printer function of the machine. The printer driver includes the Print Status Window. This is a utility that monitors the machine and informs you of the printing status, the name of the document currently being printed, and error messages.

Scanner driver (USB only)

The scanner driver allows you to use the scanning function of the machine with TWAIN-compliant and WIA-compliant applications.

Sharpdesk

Sharpdesk is an integrated software environment that makes it easy to manage documents and image files, and launch applications.

Button Manager

Button Manager allows you to use the scanner menus on the machine to scan a document.

BEFORE INSTALLATION

Hardware and software requirements

Check the following hardware and software requirements in order to install the software.

Computer type	IBM PC/AT or compatible computer equipped with a USB2.0*1
Operating system*2 *3	Windows 98, Windows Me, Windows 2000 Professional*4, Windows XP*4, Windows Vista*4
Display	1024 x 768 dots resolution and 16-bit color or higher is recommended.
Hard disk free space	150MB or more
Other hardware requirements	An environment on which any of the operating systems listed above can fully operate

^{*1} Compatible with Windows 98, Windows Me, Windows 2000 Professional, Windows XP Professional or Windows XP Home Edition preinstalled model standardly equipped with a USB port.

Installation environment and usable software

The following table shows the drivers and software that can be installed for each version of Windows and interface connection method.

		MFP Driver		Button	
Cable	Operating system	Printer driver	Scanner driver	Manager	Sharpdesk
USB	Windows 98/Me/2000/XP/Vista	Available*		Available	

^{*} The printer driver that is installed will vary depending on the type of connection between the machine and your computer.

^{*2} Printing is not available in MS-DOS mode.

^{*3} The machine does not support printing from a Macintosh environment.

^{*4} Administrator's rights are required to install the software using the installer.

INSTALLING THE SOFTWARE



- The screen images in this manual are mainly for Windows XP. With other versions of Windows, some screen images may be different from those in this manual.
- In the following explanations it is assumed that the mouse is configured for right hand operation.
- · The scanner feature only works when using a USB cable.
- If an error message appears, follow the instructions on the screen to solve the problem. After the problem is solved, the installation procedure will continue. Depending on the problem, you may have to click the "Cancel" button to exit the installer. In this case, reinstall the software from the beginning after solving the problem.

Using the machine with a USB connection

The USB cable must not be connected to the machine. Make sure that the cable is not connected before proceeding.

If the cable is connected, a Plug and Play window will appear. If this happens, click the "Cancel" button to close the window and disconnect the cable.



The cable will be connected in step 13.

- 2 Insert the CD-ROM into your computer's CD-ROM drive.
- Click the "start" button, click "My Computer" (), and then double-click the CD-ROM icon ().
 - On Windows Vista, click the "Start" button, click "Computer" and then double-click the CD-ROM icon ().
 - On Windows 98/Me/2000, double-click "My Computer", and then double-click the CD-ROM icon.
- 4 Double-click the "setup" icon (

 On Windows Vista, if a message screen appears asking you for confirmation, click "Allow".
- The "SOFTWARE LICENSE" window will appear. Make sure that you understand the contents of the software license, and then click the "Yes" button.



You can show the "SOFTWARE LICENSE" in a different language by selecting the desired language from the language menu. To install the software in the selected language, continue the installation with that language selected.

6 Read the "Readme First" in the "Welcome" window and then click the "Next" button.



To install all of the software, click the "Standard" button and go to step 12.

To install particular packages, click the "Custom" button and go to next step.



Click the "MFP Driver" button.

Click the "Display Readme" button to show information on packages that are selected



Select "Connected to this computer" and click the "Next" button.

Follow the on-screen instructions





- If you are using Windows Vista and a security warning window appears, be sure to click "Install this driver software anyway".
- If you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".



You will return to the window of step 8. If you wish to install Button Manager or Sharpdesk, click the "Utility Software" button.

If you do not wish to install the Utility Software, click the "Close" button and go to step 12.



After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer.

Installing the Utility Software



Click the "Button Manager" or the "Sharpdesk" button.

Click the "Display Readme" button to show information on packages that are selected.

Follow the on-screen instructions.



(!) Caution

In Windows 98/Me/2000, if the following screen appears, click the "Skip" button or the "Continue" button as appropriate to continue the Sharpdesk installation.

If "Skip" is selected, the Sharpdesk installation will continue without installing Sharpdesk Imaging.

If "Continue" is selected,
Sharpdesk Imaging will be installed. If Imaging for Windows is installed on your computer,
Sharpdesk Imaging will overwrite Imaging for Windows.



12

When installing is finished, click the "Close" button.

! Caution

- If you are using Windows Vista and a security warning window appears, be sure to click "Install this driver software anyway".
- If you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".

A message will appear instructing you to connect the machine to your computer. Click the "OK" button.



After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer.

Make sure that the power of the machine is turned on, and then connect the USB cable (p.42).

Windows will detect the machine and a Plug and Play screen will appear.



Follow the instructions in the plug and play window to install the driver.

Follow the on-screen instructions.



- If you are using Windows Vista and a security warning window appears, be sure to click "Install this driver software anyway".
- If you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".

This completes the installation of the software.

- If you installed Button Manager, set up Button Manager as explained in "SETTING UP BUTTON MANAGER" (p.45).
- If you installed Sharpdesk, the Sharpdesk setup screen will appear. Follow the instructions in the screen to set up Sharpdesk.

Connecting a USB cable

Follow the procedure below to connect the machine to your computer.

A USB cable for connecting the machine to your computer is not included with the machine. Please purchase the appropriate cable for your computer.



- USB is available with a PC/AT compatible computer that was originally equipped with USB and had Windows 98, Windows Me, Windows 2000 Professional, Windows XP or Windows Vista preinstalled.
- Do not connect the USB cable before installing the printer driver. The USB cable should be connected during installation of the printer driver.



- If the machine will be connected using a USB 2.0 port of your computer, please purchase a USB cable that supports USB 2.0.
- To obtain the fastest USB 2.0 data transfer speed, "USB2.0 MODE SWITCH" in the machine's user programs must be set to "HI-SPEED". For more information, see "USER PROGRAMS" (p.58).
- Use the machine's "HI-SPEED" mode only when using a computer that is running Windows 2000/XP/Vista.
- Even when the Microsoft USB 2.0 driver is used, it may not be possible to obtain full USB 2.0 speed if a PC card supporting USB 2.0 is used. To obtain the latest driver (which may enable a higher speed), contact the manufacturer of your PC card.
- 1 Insert the cable into the USB connector on the machine.



2 Insert the other end of the cable into your computer's USB port.

Using the machine as a shared printer

If the machine will be used as a shared printer on a network, follow these steps to install the printer driver in the client computer.



To configure the appropriate settings in the print server, see the operation manual or help file of your operating system.

- Perform steps 2 through 6 in "INSTALLING THE SOFTWARE" (p.38).
- 2 Click the "Custom" button.



3 Click the "MFP Driver" button.

Click the "Display Readme" button to show information on packages that are selected.



4 Select "Connected via the network" and click the "Next" button.



5 Click the "Add Network Port" button.

In Windows Vista, the "Add Network Port" button does not appear.



6 Select the network printer that is shared and click the "OK" button.

Ask your network administrator for the server name and printer name of the machine on the network.



In the printer port selection window, verify the network printer that is shared and whether the machine is to be used as the default printer, make the selections and click the "Next" button. Follow the on-screen instructions.



- If you are using Windows Vista and a security warning window appears, be sure to click "Install this driver software anyway".
- f you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".
- You will return to the window of step 3. Click the "Close" button.



After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer.

This completes the installation of the software.

SETTING UP BUTTON MANAGER

Button Manager is a software program that works with the scanner driver to enable scanning from the machine.

To scan using the machine, Button Manager must be linked with the scan menu on the machine. Follow the steps below to link Button Manager to scanner events.

Windows XP/Vista

- Click the "start" button, click "Control Panel", click "Printers and Other Hardware", and then click "Scanners and Cameras".

 On Windows Vista, click the "Start" button, select "Control Panel" and click "Hardware and Sound", and then click "Scanners and Cameras".
- 2 Click the "SHARP AR-XXXX" icon and select "Properties" from the "File" menu.

On Windows Vista, select "Properties" from the "Organize" menu.

- 3 In the "Properties" screen, click the "Events" tab.
- 4 Select "SC1:" from the "Select an event" pull-down menu.



5 Select "Start this program" and then select "Sharp Button Manager T" from the pull-down



- 6 Click the "Apply" button.
- Repeat Steps 4 through 6 to link Button Manager to "SC2:" through "SC6:".

Select "SC2:" from the "Select an event" pull-down menu. Select "Start this program", select "Sharp Button Manager T" from the pull-down menu, and then click the "Apply" button. Do the same for each ScanMenu through "SC6:".

When the settings have been completed, click the "OK" button to close the screen

Button Manager is now linked to the scan menu (1 through 6).

The scan settings for each of scan menu 1 through 6 can be changed with the setting window of Button Manager.

For the factory default settings of the scan menu and the procedures for configuring Button Manager settings, see "Button Manager Settings" in the Online Manual.

Windows 98/Me/2000

pop-up menu.

- Click the "Start" button, select "Settings", and then click "Control Panel".
- 2 Double-click the "Scanners and Cameras" icon.



If the "Scanners and Cameras" icon does not appear in Windows Me, click "view all Control Panel options".

- 3 Select "SHARP AR-XXXX" and click the "Properties" button.

 In Windows Me, right click "SHARP AR-XXXX" and click "Properties" in the
- 4 In the "Properties" screen, click the "Events" tab.
- 5 Select "SC1:" from the "Scanner events" pull-down menu.





Select "Sharp Button Manager T" in "Send to this application".





If other applications are shown, deselect the checkboxes for the other applications and leave only the Button Manager checkbox selected.



Click the "Apply" button.



Repeat Steps 5 through 7 to link Button Manager to "SC2:" through "SC6:".

Select "SC2:" from the "Scanner events" pull-down menu. Select "Sharp Button Manager T" in "Send to this application" and click the "Apply" button. Do the same for each ScanMenu through "SC6:".

When the settings have been completed, click the "OK" button to close the screen.

Button Manager is now linked to the scan menu (1 through 6). The scan settings for each of scan menus 1 through 6 can be changed with the setting window of Button Manager.

For the factory default settings of the scan menu and the procedures for configuring Button Manager settings, see "Button Manager Settings" in the Online Manual

6 PRINTER/SCANNER FUNCTIONS

The machine includes a USB connector as standard equipment.

The machine has the following features:

- · High-speed data transfer (when connected to a USB 2.0 connector)
- ROPM* function
- * ROPM is an acronym for "Rip Once Print Many" processing. The ROPM function stores multiple pages of print data in memory before printing. When printing multiple copies, this eliminates the need for the computer to repeatedly transmit the print data.

To use the machine as a printer or scanner, the printer driver or scanner driver must first be installed as explained in the "INSTALLING THE SOFTWARE" (p.36).



- If a problem occurs in printer or scanner mode, see the Online Manual.
- When using USB 2.0 (Hi-Speed mode), be sure to read "System requirements for USB 2.0 (Hi-Speed mode)" (below) to verify that your system and the machine settings are configured appropriately.
- The scanning feature is only available when Windows 98/Me/2000/ XP/Vista and a USB connection are used.

System requirements for USB 2.0 (Hi-Speed mode)

The following system is required to use USB 2.0 (Hi-Speed mode):

- Your computer must be running Windows 2000 Professional / XP / Vista and the Microsoft USB 2.0 driver must be installed.
- The "USB 2.0 MODE SWITCH" setting in the machine's user programs must be set to "Hi-Speed". To change the setting, see "USB 2.0 MODE SWITCH" in the user programs (p.58).
- Even when the Microsoft USB 2.0 driver is installed, some USB 2.0 expansion cards are not capable of attaining the speed stipulated by the Hi-Speed standard. This problem can often be fixed by installing a more recent driver for the card. To obtain the most recent driver for your card, contact the card's manufacturer.

USING THE PRINTER MODE

The procedure for loading paper for printing is the same as for loading copy paper. See "LOADING PAPER" (p.14).



- Print jobs received while the machine is copying will be stored in memory. When the copy job is finished, the print jobs will begin printing.
- Printing is not possible when the front or side cover is opened for machine maintenance, or when a misfeed occurs or the machine runs out of paper or toner.

BASIC PROCEDURE FOR PRINTING

The basic procedure for printing is explained in the following. To use convenient printer functions, see the "Online Manual" or the printer driver help file.



Make sure that paper is loaded in the tray.

The procedure for loading paper is the same as for copying. See "LOADING PAPER" (p.14) and make sure that the paper you wish to use is loaded.



Make sure that the paper size setting on the machine is the same as the paper size set in the printer driver.

- Open the file that you wish to print and select "Print" from the File menu.
- Make sure that the printer driver for the machine is selected, and select print settings in the printer driver.

 For information on the settings in the printer driver, see the "Online Manual"
- or the printer driver help file.

 4 Click the "Print" button or the "OK" button to begin printing.

The print job will be delivered to the paper output tray.

Cancelling a print job

- 1 Select printer mode with the [MODE SELECT] key on the operation panel of the machine, and then press the [CLEAR] key (C) or the [CLEAR ALL] key (A).
- "CANCEL PRINT JOB?" will appear in the display. Make sure that a checkmark appears in front of "YES" and press the [OK] key.



For limitations on copying in print mode, scanner mode limitations, and print mode limitations in copy and scanner mode, see "OPERATION IN COPY, PRINTER, AND SCANNER MODES" (p.52).

USING THE SCANNER MODE

The procedure for placing the original is the same as for copying. See "NORMAL COPYING" (p.20).



Scanner mode cannot be used at the following times:

- A misfeed has occurred (paper misfeed or original misfeed in the RSPF).
- · The user programs are being used.
- · The tray paper size is being set.
- The machine is being used in copy mode.
- The front cover or side cover is open.

SCANNING USING THE KEYS ON THE MACHINE

When scanning is performed by this method, the application that has been set in Button Manager will automatically start and the scanned image will be pasted into the application.



If the machine is in copy mode, press the [MODE SELECT] key to switch to scanner mode and clear the previously set copy settings.

Scanning from the operation panel of the machine

Press the [MODE SELECT] key to select scanner mode.



- 2 Place the original. (p.20)
- 3 Press the [◄] key (☑) or [►] key (☑) to select the desired Button Manager scan menu setting.



- 4 Press the [START] key (((a)) to begin scanning.
- **M**Note

Scanner mode remains selected after scanning is finished. (To change to a different mode, use the [MODE SELECT] key.)

Button Manager scan menu

For information on Button Manager settings, see the Button Manager help file. The names in the Button Manager menu ("xxxx" in "SC1:xxxx", etc.) can be changed. See the online manual.

SCANNING FROM YOUR COMPUTER

The machine supports the TWAIN standard, making it possible to scan from TWAIN-compliant applications. The machine also supports WIA (Windows Image Acquisition), making it possible to scan from the "Scan and Camera Wizard" in Windows XP. See the Online Manual for the procedures for TWAIN and WIA scanning. For information on TWAIN and WIA settings, see the help file for the scanner driver or Windows Help.

OPERATION IN COPY, PRINTER, AND SCANNER MODES

Some operations cannot be performed simultaneously when the machine is being used in printer mode, copy mode, or scanner mode.

Modes		Copying	Printing	Scanning from a computer	Scanning from the machine
Conv	Copy key input	Yes	Yes	Yes	No
Сору	During copying	No	No	No	No
Printer	During printing	Yes*1	No	Yes	Yes
Scanner	During scan preview/ during scanning	No	Yes*2	No	No

^{*1} During two-sided printing, the copy job begins after the print job finishes.

^{*2} Printing is possible while scanning is taking place.

HOW TO USE THE ONLINE MANUAL

The online manual provides detailed instructions for operating the unit as a printer and scanner. It also provides methods for dealing with printing or scanner problems.

- 1 Turn on your computer.
- 2 Insert the supplied CD-ROM into your CD-ROM drive.
- 3 Click the "start" button, click "My Computer" (), and then double-click the CD-ROM () icon.
 - On Windows Vista, click the "Start" button, click "Computer", and then double-click the CD-ROM icon.
 - On Windows 98/Me/2000, double-click "My Computer" and then doubleclick the CD-ROM icon.
- Double-click the "Manual" folder, then "AR_M200_M201", double-click the "Online" folder, then double-click the "English" folder, and then double-click the "AR_M200_M201.pdf" icon.
- 5 Click Start to read the online manual.

To close the online manual, click the (\boxtimes) button located at the top-right of the window.



- The online manual can be printed out using Acrobat Reader. It is useful to print out sections that you refer to frequently.
- Refer to Acrobat Reader "Help" for more details on the operation and functions of Acrobat Reader.

Viewing the online manual

The "CD-ROM" that accompanies the machine contains an online manual in PDF format. To view the manual in PDF format, Acrobat Reader or Adobe Reader of Adobe Systems Incorporated is required. If neither program is installed on your computer, the programs can be downloaded from the following URL:

http://www.adobe.com/

Chapter 7 USER SETTINGS

The user settings allow you to customize machine settings to better meet your needs.

USER PROGRAMS

The user settings consist of the following items.

To change the user program settings as explained in "SELECTING A SETTING FOR A USER PROGRAM" (p.59).

Copy mode

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
1	AUTO CLEAR	1: 10 SEC. 2: 30 SEC. 3: 60 SEC. 4: 90 SEC. 5: 120 SEC. 6: OFF	Auto clear time automatically returns the copy settings to the initial settings (p.12) if no keys are pressed for a preset period of time following the end of a copy job. This program is used to select the period of time. Auto clear time can also be disabled.
2	PREHEAT MODE	1: 30 SEC. 2: 1 MIN. 3: 5 MIN. 4: 30 MIN. 5: 60 MIN. 6: 120 MIN. 7: 240 MIN.	This function automatically switches the machine to a low power consumption state if the set duration of time elapses without the machine being used when the power is on. The power save indicator lights up, however, the keys on the operation panel can be used. Normal operation automatically resumes when a key on the operation panel is pressed, an original is placed, a print job is received.
3	AUTO SHUT-OFF	1: ON 2: OFF	Use this setting to enable or disable auto power shut-off mode.

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
4	AUTO SHUT-OFF TIME	1: 5 MIN. 2: 30 MIN. 3: 60 MIN. 4: 120 MIN. 5: 240 MIN.	This function automatically switches the machine to a state that consumes even less power than preheat mode if the set duration of time elapses without the machine being used when the power save indicator go off. To resume normal operation, press the [START] key (). Normal operation also resumes automatically when a print job is received or scanning is begun from a computer. While in auto power shut-off mode, no keys (except the [START] key ())) can be used.
7	LAYOUT IN 2IN1	1: PATTERN 1 2: PATTERN 2	Use this setting to select the layout pattern when two original pages are copied onto a single sheet of paper (see page 31 for the layout patterns).
8	OFFSET FUNCTION	1: ON 2: OFF	When enabled, this function offsets the position in the paper output tray of sets of copies during copy job, and print jobs when using the printer function.
9	ROTATE ORIG. IMAGE	1: ON 2: OFF	When two-sided copying is performed, this function rotates the image on the back of the original. This is convenient when binding the copies at the top (tablet binding).
10	AE/TEXT RESOLUTION	1: 300dpi 2: 600dpi	This setting is used to change the copy resolution in AUTO and TEXT mode from 600 x 300 dpi to 600 x 600 dpi (high- quality mode). Scanning is slower when high-quality mode is used.
11	2-SIDED COPY MODE	1: HI-SPEED 2: NORMAL	If the memory fills up when two- sided copying is performed, "NORMAL" can be selected to make copying possible. However, "NORMAL" results in a slower copying speed. Normally "HI-SPEED" is selected to enable fast two- sided copying.
12	MARGIN WIDTH	1: 5 mm 2: 10 mm 3: 15 mm 4: 20 mm	Use this setting to set the margin width.

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
13	MEM. FOR PRINTER	1: 30% 2: 40% 3: 50% 4: 60% 5: 70%	Use this to change the proportion of machine memory used for printer mode.
14	AUTO KEY REPEAT	1: ON 2: OFF	Use this setting to select whether or not holding down a key causes repeated input of the key. For keys that normally cause a set value to increase when held down (for example, holding down the [◄] key (☒) or [▶] key (☒)), this program can be used to have the set value not change when the key is held down.
15	KEY PRESS TIME	1: NORMAL 2: 0.5 SEC. 3: 1.0 SEC. 4: 1.5 SEC. 5: 2.0 SEC.	Use this setting to select how long a key must be pressed for the input to be accepted. By selecting a longer time, you can prevent settings from being changed by the accidental pressing of a key.
16	KEY TOUCH SOUND 2: HIGH 3: OFF		This sets the volume of beep signals. (p.60)
17	SOUND AT DEFAULT	1: ON 2: OFF	Use this to sound a beep when a base setting is selected. (p.60)
18	TONER SAVE MODE	1: ON 2: OFF	• This mode reduces toner usage by about 10% when copying. Toner save mode is effective when the exposure mode is AUTO (AUTO) or TEXT (G···•).
19	AE LEVEL ADJUST	1: SPF/RSPF (Adjustmentto 5 levels is possible.) 2: DOCUMENT GLASS (Adjustmentto 5 levels is possible.)	This is used to adjust the exposure level. The automatic exposure level can be adjusted separately for the document glass and the RSPF. For the procedure for adjusting the exposure and guidelines for numeric values, see page 24. The factory default setting for the exposure level is "centre".

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
20	LANGUAGE	1: AMERICAN ENGLISH 2: ENGLISH 3: FRENCH 4: SPANISH 5: GERMAN 6: ITALIAN 7: DUTCH 8: SWEDISH 9: NORWEGIAN 10: FINNISH 11: DANISH 12: HUNGARIAN 13: CZECH 14: POLISH 15: RUSSIAN 16: SLOVAK 17: PORTUGUESE	This is used to set the language used in the display.
21	RESET FACTORY	1: YES 2: NO	This is used to return all settings to the factory default settings.
22	SORT AUTO SELECT	1: ON 2: OFF	Use this setting to enable or disable sort auto select mode.
24	CHECK OC OPEN CHECK RSPF OPEN (When an RSPF is installed)	1: ON 2: OFF	You can set the operation that takes place if the [START] key () is pressed when the original cover/RSPF is not completely closed. (For details on the "Check RSPF open function", see page 13.)
25	VALID COPY WIDTH	1: LARGE (LETTER/A4 WIDTH) 2: SMALL (INVOICE/ B5R WIDTH)	Set the allowed paper sizes for copying from the bypass tray. When "SMALL" is selected, a copy of a letter size original will only be printed up to invoice size.
28	LSU SETTING	1: ON 2: OFF	Select whether copying is only allowed when the polygon motor is rotating, or also when the polygon motor is stopped.
29	PAPER TYPE	1: PLAIN PAPER 2: HEAVY PAPER	Set the temperature of the fusing unit when the bypass tray is used.
30	DISPLAY CONTRAST	1: LIGHTER 2: LIGHT 3: NORMAL 4: DARK 5: DARKER	Set the contrast of the display.

Print mode

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
1	FORCED OUTPUT	1: ON 2: OFF	When this function is enabled, printing in printer mode will automatically continue using a different size of paper if the specified size of paper runs out in all trays. This feature does not function in copy mode.
2	USB 2.0 MODE SWITCH* ¹	1: FULL-SPEED 2: HI-SPEED	This sets the USB 2.0 data transfer speed. To obtain the fastest speed when using the USB 2.0 connector, first verify that your computer meets the system requirements (operating system and driver), and then use this program to change the USB 2.0 mode to "Hi-Speed". Note that the setting should not be changed while running a TWAIN driver. (For the system requirements, see "System requirements for USB 2.0 (Hi-Speed mode)" (p.49).)
3	AUTO TRAY SWITCH*2	1: ON 2: OFF	If the paper runs out during printing and there is paper of the same size in another tray, this function automatically switches to that tray (excluding the bypass tray). The function can be disabled.

^{*1} The scanning speed increases when the USB 2.0 mode is set to "HI-SPEED", however, the printing speed does not increase considerably.

^{*2} When the 250-sheet paper feed unit is installed.

SELECTING A SETTING FOR A USER PROGRAM



Press the [MENU] key and then press the [OK] key.

In printer mode, the user programs are accessed by simply pressing the [MENU] key.



- Press the [] key () or [] key () to select the item that you wish to configure in the USER PROGRAM items, and then press the [OK] key.
 - See "USER PROGRAM" (p.54 to p.58) for the program name and program code.
 - You can also select a program by directly entering the program number with the numeric keys.



Press the [◄] key (□) or [►] key (□) to change the setting of the selected item.

See "USER PROGRAM" (p.54 to p.58) for the program code.





- If you mistakenly select the wrong item, press the [CLEAR] key
 (C) and repeat the procedure from step 2.
- To cancel a setting for a user program, press the [MENU] key.



Press the [OK] key.

Your selection appears briefly and then the previous screen appears.



When "AE LEVEL ADJUST" is selected in the user programs and the [OK] key is pressed, the automatic exposure adjustment screen appears. Adjust the exposure and press the [OK] key.

Audible signals (key entry beep, invalid key beep, base setting beep)
The machine sounds three different types of beep signals: a key entry beep that
sounds when a valid key is pressed, an invalid key beep that sounds when an
invalid key is pressed, and a base setting beep that sounds when a setting is the
same as the base setting (base settings are explained below). The base setting
beep is initially disabled. If you wish to enable the base setting beep, see
"SOUND AT DEFAULT" on page 56. If you wish to change the volume of the beep
signals or disable them, see "KEY TOUCH SOUND" on page 56.
The beep patterns of each type of beep signal are as follows:
Key entry beepOne beep Base setting beepThree beeps Invalid key beepTwo beeps
Base settings
The base settings are preset standard selections for each copy setting. The base

Paper feed locationTray 1
(Upper paper tray)
AUTO (AUTO)/TEXT (Q....)/

AUTO (auto)/TEXT (0...)/
PHOTO (/♣) AUTO (auto)

5 11	
Program Name	Page
Password Change	61
2. Account Control Set	61
Auditing Mode	62
2. Total Per Account	65
3. Reset Account	65
4. Acc. # Control	63
1. Enter Account #	63
2. Delete Account #	63
3. Change Account #	64

PREPARING FOR USING ACCOUNT CONTROL SETTINGS Entering account control mode

- Press the [MENU] key.
 Press the [◀] key (☒) or [▶] key (☒) until "4: ACCOUNT
 CONTROL" appears, and then press the [OK] key.
- 2 Enter the password (default is : "00000").

Changing password

Press the [◄] key (□) or [►] key (□) to select "1: PASSWORD CHANGE" and then press the [OK] key.

Use the numeric keys to enter a new five-digit password.

Tabis rota.

Tabis password allows you to disable access to the Account Control settings by all users, except the responsable one.



8

Enabling auditing mode



Press the [◄] key (□) or [▶] key (□) to select "2: ACC. CONTROL SET" and then press the [OK] key.



Fress the [◄] key (□) or [►] key (□) to select "1: AUDITING MODE" and then press the [OK] key.

Auditing Mode is disabled by default. When Auditing Mode is enabled, a count is kept of the number of pages output by each account (up to 15 accounts can be established).

To use the machine, the 5-digit account number programmed for the user's account must be entered (p.63).



ACCOUNT NUMBER CONTROL

This program is used to enter, delete and change account numbers.

1 After step 1, 2 and 4 on page 61 - 62, press the [◄] key (□) or [►] key (□) until [4: ACC. # CONTROL] appears and then press the [OK] key.



Entering an account number

1 Select "1. ENTER ACCOUNT #" with the [◄] key (□) or [▶] key (□) and then press the [OK] key.

If 15 accounts have already been programmed, a warning message appears. Delete any unneeded accounts and then program the new account.



2 Use the numeric keys to enter a five-digit account number (00000 to 99999).

The key operator code cannot be used a an account number.

- 3 Press the [OK] key.
 - If you enter an account number that has already been programmed in step 2, a warning message will appear and you will return to step 2. Enter a different number.
- 4 If you wish to program another account number, repeat steps 2 and 3.
- 5 To exit, press the [C] key repeatedly.

Deleting an account number

Select "2. DELETE ACCOUNT #" with the [◄] key (□) or [►] key (□) and then press the [OK] key.



2 If you wish to delete all account numbers, select "1. DELETE ALL ACCOUNT" and then press the [OK] key.

When the message "DELETE?" appears, select "YES" with the [→] key (□) or [→] key (□) to delete all accounts and press the [OK] key. If you do not wish to delete all account numbers, select "NO" and press the [OK] key.

- If you wish to delete an each account number, select
 "2. DELETE ONE ACCOUNT" and then press the [OK] key.
- 4 Enter the account number that you wish to delete with the numeric keys and then press the [OK] key.
- 5 Select "YES" with the [→] key (□) or [▶] key (□) and then press the [OK] key.

 If you enter a number that has not been programmed in step 4 and then press the [OK] key. you will return to the number entry screen of step 4.
- 6 If you wish to delete another account number, repeat steps 4 and 5.
- 7 To exit, press the [C] key repeatedly.

Changing an account number

1 Select "3. CHANGE ACCOUNT #" with the [◄] key (□) or [▶] key (□) and then press the [OK] key.



2 Enter the account number to be changed and the new account number.



- Press the [OK] key.
 If you enter an account number that has already been programmed in step 2, a warning message will appear and you will return to step 2. Enter a different number
- 4 If you wish to change another account number, repeat steps 2 and 3.
- 5 To exit, press the [C] key repeatedly.



- When entering an account number, the [OK] key will not be accepted unless 5 digits have been entered.
- If you press the [C] key while entering an account number, the account number display will change to "----".

TOTAL PER ACCOUNT

This program is used to display the page counts of each account.



After step 1, 2 and 4 on page 61 - 62, press the [◄] key (□) or [►] key (□) until "2: TOTAL PER ACCOUNT" appears, and then press the [OK] key.

This program is used to display the page counts of each account.





Pages that are copied for maintenance of the machine are counted to the "OTHER" account.

Resetting account



After pressing the [C] key to clear the displayed counts, press the [⊸] key (□) or [▶] key (□) until "3: RESET ACCOUNT" appears, and then press the [OK] key.



CONTROL SET

3:RESET ACCOUNT

This program is used to reset the page count of an individual account, or all account, to "0".

- * Press the [◄] key (□) or [▶] key (□) to select [2: RESET ONE ACCOUNT] and then press the [OK] key.

COPYING WHEN AUDITING MODE IS ENABLED

When account control is enabled, the account number entry screen appears.

ENTER YOUR ACCOUNT # ACCOUNT #:----

1 Enter your five-digit account number with the numeric keys.

When a valid account number is entered, the number of copies already made by that account appears for several seconds on the initial screen.



(Note

If you enter an incorrect number, press the [C] key and then enter the correct number.

2 When the copy job is finished, press the [ACC.#-C] key (★).

Chapter 9 TROUBLESHOOTING AND MAINTENANCE

Problems related to general use of the machine, the copy function, and software setup are explained here. Be sure to check the problem carefully before calling for service, as many problems can be solved by the user.

If you are unable to solve the problem, turn off the main switch, unplug the power cord from the outlet, and contact your dealer.



For problems related to the printer and scanner functions, see the online manual.

DISPLAY MESSAGES

When the following indicators light up or blink on the operation panel or the following alphanumeric codes appear in the display, solve the problem immediately referring to both the table below and the indicated page.



Be sure to use only genuine SHARP parts and supplies.

	1			
Indication			Cause and remedy	
Lamp in	Lamp indicator Display			
Trou		BYPASS : ADD PAPER	The indicated paper tray is not	15
Tray location indicator	Blinks	TRAY<*> : ADD PAPER	attached, is attached incorrectly, or has run out of paper. (The tray is indicated	
ii raioatoi		CLOSE PAPER TRAY<*>	in <*>.) ' ' ` ` `	
		CLEAR PAPER JAM.	A paper misfeed has occurred. Remove the misfeed as explained in "MISFEED REMOVAL".	76
		SPF/RSPF JAM.	"MISFEED REMOVAL".	
C C		FRONT OR SIDE COVER OPEN. CLOSE COVERS.	The cover is open. Close the cover.	,
		CLOSE THE SPF/ RSPF COVER.		
Farer in die		REPLACE THE TONER CARTRIDGE.	The toner cartridge is empty. Replace the toner cartridge with a new cartridge. (When the indicator blinks, the machine does not operate.)	80
Blinks	ror indicator inks		When [L1-00] appears, the scan head locking switch is locked. Turn off the power, release the scan head locking switch, and turn the power back on.	82
		SYSTEM ERROR [XX - XX] REFER	When [F2-02] appears, check the toner cartridge and make sure that the seal is not still affixed.	
		TŎ UŚĖŔ ĠŪIDĖ	The machine will not function. Turn the power switch off, wait about 10 seconds, and then turn on the switch again. If this does not clear the error, remove the power cord from the outlet, and contact your authorised service representative.	-

TROUBLESHOOTING AND MAINTENANCE

Indication		ation	Cause and remedy	
Lamp in	dicator	Display	Cause and remedy	Page
	Blinks	INSTALL A NEW TONER CARTRIDGE	The toner cartridge is not installed correctly. Reinstall the toner cartridge.	80
Error indicator	Steadily	TONER CARTRIDGE IS NEAR EMPTY.	Replacement of toner cartridge will be needed soon. Prepare a new cartridge.	80
	lit	MAINTENANCE REQUIRED CALL FOR SERVICE	Service by an authorized SHARP service technician is required.	
RESUME.		RESS START TO	Data is being held in memory. Print the data or clear it from memory.	30
NO 2-SIDI TRAY. NO 2IN1 (BYPASS T	COPY FR	OM	Two sided printing or 2 IN 1 copying is selected when the bypass tray is already selected, or the bypass tray is selected when two-sided printing or 2 IN 1 copying is already selected. The bypass tray cannot be used. Press the [TRAY SELECT] key () to select a paper tray.	26 31
NO 2IN1 (COPY WI	TH MARGIN SHIFT.	2 IN 1 copy and margin shift cannot be used in combination. Cancel the function what was selected last.	31 34
COPY RATIO CAN NOT BE CHANGED IN 2IN1.			Copy ratio can not be changed in 2 IN 1 copy.	
THIS MENU IS NOT SELECTABLE WITH DATA.		T SELECTABLE	This appears if you attempt to change a user program setting while a copy or print job is in progress.	54
NO XXXX SIZE TRAY		Y	There is no paper for printing. Press the [MODE SELECT] key to switch to printer mode and follow the instructions in the display. ("XXXX" indicates paper size)	,
			An original remains on the document glass, or the original is too thick to scan. Remove the original.	21
CHECK SPF/RSPF. START TO RESUME.			If the message is no cleared when there is not original on the document glass, the underside of the RSPF is dirty. Clean the underside of the RSPF. (especially areas where black lines appear.)	84
LOAD XXXX PAPER INTO TRAY<*>.		R INTO TRAY<*>.	Printing is not possible if the paper size setting is different from the size of paper loaded in the tray. Load the same size of paper as the paper size setting and then press the [START] key (O). Printing will begin. (*XXXX" indicates paper size. The tray is indicated in <*>.)	15
NO PC CO CABLE.	OINUMMC	CATION; CHECK	The machine is not correctly connected to the computer. Check the cable (when using the scanner function).	42

TROUBLESHOOTING THE MACHINE

The following problems are related to the general operation of the machine and copying.

Problem	Cause and solution	Page
The machine does not operate.	The machine is not plugged into a power outlet. → Plug the machine into a grounded outlet.	-
	Power switch OFF. → Turn the power switch ON.	12
	The power save indicator is blinking. Indicates that the machine is warming up. → Copies cannot be made until the machine has finished warming up.	-
	The front cover or the side cover is not completely closed. → Close the front cover or the side cover.	-
	The machine is in auto power shut-off mode. → In auto power shut-off mode, all lights are off except the power save indicator. Press the [START] key (③) to resume normal operation.	13
	The scan head locking switch is locked. → Unlock the scan head locking switch.	82
Copies are too dark or too light.	Select the correct original type for the original. → Select AUTO (△UTO) with the [EXPOSURE (※)] key or press the [◄] key (◯) or [▶] key (◯) to manually select an appropriate	24
	exposure. → If the copy is too light or too dark even though AUTO (੫਼ਾਰ) was selected with the [EXPOSURE (﴿ﷺ) key, adjust the automatic exposure level.	56
Blank copies.	The original is not placed face up in the RSPF or face down on the document glass. → Place the original face up in the RSPF or face down on the document glass.	20, 21
	The scan head locking switch is locked. → Unlock the scan head locking switch.	82

TROUBLESHOOTING AND MAINTENANCE

Problem	Cause and solution	Page
Part of the image is cut off or there is too much blank space.	The original was not placed in the correct position. → Place the original correctly.	20, 21
	An appropriate ratio was not used for the size of the original and the size of the paper. → Press the [ZOOM] key to change the ratio to a setting that is suitable for the original and the copy paper.	25
	The size of paper loaded in the tray was changed without changing the tray's paper size setting. → Be sure to change the tray's paper size setting whenever you change the size of paper loaded in the tray.	19
Wrinkles appear in the paper or the image disappears in places.	The paper is outside of the specified size and weight range. → Use copy paper within the specified range.	14
	Paper curled or damp. → Do not use curled or crimped paper. Replace with dry copy paper. During periods when the machine is not used for a long time, remove the paper from the tray and store it in a dark place in a bag to prevent moisture absorption.	-
Copies are smudged or dirty.	The document glass or the underside of the RSPF is dirty. → Clean regularly.	84
	Original smudged or blotchy. → Use a clean original.	-
Images rub off the copy easily.	The fusing temperature is not appropriate. → In the user programs, set "PAPER TYPE" (program 29) to "2 (HEAVY PAPER)".	57
Printing is not uniform between the edges of the paper and the center.	The fusing temperature is not appropriate. → In the user programs, set "PAPER TYPE" (program 29) to "1 (PLAIN PAPER)".	57

Page

Cause and solution

Problem

TROUBLESHOOTING AND MAINTENANCE

Problem	Cause and solution	Page
	Copying or printing is performed. → Set the paper size after copying or printing is complete.	-
Paper size for a paper tray cannot be set.	The machine has stopped temporarily due to running out of paper or a misfeed. → Load paper or remove the misfeed, and then set the paper size.	15, 19, 76
Output does not stack neatly in the paper output tray.	Both ends of the paper are curled upward. → Turning the paper over in the paper tray may help.	15
A copy job stops before it is finished.	"MEMORY FULL, PRESS START TO RESUME." appears in the display. → The memory became full during sort copy. Copy only the originals that have been scanned to that point, or cancel the job and clear the data from memory.	30
	The tray is out of paper. → Load paper.	15
The power save indicator is lit.	Other indicators are lit. → If other indicators are lit, the machine is in preheat mode. Press any key on the operation panel to resume normal operation.	13
	Only the power save indicator is lit. → If only the power save indicator is lit, the machine is in auto power shut-off mode. Press the [START] key () to resume normal operation.	13
Error indicator (<u>A</u>) is lit or blinking.	See "DISPLAY MESSAGES" to check the meaning of the error indicator and error message in the display, and take appropriate action.	67
Lighting fixture flickers.	The same power outlet is used for the lighting fixture and the machine. → Connect the machine to a power outlet which is not used for other electric appliances.	-

If the software does not install correctly, check the following items on your computer. To remove the software, see "Removing the software" (p.75).

MFP driver cannot be installed (Windows 2000/XP)

If the MFP driver cannot be installed in Windows 2000/XP, follow these steps to check your computer's settings.

- Click the "start" button and then click "Control Panel".
 - On Windows 2000, click the "Start" button, select "Settings", and then click "Control Panel".
- Click "Performance and Maintenance", and then click "System".
 - On Windows 2000, double-click the "System" icon.
- 3 Click the "Hardware" tab and then click the "Driver Signing" button.
- 4 Check "What action do you want Windows to take?" ("File signature verification" in Windows 2000).

If "Block" has been selected, it will not be possible to install the MFP driver. Select "Warn" and then install the MFP driver as explained in "INSTALLING THE SOFTWARE".



Plug and play screen does not appear

If the Plug and Play screen does not appear after you connect the machine to your computer with a USB cable and turn on the machine, follow the steps below to verify that the USB port is available.

1 Click the "start" button, click "Control Panel", and then click "Performance and Maintenance".

- On Windows Vista, click the "Start" button, select "Control Panel", and then click "System and Maintenance".
- On Windows 98/Me/2000, click the "Start" button, select "Settings", and then click "Control Panel".

2 Click "System", click the "Hardware" tab, and click the "Device Manager" button.

"Universal Serial Bus controllers" will appear in the list of devices.



- On Windows 98/Me, double-click the "System" icon and click the "Device Manager" tab.
- On Windows 2000, double-click the "System" icon, click the "Hardware" tab, and click the "Device Manager" button.
- On Windows Vista, click the "Device Manager", and if a message screen appears asking you for confirmation, click "Continue".
- If the "System" icon does not appear in Windows Me, click "view all Control Panel options".

3 Click the icon beside "Universal Serial Bus controllers". 3 Click the icon beside "Universal Serial Bus controllers". icon beside "Universal Bus controllers". icon beside "Un



Two items should appear: your controller chipset type and Root Hub. If these items appear, you can use the USB port. If the "Universal Serial Bus controllers" shows a yellow exclamation point or does not appear, you must check your computer manual for USB troubleshooting or contact your computer manufacturer.

4 Once you have verified that the USB port is enabled, install the software as explained in "INSTALLING THE SOFTWARE".

The MFP driver cannot be correctly installed by Plug and Play (Windows 2000/XP/Vista)


In Windows 2000/XP/Vista, if the MFP driver cannot be correctly installed by Plug and Play (for example, Plug and Play takes place without copying the required files for the MFP driver installation), follow these steps to remove unneeded devices and then install the MFP driver as explained in "INSTALLING THE SOFTWARE" (p.36).

- 1 Click the "start" button, click "Control Panel", and then click "Performance and Maintenance".
 - On Windows Vista, click the "Start" button, select "Control Panel", and then click "System and Maintenance".
 - On Windows 2000, click the "Start" button, select "Settings", and then click "Control Panel".
- 2 Click "System", click the "Hardware" tab, and click the "Device Manager" button.



- On Windows 2000, double-click the "System" icon, click the "Hardware" tab, and click the "Device Manager" button.
- On Windows Vista, click the "Device Manager", and if a message screen appears asking you for confirmation, click "Continue".
- 3 Click the + icon beside "Other devices".

If "AR-XXXX" and "SHARP AR-XXXX" appear, select and delete both of these items.

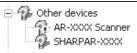



If "Other devices" does not appear, close the "Device Manager" window.

4 Install the software as explained in "INSTALLING THE SOFTWARE".

Removing the software

If you need to remove the software, follow these steps.

1 Click the "start" button and then click "Control Panel".

On Windows 98/Me/2000, click the "Start" button, select "Settings", and then click "Control Panel".

- 2 Click "Add or Remove Programs".
 - On Windows Vista, click the "Uninstall a program".
 - On Windows 98/Me/2000, double-click the "Add/Remove Programs" icon.
- 3 Select "SHARP AR-208/M200 Series MFP Driver" and Button Manager from the list, and remove the software.


For more information, refer to your operating manual or to the help files for your operating system.

MISFEED REMOVAL

When a misfeed occurs, the error indicator blinks, "CLEAR PAPER JAM" appears in the display, and the machine stops operating. If a misfeed occurs when using the RSPF, "RETURN X ORIGINAL(S) START TO RESUME" will appear in the display. ("X" indicates the number of pages to be returned.). This indicates the number of the originals that must be returned to the document feeder tray after a misfeed. Return the required number of originals. This number will be cleared when copying is resumed or the (CLEAR) key ((C)) is pressed. If an original misfeed occurs in the RSPF, the machine will stop and the error indicator will blink. To remove a misfeed from the RSPF, see "D: Misfeed in the RSPF" (p.79).




Open the bypass tray, and then open the side cover.

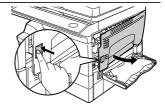

Check the misfeed location. Remove the misfed paper following the instructions for each location in the illustration below. If the error indicator blinks, proceed to "A: Misfeed in the paper feed area" (p.77).

If the misfed paper is seen from this side, proceed to "C: Misfeed in the transport area". (p.78)

If paper is misfed here, proceed to "B: Misfeed in the fusing area". (p.77)

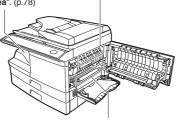

If paper is misfed here, proceed to "A: Misfeed in the paper feed area". (p.77)



Gently remove the misfed paper from the paper feed area as shown in the illustration. If the error indicator blinks and the misfed paper is not visible in the paper feed area, pull out the paper tray and remove the misfed paper. If the paper cannot be removed, proceed to "B: Misfeed in the fusing area".



The fusing unit is hot. Do not touch the fusing unit when removing misfed paper. Doing so may cause a burn or other injury.



- Do not touch the surface of the drum (green portion) of the photoconductive drum when removing the misfed paper. Doing so may damage the drum and cause smudges on copies.
- If the paper has been fed through the bypass tray, do not remove the misfed paper through the bypass tray. Toner on the paper may stain the paper transport area, resulting in smudges on copies.



2 Close the side cover by pressing the round projections near the side cover open button. The error indicator will go out and the ready indicator will light up.

B: Misfeed in the fusing area



Lower the fusing unit release lever.



9



Gently remove the misfed paper from under the fusing unit as shown in the illustration. If the paper cannot be removed, proceed to "C: Misfeed in the transport area".



▲Warning

The fusing unit is hot. Do not touch the fusing unit when removing misfed paper. Doing so may cause a burn or other injury.

! Caution

- Do not touch the surface of the drum (green portion) of the drum cartridge when removing the misfed paper. Doing so may cause smudges on copies.
- Do not remove the misfed paper from above the fusing unit. Unfixed toner on the paper may stain the paper transport area, resulting in smudges on copies.
- Raise the fusing unit release lever and then close the side cover by pressing the round projections near the side cover open button. The error indicator will go out and the ready indicator will light up.

C: Misfeed in the transport area


1 Lower the fusing unit release lever.

See "B: Misfeed in the fusing area" (p.77).

2 Open the front cover.

To open the front cover, see "TONER CARTRIDGE REPLACEMENT" (p.80).

Rotate the roller rotating knob in the direction of the arrow and gently remove the misfed paper from the exit area.

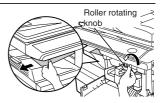



Raise the fusing unit release lever, close the front cover and then close the side cover by pressing the round projections near the side cover open button. The error indicator will go out and the ready indicator will light up.




When closing the covers, be sure to close the front cover securely and then close the side cover. If the covers are closed in the wrong order, the covers may be damaged.


D: Misfeed in the RSPF

If the misfed original is at the top of the document feeder tray or in the exit area, follow procedure (A) to remove the misfeed. If the misfed original is inside the document feeder and is not visible, follow procedure (B).

(A) If the misfed original is at the top of the document feeder tray or in the exit area, open the document feeder cover and pull out the original. If the original resists your pulling, press down on the RSPF jam release lever while pulling out the original. When finished, close the document feeder cover.

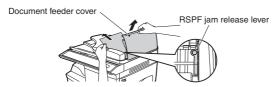

(B) Open the document feeder cover. Next, open the RSPF and rotate the roller in the direction of the arrow. If the misfed original is in the state (X), pull the original out as it feeds out into the exit area. If the misfed original is in the state (Y), pull the original down and out. When finished, lower the RSPF and close the document feeder cover.

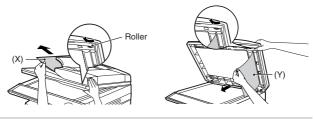




Open and close the RSPF to clear the error indicator. "RETURN X ORIGINAL(S) START TO RESUME" will appear in the display. Return the indicated number of pages to the document feeder tray. Press the [START] key (() to resume copying.

TONER CARTRIDGE REPLACEMENT


When toner is low, the error indicator will light up and "TONER CARTRIDGE IS NEAR EMPTY." will appear in the display to alert you to purchase a new toner cartridge. on purchasing a new toner cartridge. If copying is continued while the indicator is lit, copies will gradually become lighter until the toner runs out. When the toner runs out, the machine will stop operating, the error indicator will blink, and "REPLACE THE TONER CARTRIDGE" will appear in the display. Follow the procedure below to replace the toner cartridge.



- After the machine stops, it may be possible to make a few more copies by taking the toner cartridge out of the machine, shaking it horizontally, then reinstalling it. If copying is not possible after this operation, replace the toner cartridge.
- During a long copy run of a dark original, "TONER REPLENISHMENT IN PROGRESS" appears in the display, and the machine may stop even though toner is left. The machine will feed toner up to 2 minutes and then the ready indicator will light up. Press the [START] key () to resume copying.
- Open the bypass tray, and then open the side cover while pressing the side cover open button.

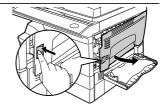


2 Push gently on both sides of the front cover to open the cover.

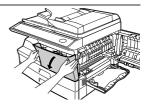


3 Gently pull the toner cartridge out while pressing the lock release lever.

Toner cartridge lock release lever

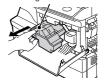



- After removing the toner cartridge, do not shake it or tap on it. Doing so may cause toner to leak from the cartridge. Put the old cartridge immediately in the bag contained in the box of the new cartridge.
- Dispose of the old toner cartridge in accordance with local regulations.
- Remove the toner cartridge from the bag. Grasp the cartridge on both sides and shake it horizontally four or five times. After shaking the cartridge, remove the toner seal.

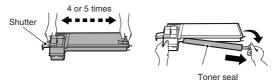




Grasp the toner cartridge as shown in the illustration. Do not hold the cartridge by the shutter. Be sure to only shake the cartridge before the toner seal is removed.


Gently insert the toner cartridge along the guides until it locks in place while pushing the lock release lever.
Remove the tape from the shutter. Pull the shutter out of the toner cartridge as shown in the illustration. Discard the shutter.



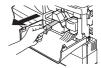



Close the front cover and then the side cover by pressing the round projections near the side cover open button. The error indicator will go out and the ready indicator will light up.

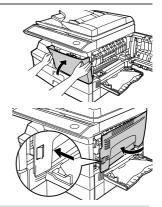

(!) Caution


When closing the covers, be sure to close the front cover securely and then close the side cover. If the covers are closed in the wrong order, the covers may be damaged.



Even after a new toner cartridge is installed, the start (() indicator may not light up, indicating copying cannot be restarted (toner is not sufficiently fed). In this case, open and close the side cover. The copier will feed toner again approximately 2 minutes and then copying can be restarted.

SCAN HEAD LOCKING SWITCH

The scan head locking switch is under the original table. If the switch is locked ($\frac{1}{120}$), the unit will not operate. Unlock the switch ($\frac{1}{120}$) as shown below.

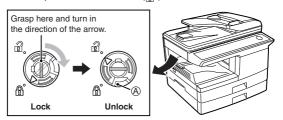

To lock the scan head locking switch, hold up the catch in illustration (A) and turn the center knob counter-clockwise 90 degrees until you hear a click.

CHECKING THE TOTAL COUNT

You can check the total number of pages output by the machine (all pages printed by the copy function and printer function), as well as the output counts of each function (number of copies, number of scanned pages, number of faxes, etc.). When a count reaches 999,999 it returns to 0.



Press the [MENU] key.

Press the [⊸] key (□) or [▶] key (□) until "TOTAL COUNT" appears, and then press the [OK] key.



2

Press the [◀] key (☑) or [▶] key (☑) to display the count of each function.



The count of each function changes as follows each the $[\blacktriangleleft]$ key (\frown) or $[\blacktriangleright]$ key (\frown) is pressed:

• "TOTAL OUTPUT": Total number of ages output by the machine

"COPIES": Total number of copies

 "SPF/RSPF": Total number of pages scanned using the RSPF

Total number of pages printed by two-sided

"PRINTS":
 Total number of pages printed the printer

function

"FAX":*
 Total number of sent and received faxes

"FAX SEND":* Total number of sent faxes

"SCAN SEND": Total number of scans

• "TONER REMAINING": The remaining number of pages that can be printed with the toner cartridge is displayed.

MAINTENANCE REQUIRED

"2-SIDED PRINT".

When the error indicator will blink and "MAINTENANCE REQUIRED CALL FOR SERVICE" will appear in the display, service by an authorized SHARP service technician is required. Contact your authorised service representative as soon as possible.

^{*} When the optional Facsimile Expansion Kit is installed.

CLEANING THE MACHINE

Proper care is essential in order to get clean, sharp copies. Be sure to take a few minutes to clean the machine on a regular basis.



Do not spray flammable cleaner gas. Gas from the spray may come in contact with the internal electrical components or high-temperature parts of the fusing unit, creating a risk of fire or electrical shock.

! Caution


- Before cleaning, be sure to turn the power switch off and remove the power cord from the outlet.
- Do not use thinner, benzene or other volatile cleaning agents.
 Doing so may cause deformation, discoloration, deterioration or malfunction.

Cabinet

Wipe the cabinet with a soft, clean cloth.

Document glass and the back side of the RSPF

Stains on the glass, RSPF scanning window, cover or RSPF roller will also be copied. Wipe the glass, RSPF scanning window, cover and RSPF roller with a soft, clean cloth. If necessary, dampen the cloth with a glass cleaner.

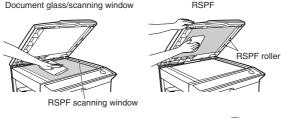




If this area is dirty, copying from the RSPF will not be possible.

- Turn the power switch off. (p.13)
- 2 Ensure that the bypass tray is open and then open the side cover while pressing the side cover open button.
- Take the charger cleaner out by holding the tab. Set the charger cleaner onto the right end of the transfer charger, gently slide the cleaner to the left end, and then remove it. Repeat this operation two or three times.




Slide the charger cleaner from the right end to the left end along the groove of the transfer charger. If the cleaner is stopped on the way, smudges on copies may occur.

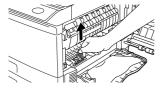



4 Return the charger cleaner to its original position.
Close the side cover by pressing the round projections near the side cover open button.

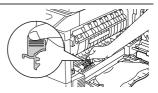

5 Turn the power switch on. (p.12)

10 Chapter 10 OPTIONAL EQUIPMENT

SYSTEM CONFIGURATION

A number of options are available for the unit which allows you to configure a system to meet your particular needs. The options include the following.




- · Be sure to use only genuine SHARP parts and supplies.
- . Some options may not be available in certain countries and regions.



For best copying results, be sure to use only SHARP products.

Only genuine SHARP consumables carry the Genuine Supplies label.

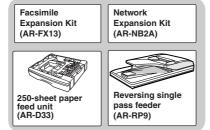

FACSIMILE EXPANSION KIT (AR-FX13)

This allows the machine to be used as a facsimile machine.

NETWORK EXPANSION KIT (AR-NB2A)

This allows the machine to be used as a network printer/network scanner.


REVERSING SINGLE PASS FEEDER (AR-RP9)

The he reversing single pass feeder (RSPF) hold up 50 originals for automatic feeding. For the names of the parts of the RSPF, see "PART NAMES" (p.9).

250-SHEET PAPER FEED UNIT (AR-D33)

The paper feed unit provide the convenience of increased paper capacity for the unit and a greater choice of paper size readily available for copying.

The procedures for loading paper in the paper tray of paper feed unit, changing the paper size, and selecting the paper tray are same as for the paper tray in the unit. See "LOADING THE PAPER TRAY" (p.15) and "SELECTING THE TRAY" (p.23).

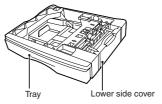

Using the AR-D33 with the printer function

To use the AR-D33 with the printer function, follow these steps to adjust the settings in the printer driver.



The printer driver cannot be set for use with the AR-D33 when opened from the application.

- 1 Click the "start" button.
- 2 Click "Control Panel", select "Printer and Other Hardware", and then click "Printer and Faxes".
 - On Windows Vista, click "Control Panel", and then click "Printer".
 - On Windows 98/Me/2000, select "Setting" and click "Printers".
- 3 Click the "SHARP AR-XXXX" printer driver icon and from the "File" menu select "Properties".
 - On Windows Vista, from the "Organize" menu select "Properties".
 - On Windows 98/Me, click the "SHARP AR-XXXX" printer driver icon, select "Properties" from the "File" menu, and then click the "Setup" tab.
- 4 Click the "Configuration" tab.
- 5 Select "Two trays" for "Input tray option", and click "OK".

The printer driver closes. This completes the settings needed to use the AR-D33.



Interface cable

Please purchase the appropriate cable for your computer.

USB interface cable

USB cable that supports USB 2.0.

SPECIFICATIONS

Model	AR-M200	AR-M201
Туре	Digital Multifunctional System, Desktop	
Photoconductive type	OPC drum	
Document glass type	Fixed	
Copy/printing system	Dry, electrostatic transfer	
Originals	Sheets, bound documents	
Originals size	Max. A4	
Copy size		ng other edges in total) ng edge of the second copy of
Copying speed*1	20 copies/min. (A4, one-sided at 100% copy ratio)	
Continuous copy	Max. 99 copies; subtractive counter	
First-copy time*2	8.0 seconds (When user program 24 is set to OFF) 10.7 seconds (When user program 24 is set to ON) (paper: A4, exposure mode: AUTO, copy ratio: 100%)	
Warm-up time*3	Approx. 0 sec.	
Copy ratio	Document glass: Variable: 25% to 400% in 1% increments (total 376 steps) Fixed preset: 25%, 50%, 70%, 86%, 100%, 141%, 200%, 400% RSPF: Variable: 50% to 200% in 1% increments (total 151 steps) Fixed preset: 50%, 70%, 86%, 100%, 141%, 200%	
Exposure system	Document glass: Moving optic (stationary p exposure fu RSPF: Moving origi	platen) with automatic nction
Paper feed	One automatic feeding paper bypass tray (50 sheets)	tray (250 sheets each) +

Fusing system	Heat rollers	
Developer system	Magnetic brush development	
Light source	Tri-color CCD light source (CCI	D: 3 components; R, G, and B)
Resolution	Scan: 600 x 300 dpi Output: 60 Scan: 600 x 600 dpi Output: 60	
Gradation	256 tones (8 bits)	
Power supply	Local voltage ±10% (For this r requirement, see the name pla machine.)	
Power consumption	Max. 1.0 kW	
Overall dimensions (with bypass tray folded)	802 mm (W) x 445 mm (D)	
Weight*4	Approx. 19.9 kg	Approx. 20.6 kg
Dimensions	518 mm (W) x 445 mm (D) x 2	298 mm (H)
Operating conditions	Temperature: 10°C to 30°C (5 Humidity: 20% to 85%	0°F to 86°F)
Noise level	Sound Power Level LwA(1B=10dB) Copying: 6.2 [B] Standby: 3.2 [B] Sound Pressure Level LpA (bystander positions) Copying: 48 [dB(A)] Standby: 17 [dB(A)] Sound Pressure Level LpA (operator position) Copying: 52 [dB(A)] Standby: 17 [dB(A)] Noise emission measurement in accordance with ISO 7779.	
Emission concentration (measured according to RAL-UZ122 : Edition Jun. 2006)	Ozone: 1.5 mg/h or less Dust: 4.0 mg/h or less Styrene: 1.0 mg/h or less Benzene: 0.05mg/h or less TVOC(Printing): 10mg/h or less TVOC(Pre-Operating): 1mg/h or less	

^{*1} When making multiple duplex copies, the copy speed will vary based on the environment conditions.

The time from power on until the first copy is output varies depending on the installation site and the state of the machine in use.

^{*2} The first-copy time is measured after the power save indicator turns off following power on, using the document glass with the polygon rotating in the copy ready state and *LSU SETTING* set to ON in the user programs (A4, paper fed from paper tray). The first-copy time may vary depending on machine operating conditions and ambient conditions such as temperature.

^{*3} The warm-up time may vary depending on machine operating conditions and ambient conditions such as temperature.

^{*4} Not including toner cartridges.

Printer Function

Print speed*	20 ppm
Resolution	600 dpi
Memory	Approx. 30MB
Emulation	SPLC (Sharp Printer Language with Compression)
Interface	USB 2.0 (Full-Speed/Hi-Speed compatible interface)
Interface cables	[USB cable] USB cable that supports USB 2.0. Please purchase a commercially available USB cable.

^{*} When printing same document continuously on A4 plain paper in non-offset mode, excluding processing time.

Scanner Function

Туре	Flatbed scanner
Scanning method	Document glass/RSPF
Light source	Tri-color CCD light source (CCD: 3 components; R, G, and B)
Resolution*	Basic: 600 dpi x 1200 dpi Setting range: 50dpi - 9600dpi
Original types	Sheet media, books
Effective scanning area	216 mm (Lengthwise) x 356 mm (Width)
Scanning speed	2.88 msec/line
Input Data	1 bit or 12 bit
Output Data	R.G.B 1 or 8 bits / pixel / A/D 16 bit
Scanning colors	Black and white 2 value, Grayscale, Full color
Protocol	TWAIN WIA (Windows XP/Vista only) STI
Interface	USB 2.0 (Full-Speed/Hi-Speed compatible interface)
Drop out color	Yes
Supported operating systems	Windows98/Me/2000 Professional/XP/Vista (Detailed information can be found in "BEFORE INSTALLATION" (p.37))
Void area	None
Interface cables	[USB cable] USB cable that supports USB 2.0. Please purchase a commercially available USB cable.
Scanner utilities	Button Manager / Sharpdesk

Network Expansion kit (AR-NB2A)

Dimensions	248 mm (W) x 127 mm (D) x 59 mm (H)
Wight	Approx. 1.0 kg
Network expansion kit memory	Standard memory: 64 MB
Emulation	PCL5e, PCL6, PS3 (PostScript 3)*
Interface	10/100BASE-TX network interface

^{*} Available only if the PS3 expansion kit (AR-PK1N) is installed.

Reversing Single Pass Feeder (AR-RP9)

Acceptable originals	Weight: 56g/m ² to 90g/m ² Size: A5 to A4 Capacity: Up to 30 sheets
Power supply	Drawn from the machine
Weight	Approx. 3.1 kg
Dimentions	496 mm (W) x 358 mm (D) x 105 mm (H)

250-sheet paper feed unit (AR-D33)

Paper size	A5 to A4
Paper weight	56g/m ² to 80g/m ²
Paper capacity	One paper tray with capacity for 250 sheets of 80g/m ² bond paper
Weight	Approx. 3 kg
Dimensions	495 mm (W) x 395 mm (D) x 88 mm (H)
Power supply	Drawn from the machine



As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Facsimile expansion kit (AR-FX13)

For the specifications of expansion kit AR-FX13, please refer to the AR-FX13 fax operation manual itself.

INDEX

Symbols

[[#]] key	10
2 IN 1 copy	88 28
A A A A A A A A A A A A A A A A A A A	77 75 89 60 12 13
B Basic procedure for printing	37 36 17 80
Canceling a print job Capacity of paper output tray Caution - Handling the machine Label on the machine Selecting an installation site - Using the machine Changing a tray's paper size setting Charger cleaner 9, Checking the total count Cleaning the machine - Cabinet Document glass RSPF RSPF scanning window Transfer charger	22 . 4 . 3 . 3 . 3 . 3 . 84 . 84

CLEAR ALL] key 11, 12, 50 CLEAR] key
D
Difference between models 7 Display 10 Display messages 67 Document feeder cover 9, 79 Document feeder tray 9, 21 Document glass 9, 31
=
17
F
Facsimile expansion kit
4
Handles

1	0
Initial settings 12	Offset function during sort copy 30
Installing the software 36	[OK] key 10
Interface cable 88	Operation in copy, printer, and scanner
Introduction 6	modes 52
1	Operation panel 9, 10
_	Optional equipment 86
Language setting	Original output tray extension9, 22
Loading paper	Original guides 9, 21
Loading paper in the bypass tray 18	Original types 24
Loading the paper tray	P
М	Paper 14
	Paper holder arm 9, 22
Main features	Paper output tray 9
Maintenance	Paper output tray extension 9, 22
Maintenance required	Paper tray 9, 15
Making copies	Part names
Margin shift	Photoconductive drum
[MENU] key 10	Plug and play screen does not
MFP driver	appear
Misfeed removal	Power cord socket
- Fusing area 77	Power on 13
- Paper feed area 77	Power save indicator
- RSPF 79	Power save modes
- Transport area 78	Power switch 9, 12, 13
Mode indicators 10	Preheat mode
[MODE SELECT] key 10	Preparations
N	Printer driver
••	Printer/scanner functions 49
Network expansion kit 86	Problems during setup of
Normal copying	the software73
- Document glass	
- RSPF	
Numeric keys 10, 23	

Į.
Toner cartridge
Toner cartridge lock release lever 81
Toner cartridge replacement 80
Transfer charger 9
Tray location indicator 10, 67
[TRAY SELECT] key 10, 18, 23
Troubleshooting 67
U
USB connector 9, 42
User programs
- Copy mode 54
- Print mode 58
User settings 54
Using the manual 6
Using the printer mode 50
Using the scanner mode 51
Z
[ZOOM] key 11, 25
[ZOON] key 11, 25

INDEX BY PURPOSE

Preparations	
Paper, loading	
- Bypass tray	
- Paper tray	
Power, turn off	
Power, turn on	. 12
Scan head locking switch,	
releasing	
Tray's paper size, setting	
User program, setting	. 54
Making copies	
Copying	
- Document glass	
- RSPF	
Enlarging/reducing copies	
Exposure, adjusting	
Exposure, selecting	
Setting the number of copies	
Stream feeding mode, using	
Tray, selecting	
Using convenient copy function	ns
2 IN 1 copying, using	
- Document glass	
- RSPF	. 33
Automatic two-sided copying	
- Document glass	. 27
- RSPF	
Margin shift, using	. 24
Sort copying, using	00
- Document glass	
- noff	. ა

Connecting the computer	
Basic procedure for printing	50
Button Manager, setting up	
- Windows 98/Me/2000	
- Windows XP/Vista	45
Installing the software	
Online manual, using	
Print job, canceling	
Printer mode, using	
Scanner mode, using	
Scanning from your computer	52
Scanning using the keys on	
the machine	51
Troubleshooting and maintena	nce
Troubleshooting and maintenant Checking the total count	
Checking the total count	83 84
Checking the total count	83 84 84
Checking the total count	83 84 84 84
Checking the total count	83 84 84 84
Checking the total count	83 84 84 84
Checking the total count	83 84 84 84 85
Checking the total count	83 84 84 84 85 77 77
Checking the total count	83 84 84 85 77 77 79
Checking the total count	83 84 84 85 77 77 79 78



Page : 1/4

Date Issued : Nov. 1, 2007 MSDS No. F-01601

1.PRODUCT AND COMPANY IDENTIFICATION

Product Name : AR-208NT/ AR-208T (Black Toner)

Supplier Identification : Sharp Corporation

22-22 Nagaike-cho, Abeno-ku, Osaka, Japan

Local suppliers are listed below. Please contact the nearest supplier for additional information.

Area	(Country)	(Name and Telephone	Number)			
North America	U.S.A.	Sharp Electronics Corporation Sharp Plaza, Mahwah, NJ				
		Telephone number for information	: 1-800-237-4277			
		Emergency telephone number	: 1-800-255-3924			
America	Canada	Sharp Electronics of Canada Ltd.				
		Telephone number for information	: 905-890-2100			
		Emergency telephone number	: 1-800-255-3924			
	Australia	Sharp Corporation of Australia PTY. Ltd.				
Oceania		No1 Huntingwood Drive Huntingwood Blacktown N.S.W.				
		Telephone number for information	: 1300-13-50-22			
	Germany	Sharp Electronics (Europe) GMBH				
		Sonninstrasse 3, 20097 Hamburg				
		Telephone number to access MSDS	: 040-2376-2185			
		For more information	: 040-2376-2613			
	United	Sharp Electronics (U. K.) Ltd.				
	Kingdom	Telephone number for information	: 08705-274-277			
	France	Sharp Electronics France S.A.				
		Telephone number for information	: 01-49-90-34-00			
	Austria	Sharp Electronics GMBH				
Europe		Telephone number for information	: 01-727-19-0			
Luiope	Italy	Sharp Electronics (Italy) S.P.A.				
		Telephone number for information	: 02895951			
	Spain	Sharp Electronics (Espana) S.A.				
		Telephone number for information	: 93-581-97-00			
	Netherlands	Sharp Electronics Benelux B.V.				
		Telephone number for information	: 30-6359500			
	Sweden	Sharp Electronics Nordic AB				
		Telephone number for information	: 08-634-36-00			
	Switzerland	Sharp Electronics(Schweiz)AG				
		Telephone number for information	: 01-846-6111			
Middle	U.A.E.	Sharp Middle East FZE				
Fast		P.O.Box 17115 Jebel Ali, Dubai				
Lasi		Telephone number for information	: 04-815311			

2.COMPOSITION / INFORMATION ON INGREDIENTS						
Substance[] Ingredient	Preparation[X] CAS No.	Proportion	OSHA PEL	ACGIH TLV	MAK-TWA	NOHSC-TWA
Styrene-Acrylate copolymer	29497-14-1	85-95%	Not listed	Not listed	Not listed	Not listed
Carbon black	1333-86-4	5-10%	3.5mg/m ³	3.5mg/m ³	Not listed	3mg/m ³
Iron oxide	1309-38-2	1-5%	Not listed	Not listed	Not listed	Not listed
Metal Complex dye*	109125-51-1 84179-66-8	< 2%	0.5mg/m ³	0.5mg/m ³	Not listed	Not listed

* EC No.: 400-110-2, Symbol letter: F,N,R Phrase: R11, R50/53



Page: 2/4

Date Issued: Nov. 1, 2007 MSDS No. F-01601

3.HAZARDS IDENTIFICATION

Most Important Hazards and Effects of the Products

Human Health Effects : There are no anticipated carcinogenic effects from exposure based on animal tests

performed using toner. When used as intended according to instructions, studies do not

indicate any symptoms of fibrosis will occur.

Environmental Effects : Not toxic to aquatic organisms

[Estimated from the other product containing similar material]

Specific Hazards : Dust explosion (like most finely divided organic powders)

Directive 1999/45/EC(Europe): Not classified as dangerous

4.FIRST-AID MEASURES

Route(s) of Entry: Inhalation? Skin? Inaestion? Yes Nο Possible but very unusual.

Inhalation : Remove to fresh air. If symptoms occur, consult medical personnel.

Skin Contact: Wash with soap and water for 15 minutes or until particle is removed.

If irritation does occur, consult medical personnel.

Eve Contact: Flush eyes immediately with water for 15 minutes. If irritation does occur, consult medical personnel. Ingestion

: Rinse with water and drink several glasses of water. If irritation or discomfort does occur, consult

medical personnel.

5.FIRE-FIGHTING MEASURES

Extinguishing Media : Water, CO2, foam and dry chemicals

Special Fire Fighting Procedures: None

Fire and Explosion Hazards : Toner material, like most finely divided organic powders, may form an explosive

None

6.ACCIDENTAL RELEASE MEASURES

Personal Precautions

Environmental Precautions

Methods for Cleaning Up : Wipe off with paper or cloth. Do not use vacuum cleaner when a large amount is released. It, like most finely divided organic powders, is capable of creating a

dust explosion.

7.HANDLING AND STORAGE

Handling

Technical Measures : None

Precautions · None

Safe Handling Advice : Use of a dust mask is recommended when handling a large quantity of toner or during long

term exposure, as with any non-toxic dust. Try not to disperse the particles.

Storage

Technical Measures

Storage Conditions : Keep container closed and Store in a cool and dry place.

Keep out of the reach of children.

Incompatible Products: None



Page: 3/4

Date Issued: Nov. 1, 2007 MSDS No. F-01601

8.EXPOSURE CONTROLS / PERSONAL PROTECTION

Engineering Measures

Ventilation : Not required under intended use.

Exposure Limit Values OSHA-PEL(USA)

: 15mg/m3 (Total Dust), 5mg/m3 (Respirable Dust) : 10mg/m3 (Total Dust), 3mg/m3 (Respirable Dust)

ACGIH-TLV(USA) Respiratory Protection

Personal Protective Equipment

: Not required under intended use.

Hand Protection Eye Protection

Not required under intended use. Not required under intended use. Not required under intended use.

Skin Protection Other Protective Equipment

: Use of a dust mask and goggles are recommended when handling a large

quantity of toner or during long term exposure, as with any non-toxic dust.

Odor: odorless

Color: Black

9.PHYSICAL AND CHEMICAL PROPERTIES

Appearance

Physical State: Solid

Form : Powder : Not applicable

Boiling / Melting Point Softening Point(°C)

: Not applicable : 100 - 130 : Not applicable : > 350

Flash Point(°C) Ignition Point(°C) **Explosion Properties**

· No data : 1.1 (bulk density: 0.35)

Density(a/cm3) Solubility in Water

: Negligible

10.STABILITY AND REACTIVITY

Stability

: Stable

Hazardous Reactions Conditions to Avoid

: Dust explosion, like most finely divided organic powders. : Electric discharge, throwing into fire,

Materials to Avoid

: Oxidizing Materials

Hazardous Decomposition Products : CO, CO2 and NOX

Further Information

: None

11.TOXICOLOGICAL INFORMATION

Acute Toxicity

Ingestion(oral)

Inhalation Eye irritation Skin irritation

: LD₅₀ > 2500mg/kg [Estimated from the other product containing similar material]

: Not an irritant [Estimated from the other product containing similar material] Not an irritant [Estimated from the other product containing similar material] : No sensitized [Estimated from the other product containing similar material]

Skin sensitizer Mutagenicity Carcinogenicity

: Negative (Ames Test) [Estimated from the other product containing similar material]

: In 1996 the IARC reevaluated carbon black as a Group 2B carcinogen (possible human carcinogen). This classification is given to chemicals for which there is inadequate human evidence, but sufficient animal evidence on which to base an opinion of carcinogenicity. The classification is based upon the development of lung tumors in rats receiving chronic inhalation exposures to free carbon black at levels that induce particle overload of the lung. Studies performed in animal models other than rats did not show any association between carbon black and lung tumors. Moreover, a two-year cancer bioassay using a typical toner preparation containing carbon black demonstrated no association between toner exposure and tumor

development in rats.



Page: 4/4

Date Issued : Nov. 1, 2007 MSDS No. F-01601

Chronic Effect

: In a study in rats of chronic inhalation exposure to a typical toner, a mild to moderate degree of lung fibrosis was observed in 92% of the rats in the high concentration (16mg/m³) exposure group, and a minimal to mild degree of fibrosis was noted in 22% of the animals in the middle (4mg/m³) exposure group, but no pulmonary change was reported in the lowest (1mg/m³) exposure group, the most relevant level to potential human exposures.

12.ECOLOGICAL INFORMATION

Ecotoxicity: On available data, toner is not harmful to aquatic organisms

[Estimated from the other product containing similar material]

13.DISPOSAL CONSIDERATIONS

Waste from Residues

: Waste material may be dumped or incinerated under conditions which meet all federal, state and local environmental regulations.

Contaminated Packaging: Waste may be disposed or incinerated under conditions which meet all federal, state

and local environmental regulations.

14.TRANSPORT INFORMATION

UN Classification : None

Not classified as hazardous for transport.

15 REGULATORY INFORMATION

US Information

TSCA(Toxic Substances Control Act) :

All chemical substances in this product comply with all applicable rules or order under TSCA.

SARA(Superfund Amendments and Reauthorization Act) Title III

302 Extreme Hazardous Substance : None 311/312 Hazard Classification : None

EU Information

1999/45/FC and 67/548/FFC

Symbol & Indication : Not required R-Phrase : Not required

76/769/EEC : All chemical substances in this product comply with all applicable rules or

order under 76/769/EEC.

16.OTHER INFORMATION

NFPA Rating (USA) : Health=1 Flammability=1 Reactivity=0
WHMIS Legislation (Canada) : This product is not a controlled product.

List of R phrases : R11 : Highly flammable

R50/53: Very toxic to aquatic organisms, may cause long-term adverse effects in

the aquatic environment.

References

IARC(1996): IARC monographs on the Evaluation of the Carcinogenic Risk of Chemicals to Humans, Vol. 65,
Printing Process And Printing Inks, Carbon Black and Some Nitro Compounds, Lyon, pp.149-261

H.Muhle, B.Bellmann, O.Creutzenberg, C.Dasenbrock, H.Ernst, R.Kilpper, J.C.MacKenzie, P.Morrow, U.Mohr, S.Takenaka, and R.Mermelstein(1991) Pulmonary Response to Toner upon Chronic Inhalation Exposure in Rats.

Fundamental and Applied Toxicology 17, pp.280-299.

The information on this data sheet represents our current data and best opinion as to the proper use in handling of this product under normal conditions. However, all materials may present unknown hazards and should be used with caution. Although certain hazards are described herein, we do not guarantee that these are the only hazards which exist.



Page: 1/4

Date Issued: Nov.01, 2007 MSDS No. F-31601

1.PRODUCT AND COMPANY IDENTIFICATION

: AR-208ND / AR-208DV (Black Developer)

Supplier Identification : Sharp Corporation

22-22 Nagaike-cho, Abeno-ku, Osaka, Japan Local suppliers are listed below. Please contact the nearest supplier for additional information.

Area	(Country)	(Name and Telephone I	Number)			
North America	U.S.A.	Sharp Electronics Corporation				
		Sharp Plaza, Mahwah, NJ				
		Telephone number for information	: 1-800-237-4277			
		Emergency telephone number	: 1-800-255-3924			
America	Canada	Sharp Electronics of Canada Ltd.				
		Telephone number for information	: 905-890-2100			
		Emergency telephone number	: 1-800-255-3924			
	Australia	Sharp Corporation of Australia PTY. Ltd.				
Oceania		No1 Huntingwood Drive Huntingwood Blacktown N.S.W.				
		Telephone number for information	: 1300-13-50-22			
	Germany	Sharp Electronics (Europe) GMBH				
		Sonninstrasse 3, 20097 Hamburg				
		Telephone number to access MSDS	: 040-2376-2185			
		For more information	: 040-2376-2613			
	United	Sharp Electronics (U. K.) Ltd.				
	Kingdom	Telephone number for information	: 08705-274-277			
	France	Sharp Electronics France S.A.				
		Telephone number for information	: 01-49-90-34-00			
	Austria	Sharp Electronics GMBH				
Europe		Telephone number for information	: 01-727-19-0			
Lurope	Italy	Sharp Electronics (Italy) S.P.A.				
		Telephone number for information	: 02895951			
	Spain	Sharp Electronics (Espana) S.A.				
		Telephone number for information	: 93-581-97-00			
	Netherlands	Sharp Electronics Benelux B.V.				
		Telephone number for information	: 30-6359500			
	Sweden	Sharp Electronics Nordic AB				
		Telephone number for information	: 08-634-36-00			
	Switzerland	Sharp Electronics(Schweiz)AG				
		Telephone number for information	: 01-846-6111			
Middle	U.A.E.	Sharp Middle East FZE				
Fast		P.O.Box 17115 Jebel Ali, Dubai				
		Telephone number for information	: 04-815311			

2.COMPOSITION / INFORMATION ON INGREDIENTS Preparation[X]

Substance[]

Ingredient	CAS No.	Proportion	OSHA PEL	ACGIH TLV	MAK-TWA	NOHSC-TWA
Iron powder	7439-89-6	85-95 %	Not listed	Not listed	Not listed	Not listed
Styrene-Acrylate copolymer	29497-14-1	5-10 %	Not listed	Not listed	Not listed	Not listed
Carbon black	1333-86-4	< 1 %	3.5ma/m ³	3.5ma/m ³	Not listed	3mg/m ³



Page : 2/4

Date Issued : Nov.01, 2007 MSDS No. F-31601

3.HAZARDS IDENTIFICATION

Most Important Hazards and Effects of the Products

Human Health Effects : There are no anticipated carcinogenic effects from exposure based on animal tests

performed using toner. When used as intended according to instructions, studies do not

indicate any symptoms of fibrosis will occur.

Environmental Effects : Not toxic to aquatic organisms

[Estimated from the other product containing similar material]

Specific Hazards : Dust explosion (like most finely divided organic powders)

Directive 1999/45/EC(Europe) : Not classified as dangerous

4.FIRST-AID MEASURES

Route(s) of Entry : Inhalation? Skin? Ingestion?

No No Possible but very unusual.

Remove to fresh air. If symptoms occur, consult medical personnel.

Skin Contact: Wash with soap and water for 15 minutes or until particle is removed.

If irritation does occur, consult medical personnel.

Eye Contact: Flush eyes immediately with water for 15 minutes. If irritation does occur, consult medical personnel.

Ingestion : Rinse with water and drink several glasses of water. If irritation or discomfort does occur, consult

medical personnel.

5.FIRE-FIGHTING MEASURES

Extinguishing Media : Water, CO₂, foam and dry chemicals

Special Fire Fighting Procedures: None

Fire and Explosion Hazards : Toner material, like most finely divided organic powders, may form an explosive

mixture.

6.ACCIDENTAL RELEASE MEASURES

Personal Precautions
Environmental Precautions

: None

Methods for Cleaning Up : Wipe of

: Wipe off with paper or cloth. Do not use vacuum cleaner when a large amount is

released. It, like most finely divided organic powders, is capable of creating a

dust explosion.

7.HANDLING AND STORAGE

Handling

Storage

Technical Measures : None

Precautions : None

Safe Handling Advice : Use of a dust mask is recommended when handling a large quantity of toner or during long

term exposure, as with any non-toxic dust. Try not to disperse the particles.

Technical Measures : None

Storage Conditions : Keep container closed and Store in a cool and dry place.

Keep out of the reach of children.

Incompatible Products: None



Page: 3/4

Date Issued: Nov.01, 2007 MSDS No. F-31601

8.EXPOSURE CONTROLS / PERSONAL PROTECTION

Engineering Measures

ACGIH-TLV(USA)

Ventilation : Not required under intended use.

Exposure Limit Values OSHA-PEL(USA)

: 15mg/m3 (Total Dust), 5mg/m3 (Respirable Dust) : 10mg/m3 (Total Dust), 3mg/m3 (Respirable Dust)

Personal Protective Equipment

Respiratory Protection : Not required under intended use. Hand Protection : Not required under intended use. Eve Protection : Not required under intended use. Skin Protection : Not required under intended use.

Other Protective Equipment : Use of a dust mask and goggles are recommended when handling a large quantity of toner or during long term exposure, as with any non-toxic dust.

9.PHYSICAL AND CHEMICAL PROPERTIES

Appearance

Physical State: Solid Form : Powder Color : Black Odor: odorless

: Not applicable : Not applicable **Boiling / Melting Point** Flash Point(°C) : Not applicable Ignition Point(°C) No data

Explosion Properties : No data : 7.3 (bulk density : 2.0) Density(a/cm3)

Solubility in Water : Nealiaible

10.STABILITY AND REACTIVITY

Stability : Stable

Hazardous Reactions : Dust explosion, like most finely divided organic powders.

Conditions to Avoid : Electric discharge, throwing into fire.

Materials to Avoid : Oxidizing Materials Hazardous Decomposition Products : CO, CO2 and NOx

Further Information None

11.TOXICOLOGICAL INFORMATION

Acute Toxicity

: LD₅₀ > 2000mg/kg [Estimated from the other product containing similar material] Ingestion(oral)

Inhalation · No data

Eye irritation : Not an irritant [Estimated from the other product containing similar material] Skin irritation : Not an irritant [Estimated from the other product containing similar material] Skin sensitizer : No sensitized [Estimated from the other product containing similar material]

Mutagenicity : Negative (Ames Test) [Estimated from the other product containing similar material]

Carcinogenicity

: In 1996 the IARC reevaluated carbon black as a Group 2B carcinogen (possible human carcinogen). This classification is given to chemicals for which there is inadequate human evidence, but sufficient animal evidence on which to base an opinion of carcinogenicity. The classification is based upon the development of lung tumors in rats receiving chronic inhalation exposures to free carbon black at levels that induce particle overload of the lung. Studies performed in animal models other than rats did not show any association between carbon black and lung tumors. Moreover, a two-year cancer bioassay using a typical toner preparation containing carbon black demonstrated no association between toner exposure and tumor

development in rats.



Page: 4/4

Date Issued: Nov.01, 2007 MSDS No. F-31601

Chronic Effect

: In a study in rats of chronic inhalation exposure to a typical toner, a mild to moderate degree of lung fibrosis was observed in 92% of the rats in the high concentration (16mg/m3) exposure group, and a minimal to mild degree of fibrosis was noted in 22% of the animals in the middle (4mg/m3) exposure group, but no pulmonary change was reported in the lowest (1mg/m3) exposure group, the most relevant level to potential human exposures.

12.ECOLOGICAL INFORMATION

Ecotoxicity: On available data, toner is not harmful to aquatic organisms [Estimated from the other product containing similar material]

13.DISPOSAL CONSIDERATIONS

Waste from Residues

: Waste material may be dumped or incinerated under conditions which meet all federal. state and local environmental regulations.

Contaminated Packaging: Waste may be disposed or incinerated under conditions which meet all federal, state

and local environmental regulations.

14.TRANSPORT INFORMATION

UN Classification Not classified as hazardous for transport.

15.REGULATORY INFORMATION

US Information

TSCA(Toxic Substances Control Act) :

All chemical substances in this product comply with all applicable rules or order under TSCA.

SARA(Superfund Amendments and Reauthorization Act) Title III

302 Extreme Hazardous Substance : None

311/312 Hazard Classification · None FU Information

1999/45/EC and 67/548/EEC

Symbol & Indication : Not required

R-Phrase : Not required

76/769/FFC : All chemical substances in this product comply with all applicable rules or

order under 76/769/EEC

16.OTHER INFORMATION

NFPA Rating (USA) : Health=1 Flammability=1 Reactivity=0

WHMIS Legislation (Canada) : This product is not a controlled product.

References

IARC(1996): IARC monographs on the Evaluation of the Carcinogenic Risk of Chemicals to Humans, Vol. 65, Printing Process And Printing Inks, Carbon Black and Some Nitro Compounds, Lyon, pp.149-261 H.Muhle, B.Bellmann, O.Creutzenberg, C.Dasenbrock, H.Ernst, R.Kilpper, J.C.MacKenzie, P.Morrow, U.Mohr, S.Takenaka, and R.Mermelstein(1991) Pulmonary Response to Toner upon Chronic Inhalation Exposure in Rats.

Fundamental and Applied Toxicology 17, pp.280-299.

The information on this data sheet represents our current data and best opinion as to the proper use in handling of this product under normal conditions. However, all materials may present unknown hazards and should be used with caution. Although certain hazards are described herein, we do not guarantee that these are the only hazards which exist

A. Information on Disposal for Users (private households)

1. In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin!

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

*) Please contact your local authority for further details. If your used electrical or electronic equipment



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

B. Information on Disposal for Business Users.

1. In the European Union

If the product is used for business purposes and you want to discard it:

Please contact your SHARP dealer who will inform you about the take-back of the

product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

For Spain: Please contact the established collection system or your local authority for take-back of your used products.

2. In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

Required in IEC-950 (EN 60 950) - Europe

A

AAA

风光成长成长成长成长成长成长成长成长成长成长成长成长成长成长成长成长

The equipment should be installed near an accessible socket outlet for easy disconnection.

Required in Appendix ZB of BS 7002 (En 60 950) — United Kingdom

MAINS PLUG WIRING INSTRUCTIONS

The mains lead of this equipment is already fitted with a mains plug which is either a non-rewireable (moulded) or a rewireable type. Should the fuse need to be replaced, a BSI or ASTA approved fuse to BS1362 marked or and of the same rating as the one removed from the plug must be used.

Always refit the fuse cover after replacing the fuse on the moulded plug. Never use the plug without the fuse cover fitted.

The tuse cover litted.

In the unlikely event of the socket outlet in your home not being compatible with the plug supplied either cut-off the moulded plug (if this type is fitted) or remove by undoing the screws if a rewireable plug is fitted and fit an appropriate type observing the writing code below.

DANGER: The fuse should be removed from the cut-off plug and the plug destroyed immediately and disposed of in a safe manner. Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet as a serious electric shock may occur.

To fit an appropriate plug to the mains lead, follow the instructions below:

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

GREEN-AND-YELLOW: Earth

BLUE: Neutral

As the colours of the wires in this mains lead may not correspond with coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured **GREEN-AND YELLOW** must be connected to the terminal in the plug which is marked with the letter **E**, or by the safety earth symbol **★**, or coloured green or green-and-yellow.

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured black.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured red.

If you have any doubt, consult a qualified electrician.

WARNING: THIS APPARATUS MUST BE EARTHED.

CAUTION

CLASS 3B INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

VORSICHT

UNSICHTBARE
LASERSTRAHLUNG DER
KLASSE 3B, WENN
ABDECKUNG GEÖFFNET UND
SICHERHEITSVERRIEGELUNG
ÜBERERÜCKT. NICHT DEM
STRAHL AUSSETZEN.

ADVARSEL

USYNLIG LASERSTRÅLING AF KLASSE 3B VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.

ADVARSEL


USYNLIG KLASSE 3B LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.

VARNING

OSYNLIG LASERSTRÅLNING KLASS 3B NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRRAR ÄR URKOPPLADE. UNDVIK EXPONERING FÖR STRÅLEN.

VARO!

AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTÖNTÄ LUOKAN 3B LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.

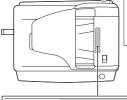

A

CAUTION CLASS 39 IMMISSIEL LASCR RADIATION WHEN OPEN AND INTERLOCKS DEFERTED.

VORSICHT EINSTEINBALLING EER KLASSE 38, WENN ASDECUMES GEÖSTNET UN

VORSICHT EINSTEINBALLING EER KLASSE 38, WENN ASDECUMES GEÖSTNET UN

ADVARSEL USTRUCK AUS DE SERVICK MAN DE BEREINEN. MICHT SOM STRAKE AUSSETZEN.

ADVARSEL

D. ADVERSEL UDVINLIS KLASSE SIG LASERSTRÄLING NÄR DOKSEL ÄPHES
OKKRINNEDELS SIGNYTEL UNDER KRYDNERSONS DOR STRÄLEN
NO VARNING OKKRINNEDELS SIGNYTEL UNDER KRYDNEDELS
VARDING OKKRINNEDELS SIGNYTELS OKT STRÄLEN
VARDIN VARTESSÄ ALS SOLDLIKENSED SPETTAGS OLET ALTTIMA NÄKYNÄÄTI

Caution

This product contains a low power laser device. To ensure continued safety do not remove any cover or attempt to gain access to the inside of the product.


Refer all servicing to qualified personnel.

CLASS 1 LASER PRODUCT

LASER KLASSE 1

LUOKAN 1 LASERLAITE

KLASS 1 LASERAPPARAT

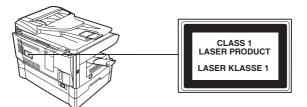

SHARP

SHARP MANUFACTURING FRANCE S.A.

Route de Bollwiller - SOULTZ 68503 GUEBWILLER CEDEX FRANCE