


CREATIVE
PC-CAM
930 Slim



Quick Start

About Your Camera

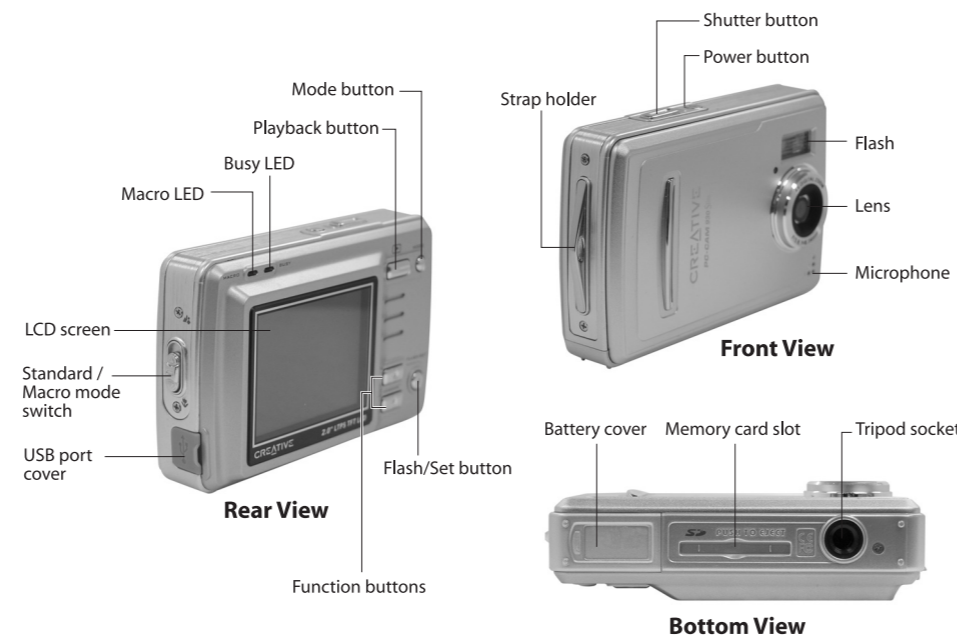

1 Setting Up Your Camera

- Open the battery cover**
a. b.
- Insert the batteries**
Note the polarity of the two AAA batteries when inserting them.
- Close the battery cover**
- Insert an SD memory card (optional)**
- Turn on your camera**
Press and hold the Power button to turn on your camera. The Busy LED lights up in red for a few seconds and the LCD turns on.

2 Taking a Picture or Video

- Taking a Picture**
- Make sure that your camera is not connected to your computer.
 - Press and hold the Power button to turn on your camera. You are in **Record Mode**. For portrait and landscape pictures, make sure that the Standard / Macro mode switch is moved toward .
 - Compose your picture and press the Shutter button halfway. A yellow box appears in the center of the LCD. Fully press the shutter and release it. Your camera beeps when you take a picture.
 - While composing your picture, use the Function buttons to zoom in and out. To take close-up pictures, move the Standard / Macro mode switch to . The Macro LED lights up in green.
- Recording a Video**
- Make sure that your camera is not connected to your computer.
 - Press and hold the Power button to turn on your camera.
 - Press and hold the Mode button. The mode selection menu appears.
 - Use the Function buttons to select the **Movie Mode** icon.
 - Press the Flash/Set button.
 - Compose your picture and press the Shutter button to begin recording. You can see the elapsed recording time, shown in seconds, on the LCD screen.
 - Press the Shutter button again to stop recording.
- Previewing a Picture**
- Press and hold the Mode button. The mode selection menu appears.
 - Use the Function buttons to select the **Play Mode** icon.
 - Press the Flash/Set button.
 - Use the Function buttons to locate your picture on the LCD screen.
 - To exit Play Mode, press and hold the Mode button.
- Playing Back a Video Recording**
- Press and hold the Mode button. The mode selection menu appears.
 - Use the Function buttons to select the **Play Mode** icon.
 - Press the Flash/Set button.
 - Use the Function buttons to locate your video recording on the LCD screen.
 - Press the Shutter button to play back the video. To pause playback, press the Shutter button again. To continue playback, press the Shutter button once.
 - To stop playback, press one of the Function buttons.
 - To exit Play Mode, press and hold the Mode button.

Product Registration

Enjoy a host of benefits by registering your product during installation, or at www.creative.com/register. Benefits include:

- Service and Product Support from Creative
- Exclusive updates on promotions and events

Please note that your warranty rights are not dependent on product registration.

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to www.creative.com and select your region.

Keep this document for future reference.

3 Installing Software

- Do not connect the camera to your computer yet!**
- Do not connect Creative PC-CAM 930 Slim to your computer before installing the drivers. If you accidentally begin installation with PC-CAM 930 Slim connected, the **Add New Hardware Wizard** or **Found New Hardware Wizard** dialog box may appear. Click the **Cancel** button and disconnect your camera from your computer.
 - Insert the Installation CD into your CD-ROM drive. Your CD should start automatically. If it does not, follow the steps below:
 - Start Windows Explorer.
 - On the left pane, click the **My Computer** icon.
 - Right-click the CD-ROM/DVD-ROM drive icon, and then click **AutoPlay**.
 - Follow the instructions on the screen to complete the installation.
 - Restart your computer after all the drivers and applications are installed.

4 Using Your Camera as a Mass Storage Device

- Press and hold the Power button to turn on your camera.
- Press and hold the Mode button. The mode selection menu appears.
- Use the Function buttons to select the **PC mode** icon.
- Press the Flash/Set button.
- Use the Function buttons to select **Mass Storage**.

- Press the Flash/Set button. The **USB connection** icon flashes on the LCD screen.
- Open the USB port cover.
- Using the supplied USB cable, connect PC-CAM 930 to an available USB port on your computer. The Busy LED lights up in red and the LCD turns off.
- Windows automatically detects the device and your camera appears as a removable disk in Microsoft® Windows® Explorer.
- Copy the picture and video files into your computer using a drag-and-drop operation.
- To install your camera as a webcam, refer to the User's Manual.



5 Using Instant Live Video Chats

Add a new dimension to your communication with family and friends, and use Live Video Chats with your camera!

To use Live Video Chats, download one of the following:

- MSN Messenger from <http://messenger.msn.com>
- Yahoo! Messenger from <http://messenger.yahoo.com>
- any Windows® application that supports Live Video Chats, like Windows NetMeeting

User's Manual

For more details on using your camera, read the User's Manual.

