


# UNITED STATES STOVE COMPANY



### *'Keeping America Warm Since 1869''*

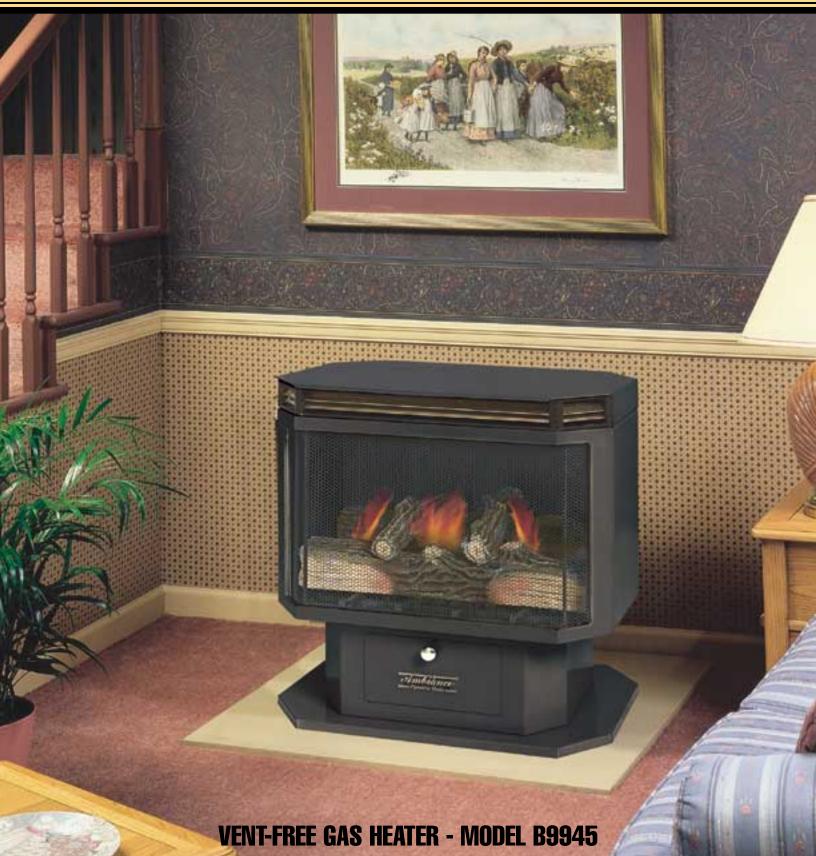

## Ambiance® Vent-Free Pedestal Gas Heater

#### Model B9945

Wrap yourself in a heart-warming glow found only in nature as you cozy up to the nurturing environment provided by the AMBIANCE from United States Stove Company. The attractive vent-free safety-test design transforms an ordinary room into a comfortable and inviting living space awaiting your presence to complete the decor. Enjoy adding warmth to your family, hearth, and home - our proud tradition at United States Stove Company since 1869.

#### Features

- Heating Efficiency 99.9%
- Wide BTU Range: 27,000 39,900
- Safe Operation Oxygen Depletion Sensor (ODS)

2713/16"

269/16"

167/8"

103 lbs.

10.25

- No Electricity Required
- Millivolt Control
- Fibre Ceramic Logs
- Push-Button Piezo Ignitor
- Wide Bay Front
- Easy Operation
- Heats from 800 to 1,200 square feet
- 120 CFM Blower optional

#### BENEFITS

- Heat stays in the room, does not go up chimney
- Heats comfortably any season
- Shuts off if room oxygen drops below normal level
- Provides heat during power outages
- Remote-ready (optional) or by wall switch
- Cozy, warm, wood-like fire
- Matchless ignition
- 180-degree viewing area
- Hidden controls, behind front door
- Heats large or small areas
- Extends even heat optional

#### **S**PECIFICATIONS

- Height
  Width
  Depth
  Shipping Weight
- Shipping Cube

#### Limited Warranty

Five (5) Years on Burner

Two (2) Years on Cabinet & Trim

One (1) Year on Logs and All Other Gas & Electrical Components.

#### OPTIONS

- Model F40-2 120 CFM Blower
- WTK60 Thermostat Kit
- WSK60 Wall Switch
- RCK60 Hand-Held Remote







UNITED STATES STOVE COMPANY P.O. BOX 151 • SOUTH PITTSBURG, TN 37380 • (423) 837-2100 Visit our website at **www.usstove.com** 

Keeping America Warm Since 1869



Note: All photographs are for illustrative purposes only and are not meant to be a guide for actual installation. All safety regulations with respect to combustible materials and surfaces must be followed. See installation manual for specifics. Dimensions and specifications are subject to change without notice. Contact local building or fire official about restrictions and installation inspection requirements.