

Congratulations on your purchase of a high-quality Insignia product. Your new digital picture frame represents the state of the art in digital picture frame design and is designed for reliable and trouble-free performance.

 
Package contents

- 8" digital picture frame
- AC power adapter
- Remote control with battery (CR2025)
- Remote control holder
- Cleaning cloth
- USB cable
- Black and white picture mats
- Two interchangeable frames
- MS Pro Duo adapter
- *User Guide*
- *Quick Setup Guide*

Features


- Displays digital pictures (JPEG format) and digital slideshows without a computer
- Plays music (MP3, AAC, or WMA formats) alone or with a picture slideshow
- Plays video (MJPEG and MPEG4 in AVI and MOV formats)
- Displays files directly from a memory card or USB drive (not included)
- Compatible with a wide variety of memory cards, including SD, SDHC, MMC, MS, MS Pro Duo, CF, and xD
- Compatible with USB flash drives
- Bright, clear TFT LCD screen
- Multi-image mode displays multiple pictures at the same time in a slideshow
- On-frame button controls and infrared remote control
- 1 GB internal memory
- Energy Star certified
- Power saving features

Sides

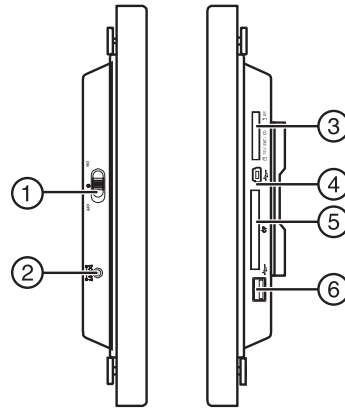


#	Description
1	Power On/Off switch
2	DC 9V power connector
3	SD/SDHC/MMC/MS/MS Pro Duo/xD memory card slot
4	Mini USB port
5	CF card slot
6	Standard USB port

 Front

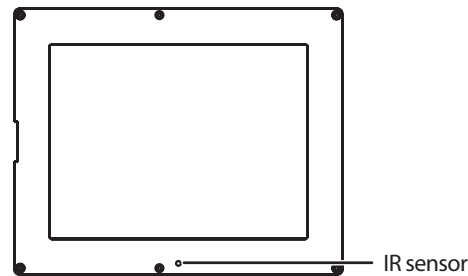


Back

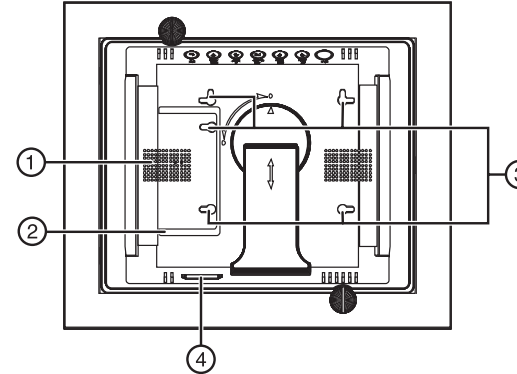 

#	Description
1	Speaker
2	Remote control holder
3	Holes for mounting the holder or digital picture frame to a wall
4	Slot for clock backup battery (CR2025)

 Top

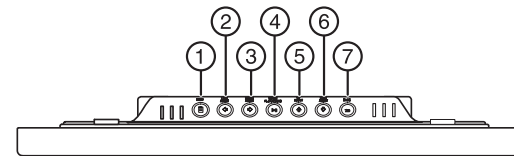

#	Description
1	MENU - press to open the Setup menu
2	Left arrow - press to move menu selection left or up, or to display the previous picture
3	Right arrow - press to move menu selection right or down, or to display the next picture
4	Enter/Play/Pause - press to select menu items, or to pause/resume slideshow, music, or video playback
5	Up arrow - press to navigate up or to increase volume
6	Down arrow - press to navigate down or to decrease the volume
7	Back - press to go back to previous selection

 
Setting up the remote control

- Remove the plastic tab that extends past the bottom edge of the remote control. This tab protects the battery. The remote control will not work until it is removed.



Setting up the frame:

- 1 Pull out the stand to place the frame.

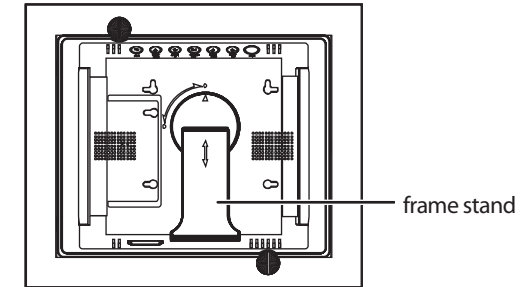

- 2 Rotate the stand to position the frame vertically or horizontally, then adjust the stand.

- 3 Plug the AC power adapter into the frame's DC power connector and into an AC power outlet.

- 4 Slide the Power On/Off switch to the **ON** position to turn on the frame. The INSIGNIA logo is displayed for several seconds, then the frame automatically shows a slideshow of pictures stored in internal memory (when no memory card or USB device is present). If a memory card or USB device is present, the frame shows a slideshow of pictures stored on the memory card or USB device.

Viewing pictures on a memory card or USB device

- Insert a memory card or USB device into one of the available memory slots or the USB port. A slideshow of pictures from the memory card or USB device automatically starts to play.

Caution: Memory cards fit into the card slots in one direction only. Do not force a memory card into a slot. The card should fit snugly when inserted correctly. Some cards require an adapter to fit correctly. For more information on supported memory cards, see "Specifications" in your *User Guide*.

For more information about using your NS-DPF8TR digital picture frame, including playing music and videos and setting up power saving functions, see your *User Guide*.

Six-month limited warranty

Visit www.insigniaproducts.com for details