



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "C" (LR14) alkaline batteries (not included).

Adult assembly is required.

Tool required for battery installation: Phillips screwdriver (not included).




[www.fisher-price.com](http://www.fisher-price.com)

**Jungle Friends Treehouse™**


 **CAUTION**

This product contains small parts. For assembly by an adult.


**Parts**

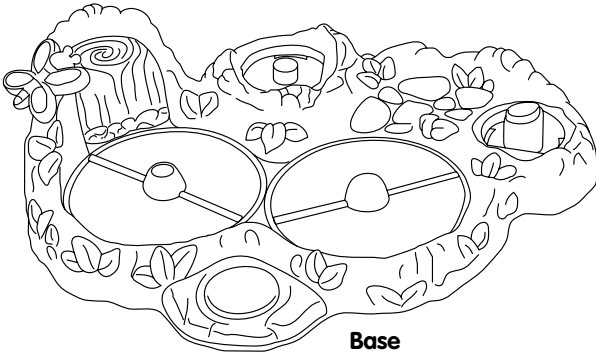


**Base**

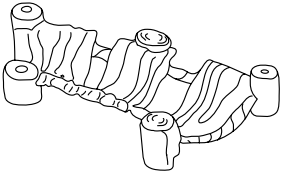


**Bridge**

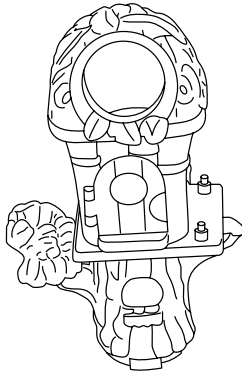

**Tree House**

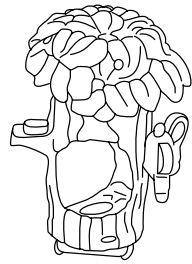

**Short Tree**

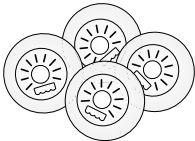


**4 Balls**



**#4 X 1/2" Screw - 3**  
**Shown Actual Size**


# Assembly

1

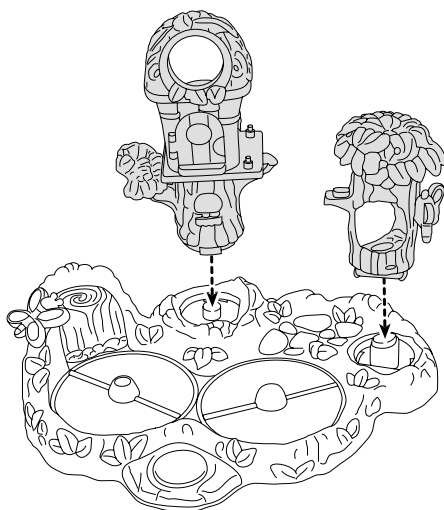

- “Snap” the treehouse into the base.
- “Snap” the short tree into the base.



2

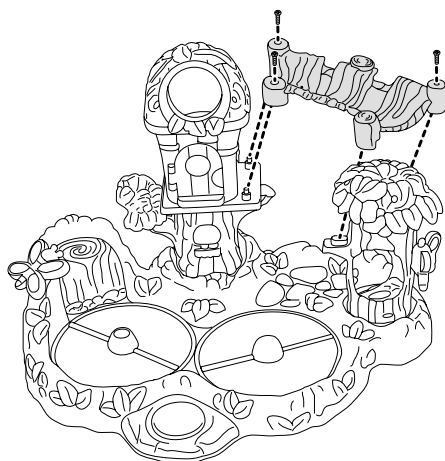

#4 X 1/2" Screw

- Fit the bridge onto the posts on the treehouse and the branch on the short tree, as shown.
- Insert three #4 x 1/2" screws into the bridge. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

## Battery Installation

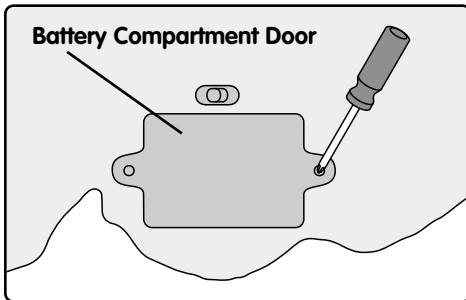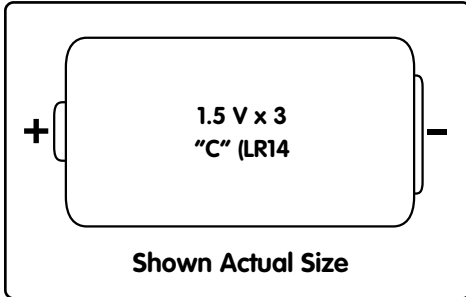

- Locate the battery compartment on the bottom of the base.
  - Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
  - Insert three "C" (LR14) **alkaline** batteries.
- Hint:** We recommend using **alkaline** batteries for longer life.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
  - When sounds or motions from this toy become faint or stop, it's time for an adult to change the batteries!

## Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Fun Music and Motion



- Locate the power/volume switch on bottom of the toy.
- Slide the switch to the desired position: Off ○ ; on with low volume 🔊 ; or on with high volume 🔊.
- Press the big button to start the fun motions and music. Press again to stop.
- Drop the balls down the treehouse, waterfall or small tree to also activate music and motions.

## Care

- Wipe the surface with a clean cloth dampened with a mild soap and water solution. Do not immerse the toy

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### For countries outside the United States:

**CANADA:** Questions? **1-800-567-7724**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN:** [Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.](#)

**AUSTRALIA:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.