

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON DVD-1400. You'll find the answers to all your questions on the DENON DVD-1400 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual DENON DVD-1400
User guide DENON DVD-1400
Operating instructions DENON DVD-1400
Instructions for use DENON DVD-1400
Instruction manual DENON DVD-1400

## DENON

DVD AUDIO-VIDEO/SUPER AUDIO CD PLAYER

**DVD-1400** 

OFERATING INSTRUCTIONS
BEDIENUNGSANLEITUNG
ISTRUZIONI FER L'USO
MODE D'EMFLOI
GEBRUIKSAANWIJZING
INSTRUCCIONES DE FUNCIONAMIENTO
BRUKSANVISNING

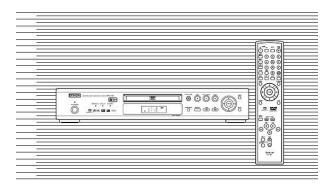



## Manual abstract:

3 EN English TABLE OF CONTENTS I PRECAUTIONS 2 Laser Safety . 2 Important 3 Power Supply 3 Warning . 3 Dew Warning . 3 Caution . 3 Declaration of Conformity . 3 I INTRODUCTION 5 About Copyright . 5 Supplied Accessories . 5 Symbols Used in this Manual . 5 I ABOUT THE DISCS . 6 Playable Discs 6 Disc Types 6 I FEATURES 7 I FUNCTIONAL OVERVIEW 8 FRONT PANEL .

8 REMOTE CONTROL. 8 Tour of the remote control. 9 Display 11 Displays During Operation 11 Loading the Batteries 11 I CONNECTIONS. 12 Description - rear panel 12 Connection to an audio system 13 Connection to a 5.1-channel Surround Sound system.

14 Connection to a TV (for video) . 15 I PLAYING A DISC 16 Basic Playback 16 CANCELLING AND CALLING BACK THE PBC FUNCTION . 16 General Features . 16 Pure Direct Mode . 16 Pause .

16 Disc Menus . 16 Title Menu 16 CALLING UP A MENU SCREEN DURING PLAYBACK . 16 Step by Step Playback . 17 Resume 17 Fast Forward / Reverse Search 17 Slow Forward / Slow Reverse . 17 Zoom 17 Track 18 Title / Chapter Search . 18 Page Selection 18 Playing From a Desired Group . 18 Playback of the Bonus Group . 18 Time Search 18 Repeat 19 REPEAT TITLE / CHAPTER . 19 REPEAT TRACK . 19 A-B REPEAT 19 Program (CD/SUPER AUDIO CD/DVD-A) 19 Playback of All Groups .

20 Random Playback (CD/SUPER AUDIO CD/DVD-A). 20 MP3 / JPEG / WMA Playback. 20 Slide Show Mode 21 On-Screen Information. 21 Track Selection 21 Random Playback (MP3/JPEG/WMA). 22 Program (MP3/JPEG/WMA). 22 Audio Language or Sound Mode. 22 Stereo Sound Mode. 23 Subtitle Language 23 Camera Angle. 23 Changing the On-Screen Display. 23 Marker Setup Screen Virtual Surround DVD SETUP Language Setting Display Setting Audio Setting Speaker Setting Ratings Control RATING LEVEL IF YOU FORGET THE PASSWORD CONTROL LEVELS.

MAINTENANCE. TROUBLESHOOTING GUIDE. SPECIFICATIONS PIN CONNECTION. 24 24 25 25 25 26 26 27 27 27 27 29 30 31 31 111111 4 EN INTRODUCTION A NOTE ABOUT RECYCLING This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes. The serial number of this product may be found on the back of the DVD player. No others have the same serial number as yours. You should record the number and other vital information here and retain this book as a permanent record of your purchase to aid identification in case of theft. Serial numbers are not kept on file.

Date of Purchase Dealer Purchase from Dealer Address Dealer Phone No. Model No. Serial No. About Copyright Unauthorized copying, broadcasting, public performance and lending of discs are prohibited. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. Apparatus Claimas of U.

S.

