


aiwa

XD-DW7U

XD-DW5U

PORTABLE DVD PLAYER
REPRODUCTOR PORTÁTIL DE DVD
LECTEUR DE DVD PORTABLE

OPERATING INSTRUCTIONS
INSTRUCCIONES DE MANEJO
MODE D'EMPLOI

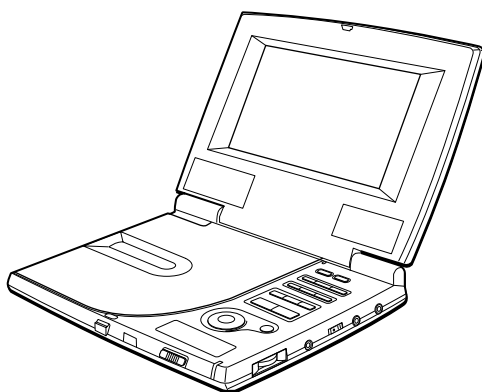

ENGLISH

ESPAÑOL

FRANÇAIS



CORRECTION

Please note the following corrections to the Operating Instructions:

Page 43

You do not remember the code number set in “Ratings”.

INCORRECT ■ → TITLE → RETURN → Q SURROUND

CORRECT ■ → TOP MENU → RETURN → Q SURROUND

CORRECCIÓN

Tenga en cuenta las siguientes correcciones para el manual de instrucciones:

Página 43

No recuerda el código ajustado en “Limite de Clasificacion”.

INCORRECTO ■ → TITLE → RETURN → Q SURROUND

CORRECTO ■ → TOP MENU → RETURN → Q SURROUND

CORRECTION

Prière de noter la correction suivante dans de mode d'emploi:

Page 43

Vous avez oublié le numéro de code programmé sous “Ratings” (Limitations).

INCORRECT ■ → TITLE → RETURN → Q SURROUND

CORRECT ■ → TOP MENU → RETURN → Q SURROUND

NOTE

FOR USE IN THE U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAUTION

Modifications or adjustments to this product, which are not expressly approved by the manufacturer, may void the user's right or authority to operate this product.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

< Note for high temperatures >

- To prevent a malfunction, deformation, or discoloration, please avoid placing the product in direct sunlight, near any heat sources, or inside your car in the summer time.
- The surface of the product becomes hot if used for a long time. This is not a malfunction.
- Please do not rest it on your body for a long time to avoid mild heat irritation.

Precautions

To maintain good performance

- Do not use the unit in places which are extremely hot, cold, dusty or humid. In particular, do not use or keep the unit in the following places.
 - in a high humidity area such as a bathroom
 - near a heater
 - in an area exposed to direct sunlight (Example: inside a parked car, where it can become extremely hot)
 - where it is very dusty or sandy
 - near sources of strong magnetism, such as televisions, speakers, or magnets
 - where there is a lot of movement or vibration, such as on a car dashboard or unstable shelf

For safety

- Do not attempt to disassemble the unit. Laser rays from the optical pickup are dangerous to the eyes and the unit contains high voltage.
- Take care not to drop the unit or subject it to strong shocks.
- To keep dust from the pickup lens, keep the disc holder closed after use. Never touch the lens.
- Do not touch the lens. Doing so may cause malfunctions.
- If you hear no sound when playing a disc, DO NOT turn the volume up too high since the music could suddenly start. Turn the volume to the lowest level before starting playback and slowly turn it up to the desired level.

Note on listening with the headphones

- Listen at a moderate volume to avoid hearing damage.
- Do not wear the headphones while driving or cycling. It may create a traffic hazard.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations, such as walking, jogging, etc.
- Wear them properly; L is left, R is right.

Table of contents

Note on condensation

If the unit is suddenly moved from a cold place to a warm one, it may result in condensation on the pickup lens causing malfunction or playback difficulties.

Should this occur, leave the unit for a few hours, then try playback again.

To clean the cabinet

Use a soft cloth lightly moistened with a detergent solution.

Do not use strong solvents such as alcohol, benzine or thinner.

NOTE

Video CD:

Some discs cannot be played back in this unit due to their conditions. In some discs, track numbers are displayed differently from the ones printed in their packages due to conditions of readings.

CD-R/RW:

- The unit may not play a CD-R/RW disc that is recorded on personal computers or some kinds of CD-R/RW recorders because of differences in recording platforms.
- Do not attach any seal or label to either side (the recordable side or the labeled side) of a CD-R/RW disc. It may cause malfunction.
- The unit cannot play back an MP3 recorded on a CD-R/RW disc.

Owner's record

For your convenience, record the model number and serial number (you will find them on the bottom of your set) in the space provided below. Please refer to them when you contact your Aiwa dealer in case of difficulty.

Model No.	Serial No. (Lot No.)

PREPARATIONS

Parts and controls	3
Remote control	6
Using the AC adaptor	6
Using the battery pack	7

PLAYBACK (THE BASICS)

Playing back	10
--------------------	----

OPERATION WITH OSD

Information about On Screen Display (OSD)	15
Title search (DVD)/Track search (Video CD with PBC off, audio CD)	16
Chapter search (DVD)	17
Time search (DVD)	18
Mark function (DVD, Video CD with PBC off, audio CD)	19
Checking ON or OFF of PBC (Video CD)	20
Programed playback (Video CD with PBC off, audio CD) ...	21
Random playback (Video CD with PBC off, audio CD) ...	22
Repeat playback	23
Changing the angle (DVD)	25
Displaying and changing subtitles	26
Changing the audio track	27

SET UP OPERATION

Changing setup values	30
-----------------------------	----

CONNECTION


Connecting to external equipment	38
--	----

OTHERS

Troubleshooting	43
Language codes	45
Explanation of terms	46
Specifications	47

Parts and controls


Main unit (front and right side)

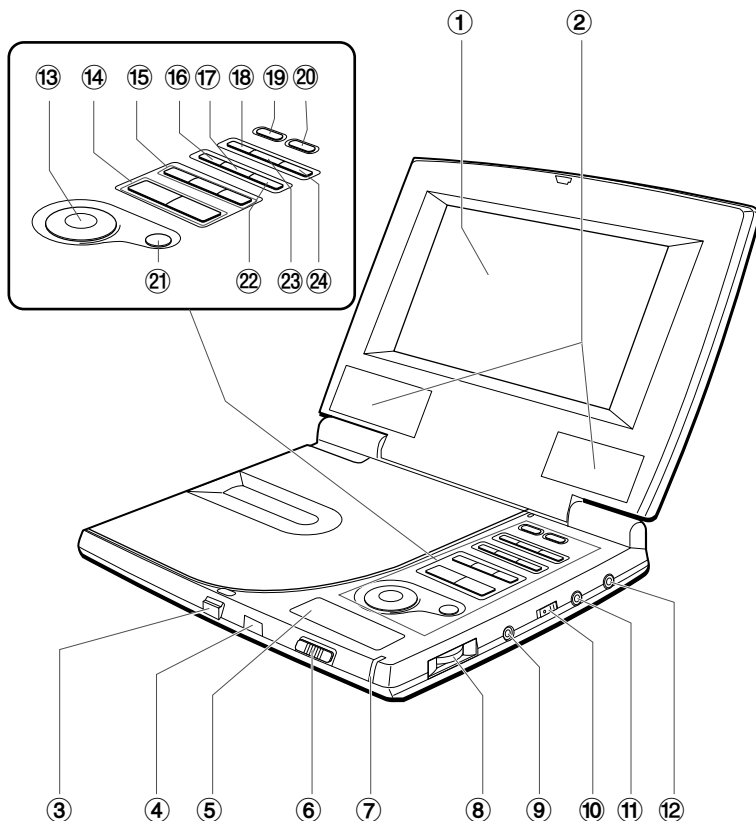

- ① Liquid crystal display
Do not push the liquid crystal display hard.
- ② Stereo speakers
- ③ ▲OPEN button
- ④ Remote sensor
- ⑤ Display window
- ⑥ POWER ON/OFF/HOLD switch
- ⑦ Power indicator
- ⑧ VOLUME control
- ⑨ PHONES jack
- ⑩ PAL/NTSC switch
- ⑪ VIDEO IN/OUT jack
- ⑫ AUDIO/OPT OUT jack


- ⑬ ◀, ▶, ▲, ▼ buttons
- ⑭ ■, ▶ (Play) buttons
- ⑮ ⏮, ⏪, ⏩, ⏭ buttons
- ⑯ RETURN button
- ⑰ MENU button
- ⑱ IN/OUT button
- ⑲ MODE button
- ⑳ TFT SW button
- ㉑ ENTER button
- ㉒ TOP MENU button
- ㉓ SET UP button
- ㉔ DISPLAY button

Main unit (left side)

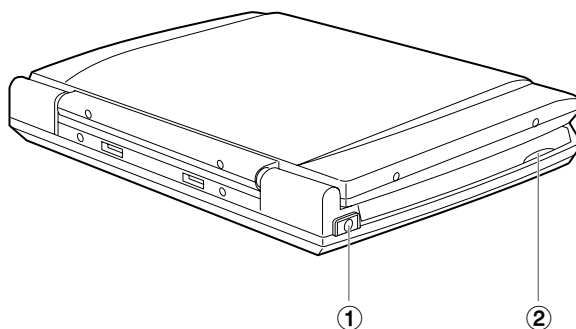

- ① DC IN 9V jack
- ② ▲DISC OPEN portion


Display window

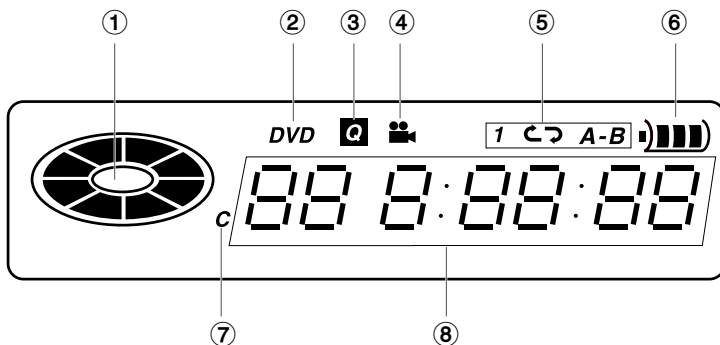

- | | |
|--|---|
| <ul style="list-style-type: none"> ① Playback indicator ② DVD indicator ③ Q SURROUND indicator ④ Angle indicator ⑤ Repeat playback indicators ↺ : Disc repeat 1 ↺ : Chapter/title/track repeat ↺A-B : A-B repeat | <ul style="list-style-type: none"> ⑥ Battery indicator ⑦ Chapter indicator ⑧ Title/chapter/track number indication/Time indication <p>The SET UP button is used to change the display to title or chapter during DVD playback.</p> |
|--|---|

CONTINUE

Remote control

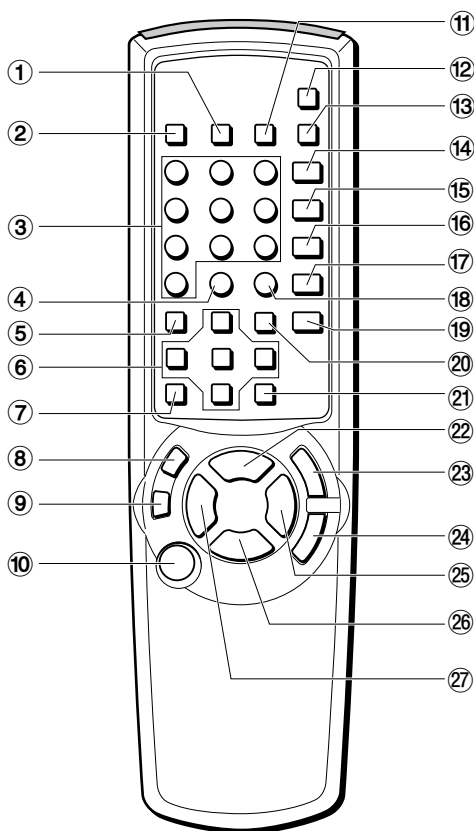


- | | |
|----------------------------------|--------------------------|
| ① PROGRAM button | ⑮ AUDIO SELECT button |
| ② MARK button | ⑯ SUBTITLE SELECT button |
| ③ 0-9 buttons | ⑰ SUBTITLE ON/OFF button |
| ④ +10 button | ⑱ C(Clear) button |
| ⑤ TOP MENU button | ⑲ T-SEARCH button |
| ⑥ ◀, ▶, ▲, ▼, ENTER buttons | ⑳ MENU button |
| ⑦ ↺ RETURN button | ㉑ SETUP button |
| ⑧ ⏸ button | ㉒ ▶ (Play) button |
| ⑨ ONSCREEN DISPLAY ON/OFF button | ㉓ ▶▶ button |
| ⑩ POWER button | ㉔ ◀◀ button |
| ⑪ REPEAT button | ㉕ ▶▶▶ button |
| ⑫ Q SURROUND button | ㉖ ■ button |
| ⑬ A-B button | ㉗ ◀◀ button |
| ⑭ ■ ANGLE button | |

Remote control

Installing batteries

Detach the battery cover on the rear of the remote control, and insert two R6 (size AA) batteries with **+** and **-** aligned correctly.

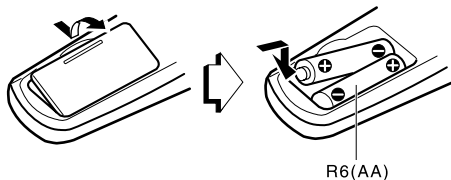

When to replace the batteries


The maximum operational distance between the remote control and the sensor of the units should be approximately 5 meters (16 feet). If this operational distance decreases, replace the batteries with new ones.

NOTES

- When operating with the remote control, point the top of the remote control toward the player.
- If the unit is not going to be used for an extended period of time, remove the batteries to prevent possible electrolyte leakage.
- The remote control may not operate correctly when:
 - The line of sight between the remote control and the unit is exposed to intense light, such as direct sunlight
 - There is fluorescent lighting near the remote sensor.
 - Other remote controls are used nearby (those of a TV set, etc.).

Using the AC adaptor

Two adaptors are supplied with this unit. To make this unit work, use the smaller one (AC-D918U).

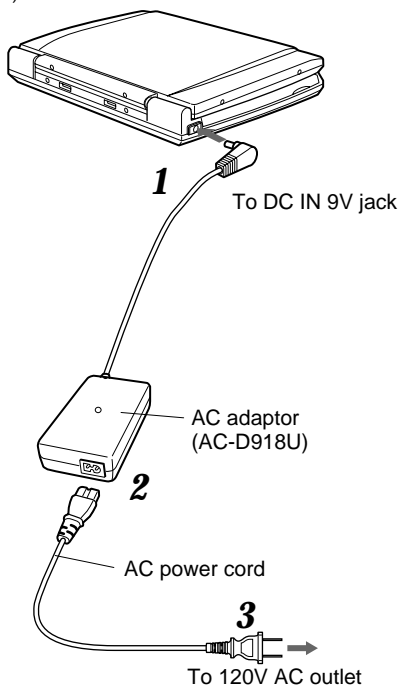

1 Connect the AC adaptor to the main unit.

Insert the AC adaptor plug to the DC IN 9V jack of the main unit.

2 Insert one end of the supplied AC power cord to the AC adaptor socket.

Use only the supplied AC power cord.

3 Insert the AC plug to the AC outlet (120V, 60Hz).

Using the AC adaptor (continued)

Connecting to the cigarette lighter socket in the car

Firmly connect the DC IN 9V jack of this unit and the cigarette lighter socket of your car with the car power adaptor (AIWA DC-901) commercially available.

NOTES


- This unit is not usable with car power adaptors other than the AIWA DC-901. If you use another one, it will cause a malfunction.
- This unit is designed for indoor use. To maintain good performance, do not use and keep this unit in extremely hot place indoors or in the car, or in the place exposed to direct sunlight.
- When this unit is connected to the cigarette lighter socket in the car, this unit will be turned off if the engine is started. To start playback again, turn the power on and press ►(Play).

Using the battery pack

Charging the battery pack

Charge the battery pack fully at the first time of use.

Two adaptors are supplied with this unit. To recharge the battery pack, use the larger one (AC-D920U). Do not recharge the battery pack when it is connected to the DVD player. It may not be recharged enough or the player may be turned off.

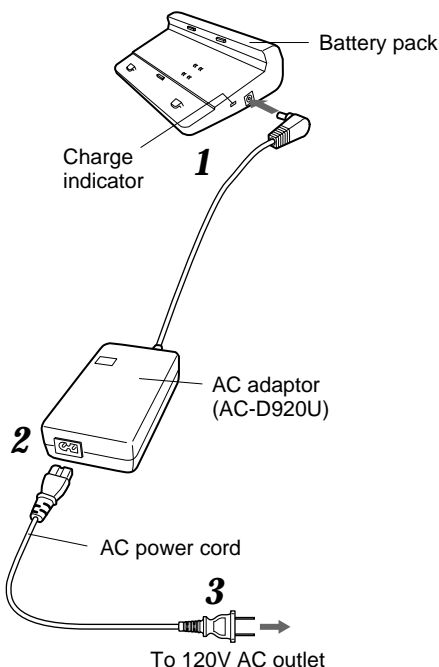

- 1 Connect the AC adaptor to the battery pack.**
- 2 Insert one end of supplied AC power cord to the AC adaptor socket.**
Use only the supplied AC power cord.
- 3 Insert the AC plug to the AC outlet (120V, 60Hz).**

After 3 seconds, the charge indicator lights.

When recharge is finished


The charge lamp turns off. After making sure the indicator is turned off, disconnect the AC adaptor and the supplied power cord.

Time to recharge the battery

The battery indicator changes the indication based on the remaining power in the battery as follows:



Recharge the battery when  appears.

After  is lit for a while, the power is shut off.

Recharge time

Recharging takes approximately 2 hours, 40 minutes at 20°C (68°F). Continuous playback time is approximately 2 hours, depending on usage patterns and the temperature condition.

Notes on using the battery pack

- This battery pack can be recharged approximately 300 times.
- When the unit is powered by the battery pack, the unit automatically enters the standby mode 5 minutes after operation stops. (Auto power saving)
- The battery pack becomes warm while using. When the battery pack is warmed too much, safety circuit works to prevent you from using continuously.
- Do not carry the battery pack in a pocket or handbag together with metal objects such as pendants or key holders.
- Do not short-circuit the terminals.
- Do not disassemble the battery pack, heat it, or put it in water.
- To prolong the performance of the battery pack, recharge it in an ambient temperature of 10 to 30°C (50 to 86 °F) and keep it in a cool location when not using.
In temperatures out of the range above, recharging may not be carried out even if the Charge indicator is lit.
- To maintain the performance of the battery pack, recharge it at least once a year even when it is not used for a long period of time.

Notes on recharging

- Use only the supplied AC adaptor to recharge the battery pack.
- If the battery pack is too warm, it may take more time to charge than usual, or charging may not be done even if the charge indicator lights. Cool it down and charge it again.
- Should the charge indicator not light up, connect the battery pack to the AC adaptor again, or connect it to the AC adaptor again after connecting to the unit and letting it run for 10 to 20 minutes.
- When you connect or disconnect the battery pack during charging, the indicator may turn off for a moment, but it is not a malfunction.
- The battery pack and the AC adaptor become warm during charging, but it is not a malfunction.
- Noises may occasionally occur inside the AC adaptor during charging, it is not a malfunction.
- Be sure to unplug from the wall outlet after charging.


NOTES

- A new battery pack which is not used yet, or one which is not used for more than one month may not be recharged enough. This is due to the characteristic of this battery, and is not a malfunction. In this case, recharge it two or three times before the first use.
- When the charge indicator of the battery pack starts to blink, it is nearly exhausted. Refer servicing to qualified service personnel.
- Noises may be generated on the TV or the radio during recharging. In this case, use a more distant power socket from them.
- Do not recharge or discharge the battery near a heating element such as a heater or direct sunlight.

Using the battery pack (continued)


Connecting the battery pack to the unit

- 1** Fit the claws of the battery pack into the latch slots on the bottom of this unit.

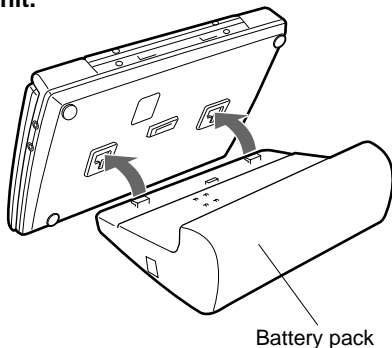


- 2** Push the battery pack up and into the latch slots as shown below.

Make sure that the battery pack is connected firmly.

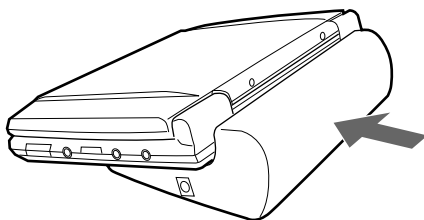

Disconnecting the battery pack


Slide the latch release (A) and slide the battery pack off as shown below.

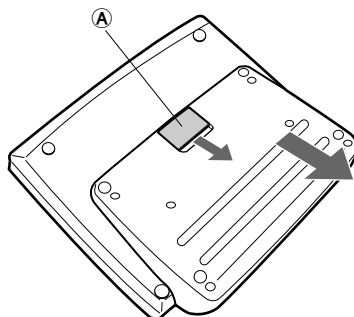

When the player is not used for an extended period of time, disconnect the battery pack from the unit. When it is connected, a small amount of current continues to flow to the player, even when the power is turned off. If left connected for a long time, the battery may become over-discharged.

Caution

When you carry or hold the battery pack, take care not to touch the electrode with metals.

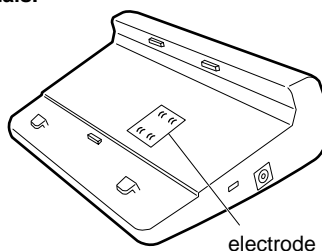

When disposing of the battery pack please check and follow local regulations regarding disposal and recycling for Nickel-Metal Hydride batteries.


Playing back

- 1 Slide POWER switch on the main unit toward ON to turn the power on.**


The power indicator lights.

The power cannot be turned on by POWER of the remote control.



When using with the battery pack, the power may not be turned on at once. In this case, turn the power on again after 3 seconds. If the unit is still not turned on, recharge the battery pack.

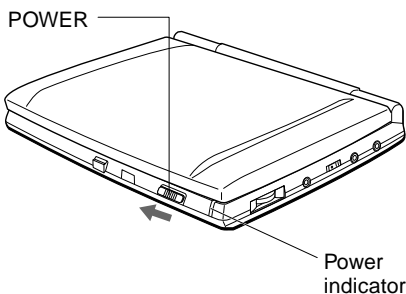

- 2 Press OPEN▲ to open the display panel.**

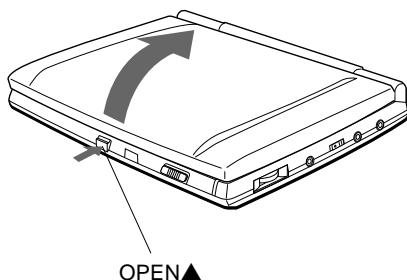


- 3 Put your finger on the pit DISC OPEN▲ on the left side of this unit and open the disc cover.**

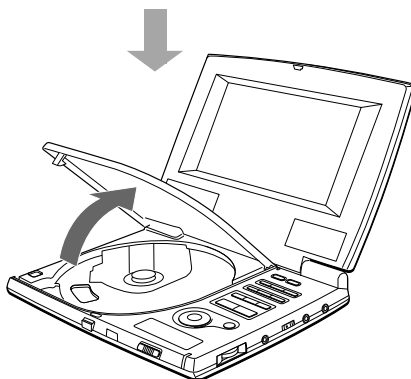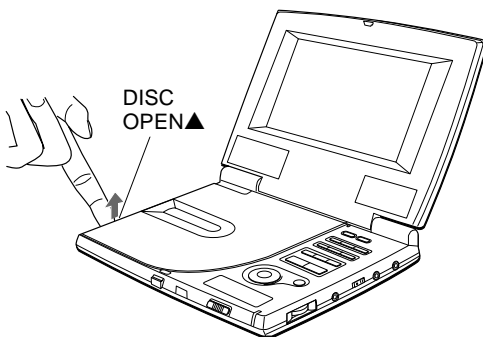

- 4 Load a disc with the label side up and push down around the center of it.**

The disc is fixed with a click.

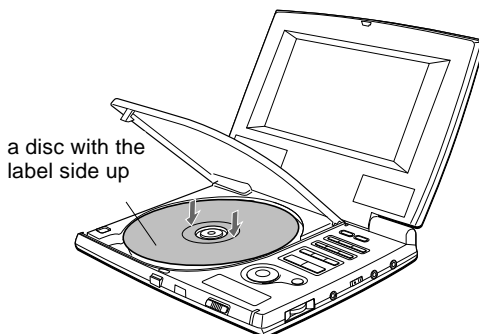


CONTINUE

Playing back (continued)

5 Close the disc cover.

This unit automatically begin playing the disc.

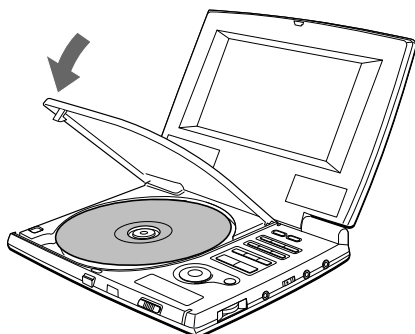

If the disc does not begin to play, press
▶ (Play).

When the remote control is used

The instructions in this manual refer mainly to the buttons on the main unit. Buttons on the remote control with the same names as those on the main unit can be used as well.

NOTES

- Load only one disc.
- After loading or removing a disc, make sure to close the disc cover. If the inside the unit becomes dusty, it will cause a malfunction.
- When playing a DVD disc, set the PAL/NTSC switch on the right side to suit the color system of the disc playing during stop or power off. Otherwise, the full potential of the disc may not be realized.

When the menu screen is displayed

The menu screen may be displayed first after loading a DVD or video CD 2.0 with PBC ON which contains a menu.

You cannot select the program in the menu screen while the on screen display appears. Turn off the on screen display before playing a disc. See page 15.

DVD: Use ▲▼◀▶ or the number buttons to select the program you would like to view, then press ENTER to begin playback. Press TOP MENU or MENU to return to the menu screen.

Video CD: Use the number buttons to select the program you would like to view. Playback begins. Press RETURN to return to the menu screen.

When PBC is set to ON, you cannot select the program with the main unit.

For either DVD or Video CDs, menu continuations and the exact operating procedures for using the menu may vary from disc to disc. Follow the instructions on the menu screen.

To turn the power off

Slide the POWER switch on the main unit toward OFF, or press POWER on the remote control.

To avoid the accidental operation

Slide the POWER switch to HOLD.

After playing back a disc

Slide the POWER switch toward OFF to turn the power off.

If stop mode or pause mode lasts for more than 5 minutes, the unit automatically enters standby mode (Auto power saving).


While the liquid crystal display is off, the power indicator remains lit. Press ▶ (Play) to turn on the power again.

Removing the disc

Caution

Make sure that the disc stops and is completely still before you remove the disc. If you touch the spinning disc, you may hurt your finger.

- 1 Press ■ to stop playback.
- 2 Put your finger on the pit DISC OPEN▲ on the left side of this unit and open the disc cover.
- 3 Remove the disc from the groove.
Do not touch the surface of the disc.

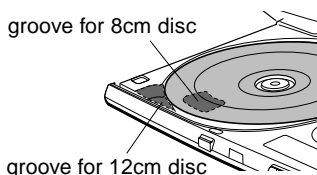



- 4 Close the disc cover.

About the Ⓢ symbol display

The Ⓢ symbol will be displayed on the screen if your operation is prohibited by the unit or the disc.

NOTES

- During playback, some of the basic functions may not work with some DVD discs. This is not a malfunction. Operate it referring to the instructions of the discs.
- When the display panel is closed, the liquid crystal display and the speakers are turned off.
- When you do not use the liquid crystal display, close the display panel to save AC power or the battery pack. Make sure that the display panel is locked with a click.
- During playback of an audio CD, set the display mode of the liquid crystal display to off to save AC power or the battery pack. (See page 14).
- A disc with the function to change the language in its menu may not be played back correctly. In this case, start play from the menu, then return to the menu and change the language.

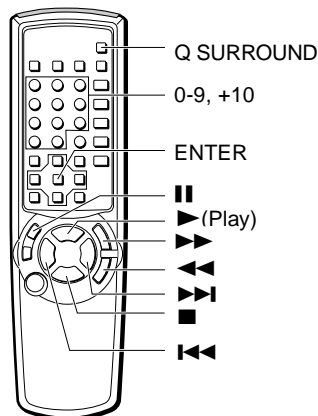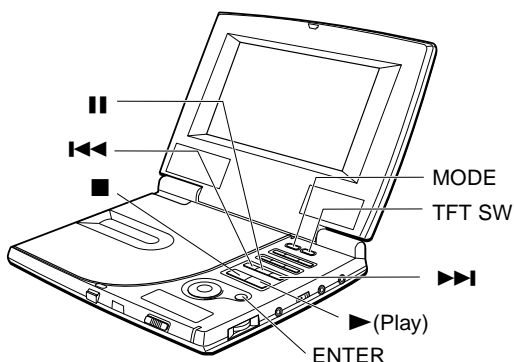

Stopping playback

Press **■**.

This unit remembers the point at which playback stopped (Resume function). When **>>**(Play) is pressed, playback begins from the resumed point.

To clear the resumed point

Press **■** again during stop. It is also cleared when the disc cover is opened.

Still (Pause)

Press **II** during playback.

To return to normal playback

Press **>>**(Play) or **II**.

NOTE

 
This unit remembers the point at which playback was paused.

Fast Forward, Reverse

Press **<<<** or **>>>** on the remote control during playback.

The program is fast forwarded or in rewind at high speed.

- When **<<<** or **>>>** is pressed repeatedly during DVD or video CD playback, the playback speed changes each time the button is pressed, as shown below.



To return to normal playback

Press **>>**(Play).

NOTE

There is no audio during fast forward or reverse (DVD and Video CD only). During audio CD play, the sound is heard intermittently.

Skipping

Press ◀◀ or ▶▶ during playback.

- Skip to the next chapter or track: ▶▶
The disc position advances one chapter or track each time the button is pressed.
- Return to the previous chapter or track: ◀◀
For DVD, video CD with PBC on, and audio CD:
Pressing ◀◀ once skips to the beginning of the chapter (track) currently being played, and pressing ◀◀ twice skips to the previous chapter (track).
For video CD with PBC off:
Pressing ◀◀ once skips to the previous track.

To skip to the desired chapter or track directly using the remote control (video CD, audio CD)

Enter the desired track number using the number buttons on the remote control.

Example: To play track 10

Press +10, 0 on the remote control.

 
Playback begins.

Switching the brightness of the liquid crystal display

The liquid crystal display can be brightened or be dimmed.

Press TFT SW on the unit.

The brightness is switched as follows.




NOTE

When using with the AC adaptor, the liquid crystal display is bright when the power is turned on.

When using with the battery pack, the liquid crystal display is dim when the power is turned on.


Display mode on the liquid crystal display

Each time you press MODE, the display changes as follows.

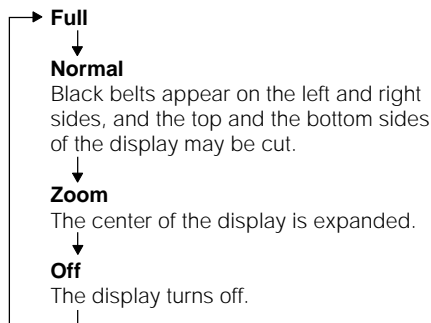

Information about On Screen Display (OSD)


This unit features OSD Menu Icons showing disc information (title/chapter/track number, elapsed playing time, audio/subtitle language, angle, and sound) and player information (repeat play, play mode, marker, etc.). Some icons only show the indicated information. Other icons allow the settings to be changed.

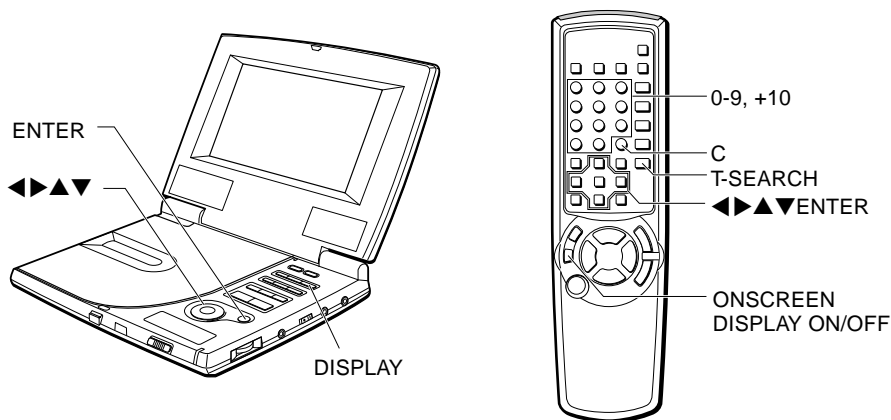

Either when playing, or while the resume function is active, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.

When the button is pressed repeatedly during playback, the information displays are shown as follows.

During a DVD playback:

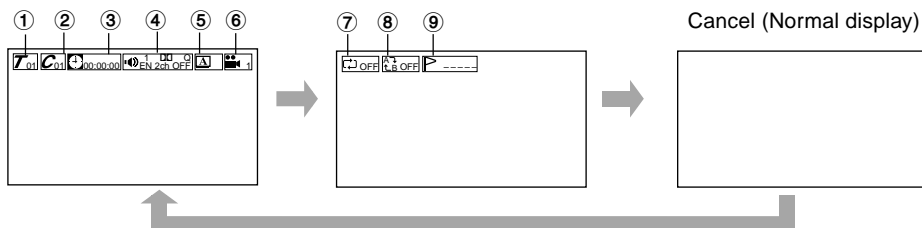

- | | |
|---|---|
| <p>① shows the title number.
(See page 16.)</p> <p>② shows the chapter number.
(See page 17.)</p> <p>③ shows the elapsed playing time during playback, or the time to be searched. (See page 18.)</p> <p>④ shows the audio information.
(See page 27.)</p> <p>⑤ shows the subtitle information.
(See page 26.)</p> | <p>⑥ shows the angle information.
(See page 25.)</p> <p>⑦ shows the repeat mode.
(See page 23.)</p> <p>⑧ shows the A-B repeat mode.
(See page 24.)</p> <p>⑨ shows the memorized mark points information. (See page 19.)</p> |
|---|---|

During Video CD or an audio CD playback:

① ② ③ ④ ⑤

➔

⑥ ⑦ ⑧

➔

Cancel (Normal display)

① shows the track number.
(See page 16.)
While playing a video CD Version 2.0,
if the "--" appears instead of the track
number, the PBC function is set to
ON.

② shows the elapsed playing time
during playback.

③ shows the audio information (Video
CD only). (See page 28.)

④ shows the playback mode.
(See page 21.)

⑤ shows the PBC is on or off (Video CD
only).
(See page 20.)

⑥ shows the repeat mode.
(See page 24.)

⑦ shows the A-B repeat mode.
(See page 24.)

⑧ shows the memorized mark points
information. (See page 19.)

**Title search (DVD)/
Track search (Video CD with PBC off, audio CD)**

- 1** Either when playing, or while the resume function is active, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

To operate with the T-SEARCH button
Press T-SEARCH on the remote control either when playing, or while the resume function is active. Then go to step 3.

2 Press **◀** or **▶** to select the icon of “Title search (DVD)” or “Track search (Video CD with PBC off, audio CD)”.

3 Press **▲** or **▼** to enter the desired title/track number.

- The number buttons on the remote control can also be used.

Example:

To play title (track) number 2
press 2.



Example:

To play title (track) number 12
Press 1, 2 (or +10, 2).

If you enter the wrong number
Press **C** to delete the number you entered. Then enter the correct number.

4 Press **ENTER**.
Playback begins with the specified title/track.
- Title search

Track search
- NOTE**
- Title/track search will not work if you specify a title/track number which does not exist on the disc.
- ENGLISH 16

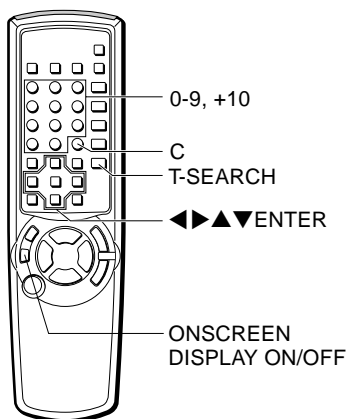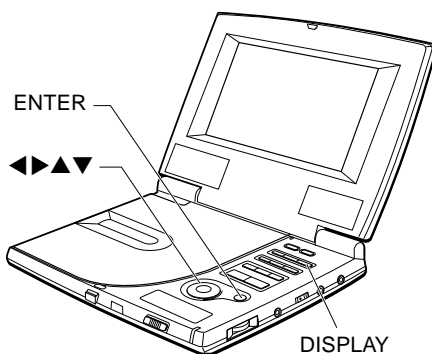

Chapter search (DVD)

- 1 While playing, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.**

The menu icons are displayed.

To operate with the T-SEARCH button

Press T-SEARCH on the remote control while playing. Then go to step 2.

- 2 Press ◀ or ▶ to select the “Chapter search” icon.**



- 3 Press ▲ or ▼ to enter the desired chapter number.**

- The number buttons on the remote control can also be used.

Example: to play chapter number 17
press 1, 7 (or +10, 7).

If you enter the wrong number

Press C to delete the number you entered.
Then enter the correct number.

- 4 Press ENTER.**

Playback begins with the specified chapter.

NOTE

Chapter search will not work if you specify a chapter number which does not exist on the disc.

Time search (DVD)

With a DVD which allows displaying of elapsed time, you can specify a time on the disc to search for a desired location.


1 While playing, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

To operate with the **T-SEARCH** button

Press T-SEARCH on the remote control while playing. Then go to step 2.

 
2 Press **◀** or **▶** to select the “Time search” icon.



3 Use the number buttons to enter the time of the desired location.

Example:

 - To start play at 1 hour, 17 minutes, 30 seconds (1:17:30)
Press 1 (hour), 1, 7 (minutes), then 3, 0 (seconds).



- To start play at 8 minutes 7 seconds (0:08:07)
Press 8 (minutes), then 0, 7 (seconds).

If you enter the wrong number


Press C to delete the number you entered.
Then enter the correct number.

4 Press **ENTER**.

Playback begins from the specified time.

NOTES

- Time search does not work if you specify a time greater than the length of the disc.
- Time search may not work with some discs.

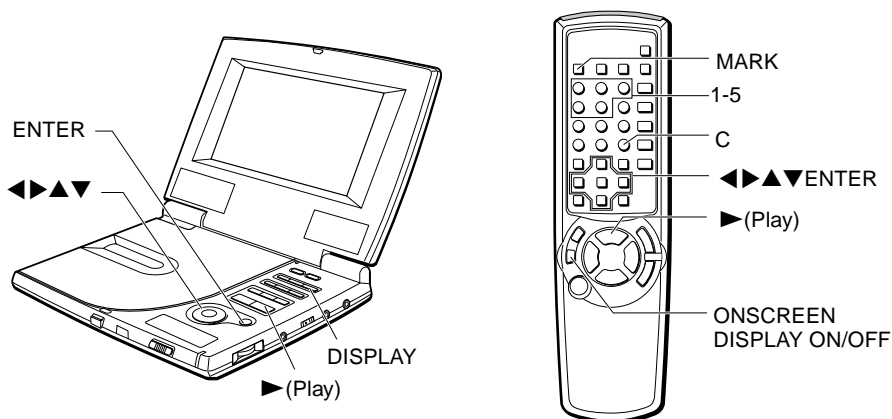

Mark function (DVD, Video CD with PBC off, audio CD)

Playback can restart from a memorized point. The mark cannot span a title boundary, but must be within a single title.

To memorize the points


- 1 While playing, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.**

The menu icons are displayed.

To memorize the points with the MARK button

Press MARK on the remote control while playing. Then go to step 3.

- 2 Press < or > to select the "Mark function" icon.**

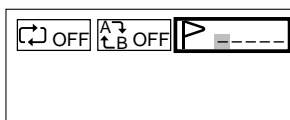

- 3 Press ENTER at the desired point.**

A point is memorized.

To memorize other points

Press < or > to move the cursor (the yellow-colored area). Then press ENTER .

NOTE

The mark function may not work with some discs.

To restart play from the memorized point

- 1 While the “Mark function” icon is displayed, press ◀ or ▶ to select a point.**

You can also use the number buttons (1-5) to select a point.

- 2 Press ▶(Play) to start play.**

To restart play from the memorized point with the MARK button

- 1 Press MARK while playing.
- 2 Use the number buttons (1-5) to select a point.

To clear a memorized point

- 1 While the “Mark function” icon is displayed, press ◀ or ▶ to select a point to be cleared.
 - 2 Press C on the remote control. The selected point is cleared.
- When the disc cover is opened, all the memorized points are also cleared.
 - With DVDs, the memorized point is canceled by pressing ■ twice during playback.

Checking ON or OFF of PBC (video CD)


When using menu playback with a video CD, the player returns to the menu display when the selected scene finishes (PBC ON).

You can also set the player to play the entire CD without returning to the menu screen, just like with normal audio CDs and video CDs with no menu capabilities (PBC OFF).

On OSD, PBC ON or OFF can be checked but cannot be set. Change it in the SETUP menu. (See page 37.)

Either when playing, or while the resume function is active, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.

The menu icons are displayed.

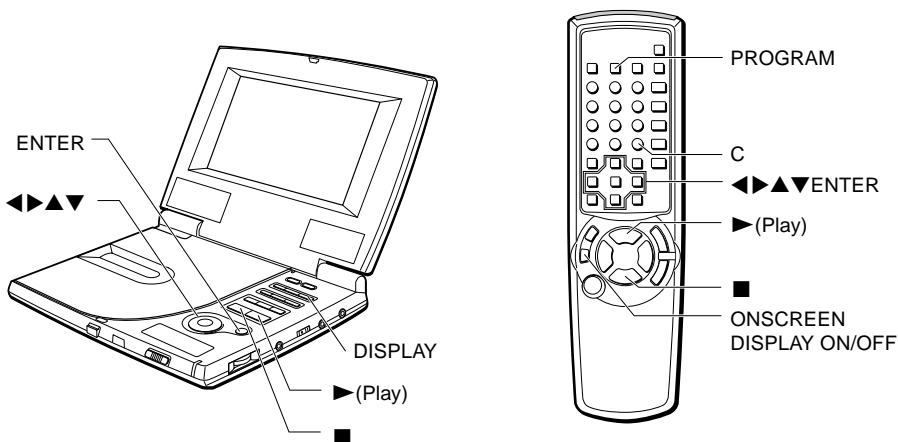

Programed playback (Video CD with PBC off, audio CD)

With video and audio CDs, you can select the tracks you would like to play, and play them in any order. You can specify up to 30 tracks. You can also repeat programmed selections.

- 1** Either when playing, or while the resume function is active, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

To program with the PROGRAM button

Press **PROGRAM** on the remote control either when playing, or while the resume function is active. Within 10 seconds press **▲** or **▼** to select "PRG", then press **ENTER**. Then go to step 4.


- 2** Press **◀** or **▶** to select the "Playback mode" icon, then press **▲** or **▼** to select "PRG".



- 3** Press **ENTER**.

A programming screen is displayed on the display.

- 4** Press **◀** or **▶** to select the number of the track you want to program. Then press **ENTER**.

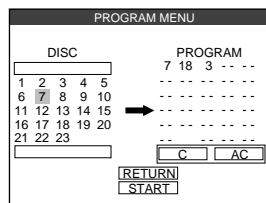


If you enter the wrong number

Press **C** to delete the number.

- 5** Repeat step 4 to program other tracks.

6 Press ▲▼◀▶ to select “START”, then press ENTER.

Playback begins from the specified track.
You can also start playback with ▶ (Play).

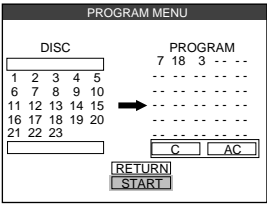

To delete a programed track

On the programing screen, select “C” with ◀ or ▶. Then press ENTER. The last programed number is canceled.
You can also delete the last program with C on the remote control.

To clear the programed contents

At the programing screen, select “AC” with ◀ or ▶. Then press ENTER. All the programed contents are cleared.
When ■ is pressed twice, the disc cover is opened, or the power is turned off, all the programed contents are also cleared.

Adding a programed track in stop mode

Show the programing screen and select tracks. Then press ENTER. The selected track is programed to the last position.

To cancel programed playback

Press ■.
Programed playback is canceled by stopping playback.

NOTE

During programed playback, the on screen display cannot be used.

Random playback

(VideoCD with PBC off, audioCD)

You can playback tracks in random order.
(Random playback)

1 Either when playing, or while the resume function is active, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.

The menu icons are displayed.

2 Press ◀ or ▶ to select the “Playback mode” icon.



3 Press ▲ or ▼ to select “RND”.



4 Press ENTER.

Random playback begins.

To operate with the PROGRAM button

Press PROGRAM on the remote control either when playing, or while the resume function is active. Within 10 seconds, press ▲ or ▼ to select “RND”, then press ENTER.


To cancel random playback

Press ■.
Random playback is canceled by stopping playback.

NOTE

During random playback, the on screen display cannot be used.


Repeat playback

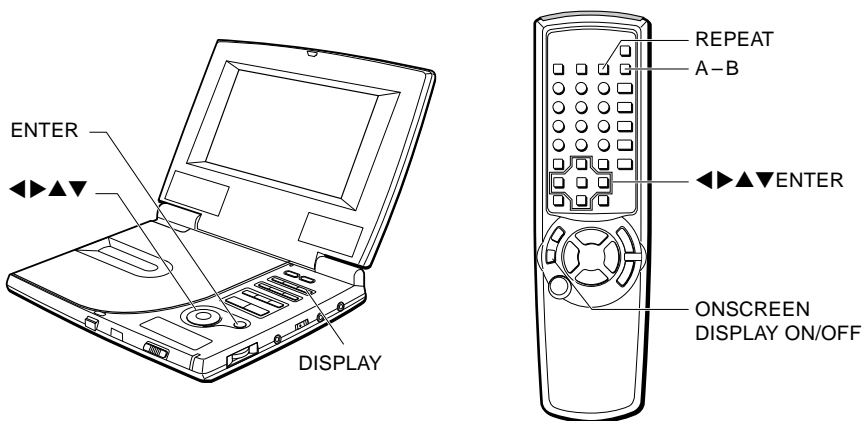

Repeating a DVD


- 1** Either when playing, or while the resume function is active, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly. The menu icons are displayed.

- 2** Press **◀** or **▶** to select the “Repeat playback” icon.

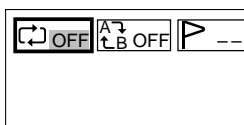


- 3** Press **▲** or **▼** to select the repeat mode. The repeat mode will change each time you press the button.

 
C(Chapter): Repeat of the chapter being played.



 
T(Title): Repeat of the title being played.



 D(Disc): Repeat the whole disc being played.



 OFF: Cancel repeat mode. (Normal playback)



When using the REPEAT button


Press REPEAT on the remote control repeatedly. The repeat mode will change each time you press the button.

Repeating a Video CD with PBC off /an audio CD

- 1** Either when playing, or while the resume function is active, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

 
- 2** Press **◀** or **▶** to select the “Repeat playback” icon.




- 3** Press **▲** or **▼** to select the repeat mode.

The repeat mode will change each time you press the button.

 
T(Track): Repeat of the track being played.



 D(Dics): Repeat of all tracks on a disc being played.



 OFF: Cancel repeat mode. (Normal playback)



When using the REPEAT button

Press REPEAT repeatedly. The repeat mode will change each time you press the button.

A-B repeat


Allows you to select a portion of a disc to be repeated. The portion to be repeated may not span a track boundary, but must be within a single track.

A-B repeat function may not work with some DVDs.

- 1** While playing, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.


The menu icons are displayed.

 - 2** Press **◀** or **▶** to select the “A-B repeat” icon.




- 3** Press **ENTER** at the starting point of the section you want to repeat.

 The Repeat indicator is displayed in the display window.



- 4** Press **ENTER** again at the ending point of the section you want to repeat.

 The player returns to point A and plays the section between A and B.



To cancel the repeat

Press A-B on the remote control.


When using the A-B button

Press A-B at the starting point of the section you want to repeat and at the ending point.

NOTES

- The track or the specified points may change if the DVD player is jarred while playing with Repeat or Repeat A-B.

- Repeat playback may not work with some discs.

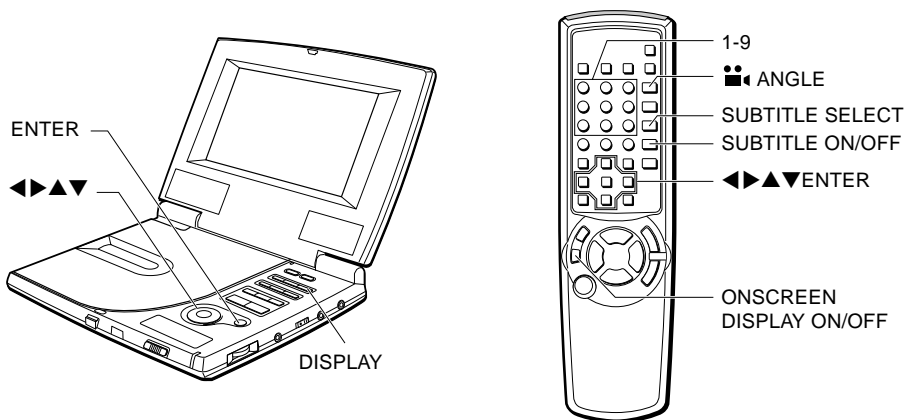


Changing the angle (DVD)

When playing a DVD which has been recorded in multi-angle (photographed from several different angles), you can select which angle you would like to view the action from. When a multi-angle scene comes on during playback, the indicator will be displayed on the display window to let you know that you can change the angle.

- 1 While playing, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.**


The menu icons are displayed.

 - 2 Press ◀ or ▶ to select the “Angle” icon.**



- 3 Press ▲ or ▼ to select the angle.**

You can also use the number buttons to select the angle.

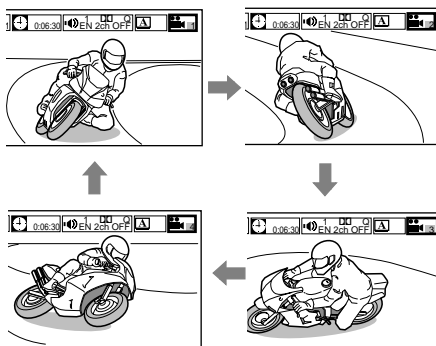

When using the ANGLE button

Press ANGLE on the remote control to change viewing angle when the indicator is shown on the display window. The angle will change each time you press ▲ or ▼.

NOTES

- The symbol will be displayed if you select the Angle while viewing a disc which does not have multiple viewing angles, or if viewing a part of the disc which does not allow angle selection.
- Depending on the disc, the symbol may not be displayed or the indicator may appear, even if the angle function does not work.

Displaying and changing subtitles


When playing discs which contain subtitles, you can display the subtitles on the screen or change the language of the subtitles.

Displaying subtitles


- 1 While playing, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

- 2 Press **◀** or **▶** to select the “Subtitle on/off” icon.

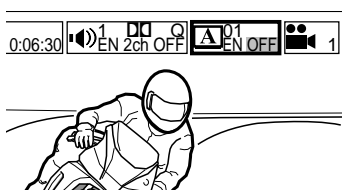

- 3 Press **▲** or **▼** to select “ON”.

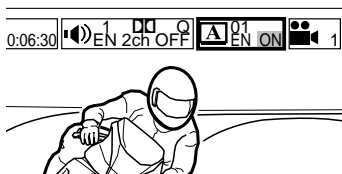

To turn off the subtitles

Press **▲** or **▼** to select “OFF”.

When using the SUBTITLE ON/OFF button

Press **SUBTITLE ON/OFF** on the remote control during playback. Subtitles will be displayed.

NOTE

Some discs have subtitles which are on by default. With such discs, **SUBTITLE ON/OFF** may not allow you to remove the subtitles.


Changing the subtitles

- 1 While playing, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

- 2 Press **◀** or **▶** to select the “Subtitle” icon.


- 3 Press **▲** or **▼** to select the desired subtitles.

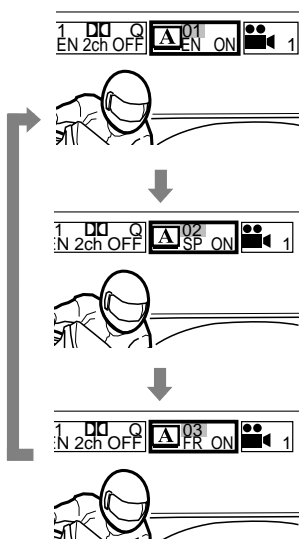

NOTES

- The first subtitles displayed will be in the subtitle language selected with the subtitle setting. (See page 33.) If there are no subtitles in that language on the disc, the disc will determine which subtitles are shown.
- Subtitles may only be changed with discs which contain more than one set of subtitles.
- The number of subtitle languages varies from disc to disc.
- With some discs, it may take a few moments after you press **SUBTITLE SELECT** for the new subtitles to be displayed.

Changing the audio track

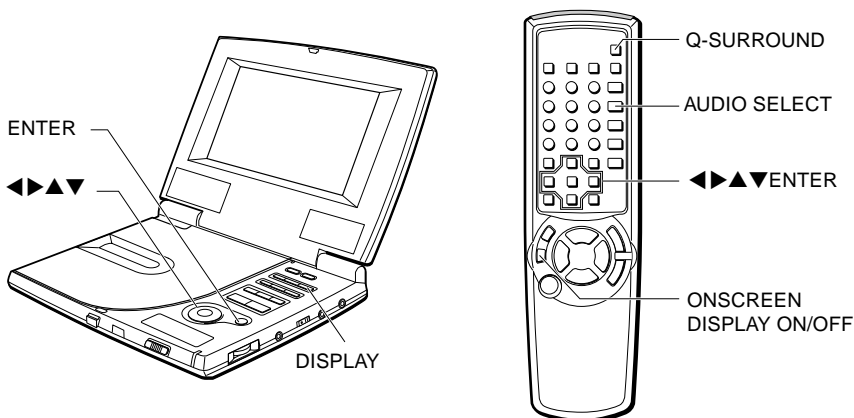

Selecting audio tracks (DVD)

Some DVDs have more than one audio track, such as soundtracks with different languages. While playing such a disc, you can change the audio track to hear the different soundtracks.

- 1 While playing, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.**


The menu icons are displayed.

- 2 Press ◀ or ▶ to select the “Audio track” icon.**



- 3 Press ▲ or ▼ to select the audio track.**

 The audio track will change each time you press ▲ or ▼.



When using the AUDIO SELECT button

Press AUDIO SELECT on the remote control during playback.

The audio track will change each time you press the button.

Information on the sound mode

When a disc is in this DVD player, the sound mode information below is shown with the “Audio track” icon.

- shows the channel of Dolby system (2ch/ 5.1ch).
- shows the “dts” during playback of a DVD with dts.

NOTES

- When playing a DVD with soundtracks in multiple languages, the audio will automatically be played in the language which was selected when the DVD player was set up. If there is not a soundtrack in that language on the disc, the disc will determine which audio track is played.
- The audio track may only be changed for discs which contain multiple audio tracks.
- The number of audio tracks available differs from disc to disc.

Selecting karaoke audio (video CD, DVD)

The method of recording the vocal audio may differ from disc to disc. This DVD player allows you to select the right method for the disc, so that you can use any karaoke disc.

Video CD karaoke:

- 1** Either when playing, or while the resume function is active, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

- 2** Press **◀** or **▶** to select the “Audio track” icon.




When using the AUDIO SELECT button

Press AUDIO SELECT on the remote control when playing or while the resume function is active. Then go to step 3.

- 3** Press **▲** or **▼** to select the audio track.

The audio track will change each time you press **▲** or **▼**.

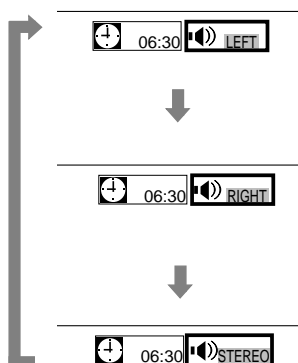


Video CD karaoke discs typically have the vocals recorded on the right channel. Select “LEFT” to play back music without vocals. Refer to the instructions with the karaoke disc for more information.

DVD karaoke:

- 1** While playing, press **DISPLAY** on the main unit or **ONSCREEN DISPLAY ON/OFF** on the remote control repeatedly.

The menu icons are displayed.

 - 2** Press **◀** or **▶** to select the “Audio track” icon.




- 3** Press **▲** or **▼** to select the audio track. Then press **ENTER**.

The audio track will change each time you press **▲** or **▼**.

Example:

A disc has 2 audio tracks (track 1 and track 2), and track 1 has 2 vocal channels.

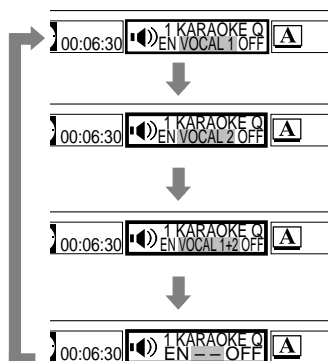

NOTES

- Refer to the instructions with the karaoke disc for more information.
- This function is available only when the “Digital Output” is set to “2 CH 48 kHz 16 bit PCM”.

CONTINUE

Changing the audio track (continued)


Selecting Q surround (DVD)

Even when only two speakers are used for the left and right, Q SURROUND makes the sounds rich and wide as if you are surrounded by two front speakers and two rear speakers.


- 1 Either when playing, or while the resume function is active, press DISPLAY on the main unit or ONSCREEN DISPLAY ON/OFF on the remote control repeatedly.**

The menu icons are displayed.

 - 2 Press ◀ or ▶ to select the “Q surround” icon.**



 - 3 Press ▲ or ▼ to select “ON” or “OFF”.**



When using the Q SURROUND button



When pressing Q SURROUND on the remote control during playback, the Q surround mode can be selected directly.

To cancel Q SURROUND, press Q SURROUND again.

NOTE

When ■ is pressed twice, or the disc cover is opened, Q SURROUND is canceled.

Changing setup values

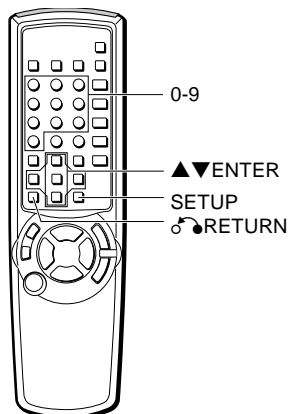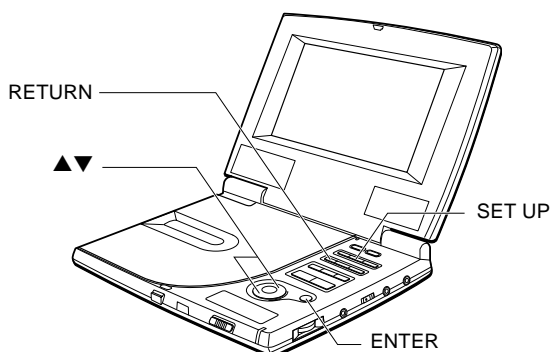


Basic operations

Your DVD player comes from the factory with all the basic items set properly. Change any other settings according to your individual setup and preferences.

1 Press SET UP while the player is stopped.

The setup screen is displayed.

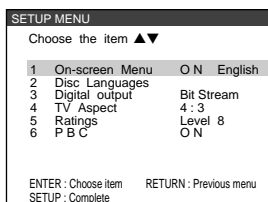

The setup screen cannot be displayed while the On Screen Display is selected. Press **ONSCREEN DISPLAY ON/OFF** to turn off the On Screen Display.

2 Use ▲ or ▼ to move the cursor (the yellow area) to the setting to be changed.

On-screen Menu (Page 31)

- Sets whether the on-screen guide messages are to be displayed or not.
- Sets the on-screen menu language to English or Spanish.

Disc Languages (Page 32)

Sets the audio soundtrack language, subtitle language, and the language used in the menu screen.

* If the language selected by these settings does not exist on the disc, the disc's default language is used.

Digital output (Page 34)

Sets the optical digital out to output either by bitstream or by linear PCM.

TV Aspect (Page 35)

Sets the aspect ratio of the television set to which the DVD player is connected.

Ratings (Page 36)

When playing discs with preset restriction level encoding, this setting allows the player to automatically cut scenes of excessive violence, etc.

PBC (Page 37)

Sets the default PBC (Play back control) mode on or off for playing a video CD with PBC function.

3 Press ENTER.

The menu screen for the item you selected will be displayed.

Changing setup values (continued)

4 Use **▲** or **▼** to move the cursor (the yellow area) to the desired setting.

5 Press **ENTER**.

The selected setting will be saved, and the main setup screen of step 1 will be displayed again. However, for some settings the screen will display a more detailed menu instead. Follow the directions shown on the screen.

6 Press **SET UP** to exit the setup menu.

To exit the setup menu without making any changes:

Press one of the following buttons instead of pressing **ENTER**.

RETURN: Return to the previous screen with no changes.

SET UP: Exit the setup menus.

NOTE

When setting the setup menu item, make sure to close the disc cover.

On-screen Menu


There are 2 items you can set.

Guide Message:

Sets whether the on-screen guide messages at the upper right side of the TV screen are to be displayed or not.


1 At the initial setting screen, select “On-screen Menu” by using **▲** or **▼**. Then press **ENTER**.

2 Use **▲** or **▼** to move the cursor (the yellow area) to “Guide Message”.

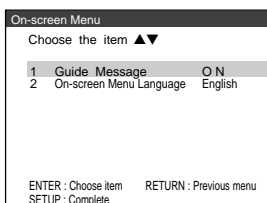

3 Press **ENTER**.

4 Use **▲** or **▼** to move the cursor (the yellow area) to the desired setting.

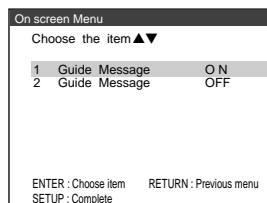

5 Press **ENTER**.

Your entry is saved.


6 Press **RETURN** to return to the previous screen or press **SET UP** to exit the setup menu.

On-screen Menu Language:

Sets the on-screen menu language to English or Spanish.


1 At the initial setting screen, select “On-screen Menu” by using **▲** or **▼**. Then press **ENTER**.

2 Use **▲** or **▼** to move the cursor (the yellow area) to “On-screen Menu Language”.

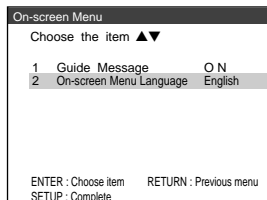

3 Press **ENTER**.

4 Use **▲** or **▼** to move the cursor (the yellow area) to the desired setting.

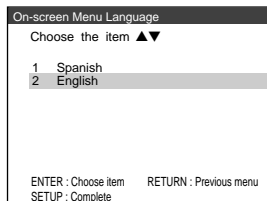

5 Press **ENTER**.

Your entry is saved.

6 Press **RETURN** to return to the previous screen or press **SET UP** to exit the setup menu.


Disc Languages

Sets the language for displaying DVD disc menus.


There are 3 items you can set.

Audio Language:

- 1 At the initial setting screen, select “Disc Languages” by using ▲ or ▼. Then press ENTER.
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to select “Audio language”.

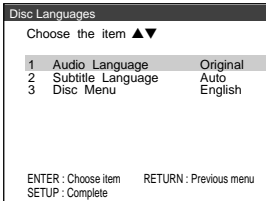

- 3 Press ENTER.
- 4 Use ▲ or ▼ to move the cursor (the yellow area) to the desired language. And press ENTER.

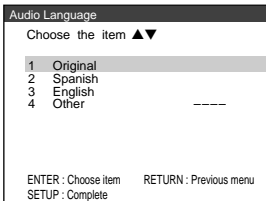


Original: Play discs in the language specified as the default on the disc. Then go to step 7.

Spanish: Play discs in Spanish. Then go to step 7.

English: Play discs in English. Then go to step 7.

Other: The language code setting screen appears. Then go to step 5.

- 5 When “Other” is selected in step 4, enter a four-digit language code by using ▲, ▼ and number buttons. Please refer to the list of language codes on page 45.

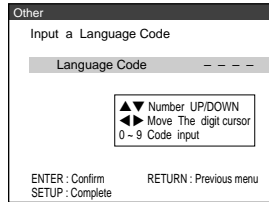

To correct the input number, press ◀ or ▶ to move the cursor to the number to be corrected, and then input new number .


- 6 Press ENTER. Your entry is saved.
- 7 Press RETURN to return to the previous screen or press SET UP to exit the setup menu.

If the language selected by these settings does not exist on the disc, then the disc's default language will be used.

Changing setup values (continued)


Subtitle Language:

- 1 At the initial setting screen, select “Disc Languages” by using ▲ or ▼. Then press ENTER.
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to “Subtitle Language”.

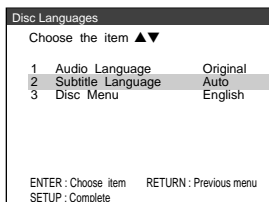

- 3 Press ENTER.

- 4 Use ▲ or ▼ to move the cursor (the yellow area) to the desired language. And press ENTER.

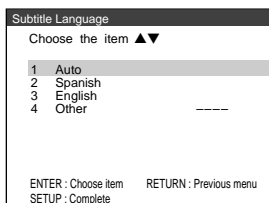

Auto:

Subtitles will be automatically displayed in the default language specified on the disc.

Spanish:

Play discs in Spanish

English:

Play discs in English.

Others:


The language code setting screen appears. The procedure for setting the language code is the same as for “Audio Language” setting. Refer to the steps 5 and 6 of “Audio Language” setting.

- 5 Press RETURN to return to the previous screen or press SET UP to exit the setup menu.


If the language selected by these settings does not exist on the disc, then the disc’s default language will be used.

Disc Menu:

- 1 At the initial setting screen, select “Disc Languages” by using ▲ or ▼. Then press ENTER.
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to “Disc Menu”.

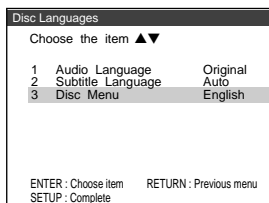

- 3 Press ENTER.
- 4 Use ▲ or ▼ to move the cursor (the yellow area) to the desired language. And press ENTER.

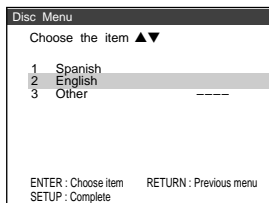

Spanish:

Show the Disc menu in Spanish.

English:

Show the Disc menu in English.

Other:

The language code setting screen appears. The procedure for setting the language code is the same as for “Audio Language” setting. Refer to the steps 5 and 6 of “Audio Language” setting.


- 5 Press RETURN to return to the previous screen or press SET UP to exit the setup menu.

If the language selected by these settings does not exist on the disc, then the disc's default language will be used.

Digital Output

Sets the audio output to be output from AUDIO/ OPT OUT jack of the unit according to the type of audio equipment connected to the unit.

- 1 At the initial setting screen, select “Digital output” by using ▲ or ▼. Then press ENTER.
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to the suitable setting.

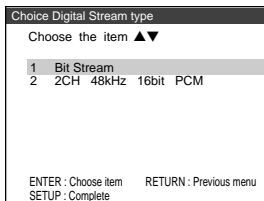

Bit Stream (See page 40.):

Digital output is applied only for DVDs with 48 kHz/16 bit linear PCM audio, and is impossible for DVDs with 48 kHz/20 bit/24 bit, 96 kHz linear PCM audio during playback. When they are played back, signals are converted into 48 kHz/16 bit with digital output. Due to secured copyrights, DVDs with PCM audio are played back at 48 kHz/16 bit or below. DVDs recorded in Dolby Digital (AC-3) format will be played back with Dolby Digital (AC-3) Bitstream (2ch-5.1ch) audio output. Select this option if your DVD player is connected to a Dolby Digital (AC-3) decoder.

When the DTS audio is selected and played, DTS bitstream is output to Bit-stream.

2CH 48KHz 16bit PCM:

Converts output into 48 kHz/16 bit PCM (2ch) when a DVD recorded in Dolby Digital (AC-3) format is played back.

- 3 Press ENTER.

Your entry is saved.

- 4 Press SET UP to exit the setup menu.

Changing setup values (continued)


TV Aspect

There are 2 options for the television aspect ratio.


When your television is connected to this unit with the connecting cable has a conventional size screen (4:3), refer to "NORMAL TV". If the connected TV has a wide-screen (16:9), refer to "WIDE TV".

NORMAL TV:

- 1 At the initial setting screen, select "TV Aspect" by using ▲ or ▼. Then press ENTER.
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to "NORMAL TV 4:3".

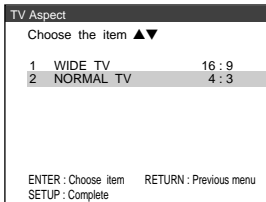

- 3 Press ENTER.
- 4 Use ▲ or ▼ to move the cursor (the yellow area) to the suitable setting.

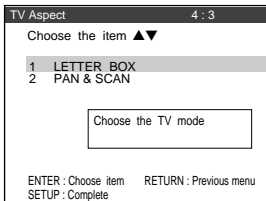


LETTER BOX

Media recorded in wide (16:9) format will be played in "letterbox" style, with black bands at the top and bottom of the screen.



PAN & SCAN


Media recorded in wide (16:9) format with pan-scan encoding will be played at the full screen height, with the left and right portions cut off. Other media will be played in "letterbox" style.

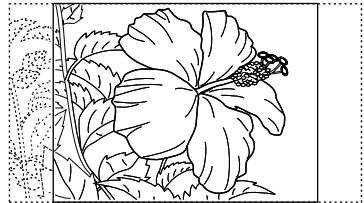

- 5 Press ENTER.
Your entry is saved.
- 6 Press SET UP to exit the setup menu.

WIDE TV:

- 1 At the initial setting screen, select "TV Aspect" by using ▲ or ▼. Then press ENTER.
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to "WIDE TV 16:9".

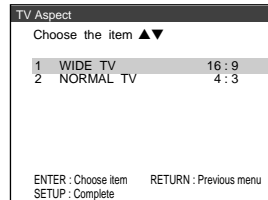

- 3 Press ENTER.
Your entry is saved.
- 4 Press SET UP to exit the setup menu.


Ratings

Caution

In some discs, the rating level mentioned on the disc label is not registered inside the disc. To check whether the lock setting is functional in this unit, carry out the lock setting procedures.


- 1 At the initial setting screen, select "Ratings" by using ▲ or ▼. Then press ENTER.
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to the level you would like to set.

The smaller the number, the higher the level of restriction. For instance, setting the rating level to 1 will make it impossible to play any disc with a rating level from 2 to 8. The rating scheme may vary from disc to disc. Check the actual disc.

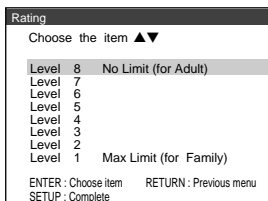

- 3 Press ENTER.

A password entry screen is displayed.

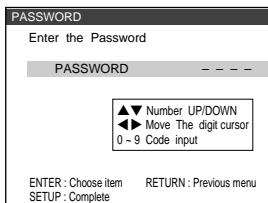


- 4 Use the number buttons, ▲ or ▼ to enter a four-digit password.

To correct the input number, press ◀ or ▶ to move the cursor to the number to be corrected, and then input new number.

- 5 Press ENTER.

Confirm your password.

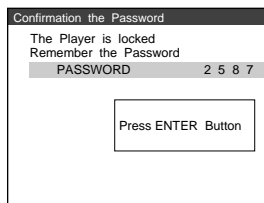

Do not forget the password you set!

- 5 If you forget the password

Reset the unit to default condition and set all the settings again including the "Ratings" setting (see page 43).


- 6 After confirming the password, press ENTER again.

Your entry is saved.

- 7 Press SET UP to exit the setup menu.

To change the settings

- 1 At the initial setting screen, select "Ratings" by using ▲ or ▼. Then press ENTER.
- 2 Input four-digit password and press ENTER.
- 3 Select an item: "Unlock Player" (lift the limitation.), "Change Password", or "Change Level".

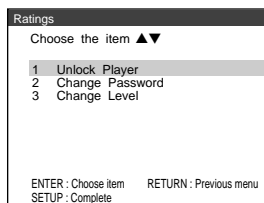

- 4 Carry out the procedure according to the instruction on the liquid crystal display.
- 5 Press SET UP to exit the setup menu.

Changing setup values (continued)

PBC

Sets the default PBC (Play back control) mode on or off for playing a video CD with PBC function.

- 1 At the initial setting screen, select “PBC” by using ▲ or ▼. Then press ENTER.**
- 2 Use ▲ or ▼ to move the cursor (the yellow area) to “ON” or “OFF”.**

PBC		
Choose the item ▲▼		
1	P B C	O N
2	P B C	O F F

ENTER : Choose item RETURN : Previous menu

SETUP : Complete

- 3 Press ENTER.**
Your entry is saved.
- 4 Press SET UP to exit the setup menu.**


Connecting to external equipment

Before connecting

- Turn off the power of this unit and the equipment to be connected.
- Refer to the instructions for the equipment to be connected.


Connecting to a wide TV/an AV TV

According to the type of connected TV, set the initial TV mode referring to "TV Aspect" on page 35.

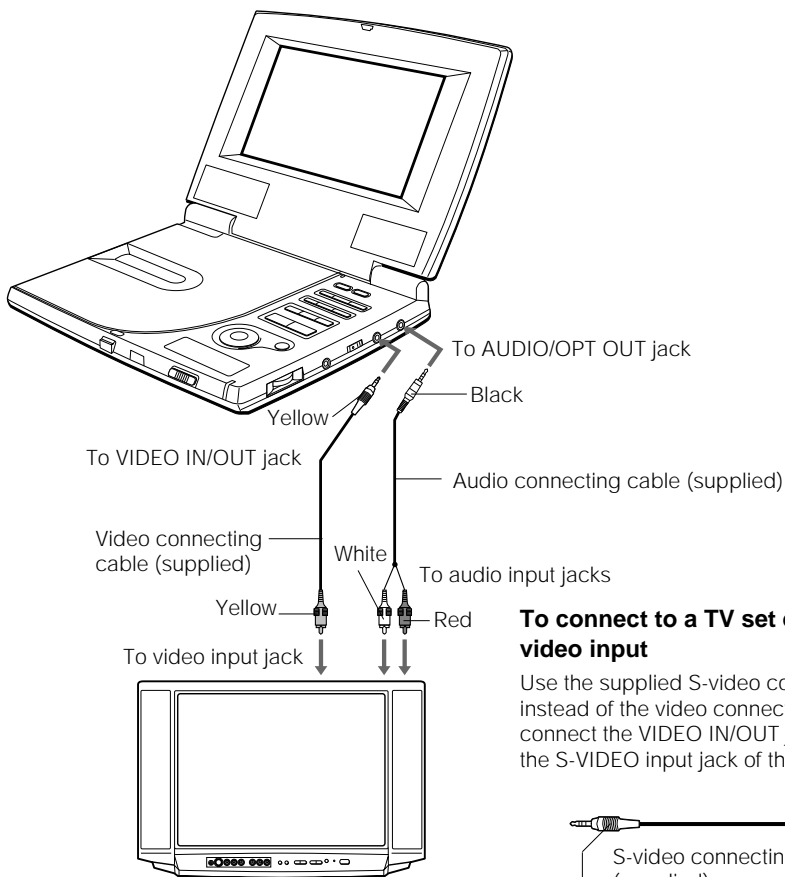

To connect to a TV set equipped with S-video input

 Use the supplied S-video connecting cable instead of the video connecting cable to connect the VIDEO IN/OUT jack of this unit and the S-VIDEO input jack of the TV set.



To set to the color system of the connected TV

Slide the PAL/NTSC switch on the right side according to the TV during stop or power off.


NOTE

Connect the video out of this unit to the TV set directly.
If it is connected to a video deck or a video TV set, the TV picture may be distorted during playback because of the copy guard.


CONTINUE

Connecting the external equipment (continued)


Connecting to audio equipment without digital audio input terminals

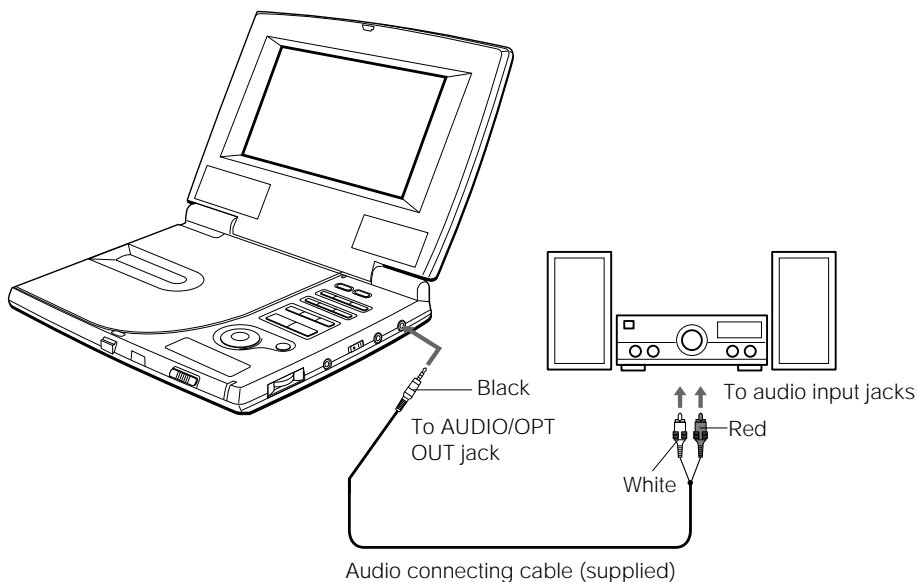

Connecting to audio equipment with digital audio input terminals

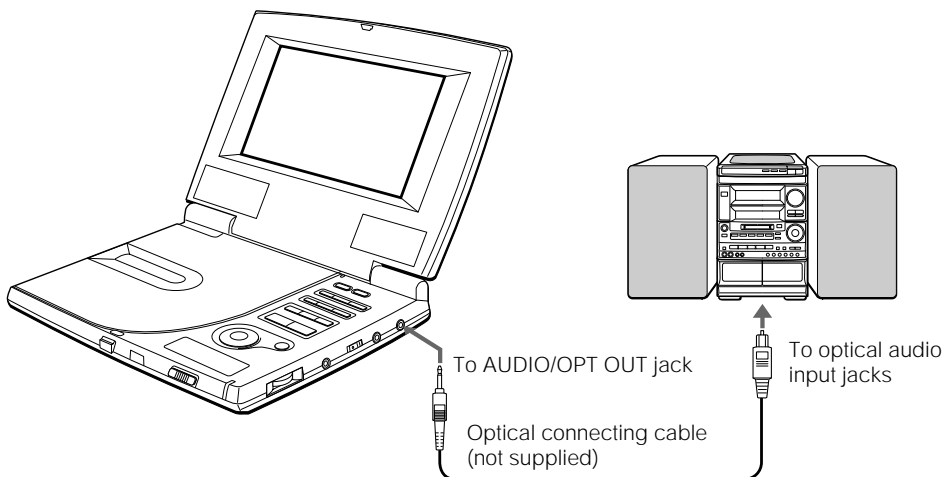

Connecting to an active speaker system

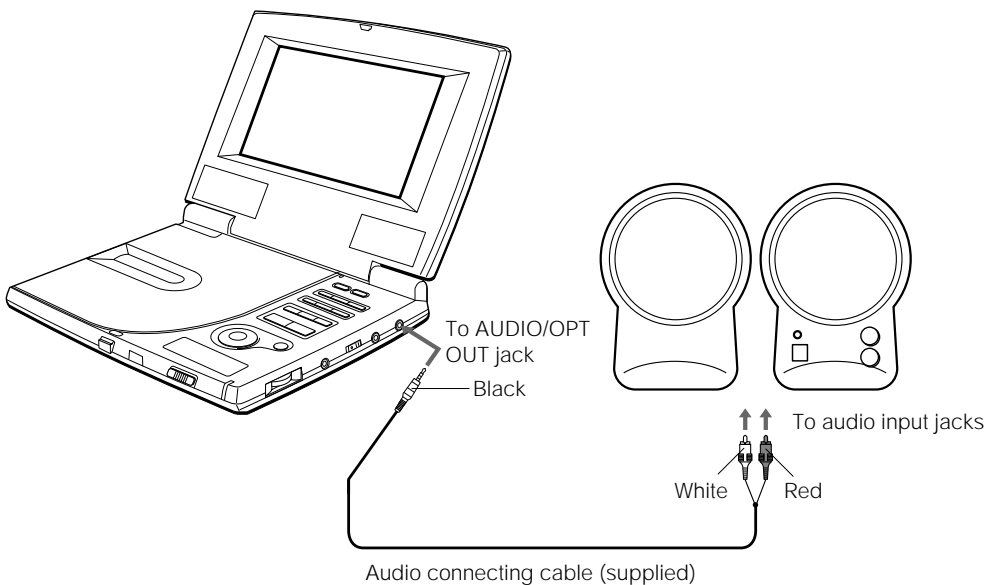

Output sound from the optical output terminals of this unit

Playing disc	Audio recording system	Output audio signals
DVD	Dolby digital (AC-3)	<ul style="list-style-type: none"> • Bit stream of Dolby digital (AC-3) (2ch-5.1ch) • PCM (48 kHz/16 bit) (2ch)*1 Select it in the initial setting "Digital output".
	Linear PCM 48 kHz/96 kHz 16/20/24 bit	Linear PCM (48 kHz/16 bit) (2ch)*2
	DTS	<ul style="list-style-type: none"> • Bit stream of DTS (1ch-5.1ch) • No output PCM signal
Video CD	MPEG 1	PCM (44.1 kHz)*1
Audio CD	Linear PCM	Linear PCM (44.1 kHz)


*2 When a 96 kHz-24 bit disc is played, the audio signals are output in 48 kHz-16 bit.

*1 This changes condensed audio signals to PCM and outputs them.

Connecting the external equipment (continued)


Connecting to a dolby digital (AC-3) decoder

During playback of a DVD recorded in Dolby Digital (AC-3)/5.1ch surround, bit streams of Dolby Digital are output from the optical audio output terminals of this unit. By connecting to a dolby digital decoder, you can enjoy theater-quality realistic audio sound right in your own home. Set the "Digital output" to "Bit Stream".

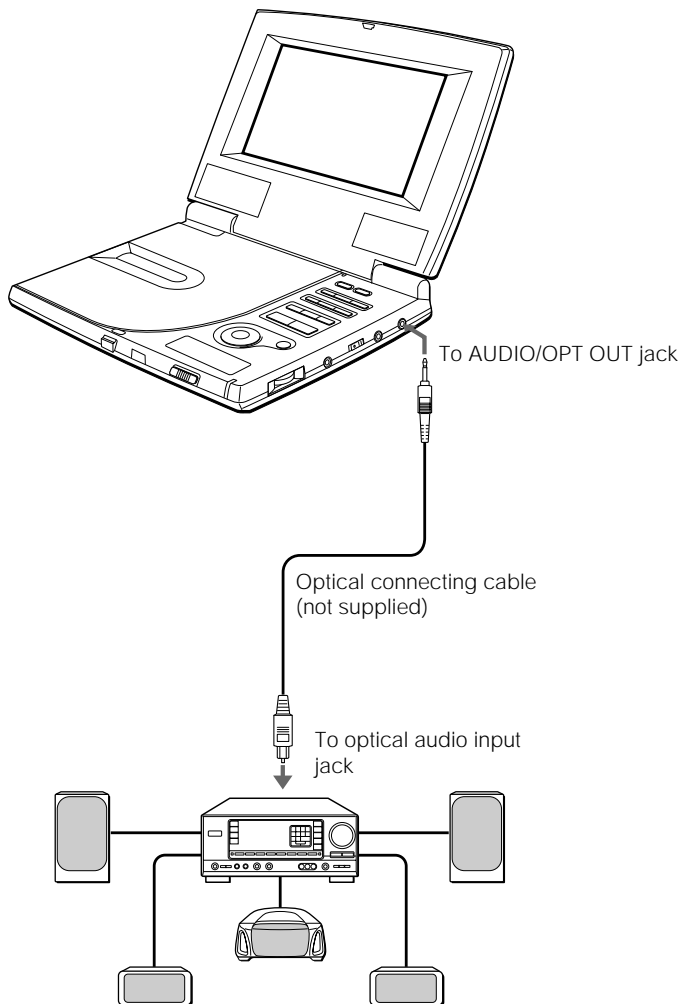

Connecting to a video camera

You can enjoy contents of an external video camera through the liquid crystal display and stereo speakers of this unit.

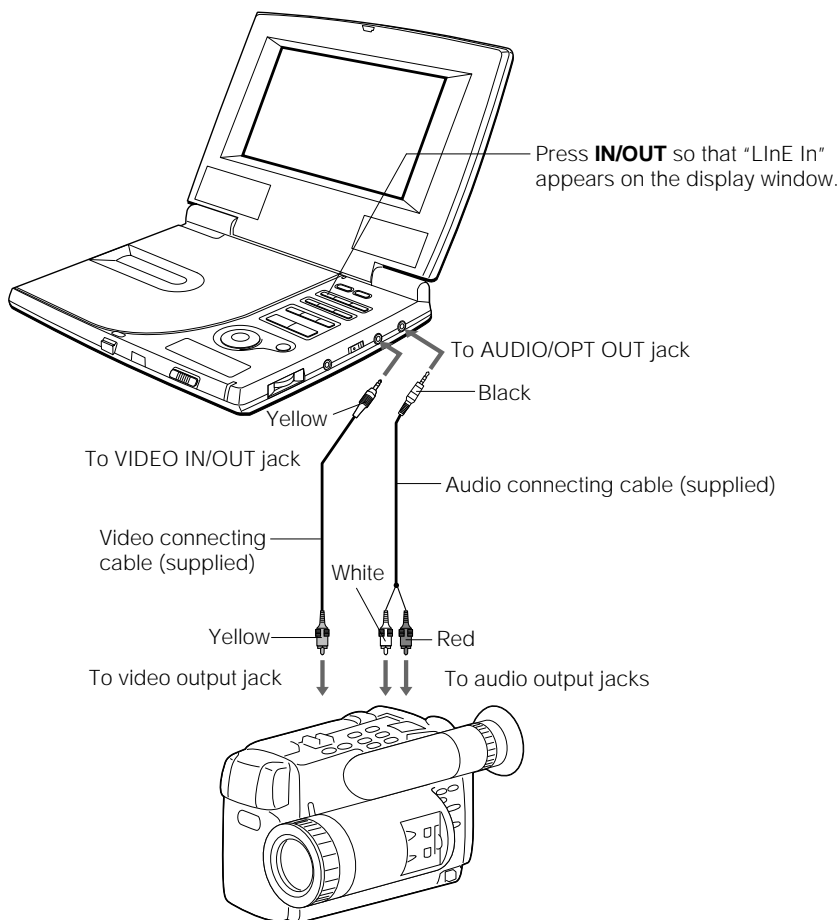

To set to the color system of connected equipment

Slide the PAL/NTSC switch on the right side according to the color system of connected equipment.

NOTES

- When you switch the PAL/NTSC switch, turn off the power first.
- During playback, do not connect equipment which outputs sound signals such as a game.

Troubleshooting

If something seems to be wrong with your DVD player, first check the items in the table below.

General

The power does not turn on.

- Connect the AC adaptor correctly or insert the battery pack correctly. (page 6-9)
- Check that POWER switch is not set to HOLD. (page 11)
- The power cannot be turned on by POWER of the remote control.

The power automatically turns off.

- In stop mode, the unit automatically enters the power saving mode after 5 minutes when using with the AC adaptor, and using with the battery pack (Auto power saving). (page 11)
Press ►(Play) to turn on the power again.

Buttons on the main unit or on the remote control do not function.

- In some discs, the operation may be prohibited.
- Check that POWER switch is not set to HOLD. (page 11)

The unit does not work correctly.

- Remove the AC adaptor and the rechargeable battery, then attach them again.

The unit is warmed during playback.

- This is not a malfunction.

You do not remember the code number set in "Ratings".

- Reset this unit as follows to restore the default condition.

When the disc cover is open, press the buttons shown below on the remote control in the following order.

■ → TITLE → RETURN → Q SURROUND

Sound and picture

No sound comes out from the connected speakers.

- Check if the connection is correct. (page 40)
- Check that "LnE In" is not displayed in the display window.

No picture appears on the TV screen.

- Check if the connection is correct. (page 38)
- Set the input switch on the TV set to "video".
- Check that "LnE In" is not displayed in the display window.

No picture appears on the liquid crystal display when the video camera is connected.

- Check if the connection is correct. (page 42)
- Check that the video camera is turned on.
- Check that "LnE In" is displayed in the display window. (page 42)
- Check that the display mode of the liquid crystal display is not set to off. (page 14)

The picture of the TV set connected to the VIDEO jacks is not stable.

- Check that the PAL/NTSC switch on the right side of this unit is set to match the color system of the TV set. (page 38)

Pictures are distorted during forward/backward search.

- This is not a malfunction.

The liquid crystal display

- For the liquid crystal display of this unit, high quality wide screen liquid crystal, composed of 280 thousand pixels. Sometimes a few of pixels may appear black or some other color due to the property of the liquid crystal parts, but this is not a malfunction.

Operations

Playback does not start by pressing ►(Play). Playback stops immediately.

- The player is affected by condensation. (page 2)
Wait approximately one or two hours.
- If the disc is dirty, wipe it with a cleaning cloth.
- Insert the disc correctly with the label side up. (page 10)

Playback does not start when a title is selected.

- Check the setting of "Ratings". (page 36)

When operating with buttons, no message appears on the display.

- Set "Guide Message" of initial setting to ON. (page 31)

Menu playback cannot be done in a video CD.

- Menu playback can be done only on a video CD with PBC function. (page 37)

Menu display is not in specified language.

- Check "Disc Menu" of "Disc language" in initial settings. (page 34)

Subtitles are not displayed.

- Subtitles are not displayed in a DVD in which subtitles are not recorded.
- If the subtitle is set to "OFF", set it to "ON" (page 26)

Audio/subtitle language cannot be changed.

- It cannot be changed on a disc that only one language is recorded.
- The menu display may be used to change the language instead of the audio/subtitle change operation. (page 32)

Audio/subtitle language is different from the one set in initial setting.

- Check that the disc contains the specified language. (page 26)

Screen size of the connected TV set does not turn to 4:3 (16:9).

- Set "TV Aspect" correctly according to your TV set. (page 35)

Remote control

The remote control does not work.

- Make sure the batteries are inserted with the correct polarity. (page 6)
- If the batteries have very little power, replace them with new ones. (page 6)
- Point it toward the remote sensor. (page 6)
- Operate it within 5 meters from the remote sensor. (page 6)
- Remove any object put between the remote control and the remote sensor. (page 6)
- Check that the POWER switch is not set to HOLD. (page 11)

The DVD player is a piece of precision equipment. Take care not to bump or jar the player during playback, or at any other time.

Language codes

Code	Language	Code	Language	Code	Language
6565	Afar	7285	Hungarian	8084	Portuguese
6566	Abkhazian	7289	Armenian	8185	Quechua
6570	Afrikaans	7365	Interlingua	8277	Rhaeto-Romance
6577	Amharic	7378	Indonesian	8279	Romanian
6582	Arabic	7383	Icelandic	8285	Russian
6583	Assamese	7384	Italian	8365	Sanskrit
6588	Aymara	7387	Hebrew	8368	Sindhi
6590	Azerbaijani	7465	Japanese	8372	Serbo-Croatian
6665	Bashkir	7473	Yiddish	8373	Singhalese
6669	Byelorussian	7487	Javanese	8375	Slovak
6671	Bulgarian	7565	Georgian	8376	Slovenian
6672	Bihari	7575	Kazakh	8377	Samoan
6678	Bengali; Bangla	7576	Greenlandic	8378	Shona
6679	Tibetan	7577	Cambodian	8379	Somali
6682	Breton	7578	Kannada	8381	Albanian
6765	Catalan	7579	Korean	8382	Serbian
6779	Corsican	7583	Kashmiri	8385	Sundanese
6783	Czech	7585	Kurdish	8386	Swedish
6789	Welsh	7589	Kirghiz	8387	Swahili
6865	Danish	7665	Latin	8465	Tamil
6869	German	7678	Lingala	8469	Telugu
6890	Bhutani	7679	Laothian	8471	Tagik
6976	Greek	7684	Lithuanian	8472	Thai
6978	English	7686	Latvian; Lettish	8473	Tigrinya
6979	Esperanto	7771	Malagasy	8475	Turkmen
6983	Spanish	7773	Maori	8476	Tagalog
6984	Estonian	7775	Macedonian	8479	Tonga
6985	Basque	7776	Malayalam	8482	Turkish
7065	Persian	7778	Mongolian	8484	Tatar
7073	Finnish	7779	Moldavian	8487	Twi
7074	Fiji	7782	Marathi	8575	Ukrainian
7079	Faroese	7783	Malay	8582	Urdu
7082	French	7784	Maltese	8590	Uzbek
7089	Frisian	7789	Burmese	8673	Vietnamese
7165	Irish	7865	Nauru	8679	Volapük
7168	Scots Gaelic	7869	Nepali	8779	Wolof
7176	Galician	7876	Dutch	8872	Xhosa
7178	Guarani	7879	Norwegian	8979	Yoruba
7185	Gujarati	7982	Oriya	9072	Chinese
7265	Hausa	8065	Punjabi	9085	Zulu
7273	Hindi	8076	Polish		
7282	Croatian	8083	Pashto; Pushto		

Explanation of terms

Interactive DVD

With this DVD disc, the story is changeable by user's selection, and/or the direction of view is changeable.

Title, chapter (DVD)

A DVD disc is divided into large parts (title) and smaller parts (chapter).

Each part has a number which is called title number or chapter number.

OPT OUT jack

The OPT OUT jack changes electric signals into optical signals before transmitting them to the amplifier. According to this, the signals flow without electric effect from outside, and noise is suppressed and produces little effect for outside.

Track (video CD/audio CD)

A video CD or an audio CD is divided into some parts (track).

Each part has a number which is called a track number.

Dolby digital (AC-3)

A technique for digital audio compression developed by Dolby Corporation.

Not only stereo (2 ch) sound, but also 5.1 ch sound can be compressed by it. A large amount of data can be held in a disc efficiently.

Dolby pro logic decoder

Equipment in which 4 channel signals recorded in 2 channels by dolby surround (pro logic) are reverted to signals in 4 channels when playing them back. As compared with the surround sounds of 5.1 ch of dolby digital (AC-3), separation between channels is worse and surround signal is played back only within 7 kHz.

Pan & scan screen

This signifies that the screen recorded in wide-screen format is displayed with left and right portions cut off.

Playback control (video CD Version 2.0)

A video CD with the playback control function can be played back by following the menu display interactively.

Letter box screen

This signifies that the screen recorded in wide-screen format is displayed with black bands at the top and bottom of the screen.

Linear PCM audio (LPCM)

This is the signal recording system for audio CD.

While the signals are recorded by 44.1 kHz/16 bit in audio CD, by 48 kHz/16 bit - 96 kHz/24 bit in DVD. As a result, DVD is played back in higher quality sound than in audio CD.

MPEG (Moving Picture Experts Group)

MPEG is the international standard format for moving pictures provided by the Moving Picture Experts Group organized under ISO (International Organization for Standardization) and IEC (International Electro-technical Commission). MPEG provided MPEG1 in 1991, and MPEG2 in 1994. MPEG2 enables play in higher quality than MPEG1.

S-VIDEO OUT terminal

As this terminal divides the video signals into color signal and brightness signal to transmit them to the TV set, the picture becomes clearer. We recommend connecting an S-VIDEO cord (supplied) to the TV set and S-VIDEO terminal.

Specifications

Main unit

Power supply	DC 9 V
Power consumption	18 W
Weight	Main unit: 670 g (23.5 oz) Battery pack: 560 g (19.6 oz)
External dimensions	XD-DW7: 195 (W) × 26.9 (H) × 144 (D) mm (7 ³ / ₄ × 1 ¹ / ₁₆ × 5 ³ / ₄ in.) XD-DW5: 195 (W) × 31.9 (H) × 144 (D) mm (7 ³ / ₄ × 1 ⁵ / ₁₆ × 5 ³ / ₄ in.)
Signal format	NTSC
Supported discs	DVD video discs 12 cm (single-sided single-layer, single-sided double-layer, double-sided-double layer) 8 cm (single-sided single-layer, single-sided double-layer, double-sided-double layer) Compact discs (CD-DA, video CD) 12 cm and 8 cm discs
S1 video output	Y output: 1 Vp-p (75 ohms, sync negative) C output: 0.286 Vp-p
Video output	Video composite output 1 Vp-p (75 ohms, sync negative) RCA jacks
Audio output	DOWN MIXING AUDIO OUT connector 1.5 Vrms (1 kHz) 2 RCA jacks (L/R) Fiber optical connector (IEC 958)

Audio output characteristics

Frequency range:

CD/VCD: 20 Hz to 20 kHz

DVD: 4 Hz to 22 kHz
(48 kHz sampling)

Wow and flutter: unmeasurable

Operating conditions

5°C to 35°C (41°F to 95°F)

Accessories

Remote control (1)

Battery pack (1)

AC adaptor (2)

AC power cord (2)

Audio connecting cable (1)

Video connecting cable (1)

S-Video connecting cable (1)

AC adaptor (for the main unit)

Model No.	AC-D918U
Input	100-240 V AC, 50/60 Hz, 30 W
Output	DC 9 V, 2 A

AC adaptor (for recharging the battery pack)

Model No.	AC-D920U
Input	100-240 V AC, 50/60 Hz, 36 W
Output	DC 9 V, 2.2 A

Specifications are subject to change without notice.

- Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories. All rights reserved.
- Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other worldwide patents issued and pending. “DTS” and “DTS Digital Surround” are trademarks of Digital Theater Systems, Inc. ©1996 Digital Theater systems, Inc. All rights reserved.

Region Management Information

Region Management Information: This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play that disc.

The region number of this DVD player is 1.



Note on Unauthorized Discs

You may not be able to play back some DVD video discs on this player if they were purchased from outside your geographic area or made for business purposes.

Note on Copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.

DVD video discs are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Playback of a CD-R/CD-R W

A CD-R/CD-RW may not be played back because its reflectance is lower than a CD.

In addition, playback may not be carried out because of a disc's condition, a spot, a scratch, condensation on the pick up lens, etc.

Reproducción de CD-R y CD-R W

Un CD-R o un CD-RW puede no reproducirse si su reflectancia es más baja que la de un CD.

Por otra parte, la reproducción puede fallar debido al estado del disco: manchas, rayaduras, condensación en las lentes del captador, etc.

Lecture d'un CD-R/CD-R W

Il se peut qu'un CD-R/CD-RW ne puisse pas être lu car son pouvoir réflecteur est inférieur à celui d'un CD.

En outre, la lecture peut s'avérer impossible si le disque est en mauvais état, s'il est tâché ou rayé, ou en présence de condensation sur la lentille de prise de vue, etc.

CAUTION

<Note for CD-R/RW playback>

This unit cannot play any CD-R/RW disc.

Some CD-R/RW discs may be played back, however, we do not guarantee their operations.

< Note for high temperatures >

- To prevent a malfunction, deformation, or discoloration, please avoid placing the product in direct sunlight, near any heat sources, or inside your car in the summer time.
- The surface of the product becomes hot if used for a long time. This is not a malfunction.
- Please do not rest it on your body for a long time to avoid mild heat irritation.

PRECAUCIÓN

<Nota sobre la reproducción de CD-R/RW>

Esta unidad no puede reproducir discos CD-R/RW.

Aunque puedan reproducirse determinados discos CD-R/RW, no se garantizan sus operaciones.

< Nota sobre altas temperaturas >

- Para evitar fallos de funcionamiento, deformaciones o pérdidas de color, evite colocar el producto bajo la luz solar directa, cerca de fuentes de calor o en el interior de un automóvil en el verano.
- La superficie del producto se calienta cuando se utiliza durante mucho tiempo. No es un fallo de funcionamiento.
- Con el fin de evitar irritaciones leves por calor, no lo deje sobre su cuerpo durante mucho tiempo.

ATTENTION


<Remarque pour la lecture du CD-R/RW>

Cet appareil ne peut lire aucun CD-R/RW.

Certains disques CD-R/RW peuvent être lus; toutefois, nous ne garantissons pas leur fonctionnement.

< Remarque concernant les températures élevées >

- Afin d'éviter tout dysfonctionnement et toute déformation ou décoloration, n'exposez pas le produit au rayonnement direct du soleil et ne le placez pas à proximité de sources de chaleur ou à l'intérieur de votre voiture en été.
- Le revêtement extérieur de ce produit peut se réchauffer lors d'une longue utilisation. Ceci ne constitue aucunement un dysfonctionnement.
- Ne le laissez pas en contact avec votre peau pendant une longue durée afin d'éviter une irritation de la peau.

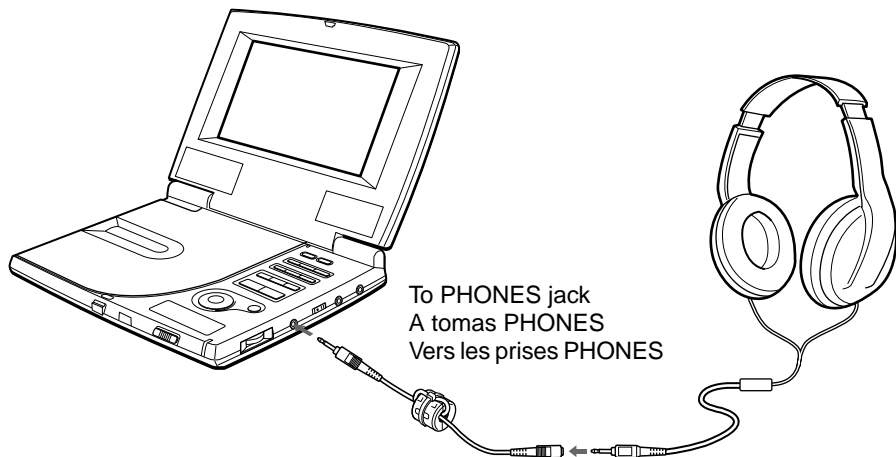

When listening with headphones

Important

You must use the supplied extension cable to suit to the Part 15 of the FCC rules, when listening with headphones (not supplied).

To connect your headphones

- (1) Connect headphones (not supplied) to the supplied extension cable.
- (2) Insert the plug of the supplied extension cable to PHONES jack of this unit.

Para escuchar el sonido con auriculares

Importante

Debe utilizar el cable de extensión suministrado para cumplir con la Parte 15 de las normas de la FCC cuando escuche el sonido con auriculares (no suministrados).

Para conectar los auriculares

- (1) Conecte los auriculares (no suministrados) al cable de extensión suministrado.
- (2) Inserte el enchufe del cable de extensión suministrado en la toma PHONES de esta unidad.

Ecoute avec un casque

Important

Pour être en conformité avec la Partie 15 des règles FCC, vous devez utiliser le prolongateur fourni pour l'écoute avec un casque (non fourni).

Pour raccorder votre casque

- (1) Raccordez le casque (non fourni) au prolongateur fourni.
- (2) Insérez la fiche du prolongateur fourni dans la prise PHONES de l'appareil.

AIWA CO.,LTD.
