


# morphy richards®

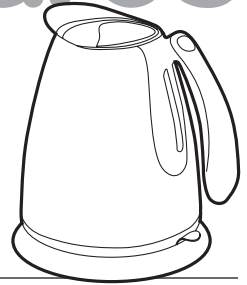

## Cordless stainless steel kettle

CE

### Dear Customer,

Thank you for buying your Morphy Richards concealed element kettle. This kettle has a concealed element situated in the bottom of the kettle. This helps to reduce problems with scale which can occur in hard water areas and has the added benefit of making the interior of the kettle easier to clean.

Before using your kettle for the first time, we would ask you to carefully read the instructions, in particular the section on 'descaling and cleaning.'

If you have any problems, please call us on the helpline number and we will be pleased to give you any help you require.

## Two year guarantee

This guarantee is valid in the UK and Ireland only. It is in your interest to retain the retailers receipt as proof of purchase. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

All Morphy Richards Products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting Model number and Serial number on the product, or write to the address below. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (see 'Exclusions') the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example kettles should have been regularly descaled or an iron cord should have been stored as recommended by the instructions.

### EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

- 1 The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non-domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

The After Sales Division, Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ  
Helpline (office hours): UK 08450 777700, Republic of Ireland 1800 409119

# IMPORTANT SAFEGUARDS

Read all instructions

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and personal injury do not immerse cord, plugs or kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

Note: If the mains lead is damaged, the cordless base should be returned to the manufacturer for repair

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Disconnect the kettle from the mains supply when filling or pouring.
- Boil only as much water as you need as this saves electricity.
- Always close the lid securely before switching on - otherwise the kettle will not switch off automatically and it may spit out boiling water. For kettles with locking lids ensure lid is locked correctly.
- Do not remove the lid while the water is boiling
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Always put in enough water to cover the bottom of the kettle.

- Ensure that the kettle is used on a firm, flat surface.
- Avoid contact with steam from the spout when the water is boiling or just after it has switched off. **TAKE CARE IF OPENING THE LID FOR RE-FILLING WHEN THE KETTLE IS HOT.**

- Do not fill above the MAX mark on the water level gauge.

**WARNING: DO NOT IMMERSE THE KETTLE OR BASE IN WATER.**


**WARNING: IF THIS KETTLE IS OVERFILLED BOILING WATER MAY BE EJECTED.**

**DO NOT TIP KETTLE BACKWARDS AS BOILING WATER MAY BE EJECTED.**

- Do not hold the switch in the ON position or tamper with the switch to fix it in the ON position as this may cause steam to be ejected from around the lid and could damage the automatic switch-off mechanism.
- Do not attempt to connect any other appliance to the cordless base unit, or tamper with the connector in any way (special interlocked shutters are designed to prevent access to the live pins until the kettle is attached to the base unit).
- Do not use abrasive cleaners on the outside of the kettle - these may scratch the surface.
- Do not use the kettle for any use other than to boil water.
- Extreme caution must be used when moving an appliance containing hot water.
- Always attach plug to appliance first, then plug into the wall outlet. To disconnect, turn any control to off, then remove plug from wall socket.

**WARNING: DO NOT PLACE THE BASE UNIT ONTO A METAL TRAY OR METAL SURFACE WHILST IN USE.**

## SAVE THESE INSTRUCTIONS

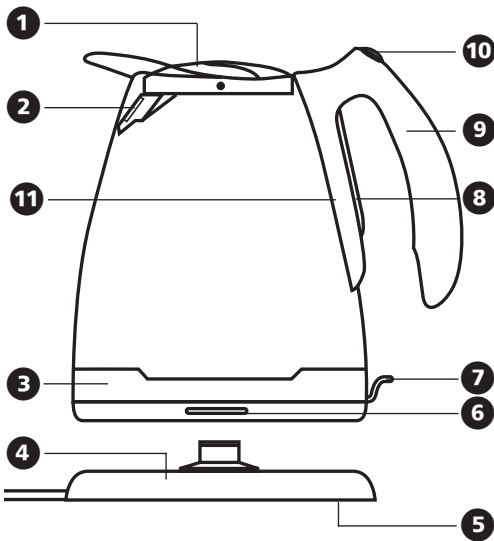

## Features of your kettle

- 1 Flip top locking lid
- 2 Limescale spout filter
- 3 Concealed element
- 4 Cordless 360° base unit
- 5 Cord storage
- 6 Neon on light
- 7 On/off switch (lift up to switch on, press down to switch off)
- 8 Water level gauge
- 9 Cool touch handle
- 10 Lid release button
- 11 Internal and external MAX marks

## Instructions for use

- 1 To fill the kettle press the release button 10 to open the flip top lid.
- 2 Put in at least enough water to cover the bottom of the kettle but never more than the maximum (MAX).
- 3 To close the lid, press the rear of the lid until it clicks.  
Do not operate the kettle with the lid open or removed. Do not operate without the spout filter in position.
- 4 Place kettle on the base unit, engaging the 360° base unit connector. The rotary type base unit allows you to place the kettle in any convenient position.
- 5 Plug in and switch on at the wall socket.
- 6 Lift the switch lever 7 to switch on. The neon ON light will illuminate indicating that the kettle is working.
- 7 When the water boils, the kettle will switch off automatically.

*If the kettle is lifted off its base, it will automatically switch off.*

- 8 To remove the kettle from the base unit, grasp the handle and hold the kettle level while lifting it clear of the base unit. Take extra care if the kettle is filled to MAX.
  - If you are using the kettle for the first time, pour away the boiled water and refill.
  - To re-boil, switch to ON again. If the kettle has just switched off wait a minute or so before switching it back on again.

If you do not put in enough water, or switch on the kettle when it is empty, the safety cut-out will switch off the power automatically. If this happens, wait a few minutes for the element to cool, then refill and use as normal.

## Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

### Mains lead length

The correct length of lead should reach from the socket to the base unit without straining the connections. Reduce the length of the lead by storing the excess on the cord storage facility in the base unit. Do not allow a loop of lead to lie on or hang over the edge of the work surface.

### For appliances supplied with fitted plug

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

Note: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

**WARNING: THIS APPLIANCE MUST BE EARTHED.**

Important: The kettle must only be used with the base unit provided and is not to be filled when located on the base unit.

## Advice on scale

If you live in a hard water area, scale will form on the inside of your kettle during boiling. This can pour into your drink, spoiling its appearance and taste. Your kettle has a spout filter which will retain unsightly pieces of scale within the kettle.

The spout filter will not, however, prevent the scale from forming inside the kettle. Therefore, it is important that the filter and inside of the kettle be cleaned regularly. Failure to do so will reduce the ability of the filter to fill and pour correctly and will invalidate the guarantee - see section Descaling and cleaning.

IF POURING THROUGH THE SPOUT BECOMES SLOW THIS IS AN INDICATION THAT THE FILTER IS READY FOR CLEANING OR DESCALING.

Note: Scale is a natural substance formed during the boiling of water in hard water areas and is not harmful to health.


## Filter removal and cleaning

**WARNING: ALLOW KETTLE TO COOL COMPLETELY BEFORE REMOVING FILTER**

Replacement spout filters are available from Morphy Richards. Should you require service, advice or repairs to your kettle, please use the helpline telephone numbers on the front of this leaflet.

To remove the filter, open the lid and lift the lid from its retaining hinges. Pull the filter firmly downwards to disconnect it from the lid.

Clean the filter by brushing gently with a small soft brush under water. Any hard deposits of scale may be removed by de-scaling. Do not use a sharp object which may damage the filter mesh.

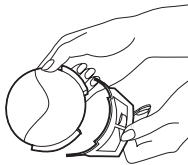

## Descaling and cleaning

IF YOU LIVE IN A HARD WATER AREA, SCALE MAY FORM ON THE INSIDE OF YOUR KETTLE. THIS COULD CAUSE THE KETTLE TO MALFUNCTION AND MAY DAMAGE THE ELEMENT INVALIDATING THE WARRANTY. IT IS ESSENTIAL THAT REGULAR DESCALING TAKES PLACE AS FOLLOWS:

Remove hard scale using either a proprietary descaling product suitable for plastic kettles (following the instructions carefully), or citric acid crystals. We recommend using citric acid crystals as follows:

Boil 1 litre of water, then unplug the kettle (remove the cordless kettle from the base unit) and stand it in an empty sink or bowl. Add 50gm of citric acid crystals to the water gradually, then leave the kettle to stand. Do not use a more concentrated solution.

As soon as the effervescence subsides, empty the kettle and rinse it thoroughly with cold water.

Wipe the outside of the kettle thoroughly with a damp cloth to remove all traces of acid which may damage the finish.

Ensure that the electrical connections are completely dry before using the kettle.

Citric acid crystals are available from most pharmacies.

Failure to descale may invalidate the guarantee.

# Safety in the kitchen

Morphy Richards is concerned that accidents involving kettles or their mains lead can cause death or serious injury through scalding. We therefore offer the following advice in the hope that it will prevent such tragedies occurring.

## Boiling water

- Boiling water is used so often in the home; tea and coffee making, cleaning, cooking, warming up. This means that your kettle is a potential mobile accident area.
- Always locate your kettle away from the edge of a worktop. Do not let the mains lead hang over the edge of a worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and table.
- Do not let the lead run across a cooker or toaster or other hot area which might damage the cable.
- Do not place the kettle where the mains lead could fall into the kitchen sink.

## Children

Your own and other children are vulnerable in the kitchen particularly when unsupervised and if appliances are being used or cooking is being carried out. Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.

## Other appliances

- Remember other products can cause serious injury in the kitchen.
- Deep fat fryers or frying pans contain hot oil at a temperature far higher than boiling water.
  - Irons are very hot and can cause serious injury if knocked by a child from an unattended ironing board.
  - Irons have long mains cables which can fray, look after your iron cable.
  - Saucepans where possible should be placed on back cooker rings: turn the saucepan handle away from the edge of your cooker.

## Accidents

If a scald occurs run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

*Morphy Richards products are intended for household use only.  
Morphy Richards has a policy of continuous improvement in product quality and design.  
The Company, therefore, reserves the right to change the specification of its models at any time.*

**morphy richards**®

Morphy Richards Limited, Mexborough,  
South Yorkshire, England S64 8AJ

440/8053/02 Rev 1