

morphy richards®



Bagged cylinder Vacuum

Read these operating instructions and keep them in a safe place

Getting the best from your new cleaner...

If your cleaner is not picking up as well as it should, please check

Dustbags

The dustbag must be replaced if the indicator is continuously illuminated. Call our helpline to purchase replacement dustbags.

Filters

It is important that the filters are cleaned regularly or replaced to allow air through the appliance.

Blockages

Check the nozzle, tubes and hose for blockages.

Safety cut out

If the product switches itself off during use refer to page 13 for instructions.




For replacement parts, help with using your Morphy Richards product, problems and lots more, contact us by phone or through our website.

VC70048MUK Rev 1






UK Helpline: 0870 060 2604
Replacement parts: 0870 167 6635
Ireland 1800 409119


www.morphyrichards.com

A

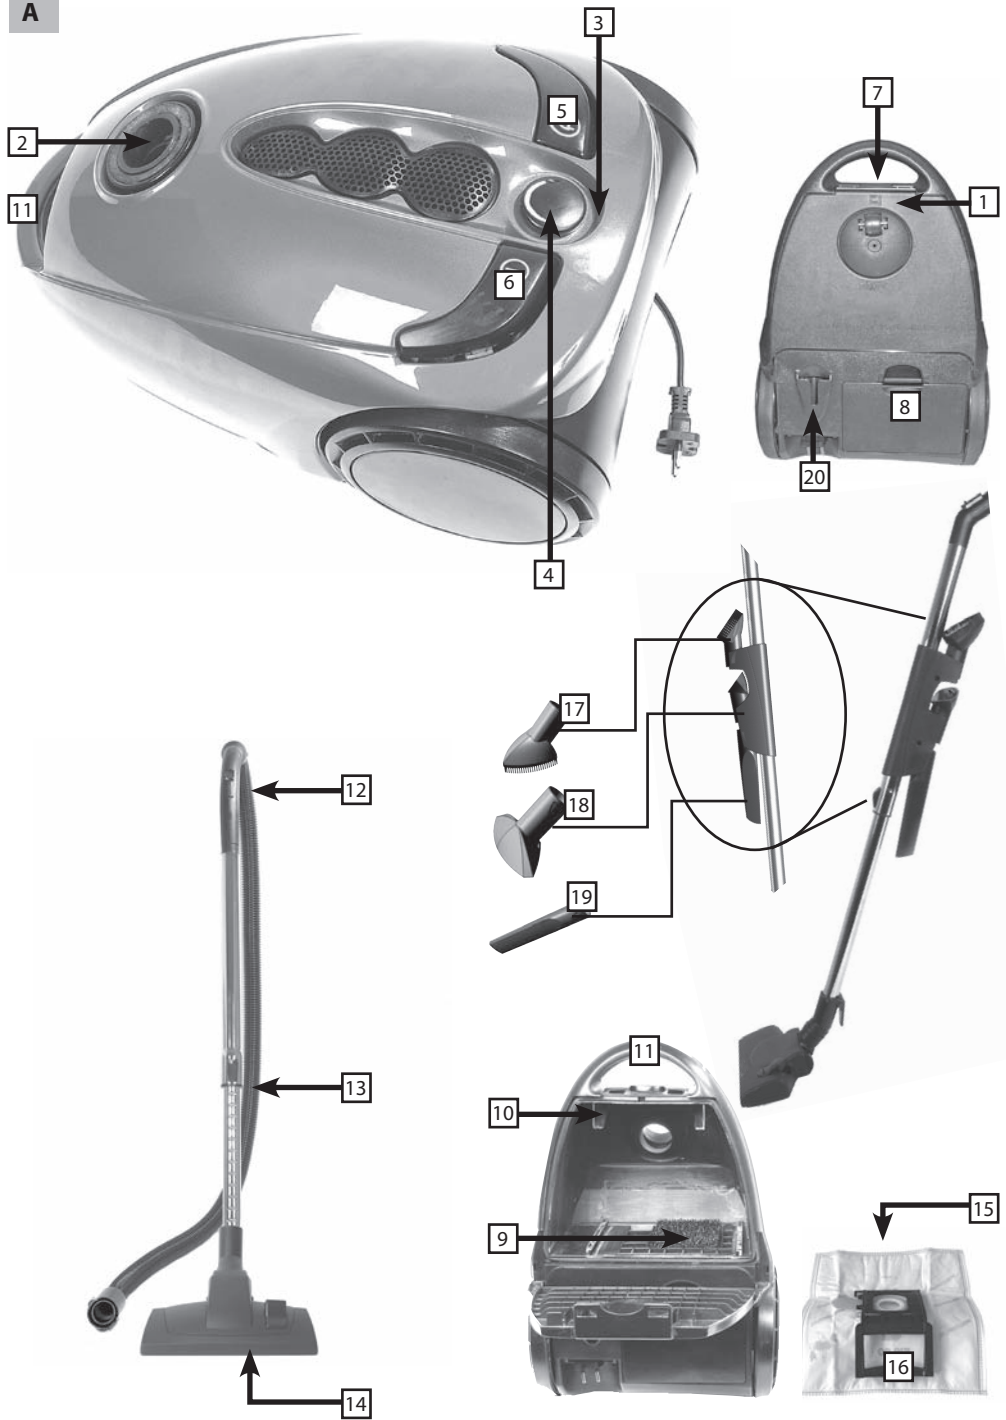


B

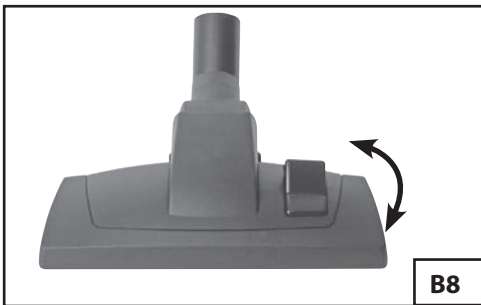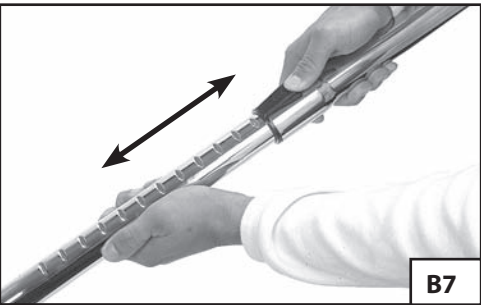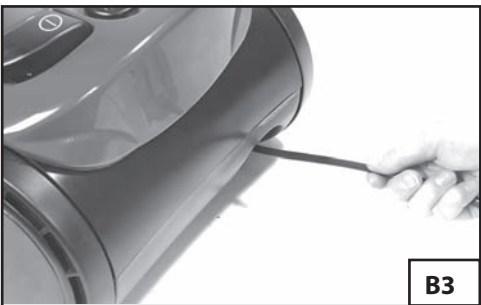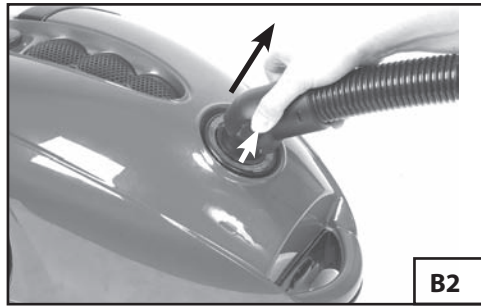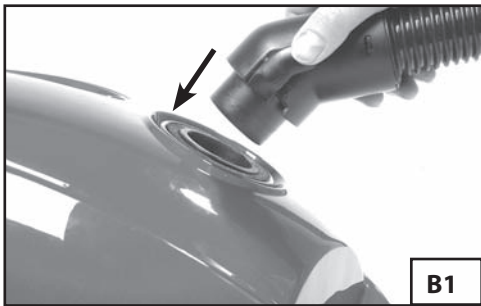


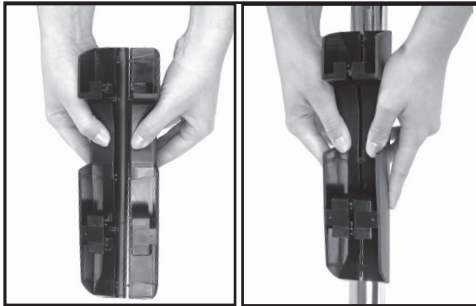

B10

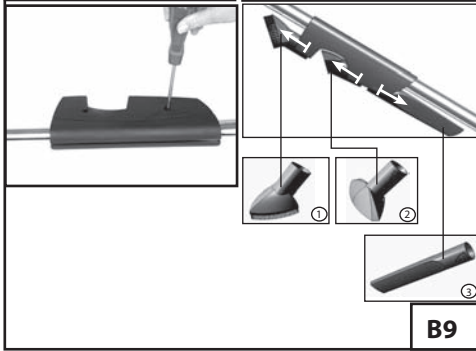


B9

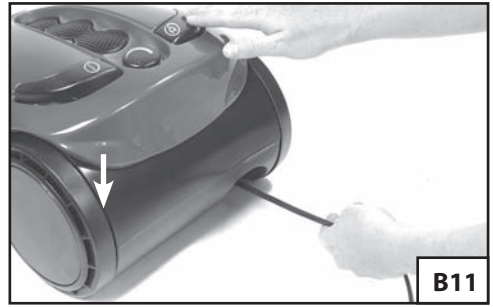

B11



B12

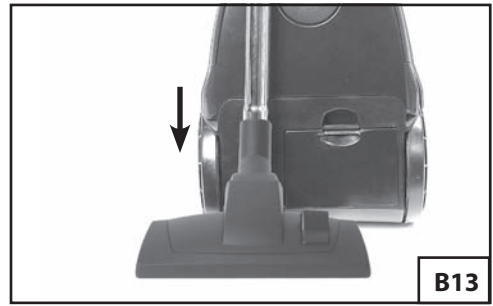








B13







B14




B15

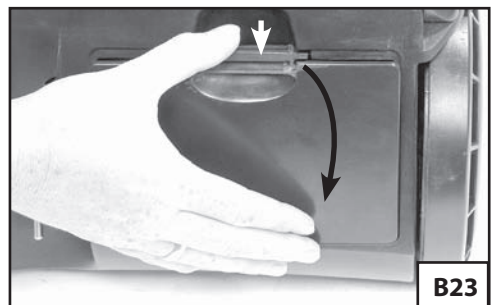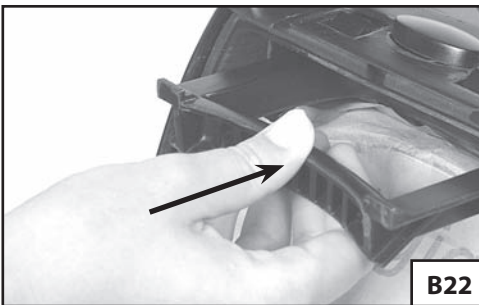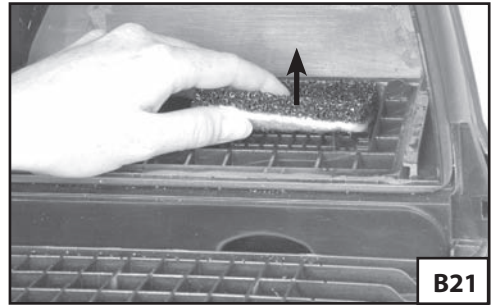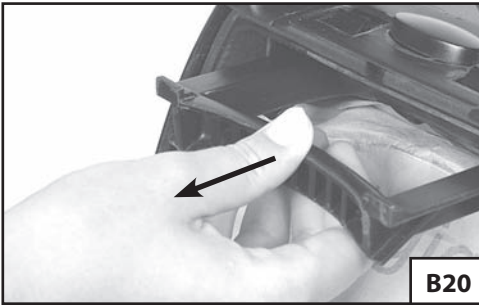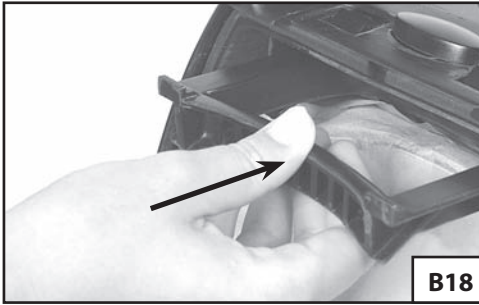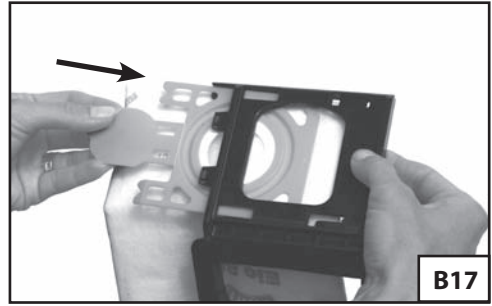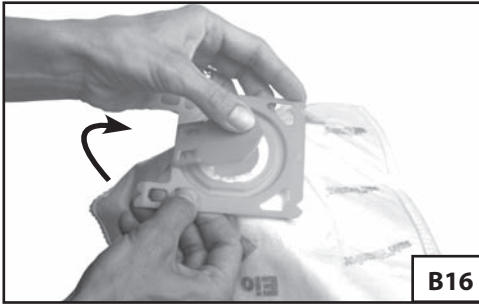

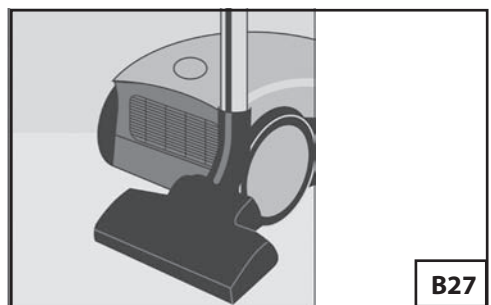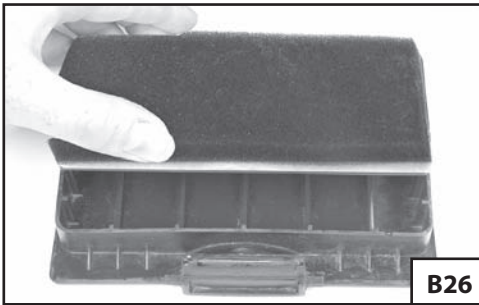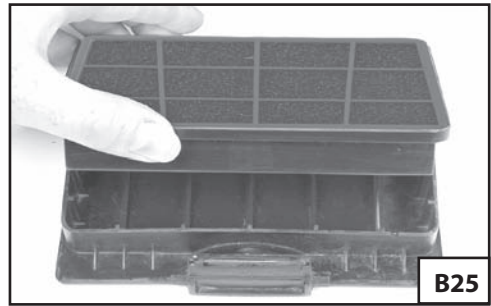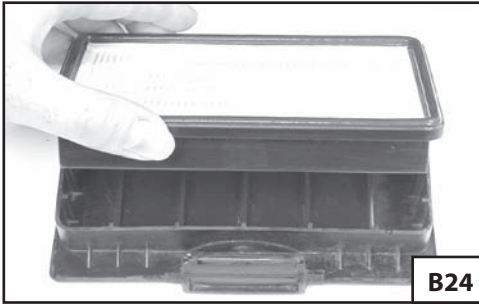

Safety Information and Warnings



-  This vacuum cleaner complies with the compulsory safety regulations for electric equipment. However, improper use can be harmful to people and property. Please read these operating instructions through carefully and completely before switching the appliance on. Keep the operating instructions, the guarantee certificate, the receipt, as well as the packaging and packaging material if at all possible.
- This appliance is designed solely for use in the private sector and for the designated purpose. The appliance is not suitable for commercial use. Don't use the appliance outdoors (unless it has been specifically designed for use outdoors). Don't subject the appliance to heat or direct sunshine or moisture. Never immerse the appliance in liquids and be aware of sharp edges that may damage it. Never use the appliance with wet or damp hands. Unplug it immediately if the appliance becomes wet or damp when it is running. Don't immerse the appliance in water.
- This vacuum cleaner may only be used and kept in the home. People or animals must never be vacuumed with this vacuum cleaner.
- Any other types of use are at your own risk and are possibly dangerous.
- Other uses and unattended operation are not allowed.
- The manufacturer cannot be made responsible for damages that are caused by improper use or incorrect operation.
- The appliance must not be used without a vacuum cleaner bag and exhaust filter.
- Always pull the power cord full out before use.
- If the power cord is damaged, it must be completely replaced along with the cable cylinder by customer service.
- Do not vacuum up ashes, large fragments of glass, sharp objects or any liquids.
- Don't vacuum up any toner dust, which is used in printers and copiers for example, because it is electrically conductive. In addition, it is possible that it will not be completely filtered out by the filter system of the vacuum cleaner and can be released into the air via the exhaust fan.
- Never vacuum asbestos or asbestos dust.
- Never vacuum flammable or poisonous liquids like petrol, oil, acids, or other volatile substances.
- Don't vacuum any liquids (e.g. water).
- Never stand the appliance on its edge or operate it on its side. Pay particular attention to a horizontal position and adequate stability on stairs.
- Always unplug the appliance after use and before cleaning or changing the filters.
- Only trained specialists may make repairs on electric equipment. Improper repairs could result in considerable danger to the user.
- Do not store the appliance directly beside a hot oven or radiator.
- Children are not aware of the dangers that result from handling electric appliances. Therefore, children should never handle electric appliances without supervision.
- When cleaning or removing the appliance, always switch it off, and pull the plug out of the receptacle if you are not going to use the appliance for an extended period of time. Never pull on the cable to unplug the appliance, rather pull on the plug itself. Also, remove any special accessories from the appliance.



- Never leave the appliance switched on unattended. If you leave the work area, switch the appliance off or unplug it from the receptacle (don't pull the cord, but use the plug).
- In order to protect children from electric household appliances, make sure that the cable can't cause children to stumble and don't give children access to the appliance.
- Check the appliance and the power cord regularly for any possible damages. Don't use damaged appliances.
- Don't try to repair the appliance yourself. Always use an authorised technician for repairs. Always have faulty power cords replaced immediately by the manufacturer or a qualified electrician. Use the same type of cable in order to prevent any danger of electric shock and injury.
- Only use original spare parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Please also pay particular attention to the following "Special Safety Information".



Special Safety Information

- Never vacuum up liquids.
- Never vacuum up ashes or pointed or sharp objects.
- Never use the appliance in damp rooms.
- Never use the appliance without a filter. Make sure that the filter is inserted into the appliance correctly.
- When using the appliance, make sure that no hair, clothing, or members are drawn in.
- Keep the vacuum cleaner away from heat sources such as radiant heaters, ovens, and so on.



Electrical Requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).
 - If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.
 - If you cut off the plug and let go of the cable it will rewind into the machine therefore you must pull out a length of cable and secure it before cutting the plug off and re-fitting a new one.
- WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.
Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.



Disposal Information

The appliance contains electric and electronic components and may not be disposed of as household garbage.

The local and currently applicable legislation must be observed unconditionally.
Please also observe the new WEEE guideline (Waste Electrical and Electronic Equipment).





A Overview of the Appliance Components

- | | |
|--|--|
| <ul style="list-style-type: none"> 1 Dust compartment lid 2 Hose inlet 3 "Dust bag full" indicator 4 Variable power control 5 Cable rewind 6 ON/OFF switch 7 Dust compartment release 8 Exhaust filter 9 Motor protection filter: Plastic foam filter or micro hygiene filter (depending on the configuration) 10 Dust bag holder location | <ul style="list-style-type: none"> 11 Carrying handle 12 Vacuum hose with air bleed slider 13 Telescopic tube with accessories holder (depending on the configuration) 14 Switchable floor nozzle 15 Vacuum cleaner bag 16 Bag holder 17 Furniture Brush (depending on the configuration) 18 Upholstery nozzle (depending on the configuration) 19 Crevice tool 20 Tube park |
|--|--|

B Operation

B1 Switching on

Push the vacuum hose into the hose inlet on the top of the vacuum cleaner so that it is physically locked in place there.

B2 To remove the hose again, press the button on the vacuum hose attachment piece. Keep this button pressed and pull the hose out of the vacuum cleaner.

B3 Pull out the power cord to its full length and plug into the mains supply.

B4 Cord Rewind

Press the button  with your foot or hand to wind up the cable

WARNING: When rewinding always hold the plug.

B5 Make sure that the power control is set all the way to the left to "Min". To start the motor, press the "On/Off" switch.

B6 Now, turn the power control to the right until the desired power setting has been reached. Work with consistent speed when vacuuming. In the process, it is unnecessary to apply additional pressure on the suction nozzle.

Variable Power Regulator

Low level of suction: for curtains and delicate fabrics.

Medium level of suction: for deep pile velour rugs and broadloom.


High level of suction: for hardwearing carpets and floors.

B7 Telescopic tube

(varies depending on the appliance model)

This adjustable vacuum tube can be lengthened to fit your height to make your work more convenient. Loosen the locking device by pressing the button in the direction of the arrow. Set the vacuum tube to the desired length. To lock the vacuum tube in the desired length, release the button and push the suction tube in a little until you hear the lock click.

B8 Floor nozzle: for vacuuming carpets and smooth surfaces.

 Snap the lever forwards for carpets and deep pile fitted carpeting.

 Snap the lever backwards for hard floors and hardwearing short pile fitted carpeting.





B9 Accessory holder

Screw both halves together using the screws provided. Slide onto the tube. Fit the accessories onto the holder as shown.

Furniture Brush (1): e.g. for shelves and delicate surfaces.

Upholstery nozzle (2): e.g. for sofas and chairs.

Crevice tool (3): for small gaps like radiators, baseboards, joints and corners.


B10 Air bleed slider

Open the air leak slider on the handle to regulate the airflow or to remove articles that are stuck to the nozzle.


Closed - high suction power

Open - low suction power

B11 After vacuum cleaning

Turn the motor off by pressing the button 

Remove the plug from the mains supply.

Press the button  with your foot or hand to wind up the cable

WARNING: When rewinding always hold the plug.

B12 Transporting

Only use the carrying handle to transport.

B13 Storage

The vacuum cleaner can be stored upright. Turn floor nozzle until the tab on the back of it can be inserted into the holder for the tube in the storage position on the bottom of the appliance.

B14 Changing the vacuum cleaner bag

The dust bag must be changed if the suction power is diminished or in case the „Dust bag full“ indicator is on continuously. Also, check whether the vacuum hose, tube or nozzle is blocked.

Press the unlocking button of the dust compartment lid and fold down the dust compartment lid.

B15 Pull the holder with the dust bag rearwards.

Slide the dustbag sideways from the holder.

B16 After removing the full dustbag from the holder, close the inlet.

Dispose of the bag with household waste.

B17 Put a new dust bag into the bag holder.

B18 Replace the bag holder with the dust bag and close the lid.



ATTENTION: Never vacuum without a dust bag.

The lid will not close unless the bag is correctly fitted.

Cleaning the motor protection filter

It is recommended to always clean the filter when the dust bag is changed and to replace it with a new filter after changing the dust bag five times.

UK Helpline 0870 060 2604 Replacement Parts 0870 167 6635 Ireland Helpline 1800 409119



It is recommended to always clean the filter if there is an operational fault, i.e. after the dust bag tears or after removing a blockage.



ATTENTION: Never use the appliance without the motor protection filter in place or else the motor could become damaged, which would not be covered by guarantee.

B19 Press the unlocking button of the dust compartment lid and fold down the dust compartment lid.

B20 Pull out the bag holder with the dust bag towards the back.

B21 Remove the filter and clean it by either shaking it out or washing it. When washing the filter, handle it with care and use warm water. Let it dry in the air. Do not use a detergent. **The filter must be fully dry before reinserting it back into the appliance.**

Reinsert the motor protection filter. Make sure that the filter is fastened centrally on the suction grate.

B22 Replace the bag holder with the dust bag and close the lid.



ATTENTION: Never vacuum without a dust bag.

When do I have to change the motor protection filter ahead of time?

When the vacuum cleaner is used improperly such as vacuuming without a paper bag or when the dust bag tears.

B23 Changing the Exhaust Filter

Press the catch down and rotate the cover complete with filter, away from the cleaner.

B24 The filter configuration varies depending on the appliance model.

Pull the HEPA exhaust filter up and out of the holder. Clean the HEPA exhaust filter by banging it out or with a soft brush. Afterwards, put the HEPA exhaust filter back into the appliance.

The HEPA exhaust filter must be replaced with a new one after approx. 50 hours of normal operation.

B25 The filter configuration varies depending on the appliance model.

Pull the foam plastic exhaust filter up and out of the holder. Clean the foam plastic exhaust filter by banging it out, with a soft brush, or by washing it. When washing the filter, handle it with care and use warm water. Let it dry in the air. Do not use a detergent. **The filter must be fully dry before reinserting it back into the appliance.**

B26 Afterwards, put the foam plastic exhaust filter back into the appliance.

The foam plastic exhaust filter must be replaced with a new one after approx. 50 hours of normal operation.

The filter configuration varies depending on the appliance model.

Foam plastic filter

Cleaning and Service

Unplug the power plug before cleaning and service. The vacuum cleaner – and above all the dust space – and all the accessories can be cleaned with a soft cloth or commercial plastic cleaner. Let it dry afterwards.

Occasionally vacuum the lower side of both floor nozzles with the joint and crack nozzle.

B27 Parking system

For short breaks from work and for storage, simply put the complete vacuuming fittings into the holder on the back side.

Other Important Information

Dust bags are disposable articles. They must not be used multiple times because plugged pores reduce the suction power.

To check:

- Attach the floor nozzle. All other nozzles affect the functioning of the change dust bag display.
- Switch on the vacuum cleaner and set the suction power selector (if available) to full suction power.
- Lift the floor nozzle off the floor by a small amount.
- If the dust bag full display is "red", then you must change the dust bag.

What you should know about how the change dust bag display works.

The display is designed to work with mixed dust, as is mainly found in the home. This includes hair, carpet fluff, threads, sand, and so on.

However, if you vacuum up a great deal of fine dust, for example drilling dust, sand, plaster, or flour, the pores of the dust bag will become clogged. Then, the change dust bag display will show "full", even if the dust bag is not yet full. The dust bag must then be changed, since the suction power has been reduced by the plugged pores.

However, if you vacuum up a great deal of hair, carpet or wool fluff, etc., then the change dust bag display may only respond when the dust bag is already bulging full.

Overheating protection

- Overheating protection (thermo switch) – vacuum cleaner switches off independently (depending on the configuration)

If the motor switches off independently, you can resume vacuuming after approx. 60 minutes.

In such a case, switch your appliance off (press the ON/OFF button).

- The appliance may switch off automatically if, for example:

- a large object has blocked the suction path
- you continue vacuuming with a full dust bag
- the motor protection filter is very dirty or
- there is a very dirty exhaust filter in the appliance.

- After removing the cause of the problem and waiting for the above-mentioned delay time, the appliance can be started once again.

Your three-year guarantee

• It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 36 months of the original purchase date please contact our helpline quoting the model number and serial number. Repair or replacement is subject to the exclusions (1-6) set out below .

If you suspect a fault, follow the simple checks detailed below before returning the appliance or calling the helpline.

- Check the dust bag and filters for blockages.
- Check the hose and tubes for blockages.
- Check the plug is firmly in the socket and the supply is switched on.
- Make sure the socket is working by trying another appliance.

If for any reason this item is replaced during the three-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of initial purchase.

Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

To qualify for the three-year guarantee the appliance must have been used according to the manufacturers instructions.

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

1. The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. The guarantee excludes consumables such as bags and filters.
6. Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.



morphy richards

**The After Sales Division
Morphy Richards Ltd**
Mexborough, South Yorkshire,
England, S64 8AJ

Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119

For details of other products in the Morphy Richards range please see our website . . .