

Franklin®

BOOKMAN®

EXPANDABLE ELECTRONIC BOOK

New International Version
HOLY BIBLE
and Complete Concordance

USER'S GUIDE
NIV-440

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN PRODUCT.

YOUR USE OF THE BOOKMAN PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE

All rights in the BOOKMAN PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN PRODUCT on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN PRODUCT or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN PRODUCT. You may not export or reexport, directly or indirectly, the BOOKMAN PRODUCT without compliance with appropriate governmental regulations. The BOOKMAN PRODUCT contains Franklin's confidential and propriety information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Contents

Welcome to the world of BOOKMAN! BOOKMAN is a powerful, portable electronic reference with a built-in book and a slot in the back for more books.

With this New International Version of the *Holy Bible*, you can quickly find any









Bible verse, as well as the occurrences of any word and phrase in the Bible. You can also place bookmarks for personalized reference.

To learn how to use other BOOKMAN books, read their User's Guides.

Key Guide	3
Installing Batteries	4
Installing Book Cards	4
Selecting Books	5
Using the Color Keys	5
Changing Settings	6
Viewing a Demonstration	6
Reading the Bible	7
Finding Bible Verses	8
Finding Words	9
Finding Phrases	10
Highlighting Search Words	11
Expanding Your Searches	11
Viewing Footnotes	12
Using Bookmarks	13
Resetting BOOKMAN	15
Specifications	15
Index	17

Key Guide

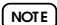Function Keys

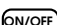




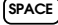
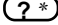

-  Clears a request.
-  Shows the main menus.
-  **(red)** Expands a search.
-  **(green)** Places a bookmark.
-  **(yellow)** Shows a footnote.
-  **(blue)** Shows bookmark list.
-  Exits the book you are reading.
-  Turns BOOKMAN on or off.

► Understanding Color Keys

The color keys (red, green, yellow, and blue) perform the functions listed above only for the BOOKMAN book described in this User's Guide.

Other books have their own color key functions, which are labelled on their book cards and listed in their User's Guides. For more information, read "Using the Color Keys."

Other Keys

-  Backs up (e.g., erases letters).
-  Shifts  to type an apostrophe.
-  Enters a request or selects a menu item.
-  Shows help messages.
-  Types a space or pages down.
-  Shows the verse number.
-  Types a colon or apostrophe.









Direction Keys



Move in indicated direction.

UP/DN Page up or down.

Star Key Combinations*

-  +  Sends a word between books.
-  + **UP** Show the next or **DN** previous chapter or match.
-  +  Go to start or end of a menu chapter, or help message.
-  + **Q**... Shifts the top row of letters to type numbers.
-  + **S** Shows section titles.
- * Hold  while pressing the other key.

Installing Batteries

Your BOOKMAN model NIV-640 uses four AAA batteries. Here is how to install or replace them.

Warning: When the batteries lose power or are removed from your BOOKMAN, information that you entered in its built-in book and in an installed book card will be erased.

1. Turn your **BOOKMAN** over.
2. Slide off its battery cover in the direction of the triangle.
3. Install the batteries as shown on the diagram in the battery compartment.
4. Replace the battery cover.


► Resuming Where You Left Off

You can turn off your BOOKMAN at any screen. When you turn your BOOKMAN on again, the last screen that you viewed appears.

Installing Book Cards

Warning: Never install or remove a book card while your BOOKMAN is turned on. If you do, information that you entered in its built-in book as well as in any other installed book cards, will be erased.

1. Turn your **BOOKMAN** off.
2. Turn your **BOOKMAN** over.
3. Align the tabs on the book card with the notches in the slot.

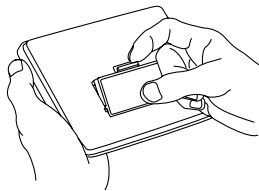

4. Press the book card down until it snaps into place.

► Removing Book Cards

Warning: When you remove a book card to install another, information that you entered in the removed book card will be erased.

Selecting Books

Once you have installed a book card in your BOOKMAN, you can select which book you want to use. Follow these steps.

1. Turn BOOKMAN on.

2. Press **CARD.**



These are sample books.

3. Press **← or **→** to highlight the book you want.**



4. Press **ENTER to select it.**


► About Screen Illustrations

Some screen illustrations in this User's Guide may differ from what you see on screen. This does not mean that your BOOKMAN is malfunctioning.

Using the Color Keys

The red, green, yellow, and blue keys on the top row of your BOOKMAN change their functions according to which book you have selected.

If you have selected the built-in book, the color keys function as labeled on the BOOKMAN keyboard. If you have selected a book card, the color keys function as labeled on that card.

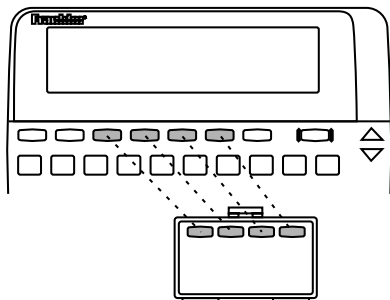

Remember, when you've selected a book card, the color keys function as labeled on that card, not as on the keyboard.

Changing Settings

You can adjust the type size, shutoff time, and screen contrast. The type size changes the number of lines of text appearing on screen. The shutoff time is how long BOOKMAN stays on if you forget to turn it off.

1. Press **(MENU)**.
2. Press the arrow keys to highlight the **Other** menu.



3. Highlight **Set Type Size, Set Shutoff, or Set Contrast**.
4. Press **(ENTER)**.
5. Highlight a setting.
6. Press **(ENTER)** to select it.

► A Quick Contrast Change

When the NIV-640 is the selected book, you can also change the screen contrast by pressing **(CLEAR)** and then repeatedly pressing **↑** or **↓**.

Viewing a Demonstration

Before you start using your BOOKMAN, you can view a brief demonstration of what it can do.

When no book card is installed in your BOOKMAN, a demonstration automatically appears once you turn it on. To stop the demonstration, press **(CLEAR)**. To disable it, press **(MENU)** and then select *Disable Demo* from the *Other* menu. To re-enable it, select *Enable Demo*.

When a book card is installed in your BOOKMAN, select *View Demo* from the *Other* menu to view the demo.

► Help is Always at Hand

You can view a help message at virtually any screen by pressing **(HELP)**. Press **↓** or **(SPACE)** to read it. To exit help, press **(BACK)**.

To read a tutorial about this book, select *Tutorial* under *Other*.

► Just Follow the Arrows


The flashing arrows at the right of the screen show which arrow keys you can press to move through menus or view more text.

Reading the Bible

The simplest way to use this Bible is to select a book from the Old or New Testament and then read its text.

Each book has sections with titles. You can view section titles from the Old or New menu or directly from verses.

1. Press **MENU**.
2. Press the arrow keys to a book title under *Old* or *New*. (e.g., *Romans* under *New*).

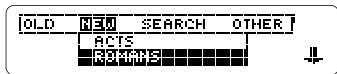

3. Hold **☆** and press **S** to view its section titles.
4. Highlight a section title.



5. Press **ENTER** to view the section.
6. Press the direction keys to read.
7. Press **MENU** to return to the menus or press **CLEAR** to clear your selection.


Reading the Bible

► Understanding Text Markings

- A ¶ indicates a new paragraph.
- Italics indicate section titles.
- Verse numbers are boldfaced at the start of verses.

► Where in the Bible Am I?

At any Bible verse, you can view its book, chapter, and verse number by pressing **?**.

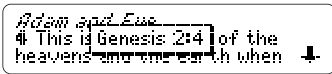

► From Verses to Sections

When Bible verses are in view, you can view a book's section titles by holding **☆** and pressing **S**.




Then highlight the section that you want and press **ENTER** to view it.

Finding Bible Verses

To go directly to a specific Bible verse, enter its book title, chapter number, and verse number.


If you enter only a book title and chapter number, you go to the start of the chapter. If you enter only a book title, you go to the start of that book.

1. Press **CLEAR**.
2. Type a book title, chapter number, and verse number.

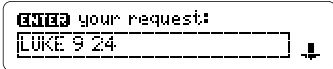

To type a number, hold **☆** and press a numbered key. Type a colon or a space between the chapter and verse number. To type a colon, press **⋮**. To erase a character, press **BACK**.

3. Press **ENTER**.

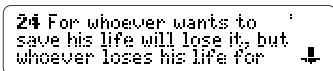

4. Press the direction keys to read.
5. Press **CLEAR** to clear your request.

Finding Bible Verses

► Verse Finding Tips

- Type abbreviations instead of complete book titles (e.g., *PS* for *Psalms* or *EPH* for *Ephesians*).
- Type an Arabic or Roman numeral before books of more than one volume (e.g., 1 *Samuel* or *II Kings*). To type a number, hold **☆** and press a numbered key.
- Some book titles, such as *Numbers* and *John*, are also valid search words. When you search for one of these ambiguous words, a menu like this appears:



Then select the item that you want.


► Searching for Sections

You can search for a section by entering one or more words from a section title of a book. For example, enter *beatitudes* and you find the start of the Sermon on the Mount.

Finding Words

Just as if you were using a concordance, you can search for almost any word in this Bible. Simply enter search words to find their occurrences, or matches. After a word search, only those books with matches are listed under *Old* and *New*.

1. Press **CLEAR**.
2. Type up to five words.

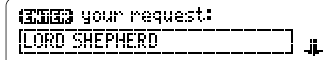

ENTER your request:
LORD SHEPHERD

3. Press **ENTER** to view the first match.



without a shepherd.
So the LORD said to
Moses, Take Joshua son of

Bullets mark the matches.

4. Hold **☆** and repeatedly press **DN** to view the next matches.

To view a previous match, hold **☆** and press the UP key.

5. Press **MENU**.



NEW SEARCH OTHER
NUMBERS
STRONG

Finding Words

6. Select a book under *Old* or *New* to view matches in it.
7. Press **CLEAR** to clear your request.

► If You Misspell a Word

If you enter a misspelled word, or enter a word not in this Bible, spelling corrections appear. Select a correction from the list. Or press **BACK** to change your request.

► If You Do Not Find Words

If you enter two or more words not in this Bible, you see this menu:



NO MATCHES FOUND
SEARCH FOR SIMILAR WORDS
CHANGE YOUR REQUEST

To expand the search to include inflections and synonyms of your words, press **ENTER**.

To change your search word(s), select *Change Your Request*.

Finding Phrases

You can search for phrases—adjacent or nearly adjacent words in a particular order—by selecting an ordered search and a narrow search width.

1. Press **MENU**.
2. Select **Ordered Search** from the Search menu.



3. Press **MENU**.
4. Select **Set Search Width** from the Search menu.



5. Select **Close Together**.
6. Enter a phrase (e.g., *holy spirit*).
7. Hold **☆** and press the DN key repeatedly to view the next matches. To view previous ones, hold **☆** and press UP.
8. Press **CLEAR** when done.

Finding Phrases

► About Ordered Searches

When you select *Ordered Search*, you find words only in the order that you enter them. For example, an ordered search for *holy spirit* does not find *spirit holy*.

► About Search Widths

The search widths set how far apart search words can be in matches.

Search Width **Distance**

<i>Close Together</i>	nearly adjacent
<i>Not as Close</i>	a few words apart
<i>Far Apart</i>	many words apart
<i>Very Far Apart</i>	up to a few verses

► Unsearchable Words

These words are too common to search for, either by entering them or by highlighting them in verses: a, an, and, are, as, be, but, by, for, from, he, her, him, his, I, in, is, it, me, my, not, O, of, our, out, shall, she, that, the, their, them, they, to, up, upon, us, was, we, were, with, you.


Highlighting Search Words

You can also search for a word by highlighting it in a verse. Try this example.

1. Go to *Romans 3:5*.

To learn how, see “Finding Bible Verses.”

2. Press **ENTER** to start the highlight.

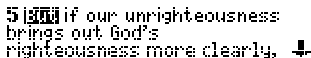

5 **SEARCH** if our unrighteousness brings out God's righteousness more clearly. **SEARCH**

To turn the highlight off, press **BACK**.

3. Press the arrow keys to highlight *righteousness*.



5 But if our unrighteousness brings out God's **RIGHTeousNESS** more clearly. **SEARCH**

4. Press **ENTER** to search for the highlighted word.

5. Hold **☆** and repeatedly press the **DN** key to view the next matches.

6. Press **MENU** to view those books with matches.


7. Press **CLEAR** when done.

Expanding Your Searches

You can expand your word searches up to three times to find inflections, synonyms, and similar words.


1. Press **CLEAR**.

2. Enter a word (e.g., *belief*).

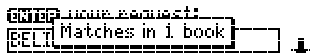

ENTER **belief** **SEARCH**
ENTER Matches in 1 book **SEARCH**

3. Press **MORE** to expand the search.

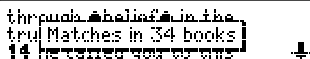

through **belief** in the true **SEARCH**
14 he called god of his **SEARCH**

4. Press **MORE** twice to fully expand the search.



6 **belief** **SEARCH**
14 he called god of his **SEARCH**
6 **belief** **SEARCH**
14 he called god of his **SEARCH**

5. Press **MENU** to view the menu.

6. Select a book to view matches in it.

7. Press **CLEAR** when done.

Expanding Your Searches

► Understanding Expansions

Each time that you expand a search, similar words are added to your search and more matches are found.

The first time that you press **MORE**, inflections are added (e.g., *believe* and *believed* to *belief*).

The second time that you press **MORE**, compound and related words are added (e.g., *believer* and *unbelief* to *belief*).

The third time that you press **MORE**, synonyms are added (e.g., *understand* and *surely* to *belief*).

When you search for a phrase, words similar to any or all your search words are found.

Sometimes pressing **MORE** only once does not expand a search because your search word(s) have no inflections in this Bible. In that case, press **MORE** a second and a third time to expand your search.

Viewing Footnotes

Whenever you see a **[N]** after a word, that word has a footnote. Try this example.

1. Go to **2 Kings 7:3**.

To learn how, see “Finding Bible Verses.”

The Siege Lifted
3: Now there were four men
with leprosy^[N] at the

Notice the footnote marker.

2. Press **NOTE**.

[3] The Hebrew word is used
for various diseases
affecting the skin—not

3. Press the direction keys to read the footnote.

4. Press **BACK** to go back to the verse.

► Understanding Footnotes


The footnotes in this Bible were written by the translators of the NIV. These footnotes provide alternative translations, describe textual variants, and define obscure words.

Viewing Footnotes

► When More Than One Footnote Marker Appears

Sometimes more than one **[F1]** appears on screen. In that case, pressing **[NOTE]** displays the footnote of the first **[F1]**.

To view footnotes of subsequent markers, press **[ENTER]** and then the arrow keys to highlight a **[F1]**.


great: He **[F1]** appeared in a body, **[F1]** was vindicated by the Spirit, was seen by 

Press **[ENTER]** to view its footnote. Then press **[BACK]** to go back to the verse.

Using Bookmarks

It's easy to place up to 30 bookmarks at verses for quick reference.


1. Press **[MARK]** at any verse to place a bookmark.

[M]6 "I am the LORD your God, who brought you out of Egypt, out of the land of 

The **[M]** marks its placement.


2. Press **[LIST]** to view your bookmark list.

3. Press to highlight a verse.

Deuteronomy 5:6
John 3:16
[M]6 **[M]**16 

This is a sample bookmark list.

4. Press **[ENTER]** to view it.

[M]1 The LORD is my shepherd, I shall not be in want. 

Using Bookmarks

► Deleting a Bookmark

To delete a bookmark, first press **LIST**. Then highlight a verse on your bookmark list. Then press **D** to delete it.

► Deleting All Bookmarks

Caution: When you delete all your bookmarks as described below, the menus are reset to their original settings: *Ordered Search* off, *Close Together* search width, *9* screen contrast, *Medium* type size, and *2 Minutes* shutoff time.

To delete all your bookmarks at one time, first turn off BOOKMAN.

Then hold **ON/OFF** and press **CLEAR** to reset it.

Sending Words Between Books

This BOOKMAN can send words between certain books.

To send a word, you must first install a book card in your BOOKMAN, and that book card must be able to send or receive words. To learn if a book card can send or receive words, read its User's Guide.

1. Highlight a word in this book.

5 But if our unrighteousness
brings out God's
~~unrighteousness~~ more clearly, ↓

To highlight a word in text, press **ENTER** and then press the arrow keys.

To highlight a word in a list, press the arrow keys.

2. Hold **☆** and press **CARD**.

3. Highlight the other book.

4. Press **ENTER**.

The word that you highlighted appears in the other book.

5. Press **ENTER** to look up the word.

Resetting BOOKMAN

If the BOOKMAN keyboard fails to respond, or if its screen performs erratically, first press **(CLEAR)** and then press **(ON/OFF)** twice. If nothing happens, follow the steps below to reset it.

Warning: Pressing the reset button with more than very light pressure may permanently disable your BOOKMAN. In addition, resetting your BOOKMAN unit erases settings and information entered into its built-in book, and in any installed books.

1. Hold **(CLEAR) and press **(ON/OFF)**.**

If nothing happens, try Step 2.

2. Use a paper clip to gently press BOOKMAN's reset button.

The reset button is recessed in a pin-sized hole on the back of your BOOKMAN. Look for it on the battery cover or near the book card slot.

► Troubleshooting Tips

- Make sure your book card, if any, is installed correctly.
- Check that the book card's metal contacts are dirt- and dust-free.

Specifications

Model NIV-640

- Batteries: 4 AAA 1.5-volt
- Size: 14 x 2.5 x 10.3 cm.
- Weight: 6 oz. without batteries

© 2000 Franklin Electronic Publisher, Inc., USA. All rights reserved.

Scripture taken from the Holy Bible, New International Version.

U.S. Patents 4,490,811; 4,830,618; 4,891,775; 4,982,181; 5,007,019; 5,113,340; 5,153,831; 5,203,705; 5,218,536; 5,229,936; 5,249,965; 5,295,070; 5,321,609; 5,333,313; 5,396,606. Euro. Patent 0 136 379.

Deutsch Pats. No. M9409743.7, M9409744.5. U.K. Reg. DES 2043954. PATENTS PENDING.

FCC Notice: Complies with the limits for a Class B computing device pursuant to Subpart B of part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation. ISBN 1-56712-139-X

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **(ON/OFF)**, or by removing/replacing batteries.

Limited Warranty (U.S. only)

FRANKLIN warrants to you that the BOOKMAN PRODUCT will be free from defects in materials and workmanship for one year from purchase. In the case of such a defect in your BOOKMAN PRODUCT, FRANKLIN will repair or replace it without charge on return, with purchase receipt, to the dealer from which you made your purchase or Franklin Electronic Publishers, Inc., One Franklin Plaza, Burlington, N.J. 08016-4907, within one year of purchase. Alternatively, FRANKLIN may, at its option, refund your purchase price. Data contained in the BOOKMAN PRODUCT may be provided under license to FRANKLIN. FRANKLIN makes no warranty with respect to the accuracy of data in the BOOKMAN PRODUCT. No warranty is made that the BOOKMAN PRODUCT will run uninterrupted or error free. You assume all risk of any damage or loss from your use of the BOOKMAN PRODUCT.

This warranty does not apply if, in the sole discretion of FRANKLIN, the BOOKMAN PRODUCT has been tampered with, damaged by accident, abused, misused, or misapplication, or as a result of service or modification by any party, including any dealer, other than FRANKLIN. This warranty applies only to products manufactured by or for FRANKLIN. Batteries, corrosion, or battery contacts and any damage caused by batteries are not covered by this warranty. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, WRITTEN OR ORAL, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE FRANKLIN'S OBLIGATION TO REPLACE OR REFUND AS SET FORTH ABOVE IN THIS WARRANTY. Some States do not allow the exclusion of implied warranties, or limitations on how long a warranty lasts. This warranty gives you specific rights; you may also have additional rights which vary from State to State. This warranty shall not be applicable to the extent that enforcement of any provision may be prohibited by applicable law.

FRANKLIN SHALL IN NO EVENT BE LIABLE TO YOU OR TO ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR ANY OTHER INDIRECT LOSS OR DAMAGE, ARISING OUT OF YOUR PURCHASE, THE MANUFACTURE OR SALE OF THE BOOKMAN PRODUCT, THIS LICENSE, OR ANY OBLIGATION RESULTING THEREFROM OR THE USE OR PERFORMANCE OF THE BOOKMAN PRODUCT UNDER ANY LEGAL THEORY, WHETHER BREACH OF CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER CAUSE OF ACTION OR PROCEEDING, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY, OR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). FRANKLIN'S ENTIRE LIABILITY FOR ANY CLAIM OR LOSS, DAMAGE, OR EXPENSE FROM ANY SUCH CAUSE SHALL IN NO EVENT EXCEED THE PRICE PAID FOR THE BOOKMAN PRODUCT. THIS CLAUSE SHALL SURVIVE FAILURE OF AN EXCLUSIVE REMEDY. This license and warranty is governed by the laws of the United States and the State of New Jersey.

Index

? key 7

¶ 7

Arrow keys 6

Auto-resume feature 4

Batteries, installing 4

Book Cards

care of 15

installing 4

removing 4

selecting in BOOKMAN 5

viewing demonstration in 6

Bookmarks

deleting 14

placing 13

Colons, typing 3, 8

Color keys

functions of 3

general use of 3, 5

Contrast, changing 6, 7

Copyrights 16

Deleting bookmarks 14

Direction keys 3

End of chapter markers 7

Expanding searches

after no matches found 9

levels of 12

FCC notice 16

Footnotes 12

Function keys 3

Help messages, viewing 6

Italics, meaning of 7

Keys

color (red, green, yellow, blue)
3, 5

Direction keys 3

Function keys 3

Star key combinations 3

Misspellings, correcting 9

MORE key 11, 12

New menu 7

Numbers, typing 3

Old menu 7

Ordered search 10

Other menu 6

Patents 16

Phrases, finding 10

Resetting 15

Screen contrast 6, 7

Search widths 10

Searching for

phrases 10

verses 8

Index

words

- by entering them 9
- by highlighting them 11
- in other books 14

Section titles

- searching for words in 8
- viewing from menus and verses 7

Sending words 14

Shutoff time, changing 6

Specifications 16

Spelling correction 9

Star key, use of 3

Text markings, understanding 7

Trademarks 16

Troubleshooting tips 15

Type size, changing 6

Typing

- colons 3, 8
- numbers 3, 8

Viewing

- Bible verses 8
- footnotes 12
- help messages 6
- menus 7
- section titles 7

Warranty 16

Word Searches

- expansions 11, 12
- ordered searches 10
- search widths 10
- unsearchable words 10