

Congratulations on your purchase of this high-quality Insignia product. Your NS-P7DVD15/NS-P7DVD15MX represents the state of the art in personal DVD player design and is designed for reliable and trouble-free performance.

## PACKAGE CONTENTS

- AC adapter
- Car power adapter
- Audio/Video adapter cable
- Built-in rechargeable battery
- Quick Start Guide

Before using your new product, please read these instructions to prevent any damage.

### FIND YOUR USER GUIDE ONLINE!


We are going green so a copy of your *User Guide* is not provided in the box but is available online.

Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), then click **Support & Service**.

Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.

 
## CHARGING THE BATTERY

Charge the built-in battery before using your player for the first time. The power indicator lights red while charging and turns yellow when charging is complete. When fully charged, your player provides 2.5 hours of playback.

**Note:** During playback, when the battery low icon  appears on the screen, the built-in battery power is low and your player should be recharged.

### To connect to AC power:


- 1 Plug the AC power adapter into the **DC IN** jack on your player.

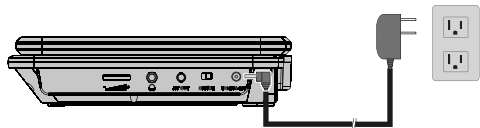

- 2 Plug the adapter into an AC wall outlet.
- 3 Turn off your player. The red charge indicator turns on.

### To connect to a 12V car power outlet:

 
- 1 Plug the car power adapter into the **DC IN** jack on your player.




- 2 Plug the adapter into a 12V vehicle power outlet.
- 3 Turn off your player. The red charge indicator turns on.

## FEATURES

### Front

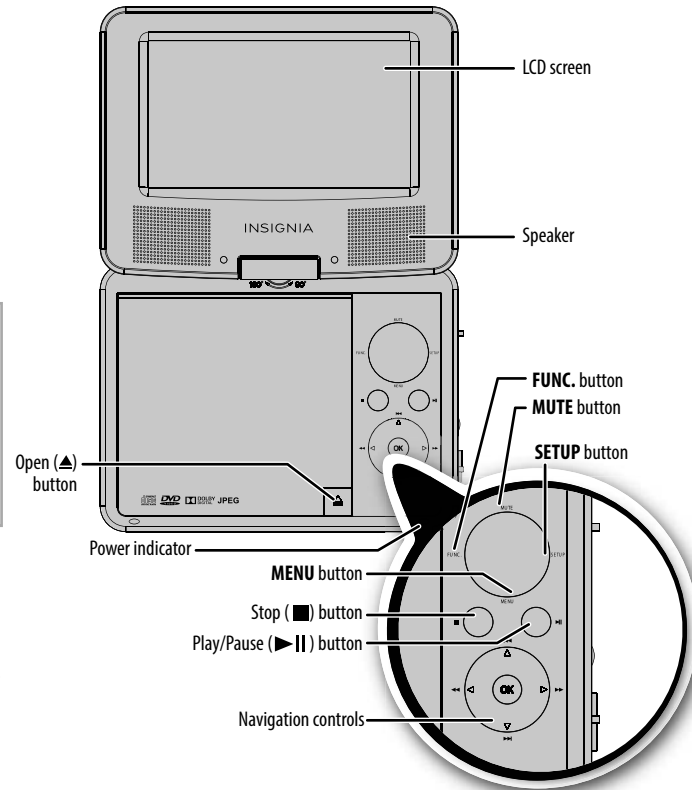


### Side

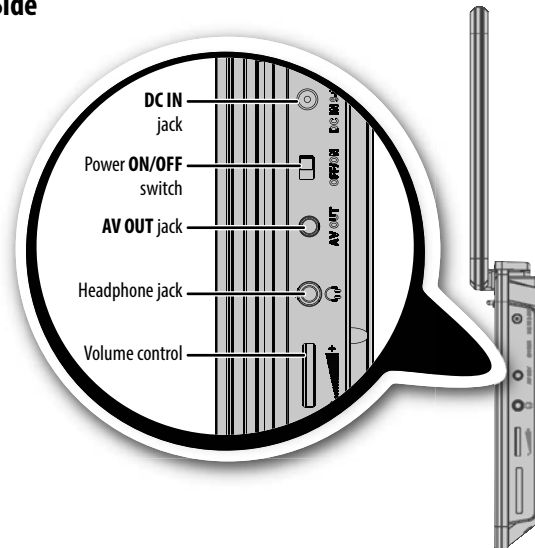 

COMPONENT	DESCRIPTION
LCD screen	Displays the picture.
Speaker	Provides audio output when headphones are not connected.
<b>FUNC.</b> button	Press to enter or exit the functions menu.
<b>MUTE</b> button	Press to MUTE or unmute.
<b>SETUP</b> button	Press to access or exit the <i>SETUP</i> menu.
Open (▲) button	Press to open the disc door.
Power indicator	The power indicator is blue when your player is powered and turned on. It lights red when charging your player and turns yellow when charging is complete.
<b>MENU</b> button	Press to access or exit the disc menu on a DVD.
Stop (■) button	Press to stop playback.
Play/Pause (▶  ) button	Press to pause or resume playback.
Navigation controls	During playback, press the ◀◀ and ▶▶ buttons to fast forward or fast reverse the disc. When using a menu, press the arrow buttons to navigate and the <b>OK</b> button to confirm selections. See <i>Player navigation controls</i> for additional information.
<b>DC IN</b> jack	Connect to an AC adapter or vehicle charger.
Power <b>ON/OFF</b> switch	Slide to turn your DVD player on or off.
<b>AV OUT</b> jack	Connect a monitor, TV, or amplifier to this jack using the included AV adapter cable and an RCA cable (not included).
Headphone jack (🎧)	Plug headphones into this jack. <b>Note:</b> When headphones are plugged in, the internal speakers are muted.
Volume control	Rotate this dial to adjust the volume.


## PLAYER NAVIGATION CONTROLS

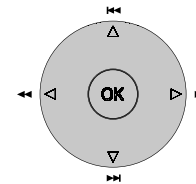 


CONTROL	DESCRIPTION
▲/◀◀	In Menu mode, press to move up in a list or menu. In playback mode, press to go to the previous title, chapter, or track.
▼/▶▶	In Menu mode, press to move down in a list or menu. In playback mode, press to go to the next title, chapter, or track.
◀◀	In Menu mode, press to move left. In playback mode, press to fast reverse the playback.
▶▶	In Menu mode, press to move right. In playback mode, press to fast forward the playback.
<b>OK</b>	In menu mode, press to confirm a selection.


**Note:** When using the setup menus, press the arrow keys to navigate and the **OK** button to make a selection.

## CONNECTING HEADPHONES

 When headphones are plugged into the  (headphone) jack, no sound comes from the built-in speaker.

### To connect headphones:

 - Plug your headphones (not included) into the  (headphone) jack.

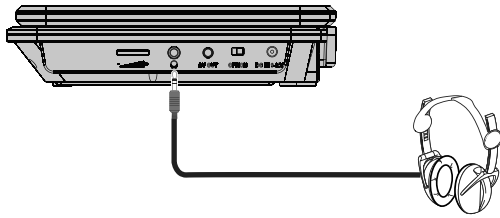


## CONNECTING TO A TV OR MONITOR

You can connect your DVD player to a TV or monitor so you can watch DVDs on the TV or monitor.


- 1 Plug the included AV adapter cable that has one black connector into the **AV OUT** jack on your DVD player.
- 2 Use a standard RCA A/V extension cable (not included) to connect the TV to the AV adapter cable of the DVD player. See below figure.

**Note:** You may have to select the correct input on your TV or monitor.

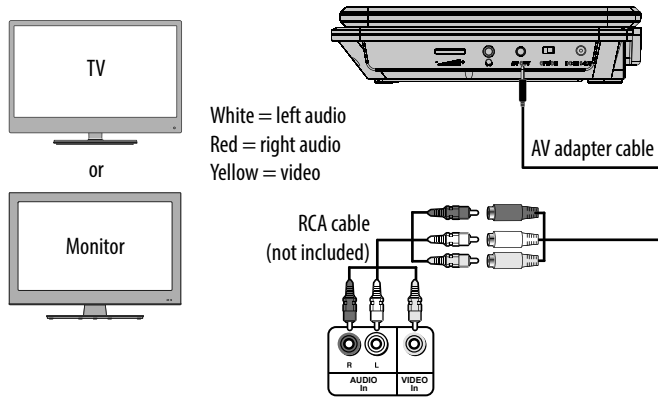


## Playing a DVD or audio CD

 **Note:** Most DVDs and your DVD player have region codes that help control illegal distribution of DVDs. The region code for your player (NS-P7DVD15) is **1** (US and Canada). You can only play DVDs with a region code of **1** or **ALL**. The region code for a DVD is printed on the DVD or the DVD packaging. The region code for your player (NS-P7DVD15MX) is **4** (Mexico). You can only play DVDs with a region code of **4** or **ALL**. The region code for a DVD is printed on the DVD or the DVD packaging.

- 1 Make sure that your player is connected to power or your battery is charged.
- 2 Slide the **ON/OFF** switch to the **ON** position.
- 3 Press the  (Open) button, the disc tray opens.
- 4 Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.

## TROUBLESHOOTING

 PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"> <li>• Make sure that the AC power adapter is plugged in and connected.</li> <li>• Make sure that your player is turned on.</li> <li>• If using in battery mode, the battery may be discharged.</li> </ul>
No sound or distorted sound.	<ul style="list-style-type: none"> <li>• Adjust the volume.</li> <li>• Make sure that all cables are inserted correctly into the appropriate jacks.</li> <li>• Make sure that your player is not paused.</li> <li>• Make sure that your player is not in fast forward or fast reverse mode.</li> <li>• Make sure that your player is not too hot. Let it cool for 30 minutes, then try it again.</li> <li>• Make sure that the headphones are not plugged in.</li> <li>• Mute button may be active!</li> </ul>
Cannot fast-forward or fast-reverse through a movie.	<ul style="list-style-type: none"> <li>• You cannot fast-forward through opening credits and warning information at the beginning of a movie.</li> <li>• Some DVDs do not allow rapid scanning or skipping of titles or chapters.</li> </ul>
The  icon appears on the screen.	<p>The action you tried cannot be done because:</p> <ul style="list-style-type: none"> <li>• The DVD software does not allow it.</li> <li>• The DVD does not support the feature (for example the Subtitle feature).</li> <li>• The feature is not available at the current point on the DVD.</li> <li>• You entered a title or chapter number that is out of range.</li> </ul>
Picture is distorted.	<ul style="list-style-type: none"> <li>• During fast-forwarding or fast-reversing, distortion is normal.</li> <li>• The DVD may be damaged. Try another DVD.</li> </ul>
Disc does not play.	<ul style="list-style-type: none"> <li>• Make sure that the disc is inserted with the label side up.</li> <li>• Make sure that the disc is compatible with your player. Your player can play DVDs and audio CDs.</li> <li>• Make sure the disc surface is clean with no major scratch marks.</li> </ul>
Play starts, then stops immediately.	<ul style="list-style-type: none"> <li>• Make sure that the region code for the DVD matches the region code for your player. Your player's region code is 1 for the USA and Canada and 4 for Mexico. The DVD's region code is on the DVD or the DVD packaging.</li> <li>• Make sure that the disc is not dirty.</li> <li>• If condensation has formed inside your player, let your player dry out.</li> </ul>

## SPECIFICATIONS

<b>Power adapter Input</b>	100-240V 50/60Hz 0.3 MAX
<b>Output</b>	9V---1A

## LEGAL NOTICES

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

## IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specific by the manufacturer.
- 11 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13 To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- 14 The wall plug is the disconnecting device. The plug must remain readily accessible.
- 15 Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

## ONE YEAR LIMITED WARRANTY

For complete warranty, visit [www.insigniaproducts.com](http://www.insigniaproducts.com).

## CONTACT INSIGNIA

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2014 Best Buy. All rights reserved. Made in China