Accessories

Locate Remote Control Switch

Model Ei 159

- Remote Locate capability
- For use with Ei140/Ei150/Ei160RC series Smoke and Heat Alarms
- Quickly locates source of alarm



Product Description

The Ei159 is a switch with Locate functionality, and is intended for installations with interconnected smoke alarms.

The Locate function will stop all the units alarming except those alarms actually sensing smoke, by disabling the interconnect feature for about 10 minutes.

The Locate function will allow the source of the alarm to be quickly located and appropriate action taken, and it can significantly reduce the annoyance to other occupants when false alarms occur at night.

The Ei159 is designed to be used in conjunction with the Ei140, Ei150 and Ei160RC series Smoke and Heat Alarms. (Note: A more suitable accessory for the Ei160RC series is the Ei1529RC remote control switch which provides, test, hush and locate functions)

The Ei159 is supplied complete with its own surface mount pattress and all mounting fixings.

Operation

- Turning on the "Locate" switch will deactivate all interconnected Smoke and Heat Alarms except those actually sensing smoke
- The Ei159 automatically restores the interconnect feature after a period of 10 minutes
- During the 10 minute period, each individual smoke detector will still operate and alarm if it senses smoke
- If the original smoke alarm continues to sound after smoke has cleared, pressing the "Locator" switch again will cancel that alarm



Shannon Free Zone, Shannon, Co. Clare, Ireland. Ph.+353 61 471277 Fx.+353 61 471053

Email. eielectronics@eiltd.ie Web: www.eielectronics.com

Model Ei159

Technical Specification

Supply Voltage: 240 V AC Fixing: Screw fixings supplied

Battery back up: No battery back up Plastic material: UL94VO flame retardant

Temperature Range: 0 to 40°C **Dimensions:** 89mm x 89mm x 47mm

Humidity Range: 0% to 90% Relative Humidity **Weight:** 170g

Warranty: 5 year (limited) warranty **Interconnect:** Up to 12 interconnected

 
Ei141/144/146/151TL/154TL/ 156TL/156TLH/156TLR/161RC/

164RC/166RC alarms

Specifications are subject to change


Installation

Mains Powered Systems



Be very careful about correctly wiring the alarms as mixing Live and Neutral will blow/damage interconnected alarms

 9Volt Battery Powered Systems



Use only with Ei100C/100TYC/100TYCH/103C/105C/105CH/105TYC/3105TYC Smoke/Heat Alarms

Important Precaution:

Do not install the actual smoke/heat alarm itself in new or renovated buildings until all work is completed (including floor coverings) and the building has been fully cleaned. The wiring can be installed when appropriate. (Excessive dust and debris from building work can contaminate the smoke chamber and cause problems, and it will also invalidate the guarantee). If it must be installed, cover it completely, particularly around the edges, with a dust cover (eg. a plastic bag), until all cleaning is finished.. Connect wires to the unit as in wiring diagram. All wiring must comply with local codes.



Shannon Free Zone, Shannon, Co. Clare, Ireland. Ph.+353 61 471277 Fx.+353 61 471053

Email. eielectronics@eiltd.ie Web: www.eielectronics.com