

 
■ Binatone Help Line: 01325 304473, 9.00 am to 5.00 pm, Monday to Friday.

OPERATION

BASIC FUNCTION

THE DISPLAY

On-Hook Status:

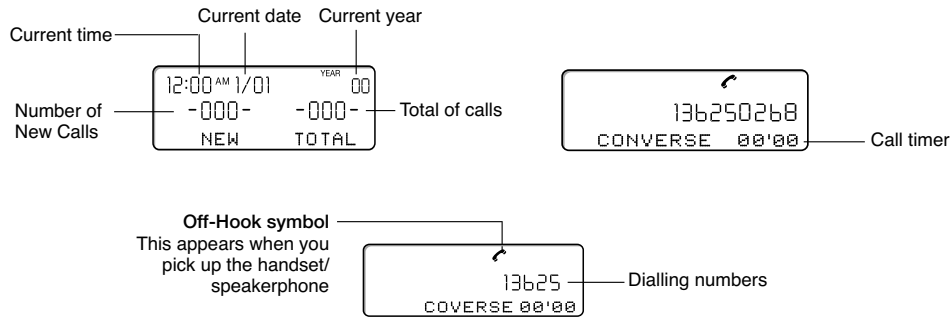

 
Installing (or Replacing) the Battery

Use screwdriver to remove the screw in the battery compartment cover on the bottom of the base unit.

IMPORTANT — before removing the battery compartment cover, always make sure the base unit is disconnected from the telephone line.

※ Install 3 Alkaline AAA batteries into the battery compartment and re-fit the cover before use.

Warning : The unit will not work without batteries fitted.

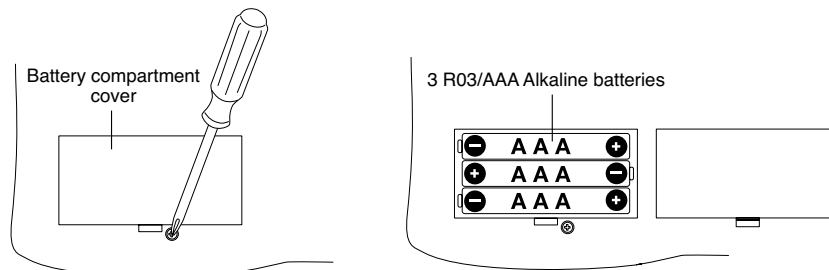

Connection and conditions for use

You can connect your D33, to public networks in the UK; or to an approved PBX using DTMF signalling. Each item of telephone equipment (phones, fax machines, etc.) has a **ringer equivalence numbers (REN)**. The RENs of all equipment connected to an exchange line **must not add up to more than 4** otherwise, one or more phones may not ring and/or answer calls correctly. D33 has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.


Note :

Subscription to the Caller ID Service is required for the phone to display the callers number. Please contact your line Provider. If you do not subscribe to Caller ID, the Caller Display will not work but the phone will work.


■ Binatone Help Line: 01325 304473, 9.00 am to 5.00 pm, Monday to Friday.

MAKING AND ANSWERING CALLS

To make a call


- 1 Lift the handset or press  and wait for Dial tone
- 2 Dial the telephone number using the keypad

LAST NUMBER REDIAL

- 1 Lift up the handset or press  to get a dial tone
- 2 Press the LNR button 

SECRECY

While you are on a call, to mute the mouthpiece so that your voice cannot be heard.



- 1 Press and hold 

USE ON A PBX

If you are using your D33 on a PBX, and the PBX User Guide tells you to press RECALL, press the  on your D33.

When making calls on some PBXS, you need to wait for a second Dial tone after dialling the outside line access digit (e.g. "9"). If your PBX is of this type, you can use the "Pause function" when making calls, so that last Number Redial will work later.







TO MAKE A LNR CALL ON A PBX :

1. Key in the outside line access digit then press 
2. Dial the telephone number.
3. Now you can redial (Lift handset & Press ) and the phone will dial 9, Pause and then dial the number.

PHONE BOOK





* Phone book can store 20 numbers (up to 16 digits) and 20 names (up to 16 characters).

ADD NUMBER AND NAME TO THE PHONE BOOK










1. Press 
2. Press  or  to go to the last entry
3. Press 
4. LCD will display a flashing ' _ '
5. Input the number
6. Press  to confirm
7. LCD will display a flashing ' _ ' under the number
8. Input the name through numerical button with letters
9. Press  to confirm

■ Binatone Help Line: 01325 304473, 9.00 am to 5.00 pm, Monday to Friday.





DELETE NUMBER AND NAME FROM THE PHONE BOOK

1. Press 
2. Press  or  to find the number you want to delete
3. Press  for 1 second
4. LCD will display '-EMPTY-' when there is no number




MODIFY NUMBER AND NAME FROM THE PHONE BOOK

1. Press 
2. Press  or  to find the number and name you want to modify
3. Press 
4. The last digit of the number will be flashing
5. Press  to modify the flashing number or press  to delete flashing number or press the number key you wish to add
6. Press  to confirm
7. The last letter of the name will be flashing
8. Press  to delete the flashing letter or press the keypad digit for the letter you wish to add
9. Press  to confirm

DIALLING FROM PHONE BOOK

1. Under On-Hook status, press , the phone book reviewing status has been entered
2. Press  or  to find the number you want to dial out. The LCD will display the number and name
3. Press  and the number will be dialled




COPY NUMBER FROM CALL LOG TO THE PHONE BOOK

1. Press  or  to select the number you wish to copy to the phonebook
2. Press 
3. LCD will display "COPY TO P"
4. Press "0 - 9" to store the number to the memory

You must contact your line provider and subscribe to Caller Display with them before the Caller ID function on this phone will work.





OUTGOING CALLS LOG

 
REVIEW DIALED NUMBERS

1. Under On-Hook status
2. Press 
3. Press  or  to review the dialed numbers and the conversation time
4. LCD will display '-EMPTY-' when there is no number in the memory





 
Remark: No.1 is the last number dialed out and No.30 is the oldest number dialed out.

TO DELETE OUTGOING CALL



 

1. Press 
2. Press  or  to find the number you want to delete
3. Press  for 1 second
4. LCD will display '-EMPTY-' when there is no number






 

TO DIAL FROM OUTGOING CALL LOG

1. Press  and use the  or  to select dialed number
2. Press , the number will be dialed.
3. Press  again if the dialling is not successful


 



COPY A DIALED NUMBER TO PHONE BOOK

1. Press  and select number you want to copy by pressing  or  key
2. Press 
3. LCD will display "COPY TO P"
4. Press 0-9 to store the number to the memory

1. Display Shows `oooooooooooooooooooo`:

The display contrast is set too high and you can no longer see the Menu selections on the display. Please follow these key presses. - Press and release the  button twice - Press and release the  button. - Press and release the  button - Press and release the  arrow button until the desired contrast is displayed and then press and release the  button.

2. Display Is Blank:

The display contrast may be set too low so that you can no longer see the menu selections in the display. Please follow these key presses. - Press and release the  button twice - Press and release the  button. - Press and release the  button - Press and release the  arrow button until the desired contrast is displayed and then press and release the  button.

 
■ Binatone Help Line: 01325 304473, 9.00 am to 5.00 pm, Monday to Friday.

CLI LOG (INCOMING CALLS LOG)

This phone can store up to 199 incoming numbers with time which can be reviewed, restored to Phone book and dialled out.

REVIEWING INCOMING CALLS

1. Under On-Hook status
2. Press **▶** or **◀**, enter into reviewing status
3. LCD will display '-NO CALL-' when there is no message
4. When reviewing to the first or last number, the LCD will display '-END OF LIST-'



DELETING NUMBER FROM CALLER ID LOG

 
1. Select number by pressing **▶** or **◀** key
2. Press and hold **DELETE** for 1 second, the number will be deleted. The LCD display will show the next number and the total of calls will decrease
3. Press and hold **DELETE** for 3 seconds, all the numbers will be deleted

DIALLING FROM CALLER ID LOG

1. Press **▶** or **◀** to find the entry you want to dial.
2. Press **CALL BACK / PAUSE (LNR)** or **ENTER**, and the number will be dialled.
3. If the dialling is not successful, press **CALL BACK / PAUSE (LNR)** to try again

 
MEMORY FULL

When the called ID log is full, the next incoming number will overwrite the most recent incoming number. The LCD display will display "-MEMORY FULL-" until you delete the numbers in the caller ID log.







LOW BATTERY INDICATOR FUNCTION

When the battery is low, the LCD will display the low battery symbol.







■ Binatone Help Line: 01325 304473, 9.00 am to 5.00 pm, Monday to Friday.

SYSTEM MENU

 


1. Under On-Hook status
2. Press  to enter into the menu
3. Press  or  to select one of the functions below that you wish to change and then press .

SET LCD CONTRAST

 
 


1. Press  or  to adjust the LCD contrast from 1 to 8
2. Press  or  to set and exit menu

Please note, if the display is faint, try adjusting the contrast as explained above.

SET OFF TIME - To limit Call Duration


1. Press  to set off time from 00 minute to 99 minutes
2. If you use this function we suggest you set it to more than 5 minutes. "Emergency calls are also affected by this function."
3. Press  or  to set exit menu

SET DATE AND TIME

1. Press  to modify the flashing number
2. Press  to change the flashing digit
3. Press  or  to set and exit menu

SET AREA CODE

Set this to your local area code. When you receive a local call, your Caller ID will log the full number including the area code. When phoning back from the Caller ID log, the local area code will not be dialled.







1. Input the area code
2. Press 

LONG PREFIX

 


Not used.

BROWSE DIALLED NUMBERS

Allows you to view and dial previously dialled numbers.

1. Press  or  key to select the "number"
2. Press  or  key to browse the number and press  which ever dialling out and press  key can delete the number

SET DISPLAY LANGUAGE

1. Press  to choose the language of LCD among English, Netherlands, Deutsch, Francais, Svenska, Espanol, Italiand or Danish
2. Press  or  to set and exit menu

■ Binatone Help Line: 01325 304473, 9.00 am to 5.00 pm, Monday to Friday.

■ While the unit is under Guarantee

Guarantee and service The Binatone D33 is guaranteed for 12 months from the date of purchase shown on your sales receipt. The Guarantee does not cover damage by misuse or negligence, or by excessive voltages – for example, faults on the telephone line, or lighting.

Please keep your sales (till) receipt – this is your guarantee. You should also keep the original packaging material.

This does not affect your statutory rights.

In the unlikely event that you need to return your D33 to our Repair Centre while it is under guarantee, there will be a £5 handling charge.

- While the unit is under Guarantee**
1. Disconnect the base unit from the telephone line.
 2. Pack up all parts of your D33, using the original packaging. Remember to include the mains adapter.
 3. Return the unit to the shop where you bought it, making sure you take your sales receipt.

Repair after the Guarantee has expired If the unit is no longer under Guarantee, first follow steps 1 and 2 as for repair under Guarantee. Then...

4. Call our Service Department on 01325 304473 and ask for a quotation of the repair charge and details of where to send your D33 for repair
5. Make sure you include with your D33:
 - your name and address
 - a cheque or postal order for the value of the repair charge
6. Return your D33 to the address given by the Service Department.

EC DECLARATION OF CONFORMITY

We: Binatone Telecom Plc
Unit 1, Ponders End Industrial Estate
East Duck Lees Lane
Enfield, Middlesex
EN3 7SP, United Kingdom

Declare under our sole responsibility that the following product(s):

Kind of Product: Telephone with Caller Display Facility

Type Designation: **D33**

is (are) in conformity with the following relevant harmonised standards:

EN 55022 : 1998 EN 55024: 1998 EN60950 CTR38 iCTR37

following the provisions of Council Directive 1999/5/EC on radio equipment and the mutual recognition of their conformity.



BTP Ver 2, June. 03

■ Binatone Help Line: 01325 304473, 9.00 am to 5.00 pm, Monday to Friday.