



Example of a starting Serial Number UT4060210000001			
UT4	06	0210	000001
Model #	Plant #	Year/month	Starting Serial Number
Operation Manual REX2289			
Service Manual M051-00K25-A059			







