

# DVD VIDEO RECORDER

## Operating Instructions

Model No. **DVD-R4000**



### Dear customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

#### Region number supported by this unit

Region numbers are allocated to DVD players and software according to where they are sold.

- The region number of this unit is "1".
- The unit will play DVDs marked with labels containing "1" or "ALL".

Example:



**For U.S.A. only**  
**The warranty can be found on page 56.**

**For Canada only**  
**The warranty can be found on page 57.**

**Para la instalación y las operaciones básicas del aparato, existe una guía en español en las páginas 58 a 63.**



This manual was printed with soy based ink.

**CAUTION!**

THIS PRODUCT UTILIZES A LASER.  
 USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.  
 DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

**WARNING:**

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:**

TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**CAUTION!**

DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.

**THE FOLLOWING APPLIES ONLY IN THE U.S.A.****FCC Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**THE FOLLOWING APPLIES ONLY IN THE U.S.A.****Note to CATV system installer:**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.


DANGER	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. (FDA 21 CFR)
CAUTION	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. (IEC60825-1)
ATTENTION	- RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FRAIS-ŒIL.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	- AVATTAESSA OLET ALTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING	- SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNEES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	- SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG. WENN ABDECKUNG GEÖFFNET, NICHT DEM STRAHL AUSSETZEN.
注意	- 打开时有可见及不可见激光辐射。避免激光束照射。
注意	- ここを開くと可視及び不可視のレーザー光が出ます。ビームを直接見たり、触れたりしないでください。 ROLS0233

(Inside of product)

**Before moving the unit, ensure the disc tray is empty. Failure to do so will risk severely damaging the disc and the unit.**

**Do not place the unit on amplifiers or equipment that may become hot.**

The heat can damage the unit.

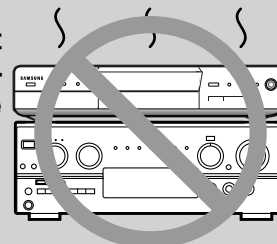

# IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Getting started

## Features

***This unit allows recording of high quality video on DVD-RAM, the compact and durable digital media with fast random access. This media also out performs past tape formats in ease of operation.***

### ■ Exceptional sound and picture quality when recording

- Audio is recorded using Dolby Digital stereo, enabling high quality sound recordings.
- The encoder system used for recording is called "Hybrid VBR" and allows high quality recordings.

### ■ Fast access to the program you want to watch (→page 17) **RAM** **DVD-R**

Use the Direct Navigator to find a program you have recorded and start play.

### ■ Make your own DVD-Video

- Finalizing a DVD-R that has been recorded on produces an original DVD-Video in accordance with DVD-Video standards.
- In addition to DVD-Video movie software, this unit can also play other types of discs including audio CDs and Video CDs. This means that this unit has the potential to play a central role in your home entertainment, from high-end home theater through to CD playback.

### ■ Maximum 12 hours on DVD-RAM

- Using a double sided, 9.4 GB DVD-RAM allows you to record a maximum of 12 hours (6 hours continuously).
- You can also use the FR (Flexible Recording) mode to fit recordings efficiently onto the available space on the disc.

### ■ Editing your recording **RAM**

- You can divide programs (→page 32).
- Use play lists (→page 28) to select your favorite scenes and rearrange them to play in any order you like.

### ■ MP3 disc play (→page 21)

You can also play MP3 files recorded on CD-R and CD-RW, as well as DVD-RAM, DVD-R, DVD-Video, Video CDs and CDs.

### ■ Progressive Scan

By connecting the component video terminal of this unit to a progressive scan television, it is possible to enjoy the high quality picture rendered by the progressive scan function.

### ■ Quick View (→page 19)

You can speed up play to make checking the contents faster. Both video and sound are played faster.

### ■ The FUNCTIONS menu shows you most of the features you can use (→page 23)

The FUNCTIONS menu has most of the features and functions you are likely to use regularly. Just select the icon for the operation you want to perform.

### ■ Watch a program while you are recording it (→page 22) **RAM**

#### Chasing play

You can watch a program from the start while you are still recording it.

#### Simultaneous recording and play

You can record a program while watching one you recorded previously.

#### Time Slip

You can jump back to review a piece of action you missed while recording by pressing the time slip button.

- During playback, you can specify a length of time to jump to the scene you wish to view.

**The manufacturer accepts no responsibility and offers no compensation for loss of recorded or edited material due to a problem with the unit or disc, and accepts no responsibility and offers no compensation for any subsequent damage caused by such loss.**

#### Examples of causes of such losses are

- A disc recorded and edited with this unit is played in a DVD recorder or computer disc drive manufactured by another company.
- A disc used as described above and then played again in this unit.
- A disc recorded and edited with a DVD recorder or computer disc drive manufactured by another company is played in this unit.

## Getting started

<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	3
<b>Features</b> .....	3
<b>Accessories</b> .....	4

## Setting up

<b>STEP 1 Antenna and television connections</b> .....	5
<b>STEP 2 The remote control</b> .....	6
<b>STEP 3 Plug-in Auto Tuning</b> .....	6
<b>STEP 4 VCR Plus+ guide channel settings</b> .....	8
<b>STEP 5 Set up to match your television</b> .....	10
<b>Disc information</b> .....	11
<b>Control reference guide</b> .....	12

## Recording

<b>Recording television programs</b> .....	14
Inserting discs .....	15
Recording modes and approximate recording times in hours .....	15
Watching the television while recording .....	15
Recording from a video cassette recorder .....	15
Recording the best quality pictures in the remaining time —Flexible Recording .....	15

## Playing back

<b>Playing discs</b> .....	16
When a menu screen appears on the television .....	17
Position Memory .....	17
Using the Direct Navigator .....	17
To erase a program that is being played back .....	17
<b>Other methods of play</b> .....	18
Skipping .....	18
Slow-motion play .....	18
Frame-by-frame viewing .....	18
Starting play from a selected program, title, chapter, or track .....	18
Skipping a minute forward—CM Skip .....	18
Selecting an amount of time to skip—Time Slip .....	19
Fast forward and rewind—SEARCH .....	19
Quick View .....	19
<b>Marking places to play again—MARKER</b> .....	20
Marking positions directly .....	20
Using on-screen menus to mark positions .....	20
<b>Using menus to play MP3 discs</b> .....	21
<b>Playing while you are recording</b> .....	22
Playing from the beginning of the program you are recording —Chasing Play .....	22
Simultaneous rec and play .....	22
Reviewing the recorded images while recording—Time Slip .....	22
<b>Changing audio</b> .....	23
<b>Using the FUNCTIONS window</b> .....	23

## Timer recording

<b>Timer recording</b> .....	24
Specify a time to stop recording .....	24
Using VCR Plus+ codes to make timer recordings .....	24
Manually programming timer recordings .....	25
Check programs .....	26
Change or delete the program .....	26

## Editing

<b>Entering text</b> .....	27
<b>Creating play lists</b> .....	28
Playing play lists, Playing play list scenes .....	29
To erase a play list or a play list scene during playback .....	29
<b>Editing play lists</b> .....	30
<b>Editing programs</b> .....	32
<b>Disc setting</b> .....	34

## Advanced operation

<b>Using on-screen menus</b> .....	36
Common procedures, Disc menu .....	36
Play menu, Audio menu .....	37
Video menu .....	38
<b>On-screen displays</b> .....	39
<b>Home Theater</b> .....	40
Connecting a cable TV box/satellite receiver .....	41
Connecting an amplifier or system component .....	42
Connecting other video equipment .....	43
<b>Other antenna connections</b> .....	44
Other antenna connection to the unit .....	44
Other antenna connection from the unit to the television .....	44
<b>Changing the remote control code</b> .....	45
<b>Changing the unit's settings</b> .....	46
Summary of settings .....	46
Common procedures .....	48
Clock settings .....	49

## Reference

<b>Glossary, Disc handling</b> .....	50
<b>Error messages</b> .....	51
<b>Troubleshooting guide</b> .....	52
<b>Maintenance</b> .....	54
<b>Product Service</b> .....	54
<b>Specifications</b> .....	55
<b>Limited Warranty (ONLY FOR U.S.A.)</b> .....	56
<b>Limited Warranty (ONLY FOR CANADA)</b> .....	57

 
## Español






<b>Instalación básica</b> .....	58
Conexiones del televisor y de la antena .....	58
Plug-in para Sintonización automática .....	58
Guía VCR Plus+ para ajuste de canales .....	59
Instalación para ajustar su televisor .....	59
<b>Grabación de programas de televisión</b> .....	60
Introducción de discos .....	61
Modos de grabación y tiempo de grabación aproximado en horas .....	61
Visualización del televisor durante la grabación .....	61
Reproducción durante la grabación .....	61
<b>Reproducción de discos</b> .....	62
Cuando aparece una pantalla de menús en el televisor .....	63
Memoria de posición .....	63
Utilización del Navegador directo .....	63
Para borrar un programa que se está reproduciendo .....	63
<b>Índice</b> .....	Contraportada

**Index** .....

**Back cover**

## Accessories

 Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts.  
**Only for U.S.A.: To order accessories contact 1-800-SAMSUNG(1-800-726-7864)www.samsungsupport.com**  
**Only for Canada: To order accessories, call the dealer from whom you have made your purchase.**

- |   |   |  |  |  |   |
|---|---|--|--|--|---|
| <input type="checkbox"/> <b>1 Remote control</b>                  |  | <input type="checkbox"/> <b>1 AC power supply cord</b> |  | <input type="checkbox"/> <b>1 75 Ω coaxial cable</b> |  |
| <input type="checkbox"/> <b>2 Batteries</b><br>for remote control |  | <input type="checkbox"/> <b>1 Audio/Video cable</b>    |  |  |   |

### Note

The included AC power supply cord is for use with this unit only. Do not use it with other equipment.


# STEP 1 Antenna and television connections

## Preparation

- Refer to the television's operating instructions.
- Turn the television off and disconnect its AC power supply cord.


## To enjoy sound through other audio equipment (→page 42) To enjoy progressive video

Connect to the component video(480P) input terminals on a television compatible with this unit's copy guard system. (Video will not be displayed correctly if connected to an incompatible television.)

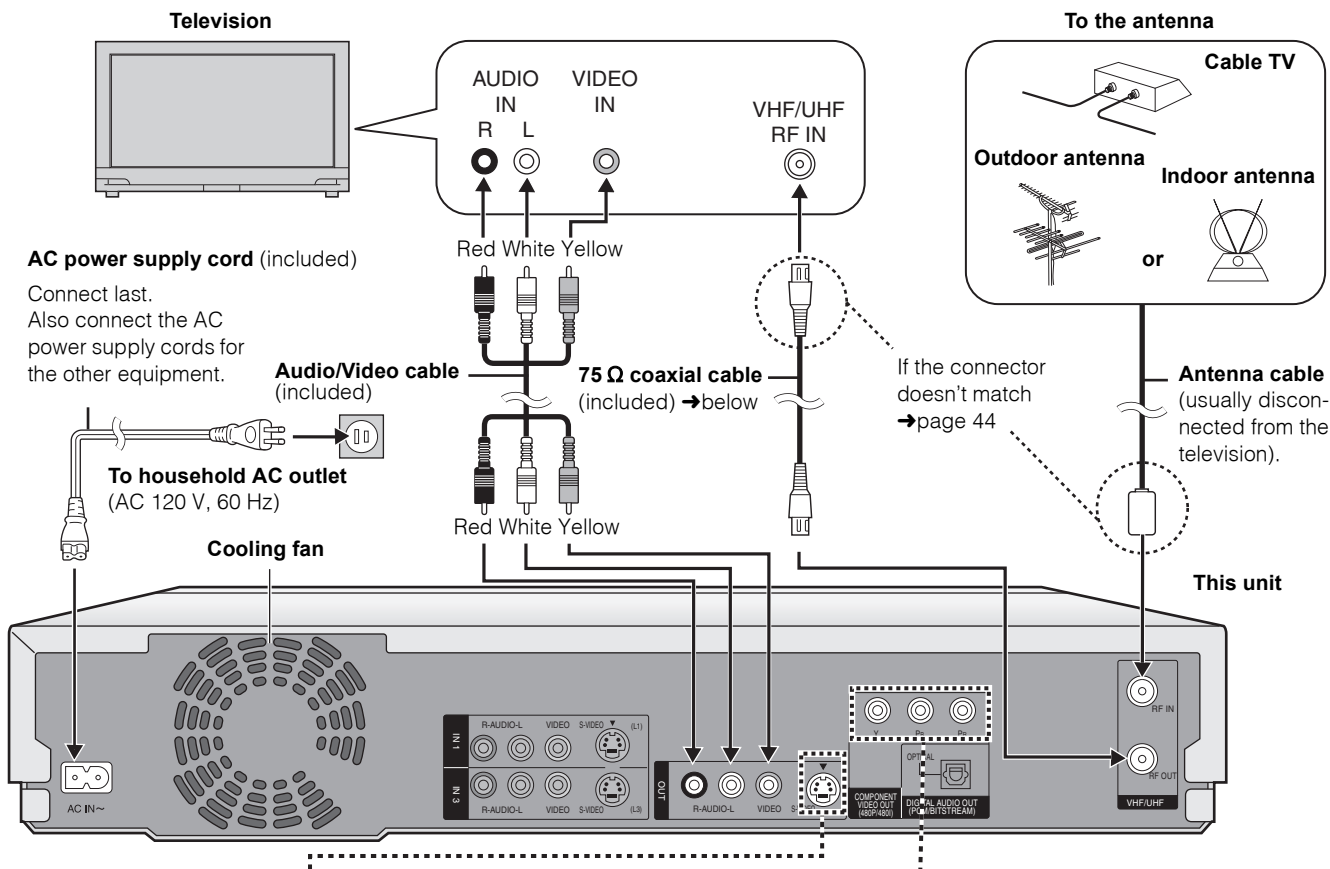

### S-VIDEO OUT terminal

The S-VIDEO OUT terminal achieves a more vivid picture than the VIDEO OUT terminal by separating the chrominance (C) and luminance (Y) signals. (Actual results depend on the television.)

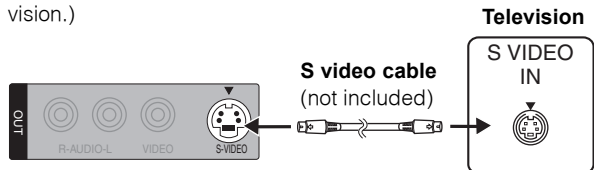

When making this connection, ensure you connect the audio cables to the corresponding audio input terminals on the television.


### 75 Ω coaxial cable

- The signal from the antenna passes through this unit and along the 75 Ω coaxial cable to the television even when this unit is turned off. You don't have to connect the antenna to the television.
- The picture and sound signal from this unit does not go through the 75 Ω coaxial cable to the television. Make sure you connect one of the following terminals on this unit to the television: the AUDIO/VIDEO terminal, the S-VIDEO OUT terminal or the COMPONENT VIDEO OUT terminal. If the television has none of these terminals, consult your local dealer.

### Conserving power

This unit consumes a small amount of power, even when it is turned off (approx. 3.2 W). To save power when the unit is not to be used for a long time, unplug it from the household AC outlet.

### Television

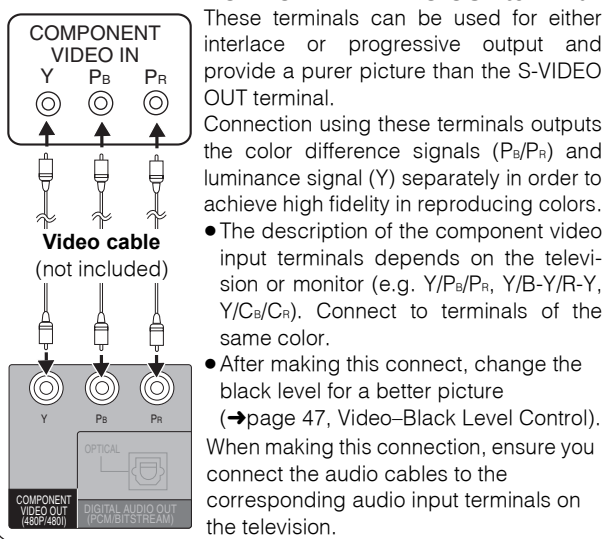

### COMPONENT VIDEO OUT terminal

These terminals can be used for either interlace or progressive output and provide a purer picture than the S-VIDEO OUT terminal.

Connection using these terminals outputs the color difference signals (P<sub>B</sub>/P<sub>R</sub>) and luminance signal (Y) separately in order to achieve high fidelity in reproducing colors.


- The description of the component video input terminals depends on the television or monitor (e.g. Y/P<sub>B</sub>/P<sub>R</sub>, Y/B-Y/R-Y, Y/C<sub>B</sub>/C<sub>R</sub>). Connect to terminals of the same color.
- After making this connect, change the black level for a better picture (→page 47, Video-Black Level Control). When making this connection, ensure you connect the audio cables to the corresponding audio input terminals on the television.

### Do not connect the unit through a video cassette recorder

Video signals fed through video cassette recorders will be affected by copyright protection systems and the picture will not be shown correctly on the television.

## STEP 2 The remote control

### Batteries

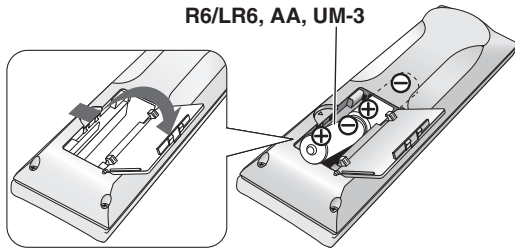

- Insert so the poles (+ and -) match those in the remote control.
- Do not use rechargeable type batteries.

#### Do not:

- mix old and new batteries.
- use different types at the same time.
- heat or expose to flame.
- take apart or short circuit.
- attempt to recharge alkaline or manganese batteries.
- use batteries if the covering has been peeled off.

Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.


Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

#### Note


If you cannot operate the unit or television using the remote control after changing the batteries, please re-enter the codes (television → page 10, main unit → page 45).

### Use

Remote control signal sensor

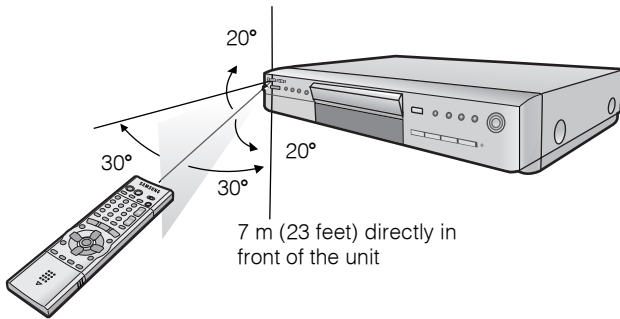

## STEP 3 Plug-in Auto Tuning

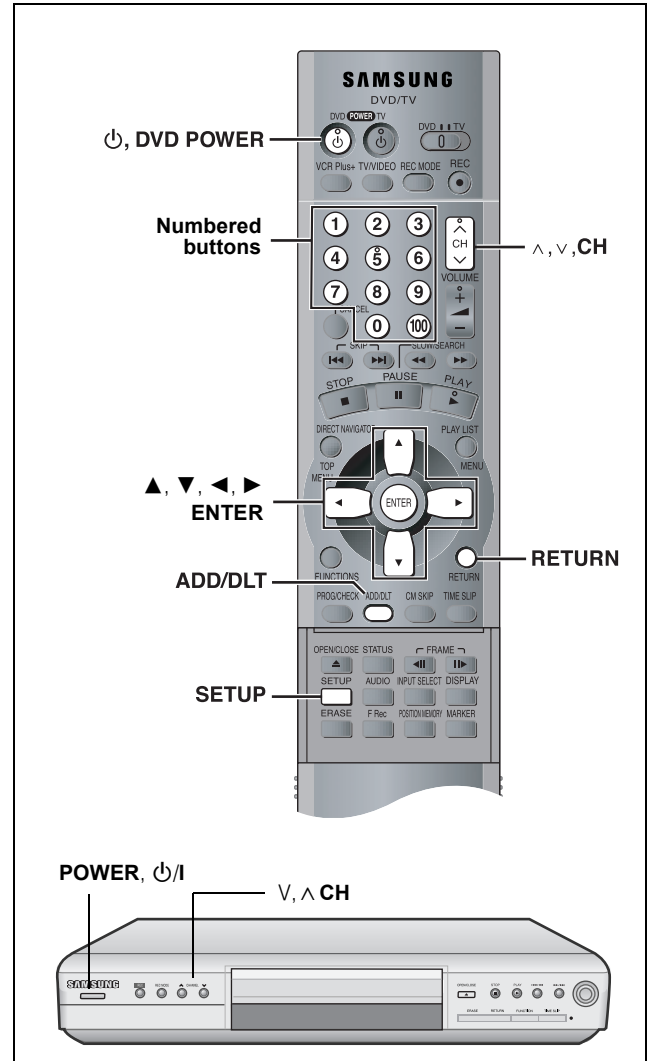

After plugging the unit into your household AC outlet and pressing [POWER, DVD POWER] to turn the unit on for the first time, the unit assists you to set the menu language, and automatically tunes in all the channels it can receive and sets the clock.


The unit automatically determines the type of transmission (VHF/UHF or cable) and puts them into channels as follows.

	Band	Channel
<b>TV Mode</b> (VHF/UHF)	VHF	2-13
	UHF	14-69
<b>CATV Mode</b> (Cable)	VHF	2-13
	CATV LOW BAND	95-99
	CATV MID/SUPER BAND	14-36
	CATV HYPER BAND	37-65
	ULTRA BAND	66-94 100-125
	SPECIAL CATV CHANNEL	1

## Preparation


- Confirm that the antenna is connected correctly.
- Turn on the television and select the appropriate video input to suit the connections to this unit.

### 1 Press [⏻, DVD POWER] to turn the unit on.

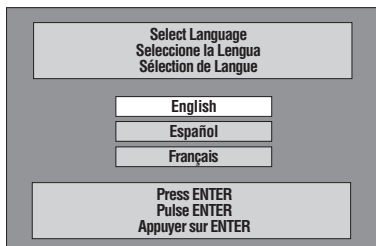

### 2 Press [▲, ▼] to select the menu language and press [ENTER].

e.g., when you select English

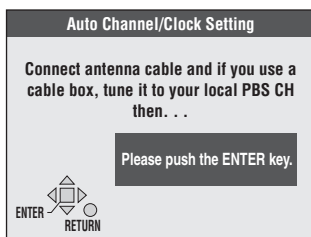

### 3 Press [ENTER].

Plug-in Auto Tuning starts and the unit puts the stations it can receive into channels.

The unit then proceeds with Auto Clock Setting. The time is displayed when finished. If the clock is an hour slower or faster than the actual time, go to "Time Zone Adjust" to correct it (→page 49).

### 4 When the display shows the correct time Press [ENTER] to complete Plug-in Auto Tuning.

#### If the unit couldn't set the clock automatically

Press [ENTER] to show the "Manual Clock Setting" screen. Set the time manually (→page 49).

#### To start Plug-in Auto Tuning again (after relocation, for example)


Antenna system, channel caption, and VCR Plus+ guide channel settings all revert to the default values when you perform the procedure below. Timer recording settings are also cleared.

When the unit is on and stopped


- 1 Press and hold [v, CH] and [^, CH] on the main unit for about five seconds.  
The unit turns off.
- 2 Press [⏻, DVD POWER] to turn the unit on.  
Follow the above steps 2–4.

#### If Plug-in Auto Tuning fails


### 1 Press [SETUP] to show the menus.

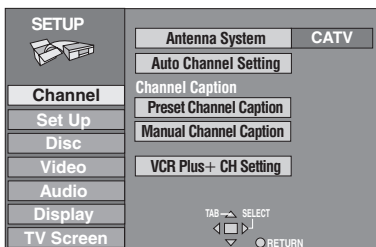

### 2 Press [▲, ▼] to select "Channel" and press [▶].

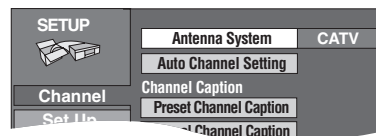


### 3 Press [▲, ▼] to select "Antenna System" and press [ENTER].

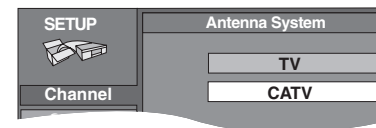

### 4 Press [▲, ▼] to select "TV" or "CATV" and press [ENTER].

The screen shown in step 2 reappears.

### 5 Press [▲, ▼] to select "Auto Channel Setting" and press [ENTER].

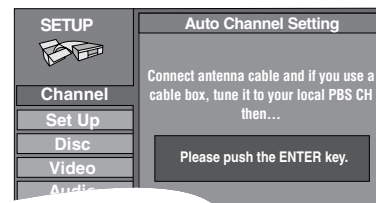

If you have not yet set clock, the "Auto Channel/Clock Setting" screen appears.

### 6 Press [ENTER].

Auto setting starts. This takes a few minutes. (To stop auto channel setting, press [RETURN].) When finished, the Complete screen or time display is shown. Press [ENTER].

#### To return to the previous screen

Press [RETURN].

#### When you are finished

Press [SETUP].

## Adding and deleting channels

Add or delete channels if necessary channels are not set or unnecessary channels are set.

While this unit is receiving the antenna signal (but not during recording):

### 1 Press the numbered buttons to select a channel.

e.g., "5": [0] → [5]  
"15": [1] → [5]  
"115": [100] → [1] → [5]

Unit's display



- You can also use [^, v, CH] when you are going to delete a channel.


### 2 Press [ADD/DLT].

The channel is **deleted** if it was set or **added** if it was not set. e.g.,



Repeat steps 1 and 2 as necessary.

# STEP 4 VCR Plus+ guide channel settings

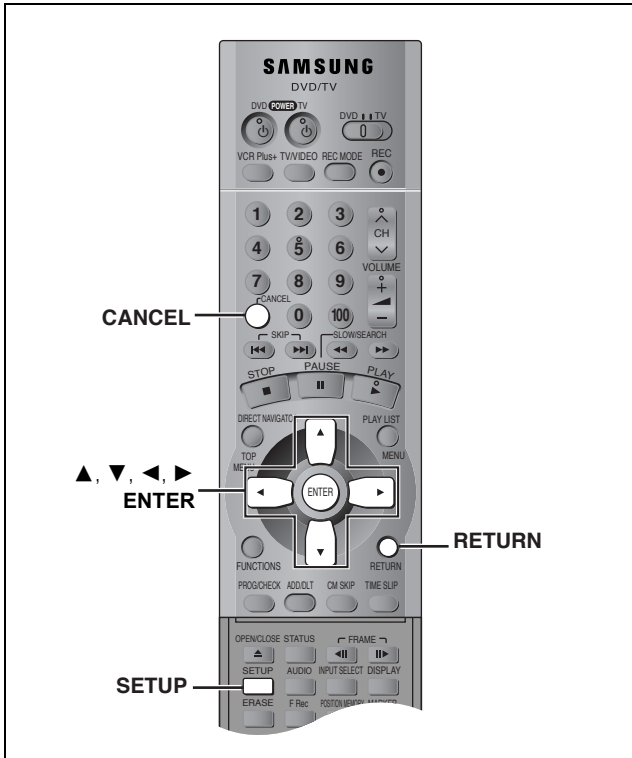


Set these guide channels so you can use VCR Plus+ codes for timer recording. Before starting the settings, prepare a chart showing the channels, station names, and guide channels.

e.g.,


Station name	Guide channel	Channel number	Channel setting (in step 5)
CBS	04	04	Unnecessary
HBO	33	15	Enter channel 15 next to Guide Channel 33.
Nickelodeon	38	20	Enter channel 20 next to Guide Channel 38.

Look up the guide channels for the stations in magazines. Write down all the stations you can receive.

## 1 Press [SETUP] to show the menus.

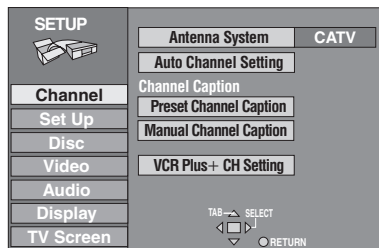


## 2 Press [▲, ▼] to select “Channel” and press [▶].

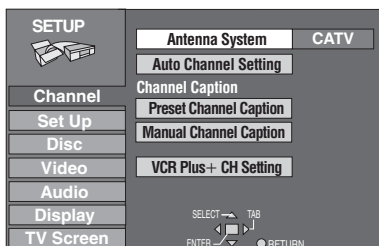


## 3 Press [▲, ▼] to select “VCR Plus+ CH Setting” and press [ENTER].

e.g., when the current antenna system is CATV.

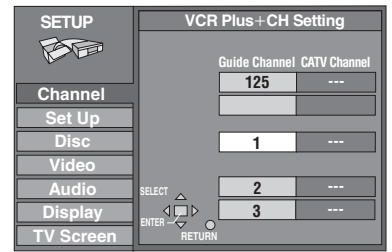


## 4 Press [▲, ▼] to select the guide channel you want to set and press [▶].

When selecting the guide channel, press and hold [▲, ▼] to scroll the screen up and down.

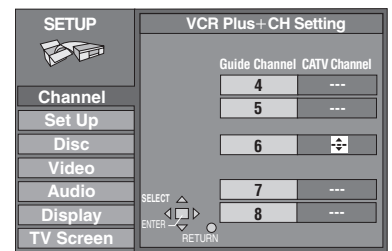

## 5 Press [▲, ▼] to select the channel corresponding to the guide channel and press [◀].

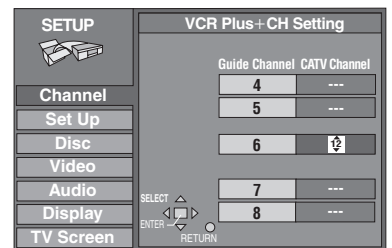

To delete a number, press [CANCEL]. Repeat steps 4 and 5 as necessary.

## 6 Press [ENTER].

The “Channel” screen reappears.

### To return to the previous screen

Press [RETURN].

### When you are finished

Press [SETUP].


VCR Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

Pats. 5,307,173; 5,335,079; 4,908,713; 4,751,578; and 4,706,121



## Other channel settings


- 1 Press [SETUP] to show the menus.
- 2 Press [▲, ▼] to select “Channel” and press [▶].

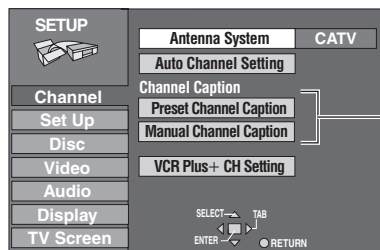

Proceed with the steps described below.

### Preset Channel Caption

- 3 Press [▲, ▼] to select “Preset Channel Caption” and press [ENTER].

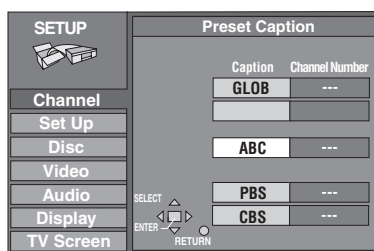

- 4 Press [▲, ▼] to select the caption and then press [▶].

You can choose from the following captions.

ABC, PBS, CBS, CNN, FOX, ESPN, NBC, HBO, A&E, AMC, FAM, MAX, MTV, SHOW, TBS, USA, TNT, CBC, UPN, CTV, WB, TSN, DSC, GLOB

- The screen scrolls a page at a time if you press and hold [▲, ▼].

- 5 Press [▲, ▼] to select the channel corresponding to the caption and then press [◀].

- Channels are not displayed if they do not contain a station or if captions have been added manually.
- To delete the channel number, press [CANCEL].
- Repeat steps 4 and 5 as necessary.

- 6 Press [ENTER].

The “Channel” screen reappears.

### To return to the previous screen


Press [RETURN].

### When you are finished

Press [SETUP].

### Manual Channel Caption

- 3 Press [3, 4] to select “Manual Channel Caption” and press [ENTER].

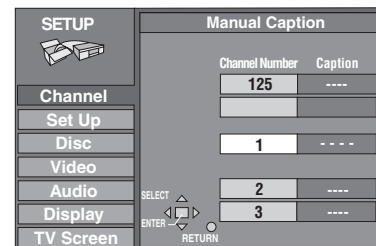


- 4 Press [▲, ▼] to select the channel and then press [▶].

- Channels are not displayed if they do not contain a station or if preset captions have been added.

- 5 Press [▲, ▼] to select the first character and then press [▶].

- You can choose from the following characters:  
A–Z, 0–9, -, &, !, /, (space)
- To delete the caption, press [CANCEL].
- Repeat step 5 to enter the other characters.

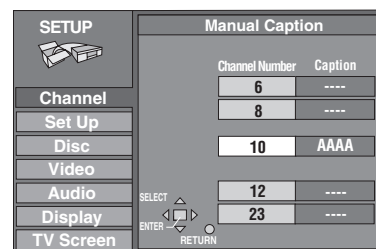


- 6 Press [◀, ▶] to return to the Channel Number column when you are finished.

Repeat steps 4, 5, and 6 as necessary.

- 7 Press [ENTER].

The “Channel” screen reappears.


# STEP 5 Set up to match your television

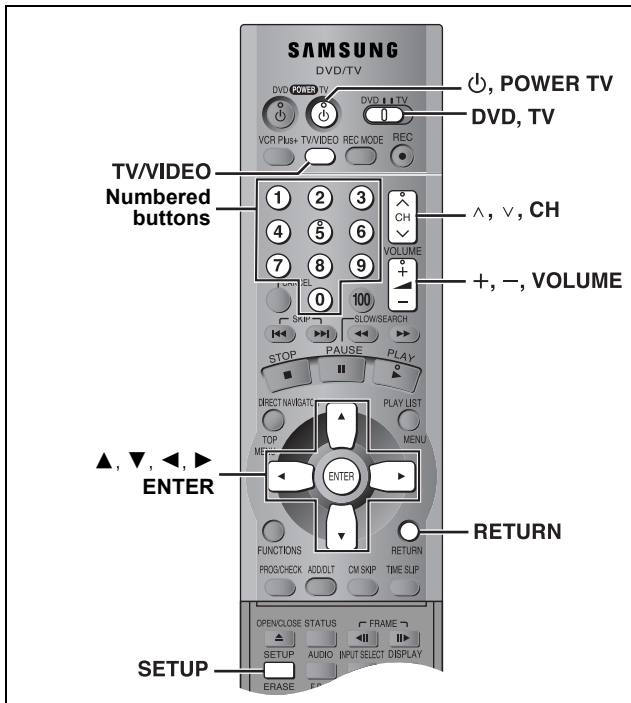


## Change the settings if your television is:

- Widescreen (16:9 aspect ratio)
- Progressive
  - Read your television's operating instructions for details.


### 1 Press [SETUP] to show the menus.

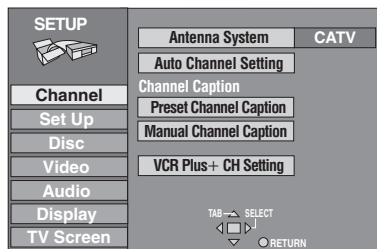

### 2 Press [▲, ▼] to select "TV Screen" and press [▶].

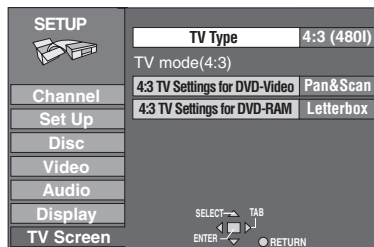

### 3 Press [▲, ▼] to select "TV Type" and press [ENTER].

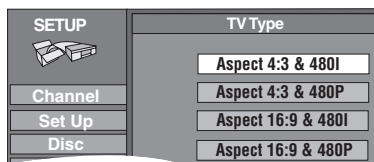

### 4 Press [▲, ▼] to select the item and press [ENTER].

- If you select a progressive output (480P) item, select Video in the on-screen menu and set "Transfer" to suit the material (→page 38).

## To return to the previous screen

Press [RETURN].

## When you are finished

Press [SETUP].

## ■ Regarding Progressive Television Picture

Progressive image aspect (height to width ratio) is set at a standard 16:9. DVD-Video which has been set at 16:9 will be displayed correctly. However, 4:3 video material will be stretched to the right and left when displayed.

### • To view the picture at the right aspect

- For televisions that allow the aspect of progressive images to be adjusted, use the function provided on the television and adjust as necessary.
- For televisions which do not allow the aspect of progressive images to be adjusted, please set "Progressive" to "OFF" (→ page 38).

## Note

- If the unit is connected to the TV through VIDEO OUT or S-VIDEO OUT, output will be interlace only (even if you select progressive output).
- When progressive output is on, closed captions can not be displayed.

## Television operation

You can control televisions by entering the remote control code.

## Press and hold [⏻, POWER TV] and enter the two-digit code with the numbered buttons.

e.g., 01: press [0] → [1].

### Code No. and Manufacturer

01	Panasonic/National QUASAR	11	JVC
02		12	HITACHI
03	MAGNAVOX SYLVANIA PHIL-IPS (RC-5)	13	mitsubishi
04	ZENITH	14	SAMSUNG
05	THOMSON RCA GE	15	GOLDSTAR/LG
06	SHARP	16	
07		17	
08	SONY	18	SAMSUNG
09	TOSHIBA	19	
10	SANYO FISHER		–

- Test by turning on the television and changing channels. Repeat the procedure until you find the code that allows correct operation.

## Note



If your television brand is not listed or if the code listed for your television does not allow control of your television, this remote control is not compatible with your television.

## ■ Operation

Point the remote control at the television.

Operation	Button
On and off	[⏻, POWER TV]
Video input mode	[TV/VIDEO]
Channels	(Switch [DVD, TV] to "TV".) [▲, ▼, CH] or Numbered buttons e.g., Channel "5": [0] → [5]
Volume	[+, -, VOLUME]

## Discs you can use for recording and play

 <b>DVD-RAM</b> 4.7 GB/9.4 GB, 12 cm (5") 2.8 GB, 8 cm (3")	 <b>DVD-R</b> 4.7 GB 12 cm (5") 1.4 GB, 8 cm (3") for General Ver. 2.0
---	---

- Do not allow the disc to become dirty or scratched. Fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for recording.
- Discs with programs recorded in PAL already cannot be recorded on using this unit.



### DVD-RAM

- **DVD-RAM recorded on this unit may not be compatible with other DVD players. Consult the manual for the player to determine compatibility with these DVD-RAM discs.**
- This unit is compatible with both non-cartridge and cartridge DVD-RAM, but the write-protect tabs on cartridge-type discs give better protection to your recordings.
- Picture aspect ratios, regular 4:3 or widescreen 16:9, are recorded as they are received.

### DVD-R

- **In order to play a DVD-R recorded using this unit on another playback source, the disc must first be finalized (→page 34).**
- Once a DVD-R is finalized, it becomes DVD-Video.
- You can record onto the available space on the disc and perform editing functions, such as giving titles to discs and programs and erasing programs before finalizing.
- When programming is erased from a DVD-R, that space does not become available. Once an area on a DVD-R is recorded on, that area is no longer available for recording, whether the recording is erased or not.
- It takes about 30 seconds for the unit to complete recording management information after recording finishes.
- This unit optimizes the DVD-R for each recording. Optimizing is carried out when you start recording after inserting the disc or turning on the unit. Recording onto the disc may become impossible if optimizing is carried out too many times.
- Play may be impossible in some cases due the condition of the recording.
- The video is recorded in a 4:3 aspect irrespective of the video signal input.

## Play-only discs



 <b>DVD-Video</b>	 <b>Video CD</b>	 <b>Audio CD*</b>
---	---	---

\* Including discs recorded with MP3.

- The producer of the material can control how DVD-Video and Video CDs are played. This means that you may not be able to control play of a disc with some operations described in these operating instructions. Read the disc's instructions carefully.
- This unit can play CD-R/CD-RW (audio recording disc) recorded with CD-DA (digital audio), video CD (video CD format 2.0 or above) or MP3. Finalize\*<sup>1</sup> the disc after recording. It may not be able to play some CD-R or CD-RW due to the condition of the recording.  
\*<sup>1</sup> A process that allows play on compatible equipment.
- This unit cannot record onto CD-R or CD-RW.

### DVD-Video

#### • Audio format

	<b>Dolby Digital (→page 47)</b> This unit can play Dolby Digital in stereo (2 channels). Connect an amplifier with a built-in Dolby Digital decoder to enjoy surround sound.
	<b>DTS Digital Surround (→page 47)</b> Connect this unit to equipment that has a DTS decoder to enjoy DVDs with this mark.

## Discs you can use

The features you can use with the different types of discs are indicated as follows.

<b>RAM</b>	<b>DVD-R</b>	<b>DVD-V</b>	<b>VCD</b>	<b>CD</b>	<b>MP3</b>
DVD-RAM	DVD-R	DVD-Video	Video CD	Audio CD	MP3 discs

**DVD-R** indicates DVD-R that have not yet been finalized (→page 34). DVD-R that have been finalized can use the same features as DVD-Video. (Refer to features indicated **DVD-V**.)

## Discs that cannot be played


- DVD-Video with a region number other than "1" or "ALL"
- 12-cm (5"), 2.6- and 5.2-GB DVD-RAM
- DVD-RAM not recorded following the Video Recording Standard
- 3.95- and 4.7-GB DVD-R for Authoring
- Unfinalized DVD-R recorded on other equipment
- PAL discs
- +RW
- Photo CD
- MV-Disc
- DVD-ROM
- CD-ROM
- CVD
- PD
- DVD-RW
- CDV
- SVCD
- Divx Video Disc, etc.
- DVD-Audio
- CD-G
- SACD

## Protection

### RAM


You can protect the contents of your discs in the following ways.

- **Cartridge-protect:**  
With the write-protect tab in the protect position, you cannot record to, edit, or erase from the disc. (Type 1, 2, and 4 cartridge discs)
- Program-protect (→page 32)
- Disc-protect (→page 34)

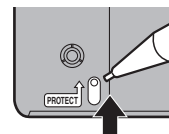


## Remote control

Setting up

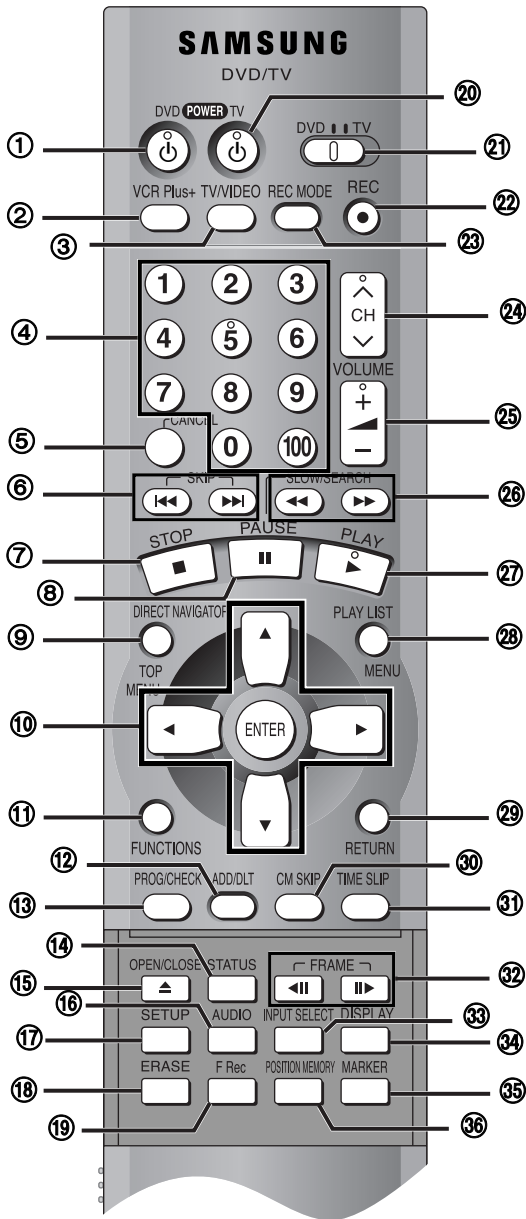


- ① **POWER button** (⏻, DVD **POWER** TV) ..... 7, 14  
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ② **VCR Plus+ button** (VCR Plus+) ..... 24
- ③ **Television input mode selector** (TV/VIDEO) ..... 10
- ④ **Numbered buttons** (1–9, 0, 100) ..... 8
- ⑤ **Cancel button** (CANCEL) ..... 8
- ⑥ **Skip buttons** (⏮, ⏭) **SKIP** ..... 18
- ⑦ **Stop button** (■ **STOP**) ..... 14
- ⑧ **Pause button** (⏸ **PAUSE**) ..... 14
- ⑨ **Top menu and Direct Navigator button** (**TOP MENU**, **DIRECT NAVIGATOR**) ..... 17, 21
- ⑩ **Cursor buttons** (▲, ▼, ◀, ▶)/**Enter button** (**ENTER**) ... 7, 15
- ⑪ **Functions button** (**FUNCTIONS**) ..... 23
- ⑫ **Manual channel adding and deleting button** (**ADD/DLT**) ..... 7
- ⑬ **Manual programming and check button** (**PROG/CHECK**) ..... 25
- ⑭ **On-screen display button** (**STATUS**) ..... 39
- ⑮ **Disc tray open/close button** (▲ **OPEN/CLOSE**) ..... 14
- ⑯ **Audio button** (**AUDIO**) ..... 23
- ⑰ **Setup button** (**SETUP**) ..... 48
- ⑱ **Program/play list erase button** (**ERASE**) ..... 17, 29
- ⑲ **Flexible Recording button** (**F Rec**) ..... 15
- ⑳ **TV power on/off button** (⏻, **POWER TV**) ..... 10
- ㉑ **DVD/TV switch** (**DVD**, **TV**) ..... 10
- ㉒ **Recording button** (●, **REC**) ..... 14
- ㉓ **Recording mode button** (**REC MODE**) ..... 14
- ㉔ **Channel buttons for recorder and TV** (▲, ▼, **CH**) ..... 10, 14
- ㉕ **TV volume buttons** (+, −, **VOLUME**) ..... 10
- ㉖ **Slow/search buttons** (⏮, ⏭) **SLOW/SEARCH** ..... 18
- ㉗ **Play/speed play button** (▶) **PLAY** ..... 16, 19
- ㉘ **Menu and play list button** (**MENU**, **PLAY LIST**) ..... 17, 28
- ㉙ **Return button** (**RETURN**) ..... 7
- ㉚ **One-minute skip button** (**CM SKIP**) ..... 18
- ㉛ **Time slip button** (**TIME SLIP**) ..... 19, 22
- ㉜ **Frame advance and frame reverse buttons** (◀◀, ▶▶) **FRAME** ..... 18
- ㉝ **Input select button** (**INPUT SELECT**) ..... 15
- ㉞ **On-screen menu button** (**DISPLAY**) ..... 36
- ㉟ **Marker button** (**MARKER**) ..... 20
- ㊱ **Position memory button** (**POSITION MEMORY**) ..... 17

### How to open the remote control

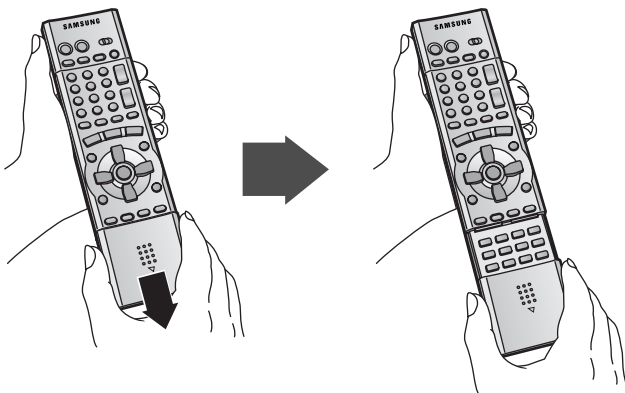


Hold both sides of the remote control's cover to open it. (You can also open it by pressing on the center of it and sliding it down.)

## Main unit

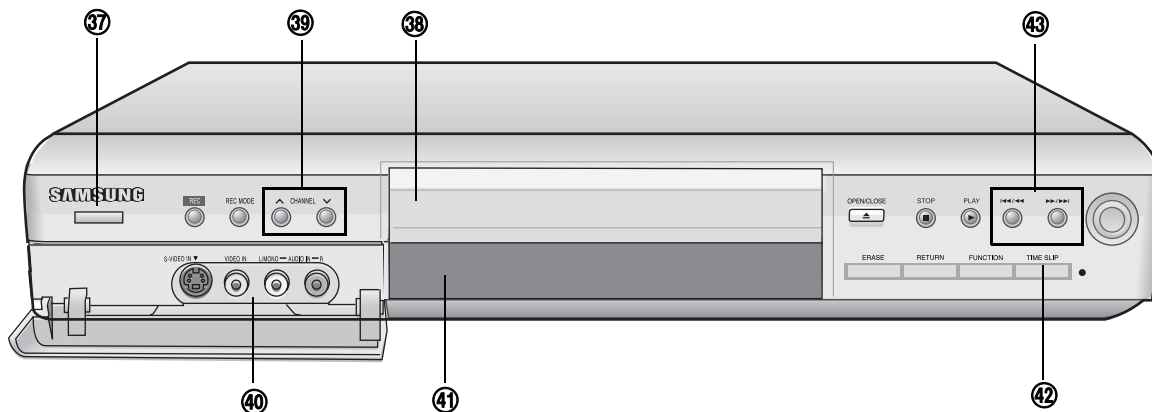

- ③⑦ Power button ..... 7, 14
- ③⑧ Disc tray ..... 14
- ③⑨ Channel buttons for recorder (CHANNEL) ..... 14
- ④① L2 input terminals (L2) ..... 43
- ④① Display
- ④② Time slip indicator (TIME SLIP) ..... 22
- ④③ Skip/Slow/Search buttons (◀◀/◀▶/▶▶) ..... 18, 19

## The unit's display

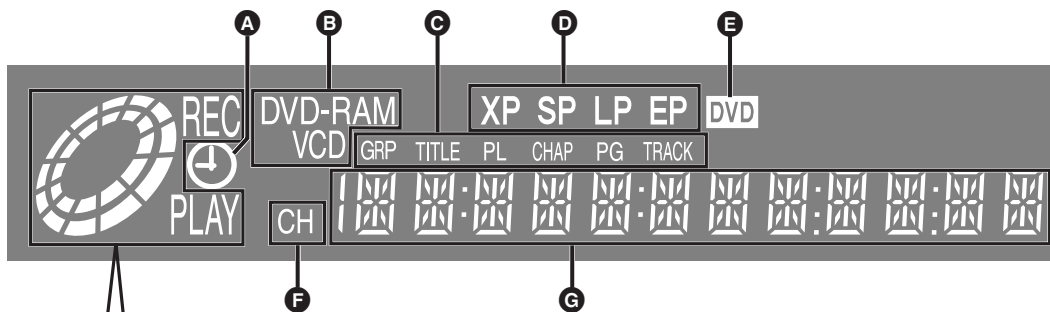

**Center circle (e.g., DVD-RAM)**  
**Rotating (REC)** :Recording  
**Stopped (REC)** :Recording paused

**Rotating (REC, PLAY)** :  
 Chasing play or simultaneous  
 recording and play is in progress

**Rotating (PLAY)** : Playing  
**Stopped (PLAY)** : Play paused  
**"PLAY" flashes** :  
 The resume function (→page 16,  
 To stop play) is working



### A Timer recording display

**On:** When timer recording is on standby (→page 24)  
**Flashes:** When the unit couldn't go to timer recording standby

### B Disc type

### C The display mode of the main display section

**GRP:** Group number  
**TITLE:** Title number  
**PL:** Play list number  
**CHAP:** Chapter number  
**PG:** Program number  
**TRACK:** Track number

### D Recording mode (→page 15)


### E DVD indicator

**Flashes:** When you press [⏻, DVD POWER] to turn the unit off until it actually turns off

### F Channel

### G Main display section


Recording and play counter, and other miscellaneous messages

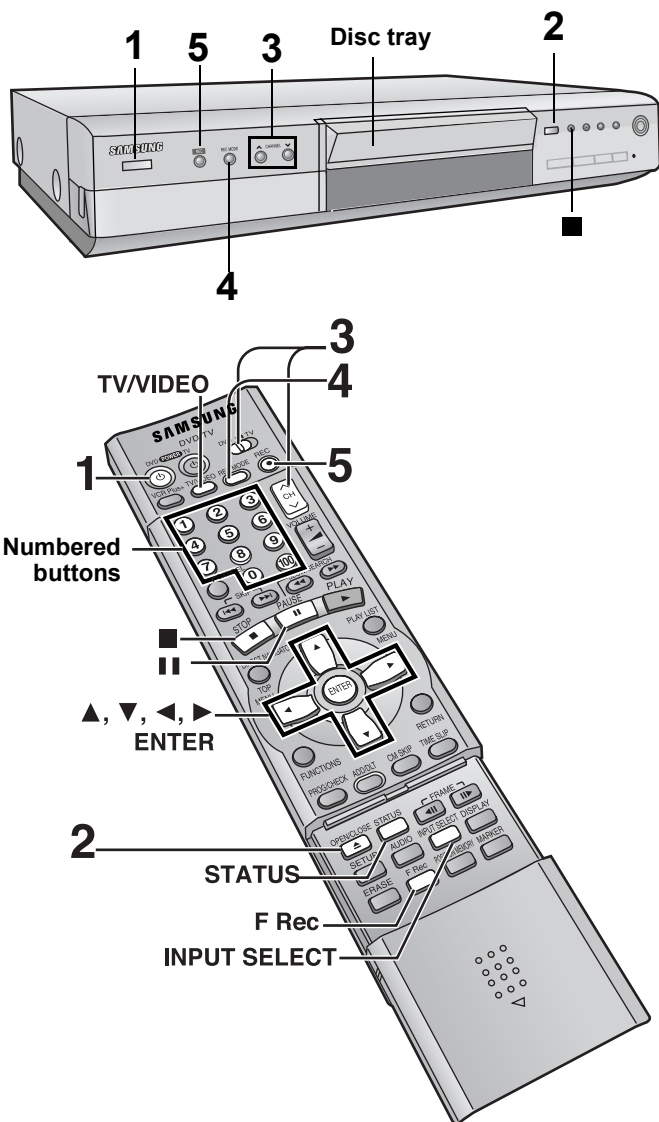

## RAM DVD-R


- 1** Press [⏻, DVD POWER] to turn the unit on.
- 2** Press [▲ OPEN/CLOSE] to open the tray and insert a disc (→ next page).
  - Press the button again to close the tray.
  - It is not possible to record continuously from one side of a double sided disc to the other. You will need to eject the disc and turn it over.
- 3** Ensure [DVD, TV] is switched to “DVD” and press [^, v, CH] to select the channel.

 e.g., when you select channel 4




- 4** Press [REC MODE] to select the recording mode (→ next page).

 e.g., when you select “XP”



 - 5** Press [●, REC] to start recording.



Program information (e.g., time and date) is registered in the program list (→page 17).

## DVD-R

To play DVD-R on compatible equipment, finalize it (→page 34).

### To stop recording

Press [■].

### To pause recording

Press [⏸]. Press again to restart recording.

### Auto power-off

The unit switches to standby after about 6 hours in the stop mode. You can turn this feature off or change the time to 2 hours (→page 46, Set Up—Off Timer).

### Note

- You cannot change the channel or recording mode during recording.
- Release protection (cartridge →page 11, disc →page 34) when you record. **RAM**
- When using a DVD-RAM for the first time with this unit, format it to ensure accurate recording (→ “Format” , page 34).
- There are limitations when recording to DVD-R (→ page 11).
- When recording MTS sound onto DVD-R, either the main channel or the sub channel can be recorded, not both. Select at “Select MTS” (→ page 47).

### For your reference


- You can record up to 99 programs on one disc.
- This unit is compatible with the **Content Protection for Recordable Media (CPRM →page 50)** system so you can record broadcasts that allow one copy, such as some CATV broadcasts, onto 4.7 GB/9.4 GB DVD-RAM (these are CPRM compatible). It is not possible to record onto DVD-R or 2.8 GB DVD-RAM.
- Recording will take place on open space on disc. Data will not be overwritten.

**Should the AC power supply cord come loose by accident or for any other reason the power supply is cut off while recording or editing is taking place, the contents of the disc may be lost.**

## Inserting discs

RAM DVD-R

You can insert a cartridge or non-cartridge disc.

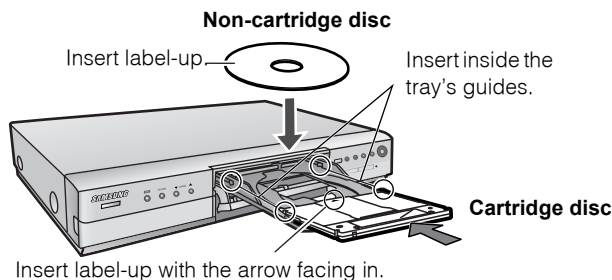

### Note

- Load double-sided discs so the label for the side you want to record/play is facing up.
- When using 8 cm (3") DVD-RAM, remove the disc from the cartridge and insert it, making sure you align it with the groove.

## Recording modes and approximate recording times in hours

Mode \ Disc	DVD-RAM		DVD-R (4.7 GB)
	Single-sided (4.7 GB)	Double-sided (9.4 GB)	
XP (High quality)	1	2	1
SP (Normal)	2	4	2
LP (Long play)	4	8	4
EP (Extra long play)	6	12	6

### FR (Flexible Recording Mode)

The unit automatically selects a recording rate between XP and EP that will enable the recordings to fit in the available recording time on the disc with the best possible recording quality.

You may use FR Mode in either Flexible Recording (→ right) or in timer recording (→page 25).

## Watching the television while recording

RAM DVD-R

Pictures being recorded are unaffected.

Switch [DVD, TV] to "TV".

- 1 Press [TV/VIDEO] to change the television's input mode to "TV".
- 2 Press [∧, ∨, CH] to change channels.
  - You can also select the channel with the numbered buttons.
  - e.g., "5": [0] → [5]
  - "15": [1] → [5]
  - "115": [100] → [1] → [5]

## Recording from a video cassette recorder

RAM DVD-R

### Preparation

Connect a video cassette recorder to this unit's input terminals (→page 43).

- 1 While stopped  
Press [INPUT SELECT] to select the input channel for the equipment you have connected.  
Select L1, L2, or L3.  
• You can also select the input channel by pressing [∧, ∨, CH].
- 2 Press [REC MODE] to select the recording mode (XP, SP, LP or EP).
- 3 Start play on the other equipment.
- 4 Press [●, REC] at the point you want to start recording.  
Recording starts.

### To skip unwanted parts

Press [II] to pause recording. (Press again to restart recording.)

### To stop recording

Press [■].

### Note

- When recording using L1, L2 or L3 terminals, only the sound received at the time of recording will be recorded.
- If flexible recording (→ below) is used instead of steps 2 and 4, settings can be made so that recording continues to the end of the video.


Almost all videos and DVD software on sale have been treated to prevent illegal copying. Any software that has been so treated cannot be recorded using this unit.

## Recording the best quality pictures in the remaining time—Flexible Recording

RAM DVD-R

The unit calculates a recording rate that enables the recording to fit in the time you set (within the remaining time on the disc) and with the best possible picture quality.

- 1 While stopped  
Press [F Rec].
- 2 Press [◀, ▶] to select "Hour" and "Min." and press [▲, ▼] to set the recording time.
- 3 Press [▲, ▼, ▶, ▶] to select "Start" and press [ENTER].  
Recording starts.

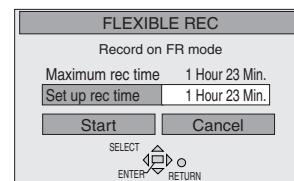


### Note

It may not be possible to record to the finish of the program if the remaining time doesn't allow.

### For your reference

- Press [STATUS] during recording to show the remaining time.
- Recording time reduces if you repeatedly pause recording.

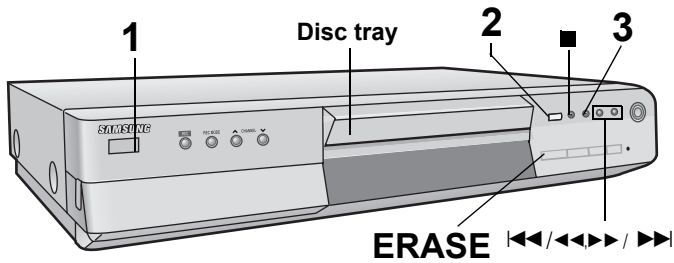

RAM DVD-R DVD-V VCD CD MP3

**1** Press [⏻, DVD POWER] to turn the unit on.

**2** Press [▲ OPEN/CLOSE] to open the tray and insert a disc (→ page 15).


- Press the button again to close the tray.
- If cartridge protection is activated (→page 11), play begins automatically when you close the tray. **RAM**
- You cannot play continuously from one side of a double-sided disc to the other. Eject the disc and turn it over.

**3** Press [▶] (PLAY).

The unit takes some time to read the disc before play starts. (When a menu screen appears on the television → next page).



- If the resume function (→ below, to stop play) is not active, playback will begin from the most recently recorded program. To play from the beginning of a disc, select "PLAY FROM TOP" in the FUNCTIONS window (→page 23).

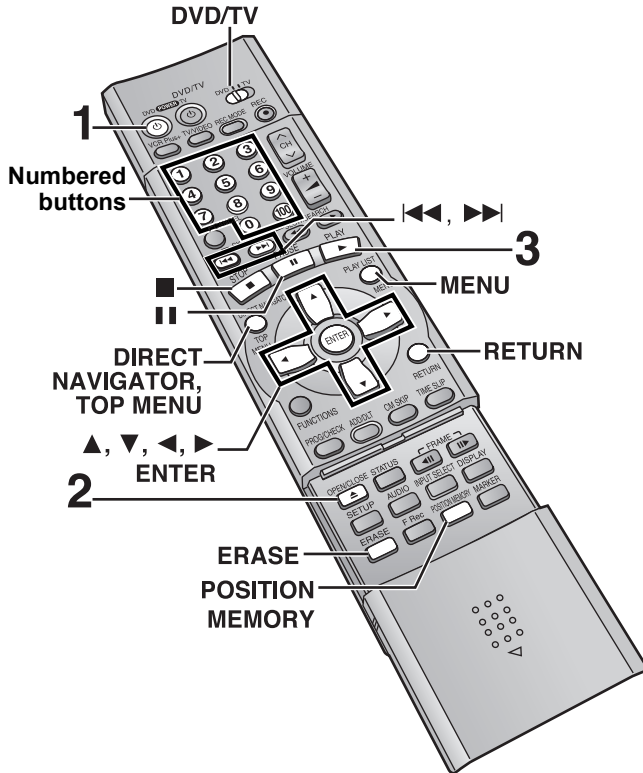

## To stop play

Press [■].

- When "PLAY" flashes on the display, resume function is active. Press [▶] (PLAY) to start play from where you stopped it. To cancel, press [■] until "PLAY" goes out. (The position is also cleared when you turn the unit off or open the disc tray.)
- The screen saver may appear when you stop play. Press [■] again and you can use this unit's tuner to watch television.



## Note

- If a disc is loaded, the unit will come on and play will start when you press [▶] (PLAY).
- When you play a disc with an audio-only track, the video from the previous disc may continue to be shown on the television.
- Actual sound levels for DVD-Video are lower compared to television broadcast or playback of other discs. To avoid a sudden increase in volume level when switching from DVD-Video, reduce the volume setting before playing other sources or switching to television broadcast.

## To pause play

Press [⏸]. (Press again to restart play.)

## Auto power-off

The unit switches to standby after about 6 hours in the stop mode. You can turn this feature off or change the time to 2 hours (→page 46, Set Up—Off Timer).



## When a menu screen appears on the television

### VCD

Switch [DVD, TV] to "DVD" and

Press the numbered buttons (0, 1–9) to select an item.

e.g., "5": [0] → [5]

"15": [1] → [5]

### DVD-V

Press [▲, ▼, ◀, ▶] to select an item and press [ENTER].

- You may also be able to use the numbered buttons (0, 1–9) to select an item.

### Other buttons used to operate menus

Read the disc's instructions for further details about operation.

[▶▶] [▶▶/▶▶]: Shows the next menu.

[◀◀] [◀◀/◀◀]: Shows the previous menu.

[RETURN]: Shows the menu screen. **VCD**

[TOP MENU]: Shows the first menu screen. **DVD-V**

[MENU]: Shows the menu screen. **DVD-V**

### Note

- Discs continue to rotate while menus are displayed. Press [■] when you have finished viewing to preserve the unit's motor and your television screen.
- If "⊙" appears on the television, the operation is prohibited by the unit or disc.
- Functions available vary from disc to disc.

## Position Memory

### RAM DVD-R DVD-V VCD CD MP3

You can start play from a memorized position even after turning the unit off.

(When the elapsed play time is displayed)

**1** During play  
Press [POSITION MEMORY].

The message "Position Memorized" appears on the television.

**2** After switching the unit to standby and back on  
Press [▶] (PLAY).

Play starts from the memorized position. (The position is cleared.)

### Note

#### DVD-R DVD-V VCD CD MP3

- The position is cleared when you open the disc tray.
- Positions remain memorized even after the disc tray is opened.
- You cannot mark positions if the disc is write-protected.

### For your reference

If you press [■] before switching the unit to standby after pressing [POSITION MEMORY] to memorize a position, play will resume from the position you pressed [■] when you press [▶] (PLAY).


## Using the Direct Navigator

### RAM DVD-R

A list of programs is created as you record them. You can use this list to find programs to watch.

**1** Press [DIRECT NAVIGATOR].

The highlighted program plays in the background.

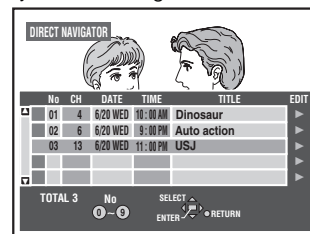

**2** Press [▲, ▼] to select the program and press [ENTER].

- You can also select programs with the numbered buttons.  
e.g., "5": [0] → [5]  
"15": [1] → [5]

Play of the images that were playing in the background continues.

### To stop play

Press [■].

### To clear the program list

Press [DIRECT NAVIGATOR].

### About the program list

#### Write-protected

Displayed when you have protected the program.

#### Copy-protected


Displayed when you have recorded a program that has copy protection, from CATV broadcasts, for example.

#### Unable to play

Displayed if you cannot play the program.

#### Currently recording

Displayed when the program is being recorded.

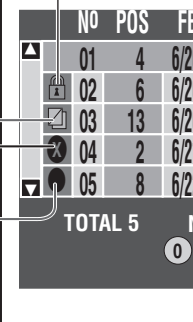

## To erase a program that is being played back

Since the program and any play lists (→page 28) created from it are erased irretrievably by this procedure, you should be certain you wish to erase before carrying it out.

**1** Press [ERASE].


A confirmation screen will be displayed.

**2** Press [◀] to select "Erase" and press [ENTER].

- On the main unit, press [◀◀/◀◀] and [ERASE].

### Note

- It is not possible to erase the program when you are carrying out simultaneous rec and play (→page 22). **RAM**
- The amount of space remaining on the disc does not increase even if you erase programs. **DVD-R**
- If the confirmation screen disappears before you complete the operation, start from the beginning again.

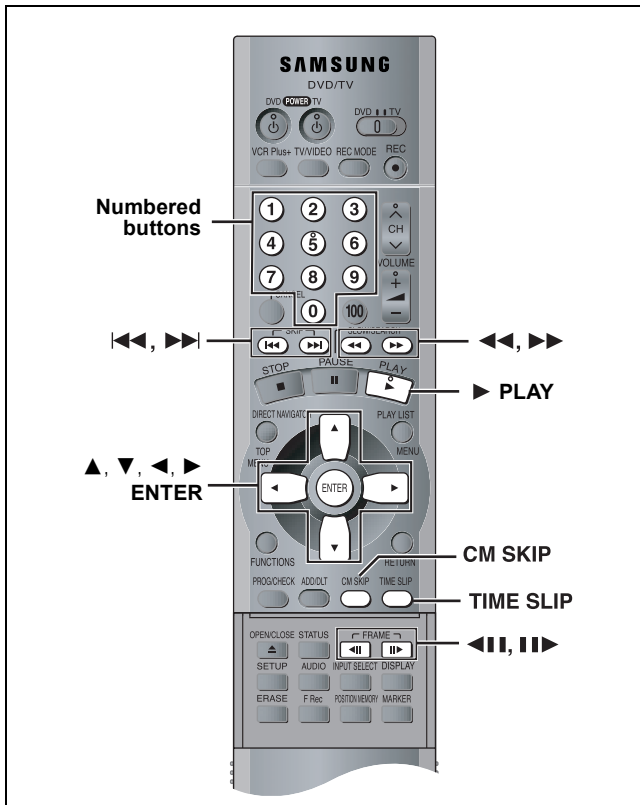

## Skipping


RAM DVD-R DVD-V VCD CD MP3

During play or while paused


Press [**⏮**] or [**⏭**].

- Press [**⏮/⏮**] or [**⏭/⏭**] on the main unit.
- Each press increases the number of skips.

DVD-V VCD CD MP3

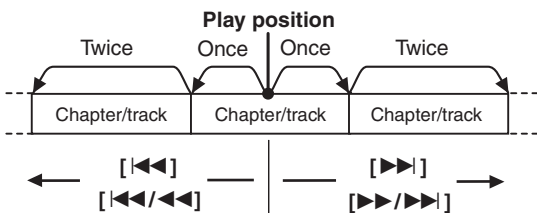

RAM DVD-R

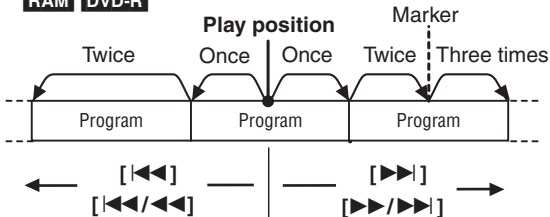

### For your reference

Pressing [**⏮**] [**⏮/⏮**] or [**⏭**] [**⏭/⏭**] while the playback control feature on Video CDs (→page 50) is working may take you to a menu screen.

## Slow-motion play

RAM DVD-R DVD-V VCD

While paused

Press [**⏮**] or [**⏭**].

Press and hold [**⏮/⏮**] or [**⏭/⏭**] on the main unit.

### Note

- The speed increases up to 5 steps.
- Press [**▶**] (PLAY) to restart play.
- Backward ([**⏮**] [**⏮/⏮**]) does not work with Video CDs.

## Frame-by-frame viewing

RAM DVD-R DVD-V VCD

While paused

Press [**⏪**] or [**⏩**].

### Note

- Each press shows the next frame.
- Press [**▶**] (PLAY) to restart play.
- Cursor buttons [**⏪**, **▶**] are also effective while paused for frame-by-frame viewing.
- Backward ([**⏪**]) does not work with Video CDs.

## Starting play from a selected program, title, chapter, or track

RAM DVD-R DVD-V VCD CD MP3

During play or while stopped

Press the numbered buttons to select the item.

e.g., "5": [0] → [5]      **MP3** "5": [0] → [0] → [5]  
 "15": [1] → [5]      "15": [0] → [1] → [5]

### Note

- This may not work with some discs.
- This works only when stopped with some discs (the screen saver is on the television).



## Skipping a minute forward—CM Skip

RAM DVD-R

During play

Press [**CM SKIP**].

Play restarts from approximately a minute later.


### Note

If the start of the next program is within one minute of the point you skipped from, play restarts from the beginning of that program.

## Selecting an amount of time to skip— Time Slip

RAM DVD-R

- 1 During play  
Press [TIME SLIP].

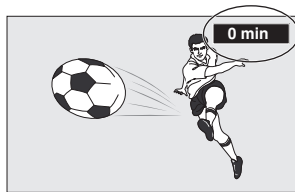

- 2 Within 5 seconds  
Press [▲, ▼] to enter the time and  
then press [ENTER].

e.g., Go back to 5 minutes



Press to change in one-minute units. Press and hold to change in 10-minute units.

## Fast forward and rewind—SEARCH

RAM DVD-R DVD-V VCD CD MP3


During play

Press [◀◀] or [▶▶].

- Press and hold [◀◀/◀◀] or [▶▶/▶▶] on the main unit.

### Note

- The speed increases up to 5 steps.
- Press [▶] (PLAY) to restart play.
- Audio will be heard during search. You can turn this audio off if you want to (→page 47, Audio—PLAY & Audio during Search).

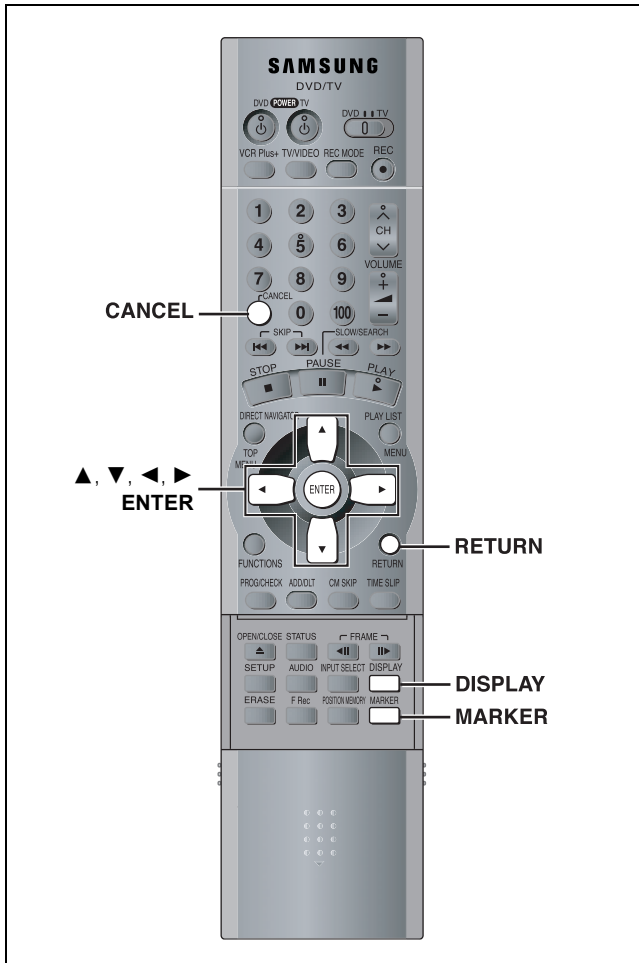

You can mark positions by pressing [MARKER]. Also use on-screen menus to mark, recall, and clear positions.

**RAM DVD-R**

Mark up to 999 positions. The unit records the markers directly onto the disc and they remain intact even if you remove the disc.

**DVD-V VCD CD MP3**

Mark up to 5 positions. The markers clear when you open the disc tray.

## Marking positions directly

During play

**Press [MARKER].**

One marker is added.



**Note**

- You cannot use this feature if:
  - the disc's elapsed play time is not shown in the display.
  - you are using a play list. **RAM**
  - protection (cartridge →page 11, disc →page 34) is set (you can still recall the markers to play a position).

## Using on-screen menus to mark positions

### Displaying the marker icon

**1**

During play

**Press [DISPLAY].**

The on-screen menus appear. (e.g., DVD-RAM)



**2**

**Press [▲, ▼] to select the “Play” and press [▶].**



**3**

**Press [▲, ▼] to select “Marker” and press [▶] to highlight the first asterisk (\*).**



### Marking positions

**Press [◀, ▶] to select an asterisk (\*) and press [ENTER].**

One marker is added.

### When marking positions 11 and above

**RAM DVD-R**

① **Press [◀, ▶] to highlight “1–10”.**



② **Press [▲, ▼] to select “11–20”.**  
You can select the next group of 10 when the current group is full.

③ **Press [▶].**

The first asterisk is highlighted.

④ **Press [ENTER] to mark a position.**

### Playing from a marked position

**Press [◀, ▶] to select a marker number and press [ENTER].**

Play starts from the marked position.

### Clearing markers


**Press [◀, ▶] to select a marker number and press [CANCEL].**

An asterisk replaces the number and the position is cleared.

### To clear the on-screen menus

Press [RETURN].

- Subtitles around markers may fail to appear.
- Markers are cleared when you finalize DVD-R (→page 34).
- Markers on DVD-RAM and DVD-R are ordered by time, so marker numbers can change when you add and delete them.

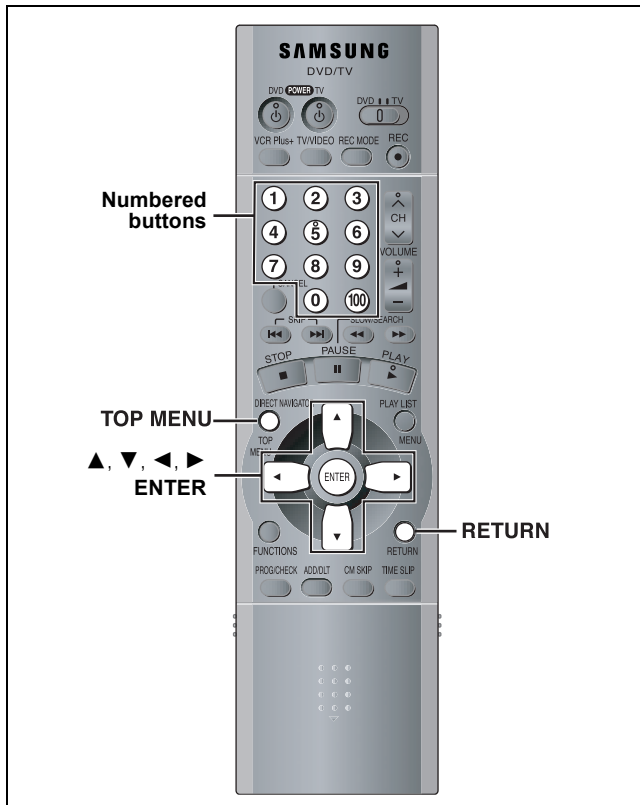


## MP3

This unit can play MP3 files recorded on CD-R/RW with a computer. Files are treated as tracks and folders are treated as groups.

### 1 Press [TOP MENU].

Selected group number and name

- G:** Group no.
- T:** Track no. in the group
- TOTAL:** Selected track no./ Total track no. in all groups

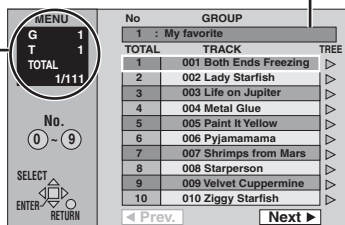

### 2 Press [▲, ▼] to select the track and press [ENTER].

Play continues to the last track in the last group.

- " " indicates the track currently playing.
- You can also select tracks with numbered buttons.  
e.g., "5": [0] → [0] → [5]  
"15": [0] → [1] → [5]

#### To show other pages

Press [▲, ▼, ◀, ▶] to select "Prev." or "Next" and press [ENTER]. After listing all the tracks in one group, the list for the next group appears.

#### To exit the file list


Press [TOP MENU].

## Using the tree screen to find a group

### 1 While stopped Press [▶] while a track is highlighted to display the tree screen.

Selected group no. / Total group no.

- If the group has no track, "--" is displayed as group number.

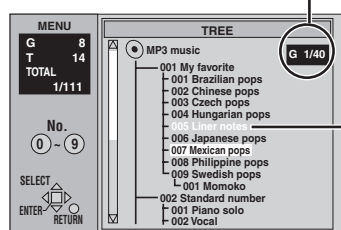

You cannot select groups that contain no compatible files.

### 2 Press [▲, ▼, ◀, ▶] to select a group and press [ENTER].

The file list for the group appears.

#### To return to the file list

Press [RETURN].


#### Note

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.
- If you play a MP3 track that includes still picture data, it will take some time before the music itself starts playing and the elapsed time will not be displayed during this time. Even after the track starts, the correct play time will not be displayed.
- This unit is not compatible with ID3 tags.
- Compatible sampling rate: 16, 22.05, 24, 32, 44.1 and 48 kHz.


Compatible compression rate: between 32 kbps and 320 kbps

#### Naming folders and files

- MP3 files must have the extension ".MP3" or ".mp3".
- At the time of recording, give folder and file names a 3-digit numeric prefix in the order you want them to play (this may not work at times).

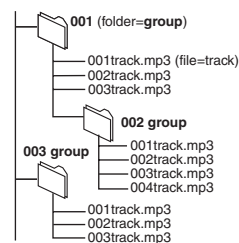

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

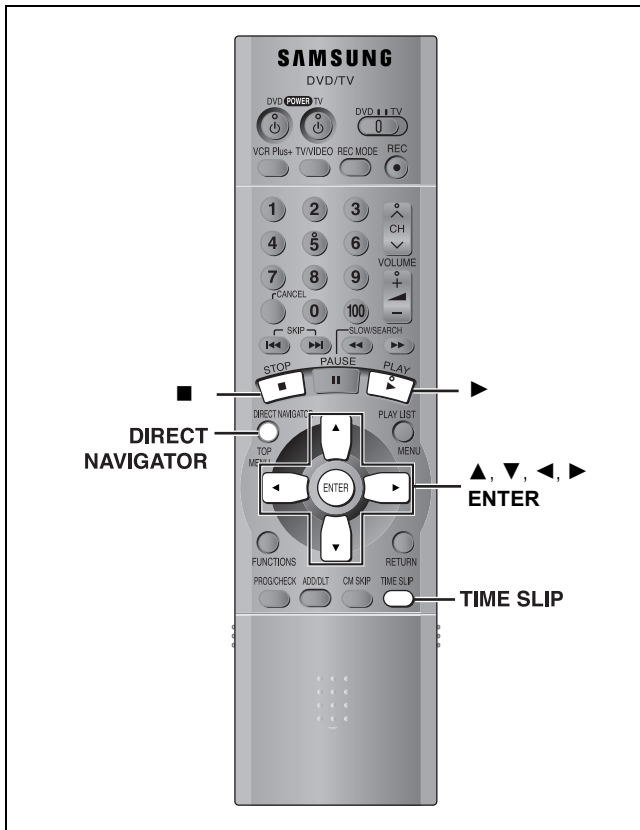

## Simultaneous recording and play

### RAM



You can play a program previously recorded.

- 1 During recording**  
Press **[DIRECT NAVIGATOR]**.  
Time slip indicator lights.
- 2 Press [▲, ▼] to select a program and press [ENTER].**

e.g.,

You want to watch the **movie** you recorded yesterday (program 1) while recording program 2 (sports program).

Program 1 is played back while program 2 (sport) is being recorded.

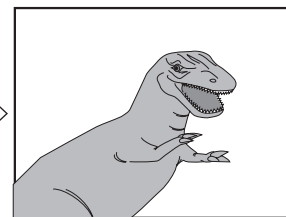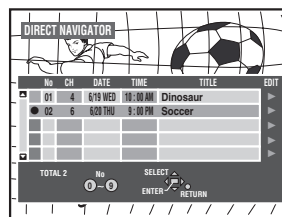

### Note

- Sound is not output while fast-forwarding.
- You cannot edit programs during simultaneous rec and play (→page 32).

## Playing from the beginning of the program you are recording—Chasing Play

### RAM

### Press [▶] (PLAY).

Play starts from the beginning of the program being recorded. (Time slip indicator lights.)

e.g.,

You are recording a **sports program** and you want to watch it from the beginning.

The same **sports program** is played back from the beginning. (Recording continues.)



### Note

Sound is not output while fast-forwarding.

### To stop play and recording

- 1 Press [■].** (Play stops.)  
Wait 2 seconds.
- 2 Press [■].** (Recording stops.)  
• To stop timer recording, press [■], then [ENTER] within 5 seconds.

## Reviewing the recorded images while recording—Time Slip


### RAM

You can play the program being recorded to check that it is being recorded correctly. You can also check parts that were recorded previously.

### 1 Press [TIME SLIP].

Time slip indicator lights. Play starts from 30 seconds previous. The current recording images appear as a picture-in-picture and you will hear the playback audio.

- You can select another program if you press [DIRECT NAVIGATOR].

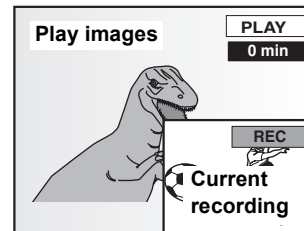


### 2 Press [▲, ▼] to enter the time and press [ENTER].

- Press [▲, ▼] to alter in one-minute units. Press and hold [▲, ▼] to alter in 10-minute units.



Press [TIME SLIP] to show the play images in full. Press again to show the play and recording images.

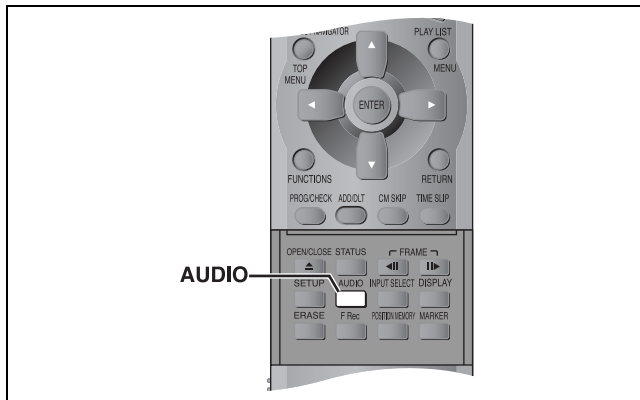

**RAM DVD-V VCD**

You can change the audio being received or played.

## Press [AUDIO].

How the type changes depends on when you press the button.

### ■ While receiving MTS audio (Multi-channel Television Sound Stereo)

 
**Stereo:** Main audio (stereo)

**SAP:** Secondary audio program (SAP)

**Mono:** Main audio (monaural)

(Return to Stereo)

- If the broadcast is "Mono + SAP", audio will be monaural even if you select Stereo mode.
- Select "Mono" if reception is poor during a stereo broadcast.



"(((" appears when the unit is receiving the type of audio you selected.

### Note

 
- If you change the sound setting while recording, the recorded sound will also change.
- You cannot change the sound when a DVD-R is in the disc tray.
- If recorded in SAP mode, main audio is also recorded.
- When you record MTS audio, select either "Main" or "SAP" before recording (→page 47, Audio—Select MTS). **DVD-R**

### ■ While playing DVD-RAM or Video CD

**Video CD**

LR→L→R

e.g., DVD-RAM  
"L R" is selected



- If you have recorded an SAP broadcast by pressing [AUDIO] to select SAP **RAM**  
MAIN↔SAP

### For your reference

You can change the audio for the full images being played with simultaneous rec and play and Time Slip. **RAM**

### ■ While playing DVD-Video

You can change the audio channel number each time you press the button. This allows you to change things like the soundtrack language.




e.g., English is the selected language.

### Note

**RAM**


- You may be unable to change the audio when you have connected the unit to an AV receiver through the DIGITAL AUDIO OUT terminal and "Dolby Digital" is set to "Bitstream". If this occurs:
  - Change "Dolby Digital" to "PCM" (→page 47), or
  - Connect also with an audio cable (→page 42, **B**) and change the input on the receiver.

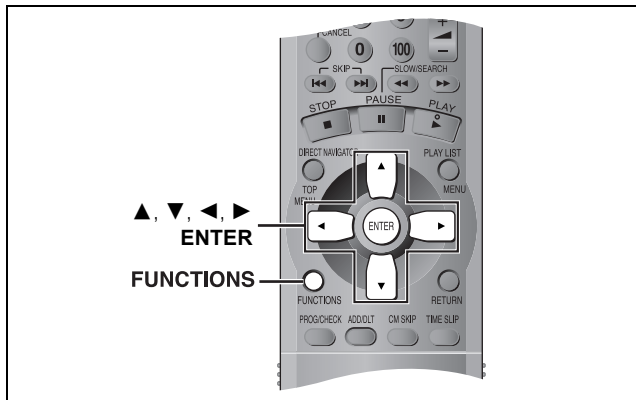

**RAM DVD-R DVD-V VCD CD MP3**

By using the FUNCTIONS window you may access the main functions quickly and easily.

## 1 While stopped Press [FUNCTIONS]. e.g., DVD-RAM

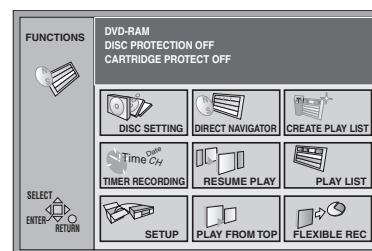

## 2 Press [▲, ▼, ◀, ▶] to select an item. Refer to the relevant pages for details.

Icon	Refer to
DISC SETTING	→page 34, Disc setting
TIMER RECORDING	→page 24, Timer recording
SETUP	→page 46, Changing the unit's settings
DIRECT NAVIGATOR	→page 17, Using the Direct Navigator
RESUME PLAY	→page 32, Editing programs
PLAY	→page 16, Playing discs
PLAY FROM TOP	<b>RAM DVD-R</b> Play will begin with the oldest program on the disc (Program 1). <b>DVD-V</b> Play will avoid playing the introductory parts and begin playing the contents immediately. (The performance of this function varies from disc to disc.)
FLEXIBLE REC	→page 15, Recording the best quality pictures in the remaining time –Flexible Recording
CREATE PLAY LIST	→page 28, Creating play lists
PLAY LIST	→page 29, Playing play lists →page 30, Editing play lists
TOP MENU	→page 17, When a menu screen appears on the television
MENU	


Functions displayed depend on the type of disc.

- Some items will be grayed out and cannot be selected if:
  - the disc is write protected/the disc is not formatted/there is nothing recorded on the disc.

## 3 Press [ENTER].

Your selection is entered and the FUNCTIONS menu disappears. If the operation requires further selections, another screen appears.

**To clear the FUNCTIONS menu**  
Press [FUNCTIONS].

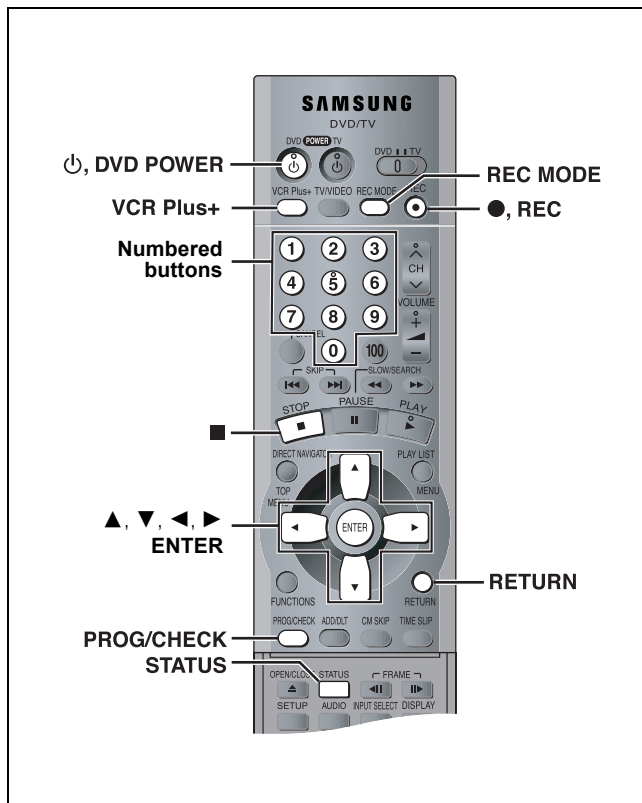

RAM DVD-R

## Specify a time to stop recording

This is a simple way of specifying a time to stop recording when you are in a hurry or before you go to bed.

### During recording

### Press [●, REC] to select the recording time.

Each time you press the button:

0:30 → 1:00 → 1:30 → 2:00 → 3:00  
 ← Counter (cancel) ← 4:00 ←

e.g.,



### For your reference

- Press [STATUS] to show the time remaining until recording finishes.
- This does not work during timer recordings or while using Flexible Recording (→ page 15).
- Recording stops and the set time is cleared if you press [■].
- The set time is cleared if you change the recording mode or channel while recording is paused.


## Preparation

- Ensure the clock (and guide channels for VCR Plus+ recording, →page 8) are set correctly.
- Release protection (cartridge →page 11, disc →page 34) before proceeding. **RAM**

## Using VCR Plus+ codes to make timer recordings


Entering VCR Plus+ codes is an easy way of programming the unit for recording. You can find these codes in TV Guides and magazines. You can enter up to 16 programs up to a month in advance.

### 1 Press [VCR Plus+].

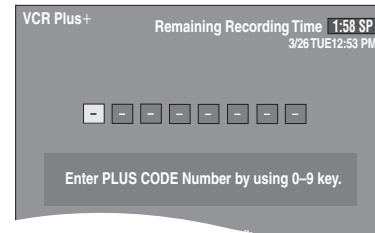

### 2 Press the numbered buttons to enter the VCR Plus+ code.


Press [◀] to move back to correct a digit.

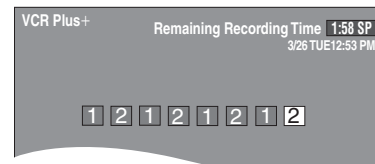

### 3 Press [ENTER].


Confirm the program and make corrections if necessary using [▲, ▼, ◀, ▶].

- "Invalid Entry" is displayed when you enter the wrong code. Reenter the code.
- **To change the recording mode**  
Press [REC MODE].
- **To enter the title of the program**  
Press [◀, ▶] to select "Enter Title" and press [ENTER] (→page 27).

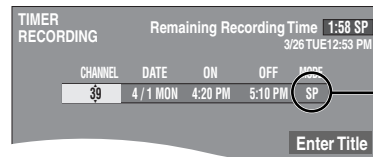

The current recording mode (shown on the unit's display) is automatically selected.

▽ When you press [ENTER]

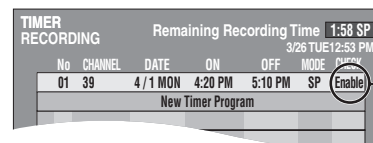

Displayed if the recording can fit in the remaining space on the disc.

Repeat steps 1–3 to program other recordings.

### 4 Press [RETURN].

The timer recording list disappears and the message "TURN RECORDER OFF FOR TIMER RECORDING" is shown on the television.

### 5 Press [⏻, DVD POWER].


Ensure "⏻" lights on the unit's display.




## Manually programming timer recordings

You can enter up to 16 programs up to a month in advance. Each daily or weekly program is counted as one program.

### 1 Press [PROG/CHECK].

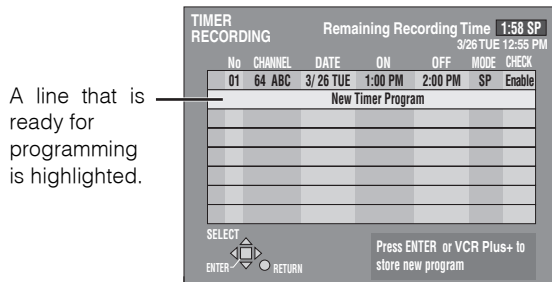


### 2 Press [ENTER].

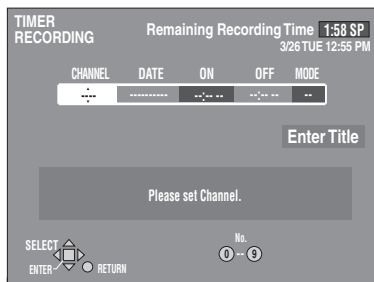

### 3 Press [▶] to move through the items and change the items with [▲, ▼].

- The current settings are shown each time you press [▶].
- You may use the numbered buttons to enter the CHANNEL, DATE, ON (start Time), and OFF (Finish Time).

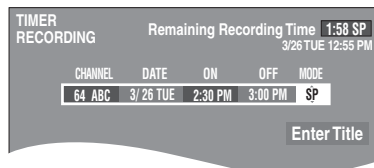

- **CHANNEL (Channel number and caption)**
- **DATE**

Current date



Next day up to one month later minus one day



Weekly timer: SUN-SAT → MON-SAT → MON-FRI



Daily timer: WEEKLY SUN → ---- → WEEKLY SAT



(Return to Current date)

- **ON (Start time)/OFF (Finish time)**

The time increases or decreases in 30-minute increments if you hold the button.


- **MODE (Recording mode → page 15)**

SP → XP → FR → EP → LP (→ Return to SP)

- **Enter Title**

Select "Enter Title" using [◀, ▶] and press [ENTER] (→ page 27).

### 4 Press [ENTER] when you have finished programming the timer.

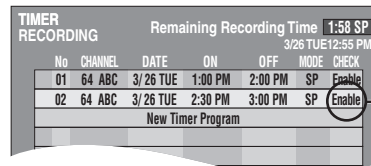

- Press [▲, ▼] to select "New Timer Program" and repeat steps 2- 4 to program other recordings.

### 5 Press [PROG/CHECK] or [RETURN].

The timer recording list disappears and the message "TURN RECORDER OFF FOR TIMER RECORDING" is shown on the television.

### 6 Press [⏻, DVD POWER].

Ensure "⏻" lights on the unit's display.

#### To release the unit from recording standby

If you want to record something else before the program start time, for example:

##### Press [⏻, DVD POWER].

The unit turns on and "⏻" goes out.

- Be sure to press [⏻, DVD POWER] to return the unit to standby mode before the scheduled recording time. Timer recording will work only if "⏻" is displayed.


#### To stop recording when recording has already begun

Press [■], then [ENTER] within 5 seconds.

Recording stops.

#### Note

- The actual time recorded may be longer than the program itself when television programs are recorded using VCR Plus+.
- If you don't select a recording mode when using VCR Plus+ codes to make a timer recording, the unit sets the mode selected on the unit at that time (unless the mode is "XP", in which case the unit sets "FR" as the mode).
- "All timer programs are occupied." appears if there are already 16 programs.
- The remaining time displayed is based on the current recording mode.
- When you program successive timer recordings to start immediately one after the other, the unit cannot record the part at the beginning of the later programs (a few seconds when recording with DVD-RAM and approximately 30 seconds when recording with DVD-R).
- If you set DST (Daylight Saving Time) to ON when manually setting the clock (→ page 49), timer recording may not work when summer switches to winter and vice versa.
- "⏻" flashes when the unit couldn't go to timer recording standby (e.g., a disc isn't loaded, a disc that can't be recorded is loaded, or the disc is protected). Check the disc carefully.

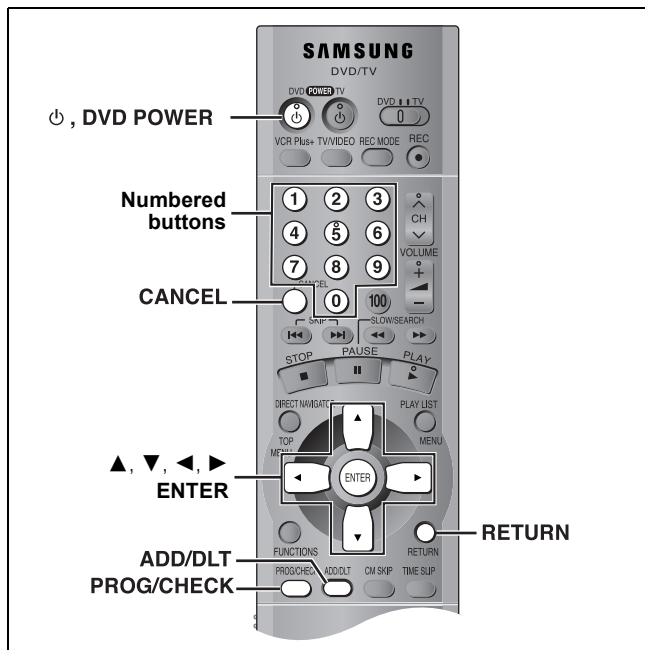

RAM DVD-R

### Check programs

1 Press [PROG/CHECK].

TIMER RECORDING		Remaining Recording Time		3/26 TUE 1:19 PM	
No	CHANNEL	DATE	ON	OFF	MODE CHECK
01	64 ABC	3/26 TUE	1:19 PM	1:22 PM	LP Enable
02	64 ABC	SUN-SAT	2:30 PM	2:40 PM	LP → 3/31
03	64 ABC	3/25 MON	2:30 AM	3:30 AM	SP Overlap
04	64 ABC	WEEKLY MON	5:00 AM	6:00 AM	LP → 3/28
05	64 ABC	3/26 TUE	9:00 AM	10:00 AM	SP
06	64 ABC	3/26 TUE	8:00 AM	9:00 AM	SP
07	64 ABC	3/26 TUE	10:00 AM	11:00 AM	SP

New Timer Program

SELECT ENTER RETURN Press ENTER or VCR Plus+ to store new program

#### Icon explanations

- Ⓜ The times overlap those in another program. Note the following if times overlap:  
The program with the earlier start time receives priority. Recording of the program with the later start time starts when the earlier program finishes recording. If you make two programs with the same start time, the one you programmed last receives priority.
  - Ⓜ You stopped recording of a weekly or daily timer recording. The icon disappears the next time the timer starts recording.
  - This program is currently recording.
  - Ⓜ The disc was full or the maximum number of programs or scenes was reached so the program failed to record.
  - Ⓜ The material was copy-prohibited so it was not recorded.
  - Ⓜ The program failed to record for some other reason.
- Programs that failed to record are displayed gray. They are automatically deleted from the timer recording list at 4 a.m. two days later.

### To put the unit on timer recording standby

Press [⏻, DVD POWER].

The unit turns off and "⏻" lights on the unit's display.

### Message displayed in the CHECK line

Some of the information shown in the CHECK line may not be correct while you are recording.

**Enable:** Displayed if the recording can fit in the remaining space on the disc.

→ **(Date):** For recordings made daily or weekly, the display will show until when recordings can be made (up to a maximum of one month from the present time) based on the time remaining on the disc.

! : It may not be possible to record because of write protection, because there is no more space left or because the number of possible programs has reached its maximum. Please check the disc.

2 Press [PROG/CHECK] or [RETURN].

The timer recording list disappears.

### Change or delete the program

1 Press [PROG/CHECK].

The timer recording list appears.

2 Press [▲, ▼] to select the program.

- You may also select programs by inputting a 2-digit number using the numbered buttons.  
e.g., "5": [0] → [5]  
"15": [1] → [5]
- Press [◀, ▶] to move to the page preceding or following the one on display.

3 Press [CANCEL] or [ADD/HLT] to delete,

You cannot delete programs that are currently recording. or press [ENTER] to change.

The timer recording setting screen appears.


4 If you pressed [ENTER] in step 3, Move through the items with [◀, ▶] and change the settings with [▲, ▼] and press [ENTER].

5 Press [PROG/CHECK] or [RETURN].

The timer recording list disappears.

#### Note

- A Timer recording that is taking place in a recording mode other than "FR" may have its end time altered.
- Even if the power is off you can still view timer recording information by pressing [PROG/CHECK].

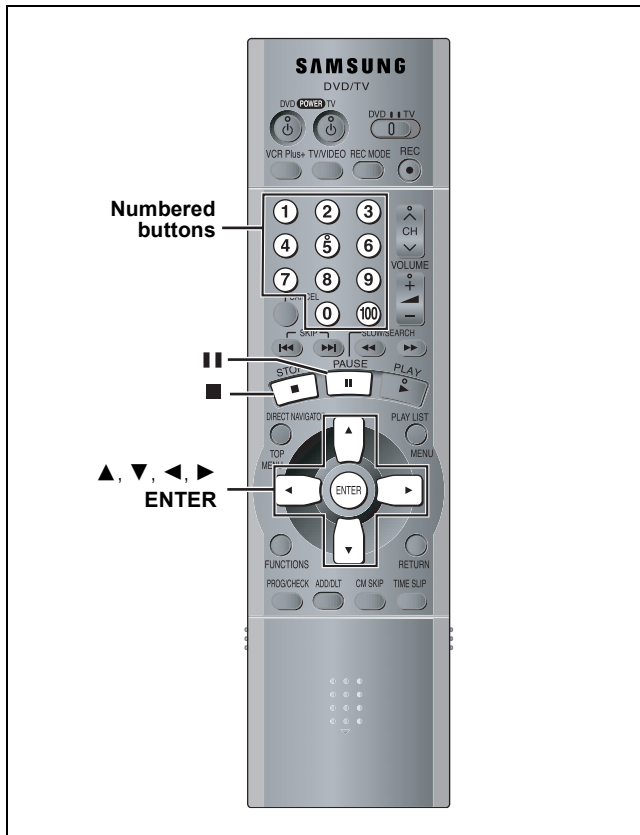

## RAM DVD-R

This page shows how to enter text for:

- Program titles for timer recording (→pages 24 and 25)  
Program titles (→page 32)
- Play list titles (→page 30)
- Disc titles (→page 34)

You can enter up to:


- 64 characters (DVD-RAM)
- 40 characters for a disc title (DVD-R)
- 44 characters for a program title (DVD-R)

## Preparation

Release protection (cartridge →page 11, program →page 32, disc →page 34) before proceeding.

- 1 After the titling screen appears  
Press [**▲**, **▼**, **◀**, **▶**] to select the character and press [**ENTER**].

**Title field:** shows the text you have entered

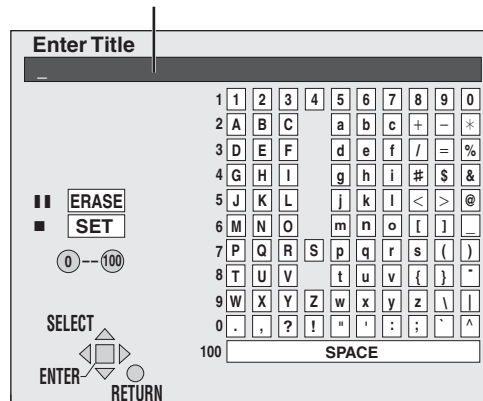

Repeat step 1 to enter other characters.

- 2 Press [**■**].


The title is entered and the screen disappears.

- You can also finish entering the title by selecting “SET” and pressing [**ENTER**].

## Using the numbered buttons to enter characters

e.g., entering the letter “R”

- 1 Press [**7**] to move to the 7th row.
- 2 Press [**7**] twice to highlight “R”.
- 3 Press [**ENTER**].

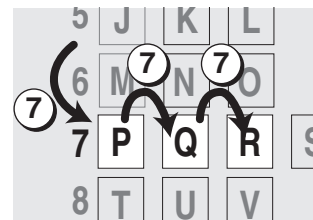


## To erase a character

- 1 Press [**▲**, **▼**, **◀**, **▶**] to select the character you want to erase in the title field.
- 2 Press [**■**].  
You can also erase characters by selecting “ERASE” and pressing [**ENTER**].

## Note

- The full title is shown in the Properties screen (→page 30 and 32), but if you enter a long title, only part of it is shown in the program list or play list screen.
- If you enter a long title, only part of it is shown in the menu screen after finalization. **DVD-R**

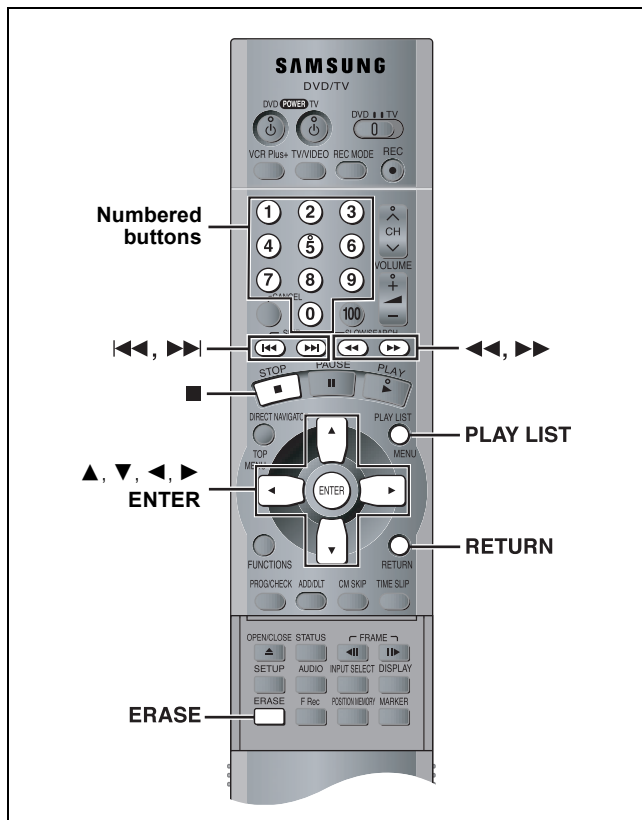


## RAM

Specify start and end points to create scenes, then specify the order in which they are to be played. These scenes are not recorded separately so this doesn't use much capacity. You can create a maximum of 99 play lists and 999 scenes.

## Preparation

Release protection (cartridge →page 11, disc →page 34) before proceeding.


- 1** While stopped  
Press [PLAY LIST].
- 2** Press [▲, ▼] to select “--- --/---” and press [ENTER].

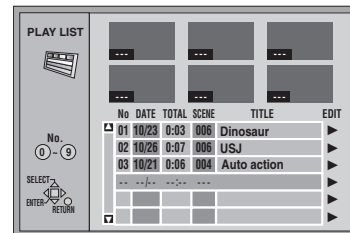

- 3** Press [ENTER] at the start point.

The length of the whole contents on the disc.


The location of the start point.

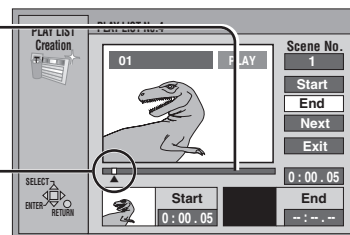

- Use [◀◀], [▶▶] and slow-motion (→page 18) to find the start and end points.
- Pressing [◀◀], [▶▶] allows you to select other programs.

- 4** Press [ENTER] at the end point.

The location of the end point.

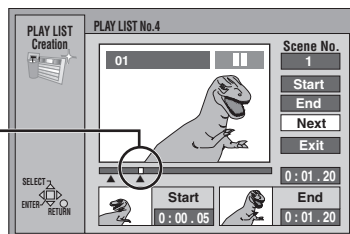

## To specify another scene

Select “Next” and press [ENTER], then repeat steps 3 and 4.

- 5** Press [▲, ▼] to select “Exit” and press [ENTER].

The play list screen appears.

## To clear the play list screen

Press [PLAY LIST].

## To stop partway through


Press [RETURN].

## For your reference

- You cannot specify an end point before a start point.
- You may not be able to specify points within 3 seconds of each other.
- Play pauses if the end of the last program on the disc is reached during this procedure.
- Depending on the state of recording, the actual number of play lists that can be recorded may be less than that specified in this manual.

## Playing play lists

- 1 While stopped  
Press [PLAY LIST].

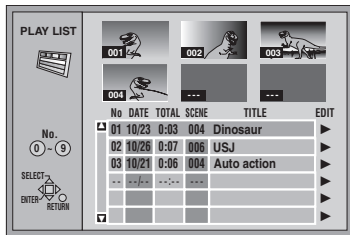

- 2 Press [▲, ▼] to select the play list and press [ENTER].

- You can also select play lists by entering a 2-digit number with the numbered buttons.

e.g., "5": [0] → [5]  
"15": [1] → [5]


All the scenes in the play list are played.

### To stop play list play


Press [■]. (The play list appears.)

## Playing play list scenes

- 1 While stopped  
Press [PLAY LIST].
- 2 Press [▲, ▼] to select the play list that contains the scene you want to play and press [▶].

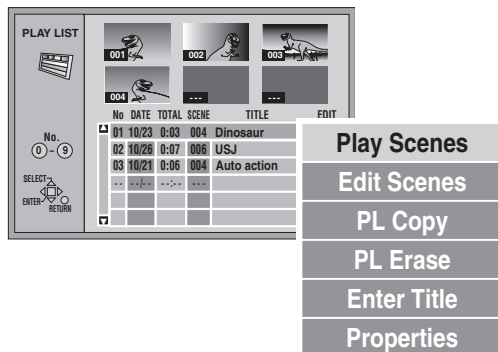

- 3 Press [▲, ▼] to select "Play Scenes" and press [ENTER].

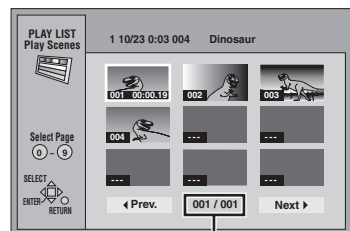

Page no./Total page no.

- 4 Press [▲, ▼, ◀, ▶] to select the scene and press [ENTER].

The scene you select is played.

### To show scene 10 and later

Press [▲, ▼, ◀, ▶] to select "Next" and press [ENTER].

- You can also select a page of scenes by entering a 3-digit number with the numbered buttons.

e.g., "5": [0] → [0] → [5]  
"15": [0] → [1] → [5]

### To stop scene play

Press [■]. (The scene list appears.)

### To clear the scene list

Press [RETURN].


## To erase a play list or a play list scene during playback

- 1 Press [ERASE].  
A confirmation screen will be displayed.
- 2 Press [◀] to select "Erase" and press [ENTER].

RAM

## Operation

While stopped  
Press [PLAY LIST].

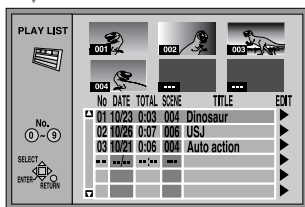

Press [▲,▼] to select the list.

- To create a new list, select "—" and press [ENTER] (→ page 28).


Press [▶] so the submenu appears.

Press [▲,▼] to select the item and press [ENTER].

## Play Scenes

→ page 29, Playing play list scenes

## Edit Scenes

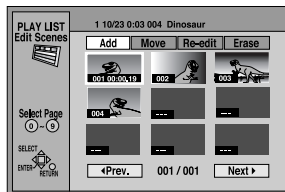

Press [◀,▶] to select the item (Add, Move, Re-edit or Erase) and press [ENTER].

## To show scene 10 and later

- Press [▲,▼,◀,▶] to select "Next" and press [ENTER].
- You can also select a page of scenes by entering a 3-digit number with the numbered buttons.  
e.g., "5": [0] → [0] → [5]  
"15": [0] → [1] → [5]

Editing

## PL Copy



Press [◀] to select "Copy" and press [ENTER].

The copied play list appears at the bottom of the list.

## PL Erase




Once a play list has been erased, it is irretrievable. Check carefully before proceeding.

Press [◀] to select "Erase" and press [ENTER].

The play list is erased.

Numbered buttons

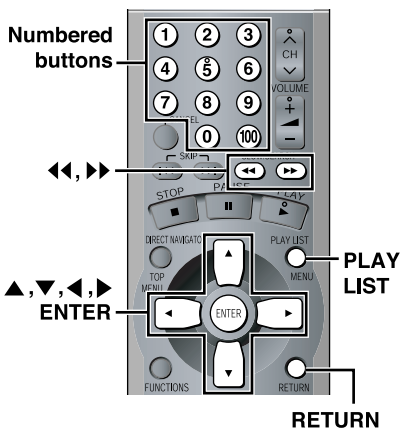

## To clear the play list or scene list screen

Press [PLAY LIST].

## To stop set up process


Press [RETURN].

## For your reference

You can only access "Play Scenes" and "Properties" if the disc is write-protected. Release protection (cartridge → page 11, disc → page 34) to access other items.


## Enter Title

Entering text → page 27

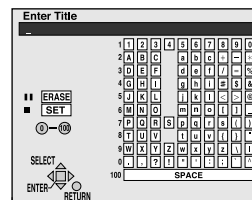

## Properties


Play list information (e.g., time and date) is shown.

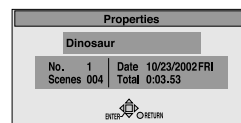

**■ Add** (maximum of 999 scenes)

Press [▲, ▼, ◀, ▶] to select the place where you want to add the scene and press [ENTER].

Press [ENTER] at the start point of the scene.

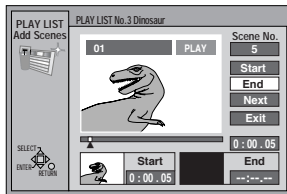

Press [ENTER] at the end point of the scene.

Press [▲, ▼] to select "Exit" and press [ENTER]. The new scene is inserted before the highlighted scene.

Press [▲, ▼] to select "Next" and press [ENTER]. (Repeat to add other scenes.)

**■ Move**

Press [▲, ▼, ◀, ▶] to select the scene and press [ENTER].

Press [▲, ▼, ◀, ▶] to select the place where you want to move the scene to and press [ENTER]. The scene is moved and inserted before the highlighted scene.

Repeat to move other scenes.

**■ Re-edit**

Press [▲, ▼, ◀, ▶] to select the scene and press [ENTER].

Press [ENTER] at the start point of the scene.



Press [ENTER] at the end point of the scene.

 
Press [▲, ▼] to select "Exit" and press [ENTER]. The re-edited scene replaces the old one.

Press [▲, ▼] to select "Prev." or "Next" and press [ENTER]. (Repeat to re-edit other scenes.)

**■ Erase**

Once a scene has been erased, it is irretrievable. Check carefully before

Press [▲, ▼, ◀, ▶] to select the scene and press [ENTER].



Press [◀] to select "Yes" and press [ENTER]. The selected scene is erased from the play list.

**Note**

The play list itself is erased if you erase all the scenes in it.


Repeat to erase other scenes.

**Note**

- Use [◀◀], [▶▶] and slow-motion (→ page 18) to find the start and end points.
- You cannot specify an end point before a start point.
- You may not be able to specify points within 3 seconds of each other.
- Play pauses if the end of the last program is reached during this procedure.
- You cannot edit still picture images.
- Depending on the state of recording, the actual number of play lists or scenes that can be recorded may be less than that specified in this manual.

## Operation

Press [DIRECT NAVIGATOR].

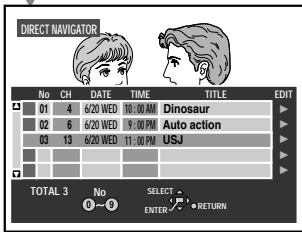


Press [ $\blacktriangle$ ,  $\blacktriangledown$ ] to select the program.

- You can also select programs by entering a 2-digit number with the numbered buttons. e.g., "5" [0]  $\rightarrow$  [5]

Press [ $\blacktriangleright$ ] so the submenu appears.

Press [ $\blacktriangle$ ,  $\blacktriangledown$ ] to select the item and press [ENTER].

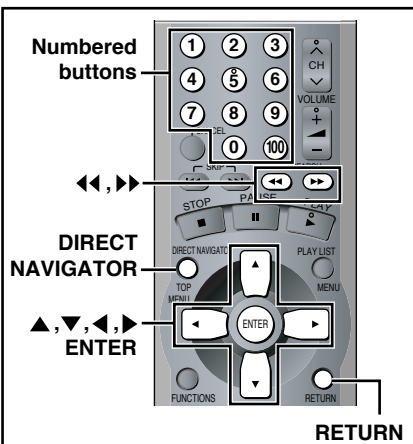

**To clear the program list**  
Press [DIRECT NAVIGATOR].

**To stop set up process**  
Press [RETURN].

### For your reference


You can only access "Properties" if the disc is write-protected. Release protection (cartridge  $\rightarrow$  page 11, disc  $\rightarrow$  page 34) to access other items.

RAM

## Erase Program

RAM DVD-R


The program, and play lists created from it, are erased irretrievably when you use this procedure. Check carefully before proceeding.

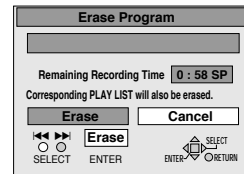

## Enter Title

RAM DVD-R


Entering text  $\rightarrow$  page 27

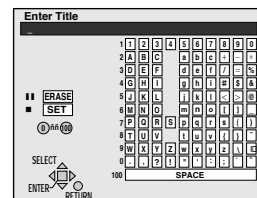

## Properties

RAM DVD-R


Program information (e.g., time and date) is shown.

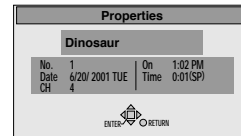

## Protection

RAM


If set, this will protect the program from accidental erasure.

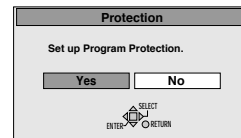

## Shorten Segment

RAM

The program segment, and play list scenes created from it, are erased irretrievably when you use this procedure. Check carefully before proceeding.

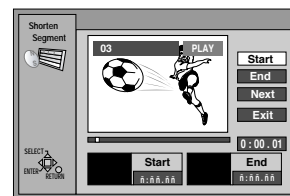


## Divide Program

RAM

Select a point at which to divide the program into two.

You must be sure you wish to divide a program because once a program has been divided, it cannot be returned to its original form.

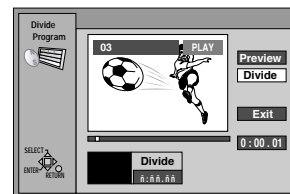




Press [◀] to select "Erase" and press [ENTER].  
The program is erased.

**Note**


- The disc's available recording time may not increase after erasing short programs.
- Computer data cannot be erased.
- The available recording time on DVD-R does not increase when you erase programs.

Press [◀] to set protection and press [ENTER].


The lock symbol appears when the program is write-protected.

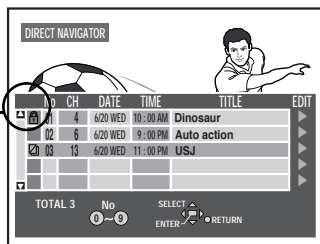

Press [ENTER] at the start point of the section you want to erase.

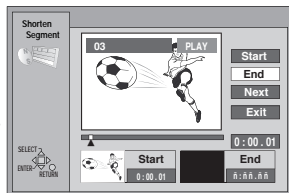

Press [ENTER] at the end point of the section you want to erase.

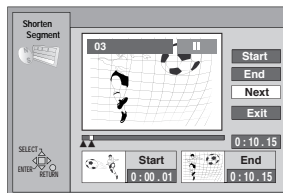


Press [▲, ▼] to select "Next" and press [ENTER], then press [◀] to select "Erase" and press [ENTER].

Press [▲, ▼] to select "Exit" and press [ENTER].

Repeat to enter other sections.

**Note**


- Use [◀◀], [▶▶] and slow-motion (→ page 18) to find the start and end points.
- Play pauses if the end of the program is reached during this procedure.
- You may not be able to specify points within 3 seconds of each other.
- You cannot specify an end point before a start point.
- You cannot specify points on still pictures in the program.
- The disc's available recording time may not increase after erasing short segments.

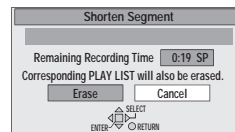

Press [◀] to select "Erase" and press [ENTER].

Press [ENTER] at the point you want to divide the program.

Press [▲, ▼] to select "Exit" and press [ENTER].

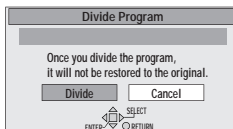

Press [◀] to select "Divide" and press [ENTER].  
The program is divided.

**To confirm the division point**



Press [▲, ▼] to select "Preview" and press [ENTER]. (Play will begin from a point 10 seconds prior to and after the division point.)

**To change the division point**

Press [▲, ▼] to select "Divide" and press [ENTER] at the point you want to change.

**Note**


- The divided programs retain the title and CPRM property (→ page 50) of the original program.
- A minute portion of the recording directly preceding the division point may be lost.
- It is not possible to carry out Divide Program in the following cases:
  - when the program is extremely short.
  - when the total number of programs is more than 99.

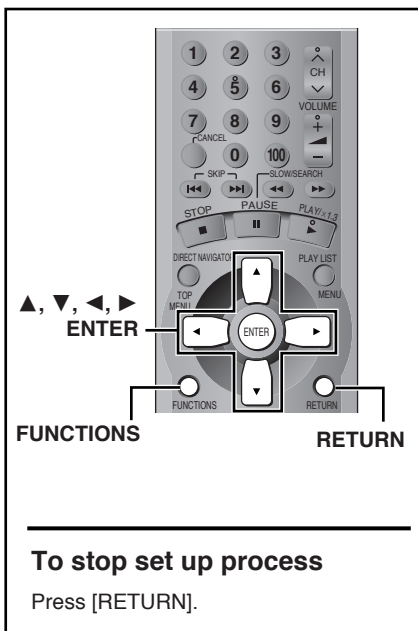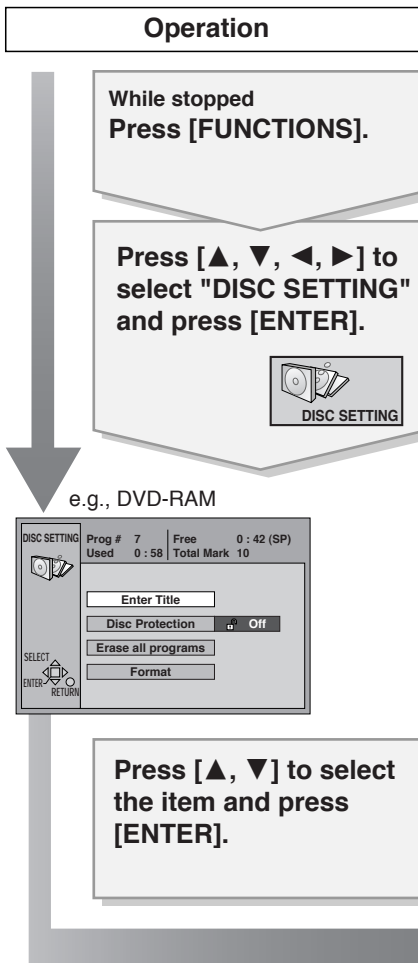

**Enter Title**

**RAM DVD-R**


Entering text → page 27

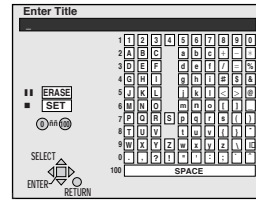

**Disc Protection**

**RAM**


If set, this will protect the disc from accidental erasure.

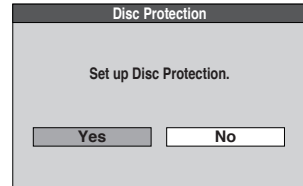

**Erase all programs**

**RAM**

All programs and play lists created from them will be erased irretrievably when you use this procedure. Check carefully before proceeding.

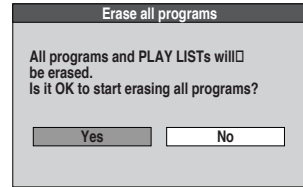

**Preparation**  
Release protection (cartridge → page 11, program → page 32, disc → page 34) before proceeding.

**Format**


**RAM**

Some DVD-RAM are unformatted. Format them before using them in this unit. Formatting also allows you to erase the entire contents of a disc.

Formatting erases all contents on the disc, including computer data. Check carefully before proceeding.

**Preparation**


- Release protection (cartridge → page 11) before proceeding.
- If the disc is dirty, clean it with the recommended cleaner (→ page 50) before formatting.

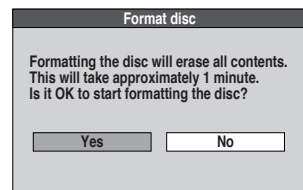

**Finalize**


**DVD-R**  
(DVD-R recorded on this unit only)

You can play DVD-R on compatible DVD players by finalizing them on this unit, effectively making them into DVD-Video.

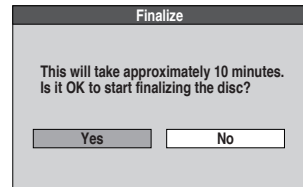

**For your reference**  
The markers you entered (→ page 20) will be lost.

Press [◀] to set disc protection and press [ENTER].

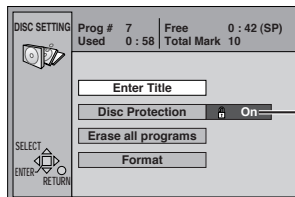

The lock symbol appears closed when the disc is write-protected.

Press [◀] to select "Yes" and press [ENTER].

Press [◀] to select "Start" and press [ENTER].

All programs and play lists are erased.

**Note**

Computer data cannot be erased.

Press [◀] to select "Yes" and press [ENTER].

Press [◀] to select "Start" and press [ENTER].

Formatting starts.  
 • A message appears when formatting is finished.

Press [ENTER] to complete the procedure.

**Note**

- Do not turn the unit off or disconnect the AC power supply cord while the message "Formatting the disc" is on the television. This can render the disc unusable.
- Formatting takes up to a maximum of 70 minutes.
- The contents on the disc are erased when you format it even if you have set program or disc protection.
- It may not be possible to use a disc on this unit if you cannot format it.
- Formatting cannot be performed on DVD-R or CD-R/RW.

**To stop formatting**

Press [RETURN].

You can cancel formatting if it takes more than 2 minutes. The disc must be reformatted if you do this.

Press [◀] to select "Yes" and press [ENTER].

Press [◀] to select "Start" and press [ENTER].

Finalizing starts.  
 • A message appears when finalizing is finished.


Press [ENTER] to complete the procedure.

**Note**

- Do not turn the unit off or disconnect the AC power supply cord while the message "Finalizing the disc" is on the television. This will render the disc unusable.
- Finalizing takes up to 15 minutes.

**After finalizing..**

- You cannot record or perform editing such as giving titles and erasing programs.
- Programs longer than 5 minutes are divided into about five-minute chapters.
- These DVD-R can be played on other Samsung DVD players, but this is not guaranteed. Play may not be possible due to the player you are using, the DVD-R, or the condition of the recording. Play the disc using this unit if you experience problems with other equipment. Visit Samsung's website for more information about DVDs. <http://www.samsungusa.com>

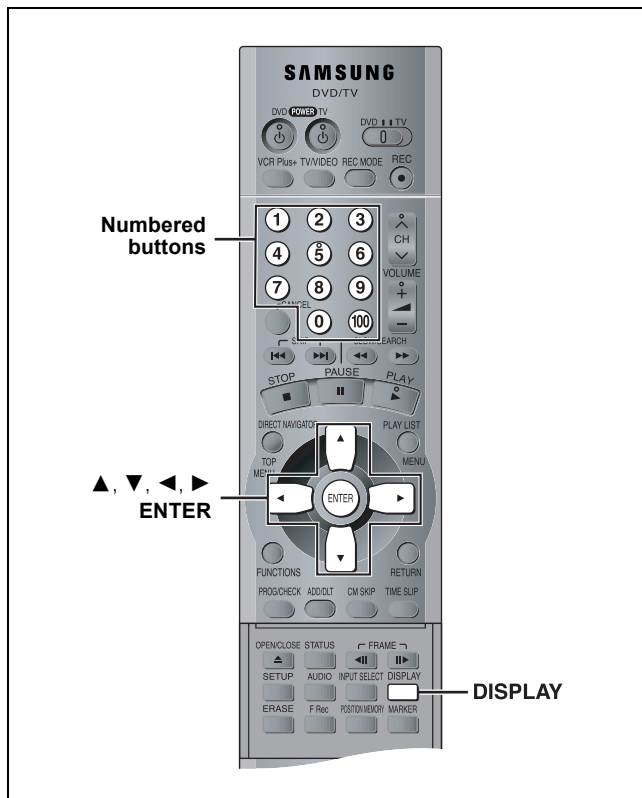

## Disc menu

Not available when playing CDs and MP3 discs.

e.g., DVD-RAM

<b>Disc</b>	<b>Sound track</b>	1	<b>DQ Digital</b>	2/0 ch
<b>Play</b>	<b>Subtitle</b>	OFF		
<b>Video</b>	<b>Audio channel</b>	L R		

Item	Content
<b>Sound track</b>	<b>Soundtrack language</b> DVD-V See <b>A</b> below.
	<b>Audio attribute</b> RAM DVD-R DVD-V See <b>B</b> below.
	<b>Karaoke vocals, on and off</b> (Karaoke DVD-V only) Solo: ON ↔ OFF Duet: OFF ↔ V1+V2 ↔ V1 ↔ V2
<b>Subtitle</b>	<b>Subtitle language</b> DVD-V See <b>A</b> below.
	<b>Subtitle on/off</b> RAM DVD-R DVD-V
<b>Angle</b>	<b>Angle number</b> DVD-V
<b>Audio channel</b>	RAM VCD (→page 23)
<b>PBC</b>	<b>Playback control on/off</b> VCD Indicates whether menu play (playback control) is on or off.

## Common procedures

### 1 Press [DISPLAY].

e.g., DVD-RAM

<b>Disc</b>	<b>Sound track</b>	1	<b>DQ Digital</b>	2/0 ch
<b>Play</b>	<b>Subtitle</b>	OFF		
<b>Video</b>	<b>Audio channel</b>	L R		

Menu                      Item                      Setting

### 2 Press [▲, ▼] to select the menu and press [▶].

### 3 Press [▲, ▼] to select the item and press [▶].

### 4 Press [▲, ▼] to select the setting.

#### To clear the on-screen menus

Press [DISPLAY].

#### For your reference

- The screens depend on the disc contents.
- Depending on the condition of the unit (playing, stopped, etc.) and disc contents, there are some items that you cannot select or change.

#### A Soundtrack/Subtitle language

ENG: English	SVE: Swedish	CHI: Chinese
FRA: French	NOR: Norwegian	KOR: Korean
DEU: German	DAN: Danish	MAL: Malay
ITA: Italian	POR: Portuguese	VIE: Vietnamese
ESP: Spanish	RUS: Russian	THA: Thai
NLD: Dutch	JPN: Japanese	*: Others

#### B Audio attributes

LPCM/DQ Digital/DTS/MPEG: Signal type

k (kHz): Sampling frequency

b (bit): Number of bits

ch (channel): Number of channels

e.g., 3/2\_1ch

.1:	Subwoofer signal (not displayed if there is no subwoofer signal)
0:	No surround
1:	Mono surround
2:	Stereo surround (left/right)
1:	Center
2:	Front left+Front right
3:	Front left+Front right+Center


#### For your reference

- When playing back recordings of SAP broadcasts, "1+1 ch" will be displayed.
- You can only select subtitles, soundtracks, and angles if they are recorded on the disc.
- Some discs allow changes to soundtracks, subtitles, and angles only by using the disc's menus.
- If the subtitles overlap closed captions recorded on discs, turn the subtitles off.

## Play menu

e.g., DVD-RAM

Disc	Repeat play	OFF
Play	Marker	1-10 *****
Video		
Audio		

Item	Content	Remarks
<b>Repeat play</b>	Each time you press [ $\blacktriangle$ , $\blacktriangledown$ ]: <b>RAM DVD-R DVD-V</b> PRG: Program Chapter All Title PL: Play list ( <b>RAM</b> ) OFF OFF  <b>VCD CD MP3</b> Track Track All Group OFF OFF  To cancel: Select "OFF".	<ul style="list-style-type: none"> <li>You cannot use repeat play to repeat an entire DVD-Video.</li> <li>Repeat play does not work if the disc's elapsed play time is not shown on the unit's display.</li> <li>[ERASE] does not work while in repeat play mode.</li> </ul> <p><b>If the Video CD has playback control</b></p> <ol style="list-style-type: none"> <li>While stopped (the screen saver is on the television), press the numbered buttons to select a track (<math>\rightarrow</math>page 18).</li> <li>Select the repeat mode.</li> </ol> 
<b>Marker</b>	<b>RAM DVD-R DVD-V VCD CD MP3</b> ( $\rightarrow$ page 20)	—

## Audio menu

Not available when playing Video CDs, CDs and MP3 discs.

e.g., DVD-Video

Disc	V. S. S.	OFF
Play	Dialog Enhancer	OFF
Video		
Audio		

Item	Content	Remarks
<b>V.S.S.</b>	<b>RAM DVD-R DVD-V</b> (Only with Dolby Digital with 2 or more channels) Enjoy a surround-like effect if you are using two front speakers only. The effect is broadened and sound seems to come from virtual speakers on either side if the disc has surround signals recorded on it. Natural $\longleftrightarrow$ Emphasis $\longleftrightarrow$ OFF $\uparrow$ $\uparrow$	<ul style="list-style-type: none"> <li>Turn off the surround effects on the other equipment.</li> <li>V.S.S. will not work, or will have less effect, with some discs.</li> <li>Turn V.S.S. off if it causes distortion.</li> </ul>
<b>Dialog Enhancer</b>	<b>DVD-V</b> (Dolby Digital, 3-channel or over only, including a center channel) The volume of the center channel is raised to make dialog easier to hear. ON $\longleftrightarrow$ OFF	—

## Video menu

Not available when playing CDs and MP3 discs.

RAM DVD-R DVD-V VCD


Disc	Picture	Normal
Play	MPEG-DNR	ON
Video		
Audio		

Item	Content
<b>Picture</b>	<p><b>Normal:</b> Default setting</p> <p><b>Soft:</b> Soft picture with fewer video artifacts</p> <p><b>Fine:</b> Details are sharper</p> <p><b>Cinema:</b> Mellows movies, enhances detail in dark scenes.</p>
<b>MPEG-DNR</b>	<p>You can turn the recommended settings for 3D NR, block NR, and mosquito NR on and off.</p> <p>ON ↔ OFF</p> <p>3D NR: Reduces overall noise</p> <p>Block NR: Smooths block noise</p> <p>Mosquito NR: Reduces the smudging that appears around contrasting sections of the picture</p>

- When you have set “TV Type” to “Aspect 4:3 & 480P” or “Aspect 16:9 & 480P” in SETUP (→page 10)

Disc	Picture	Normal
Play	MPEG-DNR	ON
Video	Progressive	ON
Audio	Transfer	Auto 1

Item	Content
<b>Progressive</b>	<p><b>ON:</b> Enables progressive output</p> <p><b>OFF:</b> Disables progressive output</p>
<b>Transfer</b> (When progressive output is on)	<p>Select the method of conversion for progressive output to suit the type of material being played (→page 50, Film and video).</p> <p><b>Auto1 (normal):</b> For film material</p> <p><b>Auto2:</b> For film material (the same as Auto1, but able to convert 30-frame-per-second progressive video.)</p> <p><b>Video:</b> For video material</p>

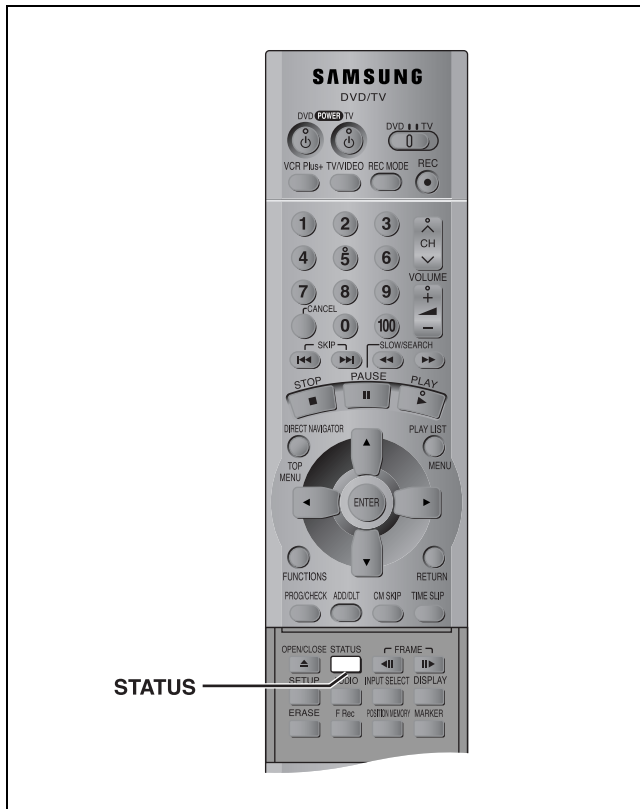


Displays appear on the television when you operate the unit to let you know what operation was performed and what condition the unit is in.

- You can change the setting in the SETUP menu so the first display does not appear automatically (→page 47, Display—Status Messages).


## Changing the information displayed

### Press [STATUS].

The display changes each time you press the button. e.g., DVD-RAM

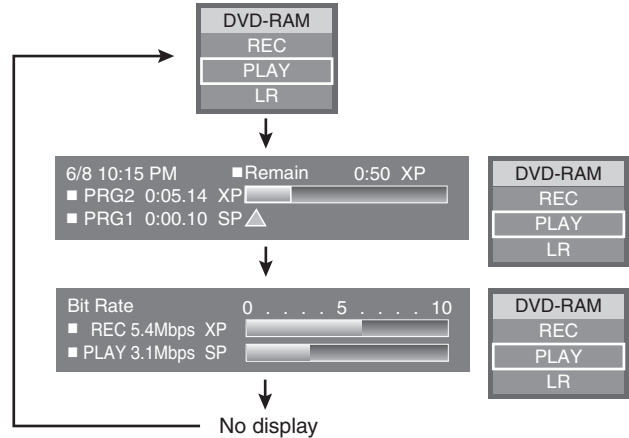

## Display examples

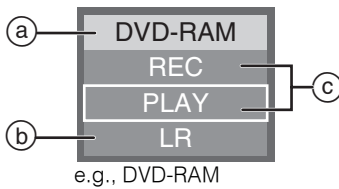


- (a) Disc indication**
- (b) Audio type** (→page 23)  
Shows the selected audio type.
  - During reception
    - Stereo:** Stereo is selected
    - Mono:** Monaural is selected
    - SAP:** Secondary audio program is selected


("(" appears when the type you have selected is actually being received.)

- During play
  - LR, R, L:** a stereo program is recorded
  - MAIN, SAP:** an SAP program is recorded

- (c) Current recording or play status/input channel and caption (if entered)**
  - REC:** Recording
  - PAUSE:** Recording paused
  - PLAY:** Playing
  - ◀◀:** Rewinding
  - ◀:** Reverse slow-motion
  - ||:** Playing paused
  - ▶▶:** Fast forwarding
  - ▶:** Slow-motion

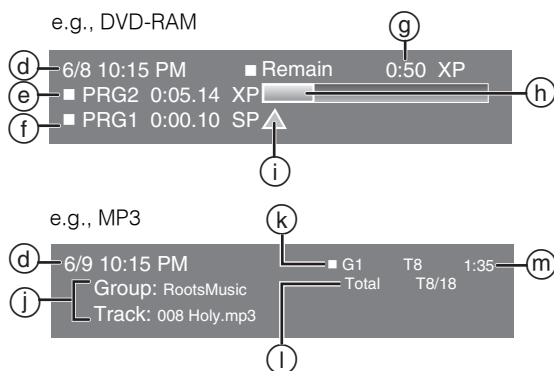

- (d) The current date and time**
- (e) Elapsed recording time/recording mode**
- (f) Elapsed play time of a program playing/mode at the time of recording**
- (g) Available recording time and recording mode**
- (h) Approximate volume of recording**
- (i) Play position in the volume of recording**
- (j) Selected group and track name**
- (k) Selected group and track number**
- (l) Selected track no./Total track no. in all groups**
- (m) Elapsed play time of a track playing**

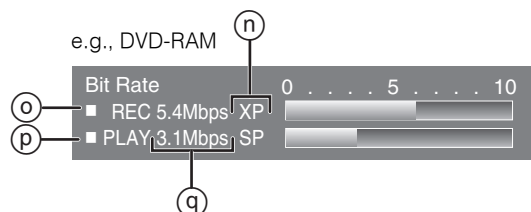

- (n) Recording mode or I/P/B display when paused** (→page 50)
- (o) Video bit-rate when recording**
- (p) Video bit-rate when playing**
- (q) Bit-rate display\***  
Show as Mbps (Megabits per seconds) during play and recording, or kbit (kilobits) while paused.



\* The method of calculating bit-rate for recording and playing is different so there may be differences in the figures displayed. (Values are approximate.)

Refer to the relevant pages for details.

## Enjoying CATV/Satellite broadcasts

What you want to do	How to do it	Reference pages	Settings	Reference pages
<b>Enjoying CATV/Satellite broadcasts</b>	Connect a cable TV box or satellite receiver.	41	Tune to channels correctly.	9
			Change the necessary settings on the equipment you have connected.	—

## Enjoying more powerful sound
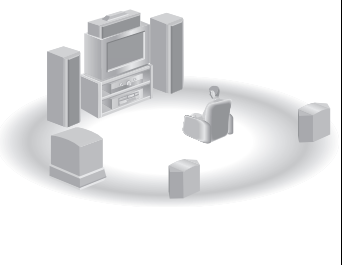
<b>Enjoying 5.1-channel surround sound with Dolby Digital and DTS</b> 	<b>Digital connection</b> Connect to an amplifier with built-in decoders.	42 <b>A</b>	<b>SETUP—Audio—Digital Audio Output</b> <ul style="list-style-type: none"> <li>• Set PCM Down Conversion to suit the equipment.</li> <li>• Set Dolby Digital and DTS to suit the equipment.</li> </ul>	47
				Change speaker settings on the amplifier.
<b>Enjoying stereo or Dolby Pro Logic</b> 	<b>Analog connection</b> Connect to an analog amplifier or system component.	42 <b>B</b>	<b>SETUP—Audio—Digital Audio Output</b> <ul style="list-style-type: none"> <li>• Set PCM Down Conversion to Off.</li> </ul>	47
	<b>Digital connection</b> Connect to a digital amplifier or system component.	42 <b>A</b>	<b>SETUP—Audio—Digital Audio Output</b> <ul style="list-style-type: none"> <li>• Set PCM Down Conversion to suit the equipment.</li> <li>• Set Dolby Digital to PCM.</li> <li>• Set DTS to Off.</li> </ul>	47

### Other uses

Record to digital recording equipment or cassette deck (→page 42)  
 Record from a video cassette recorder (→page 15)

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.




- The equipment connections described are examples.
- Peripheral equipment and optional cables sold separately unless otherwise indicated.
- Before connection, turn off all equipment and read the appropriate operating instructions.
- The signal from the cable TV box or satellite receiver passes through this unit to the television even when this unit is turned off.

## Connecting a cable TV box/satellite receiver

You need to subscribe to a cable TV or satellite TV service, to enjoy viewing their programming.

- Consult your service provider regarding appropriate cable box or satellite receiver.
- Select the applicable input on your television to view the output from your cable box or satellite receiver, or the applicable video input on the television is connected using the audio and video connections.

### One cable TV box/satellite receiver

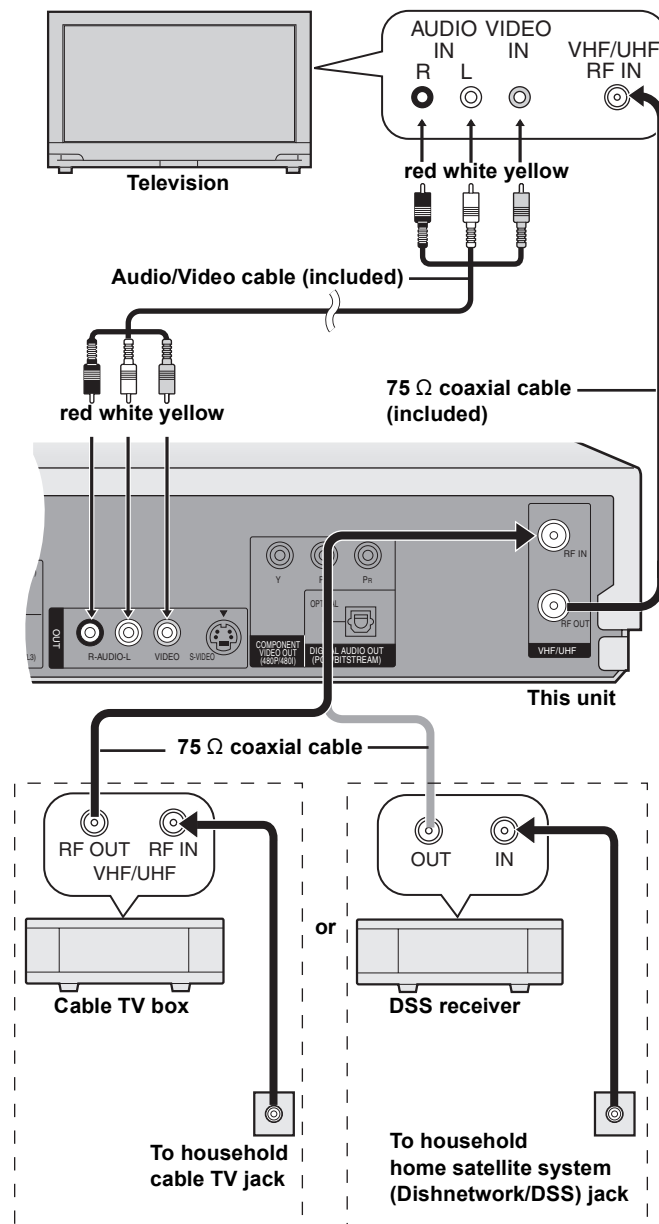


#### Note

When a home satellite system (Dishnetwork/DSS) is connected, auto tuning and auto clock setting may not operate properly. Set the clock manually (→page 49).

- Change the video input on the television when you want to watch another program while recording.
- You cannot do a timer recording unless the channel is first selected on the cable TV box or DSS receiver.

### Two cable TV boxes

You can record and view both scrambled and unscrambled channels if connections are made as shown in the diagram below.

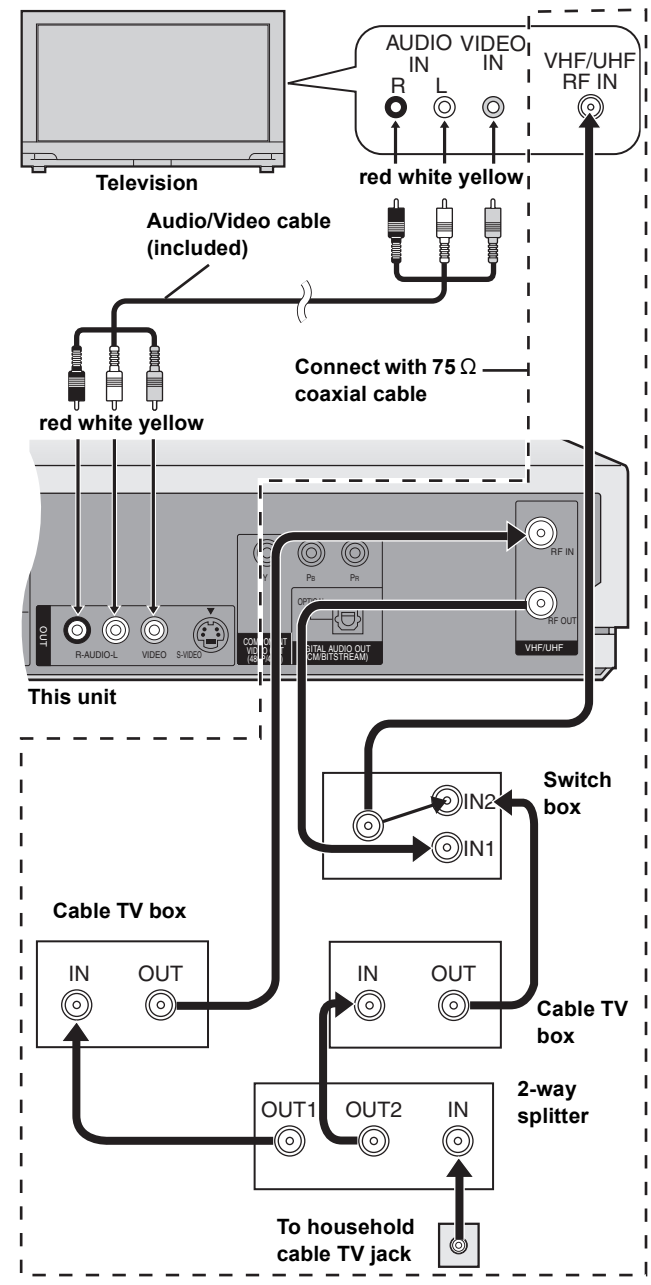

- Change the video input on the television when you want to watch another program while recording.
- You cannot do a timer recording unless the channel is first selected on the cable TV box.

## Connecting an amplifier or system component

This model can play Dolby Digital, but only in two channels. This model does not have a DTS decoder. You must connect a unit with a Dolby Digital or DTS decoder to enjoy surround sound.

### A Digital connection

#### To enjoy multi-channel surround sound

Connect an amplifier with a built-in decoder or a decoder-amplifier combination.

- Change the settings in "Digital Audio Output" (→page 47).


#### Note

You cannot use DTS Digital Surround decoders not suited to DVD.

#### To enjoy stereo or Dolby Pro Logic

Connect a digital amplifier or system component.



- Change the settings in "Digital Audio Output" (→page 47).

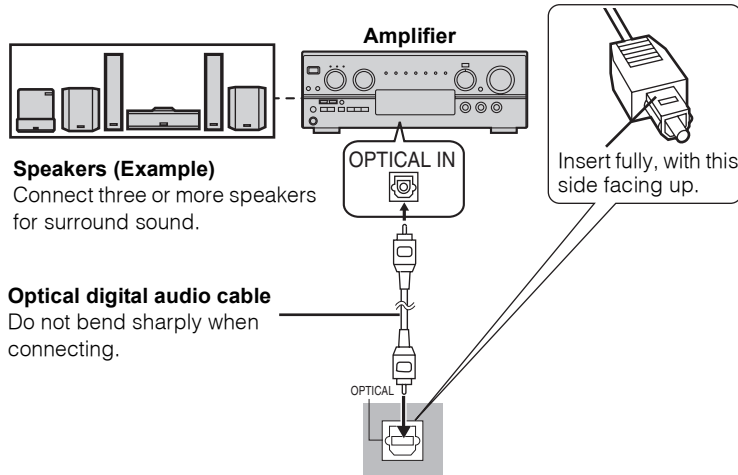

### B Analog connection

#### To enjoy stereo or Dolby Pro Logic

Connect an analog amplifier or system component.

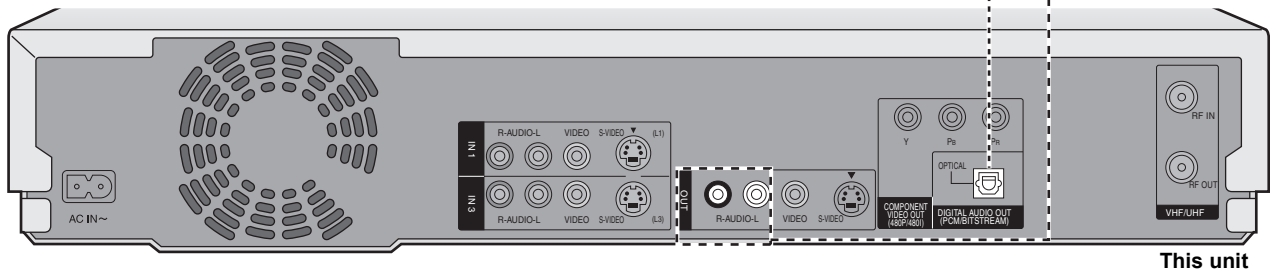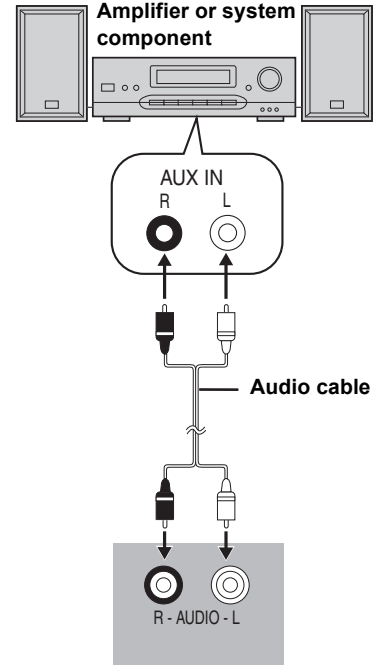

Advanced operation

## Recording to digital recording equipment or cassette tapes

### Digital recording

You can record the digital signal directly to digital recording equipment (→ Connection **A** above).

#### Note

- With DVD, the following conditions must be met: (a) the disc doesn't have protection preventing digital recording, and (b) the recording equipment can handle signals with a sampling frequency of 48 kHz.
- You cannot record DTS signals.
- You cannot record MP3.

When recording DVDs, make the following settings.

V.S.S.: OFF (→page 37)

PCM Down Conversion: On (→page 47)

Dolby Digital: PCM (→page 47)

DTS: Off (→page 47)


### Analog recording

You can record to a cassette deck or other recording equipment (→ Connection **B** above).

There are no limitations on recording analog signals as there are with digital signals.

## Connecting other video equipment

Connecting to the L2 input terminals on the front of the unit

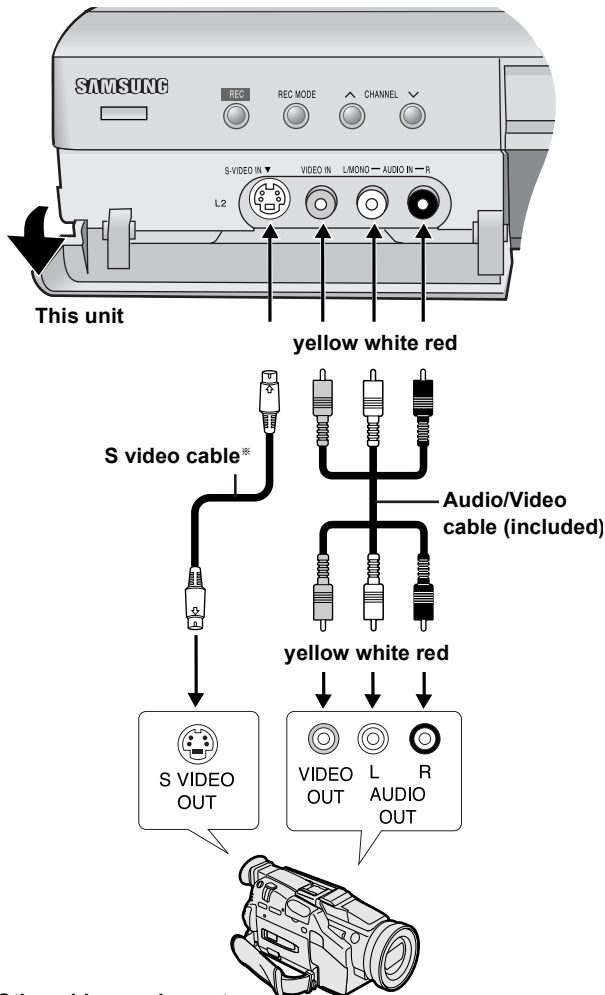

### Other video equipment


Connect to the video and audio output terminals.

\* By using the S video cable instead of the yellow video cable you can make recordings of higher picture quality.

### Note

If the audio output of the other equipment is monaural, connect to L/MONO. (Both left and right channels are recorded when connected through L/MONO.)

Connecting to the input terminals on the rear of the unit, L1 and L3

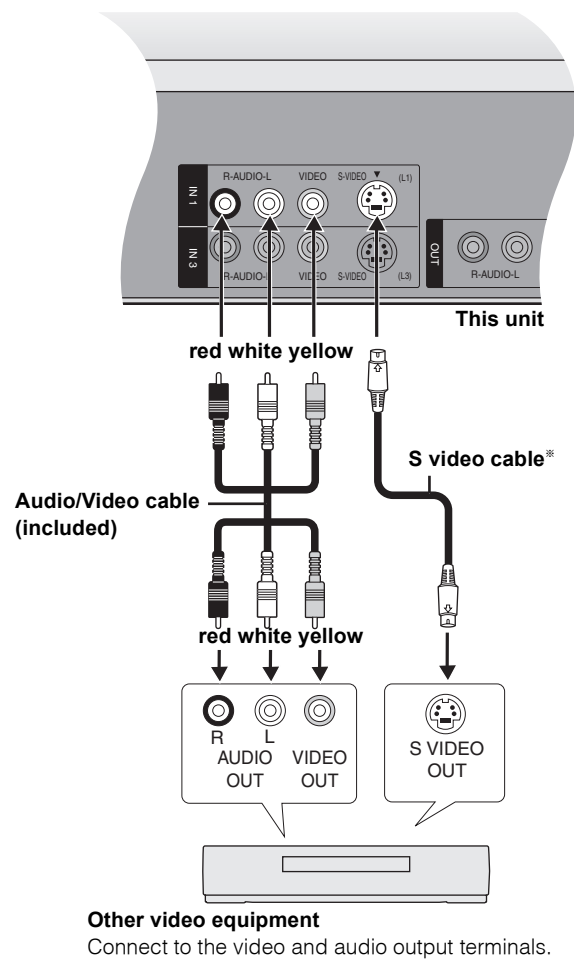

\* By using the S video cable instead of the yellow video cable you can make recordings of higher picture quality.


### Note

If audio output on the other equipment is monaural, use a stereo-monaural conversion cable (not included).


## Other antenna connection to the unit

Use one of the following connections to suit the antenna lead.


### ■ A single twin lead

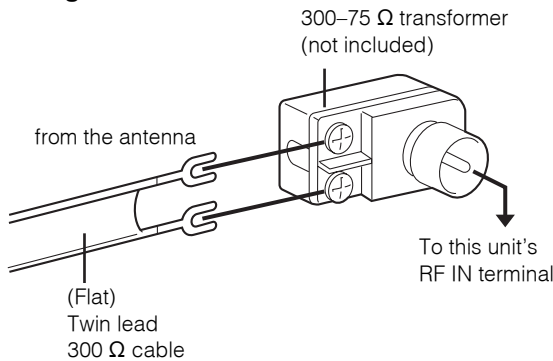

### ■ A twin lead and a coaxial cable

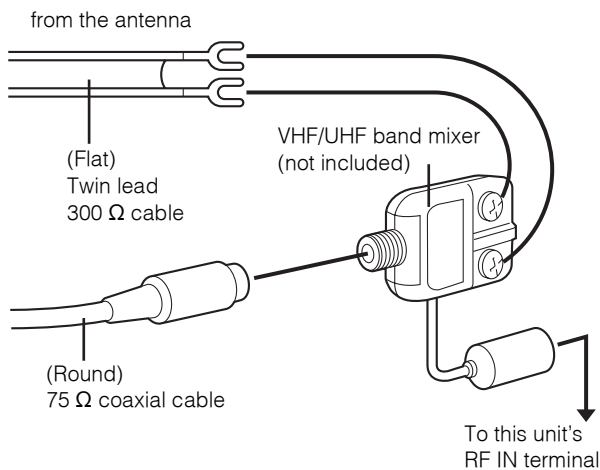

### ■ Two twin leads

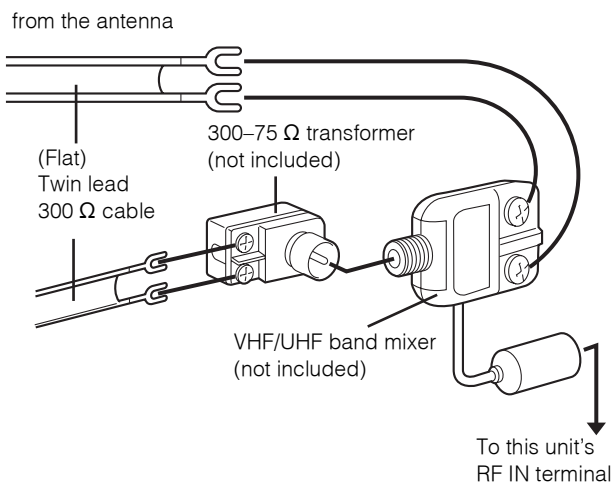


- If your television has both lead and coaxial VHF terminals, use the lead connection to minimize signal loss.


## Other antenna connection from the unit to the television

Use one of the following connections to suit the antenna terminals on your television. Refer to the television's operating instructions.


### ■ A twin lead and coaxial plug terminal

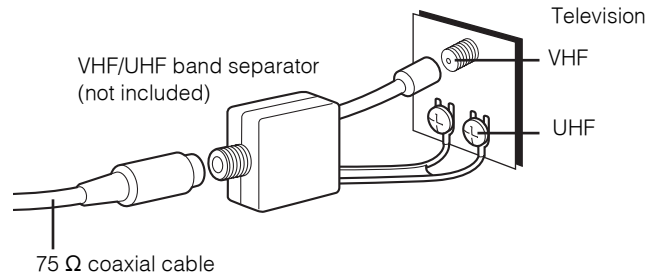


### ■ A twin lead terminal

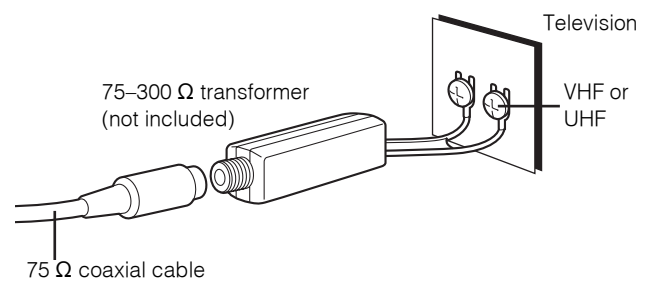


### ■ Two twin lead terminals

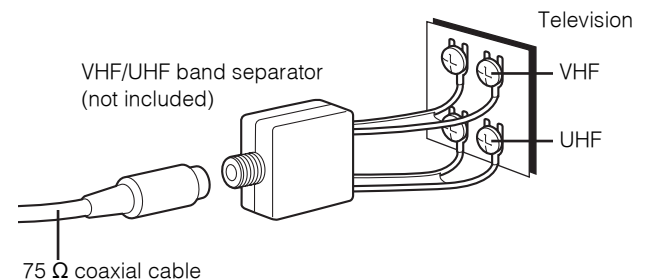


### ■ Multiple antenna terminals

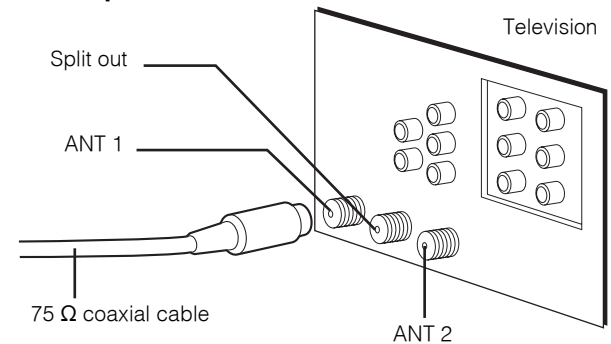

- Connect to one of the terminals, then change the television's setting as necessary.

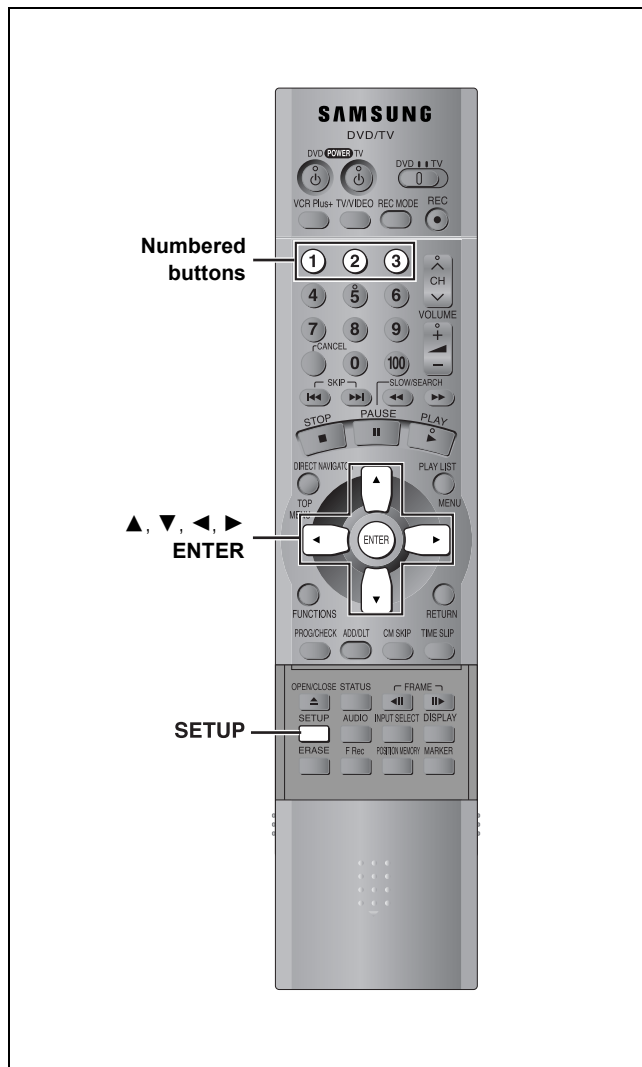

- 1 While stopped  
Press [SETUP] to show the menus.

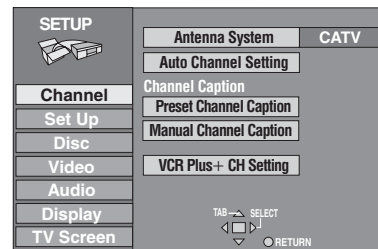

- 2 Press [▲, ▼] to select “Set Up” and press [▶].
- 3 Press [▲, ▼] to select “Remote Control Code” and press [ENTER].
- 4 Press [▲, ▼] to select the code (1, 2, or 3) and press [ENTER].

The remote control code on the unit has been set.

- 5 While pressing [ENTER] on the remote control, press the numbered button ([1], [2] or [3]) corresponding to the code you selected in step 4.

The remote control code on the remote control has been set.

- 6 Press [SETUP]

The following display appears when you use a remote control with a different code.



The unit's remote control code

If you are trying to use this unit's remote control, change its code to match the unit's (→ step 5).


## Summary of settings

This chart shows the initial settings for this unit. See page 48 for details on menu operation.

• Underlined items are the factory presets.

Tabs	Menus	Options
<b>Channel</b>	<b>Antenna System</b> (→page 7) Select to suit the type of antenna you are using. Channels are set corresponding to the antenna system you select.	•TV      • <u>CATV</u>
	<b>Auto Channel Setting</b> (→page 7) The unit sets the channels automatically.	
	<b>Preset Channel Caption</b> (→page 9) You can give preset captions to the channels.	
	<b>Manual Channel Caption</b> (→page 9) You can set channel captions manually.	
	<b>VCR Plus+ CH Setting</b> (→page 8) Set the guide channels for use with VCR Plus+ timer recording.	
<b>Set Up</b>	<b>Off Timer</b> Select how long the unit remains on when it is not being used.	•2 hr      • <u>6 hr</u> •Off
	<b>Remote Control Code</b> (→page 45) To avoid operating equipment other than the one intended (when more than one remote controlled item is in the same area), change the remote control code.	• <u>Set Code 1</u> •Set Code 2      •Set Code 3
	<b>Auto Clock Setting</b> (→page 49) The unit adjusts the clock automatically.	
	<b>Manual Clock Setting</b> (→page 49) You can adjust the clock.	
	<b>Time Zone Adjust</b> (→page 49) Adjust the time zone if it was not set correctly after auto clock setting. This appears only after auto clock setting is complete.	•-1      • <u>0</u> •+1
	<b>Re-initialize Setting</b> This returns all values in the SETUP menus, except for the clock, channel settings, ratings level, and display language, to the default settings.	•Yes      • <u>No</u>
<b>Disc</b> <b>DVD-V</b>	<b>Audio</b> Choose the audio language.	• <u>English</u> •French      •Spanish •Original: The original language of each disc will be selected. •Other *****: Input a code (→page 48).
	<b>Subtitle</b> Choose the subtitle language.	• <u>Automatic</u> : If the language selected for "Audio" is not available, subtitles of that language will automatically appear if available on that disc. •English      •French      •Spanish      •Other *****
	<b>Menus</b> Choose the language for disc menus.	• <u>English</u> •French      •Spanish      •Other *****
	<b>Ratings</b> Set a ratings level to limit DVD-Video play. The password screen is shown when you select levels 0 to 7. <b>To enter a password</b> 1. Input a 4-digit password with the numbered buttons. • If you enter a wrong number, press [CANCEL] to erase it. • <b>Do not forget your password.</b> 2. Press [ENTER]. • The lock symbol appears closed to show the rating is locked. 3. Press [ENTER] to confirm the 4 digits.  If you insert a DVD-Video that exceeds the ratings limit you set, a message appears on the television. Press [SETUP] to select "Ratings" again and change ratings.	<b>Setting ratings (When level 8 is selected)</b> <u>8 No Limit</u> : All DVD-Video can be played. 1 to 7: Prohibits play of DVD-Video with corresponding ratings recorded on them. 0 Lock All: Prohibits play of all DVD-Video.  ----- <b>Changing ratings (When level 0-7 is selected)</b> •Unlock Recorder      •Change Password •Change Level      •Temporary Unlock
<b>Video</b>	<b>3-D Y/C Separation</b> Turn 3-D Y/C separation on or off.	• <u>On</u> : Reduces noise for recording by separating the luminance (Y) and color (C) signals received from the television station. •Off: Reduces the ghosting that occurs when recording fast moving images.
	<b>Hybrid VBR Resolution</b> Switch between automatic and fixed hybrid VBR resolution when recording.	• <u>Automatic</u> : The unit automatically switches resolution rates during recording. The unit reduces block noise, which occurs during MPEG compression, by selecting the optimum rate. •Fixed: The resolution rate is fixed to ensure the resolution rate is not reduced.


Tabs	Menus	Options					
<b>Video</b>	<b>Still Mode</b> Select the type of picture shown when you pause play.	<ul style="list-style-type: none"> <li>● <u>Automatic</u></li> <li>● <u>Field</u>: Less blurred field stills are shown. Select if jittering occurs when "Automatic" is selected.</li> <li>● <u>Frame</u>: Sharper frame stills are shown. Select if small text or fine patterns cannot be seen clearly when "Automatic" is selected.</li> </ul>					
	<b>Black Level Control</b> Select normal, lighter or darker for adjusting the black level control to the desired setting for picture enhancement.	<ul style="list-style-type: none"> <li>● <u>Input Level (Lighter/Darker)</u>: Adjusts the black level of the input signal (e.g., L1, L2, L3)</li> <li>● <u>Composite &amp; S Video Output Level (Lighter/Darker)</u>: when connected to a TV through the VIDEO OUT or S-VIDEO OUT terminal</li> <li>● <u>Component Video Output Level (Lighter/Normal/Darker)</u>: when connected to a TV through the COMPONENT VIDEO OUT (Y/P<sub>a</sub>/P<sub>b</sub>) terminal</li> </ul>					
<b>Audio</b>	<b>PLAY &amp; Audio during Search</b> <b>RAM</b> <b>DVD-R</b> <b>DVD-V</b> <b>VCD</b> Choose whether to have sound during the first level of fast-forward. Quick View (→page 19) does not work if you make the setting "Off".	<ul style="list-style-type: none"> <li>● <u>On</u></li> <li>● <u>Off</u></li> </ul>					
	<b>D. Range Compression</b> <b>DVD-V</b> (Dolby Digital only) Change the dynamic range for late night viewing.	<ul style="list-style-type: none"> <li>● <u>On</u></li> <li>● <u>Off</u></li> </ul>					
	<b>Select MTS</b> (→page 23) Select whether to record the main or secondary audio type (SAP) when recording to DVD-R.	<ul style="list-style-type: none"> <li>● <u>Main</u></li> <li>● <u>SAP</u></li> </ul>					
	<b>Digital Audio Output</b> Change the settings when you have connected equipment through this unit's DIGITAL AUDIO OUT terminal (→page 42, <b>A</b> ). <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><b>PCM Down Conversion</b> Select how to output audio with a sampling frequency of 96 kHz.</td> <td style="width: 70%;"> <ul style="list-style-type: none"> <li>● <u>On</u>: Converted to 48 kHz for output. Select if the equipment you connect cannot process signals with a sampling frequency of 96 kHz.</li> <li>● <u>Off</u>: Output as 96 kHz. There is no output if the disc has copy protection. Select "On" in this case. If you use analog connection, select this setting irrespective of the type of equipment.</li> </ul> </td> </tr> <tr> <td><b>Dolby Digital</b></td> <td rowspan="2">           If the equipment you connected cannot decode the signal, the setting must be changed to PCM or Off. If not, signals the equipment cannot process will be output by this unit, causing high levels of noise which can damage your hearing and the speakers.         </td> </tr> <tr> <td><b>DTS</b></td> </tr> </table>	<b>PCM Down Conversion</b> Select how to output audio with a sampling frequency of 96 kHz.	<ul style="list-style-type: none"> <li>● <u>On</u>: Converted to 48 kHz for output. Select if the equipment you connect cannot process signals with a sampling frequency of 96 kHz.</li> <li>● <u>Off</u>: Output as 96 kHz. There is no output if the disc has copy protection. Select "On" in this case. If you use analog connection, select this setting irrespective of the type of equipment.</li> </ul>	<b>Dolby Digital</b>	If the equipment you connected cannot decode the signal, the setting must be changed to PCM or Off. If not, signals the equipment cannot process will be output by this unit, causing high levels of noise which can damage your hearing and the speakers.	<b>DTS</b>	<ul style="list-style-type: none"> <li>● <u>Bitstream</u>: Select if the equipment you connected can decode the signal.</li> <li>● <u>PCM</u>: Select if the equipment you connected cannot decode the signal.</li> <li>● <u>Bitstream</u>: Select if the equipment you connected can decode the signal.</li> <li>● <u>Off</u>: Select if the equipment you connected cannot decode the signal.</li> </ul>
	<b>PCM Down Conversion</b> Select how to output audio with a sampling frequency of 96 kHz.	<ul style="list-style-type: none"> <li>● <u>On</u>: Converted to 48 kHz for output. Select if the equipment you connect cannot process signals with a sampling frequency of 96 kHz.</li> <li>● <u>Off</u>: Output as 96 kHz. There is no output if the disc has copy protection. Select "On" in this case. If you use analog connection, select this setting irrespective of the type of equipment.</li> </ul>					
<b>Dolby Digital</b>	If the equipment you connected cannot decode the signal, the setting must be changed to PCM or Off. If not, signals the equipment cannot process will be output by this unit, causing high levels of noise which can damage your hearing and the speakers.						
<b>DTS</b>							
<b>Display</b>	<b>Status Messages</b> Choose whether to show on-screen messages automatically.	<ul style="list-style-type: none"> <li>● <u>Automatic</u></li> <li>● <u>Off</u></li> </ul>					
	<b>Language of Display Message</b> Choose the language for these menus and the on-screen messages.	<ul style="list-style-type: none"> <li>● <u>English</u></li> <li>● <u>Español</u></li> <li>● <u>Français</u></li> </ul>					
	<b>Blue Background</b> Select "Off" if you do not want to have the unit show the blue background when reception is weak.	<ul style="list-style-type: none"> <li>● <u>On</u></li> <li>● <u>Off</u></li> </ul>					
	<b>FL Display</b> Changes the brightness of the unit's display.	<ul style="list-style-type: none"> <li>● <u>Bright</u></li> <li>● <u>Dim</u></li> <li>● <u>Automatic</u>: The display dims during video playback and goes off completely when the unit is turned off or on timer recording standby. If you press a button the display will brighten briefly. (At this time the power consumed will be 0.4 W.)</li> </ul>					
<b>TV Screen</b>	<b>TV Type</b> (→page 10) Choose the setting to suit your television.	<ul style="list-style-type: none"> <li>● <u>Aspect 4:3 &amp; 480I</u></li> <li>● <u>Aspect 16:9 &amp; 480I</u></li> <li>● <u>Aspect 4:3 &amp; 480P</u></li> <li>● <u>Aspect 16:9 &amp; 480P</u></li> </ul>					
	<b>4:3 TV Settings for DVD-Video</b> Select how DVD-Video widescreen picture is shown on a 4:3 standard aspect television.	<ul style="list-style-type: none"> <li>● <u>Pan &amp; Scan</u> (→page 50): Video recorded for a widescreen is played as Pan &amp; Scan (unless prohibited by the producer of the disc).</li> <li>● <u>Letterbox</u> (→page 50): Video recorded for a widescreen is played in the letterbox style.</li> </ul>					
	<b>4:3 TV Settings for DVD-RAM</b> Select how DVD-RAM widescreen picture is shown on a 4:3 standard aspect television.	<ul style="list-style-type: none"> <li>● <u>4:3</u>: Programs played as recorded.</li> <li>● <u>Pan &amp; Scan</u>: Video recorded for a widescreen is played as Pan &amp; Scan.</li> <li>● <u>Letterbox</u>: Video recorded for a widescreen is played in the letterbox style.</li> </ul>					

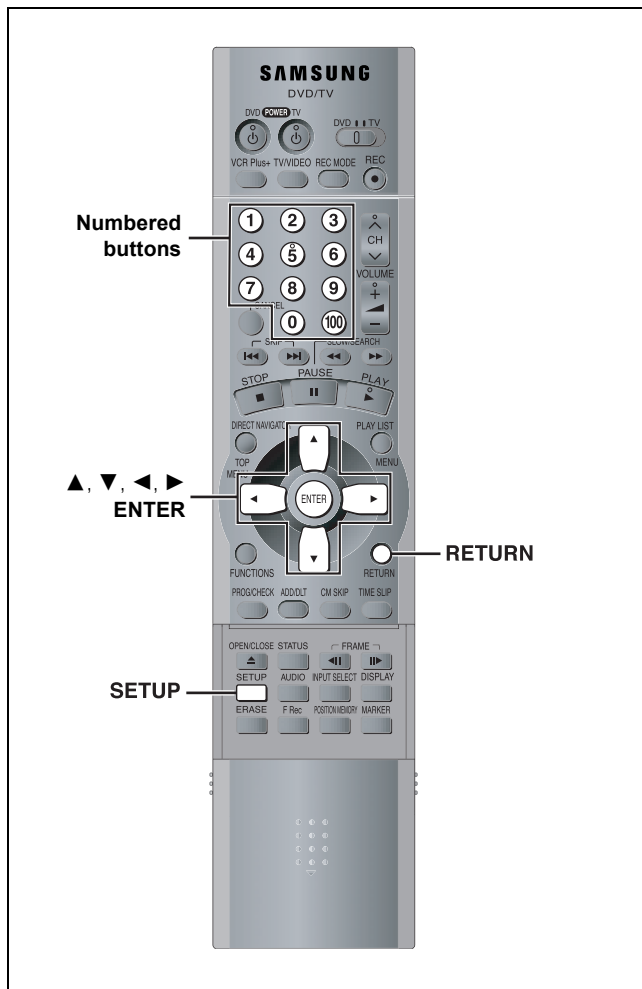

## Common procedures

See page 46 for menu and option details.

- 1 While stopped  
Press [SETUP] to show the menus.

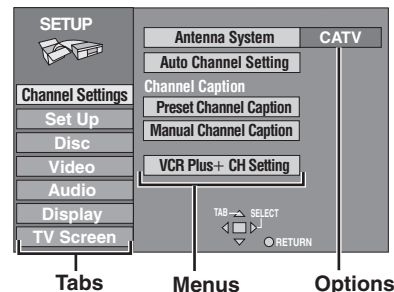

- 2 Press [▲, ▼] to select the menu's tab and press [▶].
- 3 Press [▲, ▼] to select the menu and press [ENTER].
- 4 Press [▲, ▼] to select the option and press [ENTER].

The screen now shows the menu again.

- Some items require different operations. Follow the on-screen instructions, or read the following explanations.

### To return to the previous screen

Press [RETURN].

### When you are finished

Press [SETUP].

## Language code list

Input the code with numbered buttons.

Abkhazian: 6566	Chinese: 9072	Hausa: 7265	Lithuanian: 7684	Romanian: 8279	Telugu: 8469
Afar: 6565	Corsican: 6779	Hebrew: 7387	Macedonian: 7775	Russian: 8285	Thai: 8472
Afrikaans: 6570	Croatian: 7282	Hindi: 7273	Malagasy: 7771	Samoan: 8377	Tibetan: 6679
Albanian: 8381	Czech: 6783	Hungarian: 7285	Malay: 7783	Sanskrit: 8365	Tigrinya: 8473
Ameharic: 6577	Danish: 6865	Icelandic: 7383	Malayalam: 7776	Scots Gaelic: 7168	Tonga: 8479
Arabic: 6582	Dutch: 7876	Indonesian: 7378	Maltese: 7784	Serbian: 8382	Turkish: 8482
Armenian: 7289	English: 6978	Interlingua: 7365	Maori: 7773	Serbo-Croatian: 8372	Turkmen: 8475
Assamese: 6583	Esperanto: 6979	Irish: 7165	Marathi: 7782	Shona: 8378	Twì: 8487
Aymara: 6588	Estonian: 6984	Italian: 7384	Moldavian: 7779	Sindhi: 8368	Ukrainian: 8575
Azerbaijani: 6590	Faroese: 7079	Japanese: 7465	Mongolian: 7778	Singhalese: 8373	Urdu: 8582
Bashkir: 6665	Fiji: 7074	Javanese: 7487	Nauru: 7865	Slovak: 8375	Uzbek: 8590
Basque: 6985	Finnish: 7073	Kannada: 7578	Nepali: 7869	Slovenian: 8376	Vietnamese: 8673
Bengali; Bangla: 6678	French: 7082	Kashmiri: 7583	Norwegian: 7879	Somali: 8379	Volapük: 8679
Bhutani: 6890	Frisian: 7089	Kazakh: 7575	Oriya: 7982	Spanish: 6983	Welsh: 6789
Bihari: 6672	Galician: 7176	Kirghiz: 7589	Pashto, Pushto: 8083	Sundanese: 8385	Wolof: 8779
Breton: 6682	Georgian: 7565	Korean: 7579	Persian: 7065	Swahili: 8387	Xhosa: 8872
Bulgarian: 6671	German: 6869	Kurdish: 7585	Polish: 8076	Swedish: 8386	Yiddish: 7473
Burmese: 7789	Greek: 6976	Laotian: 7679	Portuguese: 8084	Tagalog: 8476	Yoruba: 8979
Byelorussian: 6669	Greenlandic: 7576	Latin: 7665	Punjabi: 8065	Tajik: 8471	Zulu: 9085
Cambodian: 7577	Guarani: 7178	Latvian, Lettish: 7686	Quechua: 8185	Tamil: 8465	
Catalan: 6765	Gujarati: 7185	Lingala: 7678	Rhaeto-Romance: 8277	Tatar: 8484	




## Clock settings

### Preparation

If you connect the unit through a cable TV box or DSS receiver (→page 41), tune to your local PBS station before starting auto clock setting. Use manual clock setting if auto clock setting does not work or if there is no local PBS channel in your area.


- 1 Press [SETUP] to show the menus.
- 2 Press [▲, ▼] to select “Set Up” and press [▶].

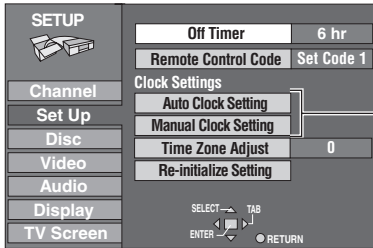

Proceed with the steps described below.

### Auto Clock Setting


- 3 Press [▲, ▼] to select “Auto Clock Setting” and press [ENTER].

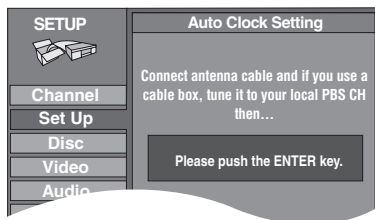

If you have not yet set channels, the “Auto Channel/Clock Setting” screen appears.

- 4 Press [ENTER].

Auto setting starts. This can take some time, up to a few hours in some cases. (To stop auto clock setting, press [RETURN].) The following screen appears when setting is complete. Press [ENTER].

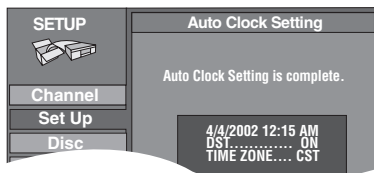


### Note

- If the time was not set correctly, use manual clock setting or time zone adjust.
- DST, Daylight Saving Time, shows the summertime setting.
- TIME ZONE shows the time difference from Greenwich meantime (GMT).  
EST=GMT -5, CST=GMT -6, MST=GMT-7, PST=GMT-8, AST=GMT -9, HST=GMT-10, For other areas: xx hr

### Manual Clock Setting

- 3 Press [▲, ▼] to select “Manual Clock Setting” and press [ENTER].

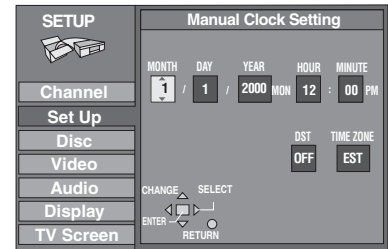

- 4 Press [◀, ▶] to select the item you want to change and press [▲, ▼] to change the setting.

MONTH↔DAY↔YEAR↔HOUR (12-hour display)  
↑→TIME ZONE↔DST↔MINUTE↔

DST (Daylight Saving Time): ON or OFF

If you select “ON”, the clock is advanced one hour starting at 2 a.m. on the first Sunday in April and ending at 2 a.m. on the last Sunday in October.

TIME ZONE:

EST↔CST↔MST↔PST↔AST↔HST  
(-5) (-6) (-7) (-8) (-9) (-10)

- 5 Press [ENTER].

The clock starts.

### Note


When you change the time zone, the recording times for programs recorded before the time zone was changed also change to correspond to the new time zone.

### Time Zone Adjust

Adjust the time zone (-1 or +1) if it was not set correctly with auto clock setting.

You cannot change this setting if you set the clock manually.

- 3 Press [▲, ▼] to select “Time Zone Adjust” and press [ENTER].

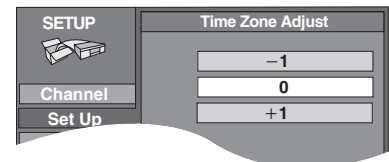

- 4 Press [▲, ▼] to select “-1”, “0”, or “+1” and press [ENTER].

The “Set Up” screen (→ step 2) reappears.

## Bitstream

This is the digital form of multi-channel audio data (e.g., 5.1 channel) before it is decoded into its various channels.

## CPRM (Content Protection for Recordable Media)

CPRM is the copyright protection technology that is used to protect broadcasts that are allowed to be recorded only once (e.g. some CATV broadcasts).

## Decoder

A decoder restores the coded audio signals on DVDs to normal. This is called decoding.

## Dolby Digital

This is a method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2-channel) audio, these signals can also be multi-channel audio. A large amount of audio information can be recorded on one disc using this method.

This unit is set to record using Dolby Digital in all recording modes.

## Dolby Pro Logic

A surround system where a 4-channel audio track is recorded as 2 channels and then is restored to 4 channels for play. The surround channel is monaural and can reproduce up to 7 kHz.

## DTS (Digital Theater Systems)

This surround system is used in many movie theaters around the world. There is good separation between the channels, so realistic sound effects are possible.

## Film and video

DVD-Videos are recorded using either film or video. Usually, film is recorded at 24 frames per second, the rate movies are filmed at, while video is recorded at 30 frames per second.

## Frame still and field still

Frames are the still pictures that go together to make a moving picture. There are about 30 frames shown each second.

One frame is made up of two fields. A regular television shows these fields one after the other to create frames.

A still is shown when you pause a moving picture. A frame still is made up of two alternating fields, so the picture may appear blurred, but overall quality is high.

A field still is not blurred, but it has only half the information of a frame still so picture quality is lower.

## Interlace and progressive output

NTSC, the video signal standard, has 480 interlaced (i) scan lines, whereas progressive scanning uses twice the number of scan lines. This is called 480p. The video signals output from this unit's COMPONENT VIDEO OUT terminals (Y, P<sub>B</sub>, P<sub>R</sub>) allow you to enjoy higher quality pictures than if the signals were output from the VIDEO OUT terminal or S-VIDEO OUT terminal.

## I/P/B

MPEG 2, the video compression standard adopted for use with DVD-Video, codes frames using these 3 picture types.

- I:** Intra coded picture  
This picture has the best quality and is the best to use when adjusting the picture.
- P:** Predictive coded picture  
This picture is calculated based on past I- or P-pictures.
- B:** Bidirectionally-predictive coded picture  
This picture is calculated by comparing past and future I- and P-pictures so it has the lowest volume of information.

## Linear PCM (pulse code modulation)

These are uncompressed digital signals. This unit outputs linear PCM sound in 2 channels from the DIGITAL AUDIO OUT terminals.

## Playback control (PBC)

If a Video CD has playback control, you can select scenes and information with menus.

## Pan&Scan/Letterbox

In general, DVD-Video are produced with the intention that they be viewed on a widescreen television with an aspect ratio of 16:9. This means you can view most material with the intended aspect ratio on a widescreen television.

Material with this ratio will not fit onto a standard television with an aspect ratio of 4:3. Two styles of picture, "Pan&Scan" and "Letterbox", deal with this problem.

**Pan&Scan:** The sides are cut off so the picture fills the screen.




**Letterbox:** Black bands appear at the top and bottom of the picture so the picture itself appears in an aspect ratio of 16:9.




## Disc handling

Do not use irregularly shaped discs, such as heart-shaped. (These can damage the unit.)

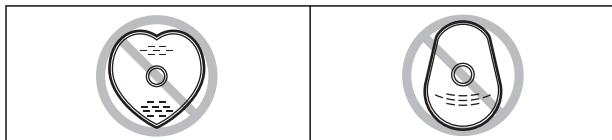

### How to hold a disc

Do not touch the recorded surface.

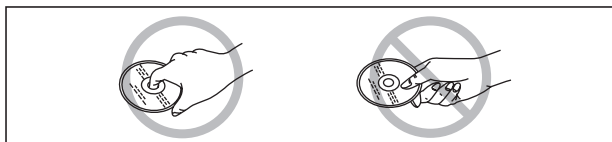

### If there is dirt or condensation on the disc

Moisture may condense on discs after they are brought inside from the cold.


### DVD-RAM and DVD-R

Clean only with the DVD-RAM/PD disc cleaner available.

Do not use cleaners or cloths for CDs to clean DVD-RAM and DVD-R.

### DVD-Video, Video CD, CD


Wipe with a damp cloth and then wipe dry.

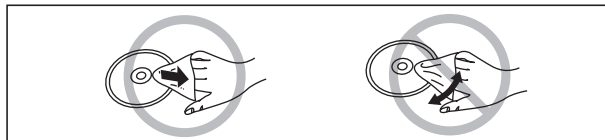

### Handling precautions

- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not attach labels or stickers to discs. (Do not use discs with exposed adhesive from tape or left over peeled-off stickers.)
- Do not use scratch-proof protectors or covers.
- Do not use discs printed with label printers available on the market.
- Do not use discs that are badly warped or cracked.

## On the television

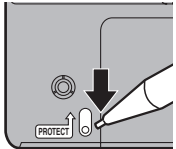		Page
<b>No disc.</b>	● You haven't inserted a disc. Correctly insert a disc that this unit can use.	11
	● The disc is upside down. If it is a single-sided disc, insert it so the label is facing up.	15
<b>This is non-recordable disc.</b>	● The unit cannot record on the disc you inserted. Insert a DVD-RAM or unfinalized DVD-R.	11
<b>This disc is not formatted properly. Please format the disc in 'DISC SETTING' to record.</b>	● You inserted an unformatted DVD-RAM. Format the disc with this unit.	34
<b>This disc cannot be read.</b>	● You inserted an incompatible disc.	11
<b>Please check write protect tab on the disc.</b>	<ul style="list-style-type: none"> <li>● The write-protect tab on the cartridge is set to PROTECT. Use a ballpoint pen or similar to release the write protection.</li> </ul> 	—
<b>Contents of this disc are protected.</b>	● The program is write-protected. Cancel the protection.	32
	● The disc is write-protected. Cancel Disc Protection.	34
<b>Cannot finish recording completely.</b>	● The program was copy-guarded.	—
	● No space left on the disc.	32
	→ Create space by erasing any unwanted programs. <b>RAM</b>	—
	→ Use a new disc. <b>RAM DVD-R</b>	—
<b>Cannot record on the disc.</b>	● Recording was not completed for some other reason.	—
	● The disc is scratched. Use another disc.	—
	● The disc is dirty.	50
<b>Disc is full.</b>	● You inserted an incompatible disc.	11
	<ul style="list-style-type: none"> <li>● No space left on the disc.</li> <li>→ Create space by erasing any unwanted programs. <b>RAM</b></li> <li>→ Use a new disc. <b>RAM DVD-R</b></li> </ul>	32
<b>Please set clock.</b>	● The clock is not set.	49
<b>This disc may not be played in your region.</b>	● You tried to play a disc with a region number different from this unit's region number. This unit can only play discs with the region numbers compatible with this unit (1, All, or including the number 1).	Cover page
<b>Your selection exceeds the recorder's rating limit.</b>	● A ratings level has been set for DVD-Video with this unit. Unlock the unit with "Ratings" in "Disc".	46
<b>Finalizing is necessary for compatible playback.</b>	● To enable playback of your DVD-R on compatible equipment, it is necessary to finalize it.	34
<b>Error has occurred. Please press [ENTER].</b>	● A serious, but temporary error has occurred and one of the unit's safety devices has activated. Press [ENTER]. The unit switches to the standby mode. Press [⏻, DVD POWER] to turn the unit on again.	—

## On the unit's display

<b>NO READ</b>	● The disc is dirty or badly scratched.	50
	→ Clean the disc if it is dirty.	—
	→ The disc cannot be played if it is scratched and this display doesn't disappear.	—
	● The unit cannot read the disc.	50
<b>UNSUPPORT</b>	● You have used a DVD-RAM/PD lens cleaner and it has finished.	50
	● You have inserted a disc the unit cannot play or record on.	11
<b>U14</b>	● The unit is hot.	—
	→ The unit switches to standby automatically for safety reasons and you cannot operate it. Wait for about 30 minutes for the service number to disappear.	—
	→ Select a position with good ventilation when installing the unit.	—
	→ Do not block the cooling fan on the rear of the unit.	—
<b>U99</b>	● The unit fails to operate properly. Press [⏻, DVD POWER] to switch the unit to standby. Now press [⏻, DVD POWER] again to turn the unit on.	—
<b>CHK REMOTE</b>	● The remote control and main unit are using different codes. Change the code on the remote control or main unit.	45
<b>RECOVER</b>	● There was a power failure or the AC plug was disconnected while the power was on. The unit is carrying out its recovery process. Wait until the message disappears.	—

# Troubleshooting guide

Before requesting service, make the below checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem:

**SAMSUNG ELECTRONICS AMERICA, INC. -SERVICE DIVISION 400 Valley Road, Suite 201, Mt Arlington, NJ 07856**  
**1-800-SAMSUNG (1-800-726-7864)**  
**www.samsungusa.com**

Power		Page
<b>No power.</b>	<ul style="list-style-type: none"> <li>● Insert the AC power supply cord securely into a known active AC outlet.</li> </ul>	<b>5</b>
<b>The unit switches to the standby mode.</b>	<ul style="list-style-type: none"> <li>● This is a power saving feature. You can turn it off if you would prefer (Set Up—Off Timer—Off). Press [⏻, DVD POWER] to turn the unit on.</li> <li>● One of the unit's safety devices may have activated. Press [⏻, DVD POWER] to turn the unit on.</li> </ul>	<b>46</b> —

## Operation

<b>The unit is on but cannot be operated.</b>	<ul style="list-style-type: none"> <li>● Some operations may be prohibited by the disc.</li> <li>● The unit is hot ("U14" appears on the display). Wait for "U14" to disappear.</li> <li>● One of the unit's safety devices may have activated. Reset the unit as follows:               <ol style="list-style-type: none"> <li>1. Press [⏻, DVD POWER] to switch the unit to standby. If the unit doesn't switch to standby, press and hold [⏻, DVD POWER] for about 10 seconds. The unit is forcibly switched to standby. Alternatively, disconnect the AC power supply cord, wait one minute, then reconnect it.</li> <li>2. Press [⏻, DVD POWER] to turn the unit on.</li> </ol> </li> </ul>	— <b>51</b> —
---	--	---------------------

## Picture

● When progressive output is on, refer also to "**Progressive video**" below.

<b>The images from this unit do not appear on the television.</b>	<ul style="list-style-type: none"> <li>● Make sure that the television is connected to the AUDIO/VIDEO terminal, S-VIDEO OUT terminal or COMPONENT VIDEO OUT terminal on this unit.</li> <li>● Make sure that the television's input setting (e.g., VIDEO 1) is correct.</li> <li>● You have set "TV Type" to "4:3 (480P)" or "16:9 (480P)" in the TV Screen menus, but the television isn't compatible with progressive signals. Press and hold [■] and [TIME SLIP] on the unit at the same time for about 5 seconds. The setting will change to interlace.</li> </ul>	<b>5</b> — —
<b>Television reception worsens after connecting the unit.</b>	<ul style="list-style-type: none"> <li>● This can occur because the signals are being divided between the unit and the television. It can be solved by using a signal booster, available from audio-visual suppliers. Consult your dealer if reception does not improve.</li> </ul>	—
<b>Screen size is wrong.</b>	<ul style="list-style-type: none"> <li>● Check the settings on your television.</li> <li>● Check the settings for "TV Type", "4:3 TV Settings for DVD-Video" or "4:3 TV Settings for DVD-RAM" in the TV Screen menu.</li> </ul>	— <b>10, 47</b>
<b>On-screen messages do not appear.</b>	<ul style="list-style-type: none"> <li>● Go to the Display menu and select "Automatic" for "Status Messages".</li> <li>● Press [STATUS] to show the on-screen messages constantly.</li> </ul>	<b>47</b> <b>39</b>
<b>The blue background does not appear.</b>	<ul style="list-style-type: none"> <li>● Go to the Display menu and select "On" for "Blue Background".</li> </ul>	<b>47</b>
<b>There is ghosting.</b>	<ul style="list-style-type: none"> <li>● Turn "MPEG-DNR" off if it is on.</li> </ul>	<b>38</b>
<b>Play stops for a moment during Quick View.</b>	<ul style="list-style-type: none"> <li>● Play may stop where two play lists join, but this is not a malfunction.</li> </ul>	—

## Progressive video

<b>There is ghosting when progressive output is on.</b>	<ul style="list-style-type: none"> <li>● Set "Progressive" to "OFF". This problem is caused by the editing method or material used on DVD-Video, but should be corrected if you use interlace output.</li> </ul>	<b>38</b>
<b>There is no apparent change in picture quality when adjusted with the Video menu in the on-screen menus.</b>	<ul style="list-style-type: none"> <li>● The effect is less perceivable with some types of video.</li> </ul>	—

## Sound

Page

<b>No sound.</b>	● Check the connections. Check the input mode on the amplifier if you have connected one.	<b>5,</b>
<b>Low volume.</b>		<b>41–43</b>
<b>Distorted sound.</b>	● Turn V.S.S. off if it causes distortion.	<b>37</b>
<b>Cannot hear the desired audio type.</b>	● Press [AUDIO] to select the desired audio type.	<b>23</b>
<b>Cannot switch audio during stereo or SAP broadcasts.</b>	● You have used digital connection. Set “Dolby Digital” to “PCM” or connect to other equipment using audio cables (analog connection). ● You cannot change the audio type when a DVD-R is in the disc tray.	<b>42, 47</b> <b>—</b>

## Play

<b>Play fails to start even when [▶] (PLAY) is pressed. Play starts but then stops immediately.</b>	● Insert the disc correctly with the label facing up.	<b>15</b>
	● This unit cannot play discs other than DVD-RAM, DVD-R, DVD-Video, Video CD, CD and MP3 discs.	<b>11</b>
	● The disc is dirty. Clean it.	<b>50</b>
	● The disc may be badly scratched.	<b>—</b>
	● You inserted a blank DVD-RAM or DVD-R.	<b>—</b>
	● Condensation has formed: Wait 1 to 2 hours for it to evaporate.	<b>—</b>
<b>A title or chapter doesn't play when it is selected.</b>	● Some titles and chapters on DVD-Video are not played when you have changed the ratings level.	<b>46</b>
<b>Picture distorted during search.</b>	● Some distortion is normal.	<b>—</b>
<b>Alternative soundtrack and subtitles cannot be selected.</b>	● The languages are not recorded on the disc.	<b>—</b>
	● You may have to use the disc's menus to select languages.	<b>17</b>
<b>No subtitles.</b>	● Subtitles are not recorded on the disc.	<b>—</b>
	● Turn the subtitles on.	<b>36</b>
<b>Angle cannot be changed.</b>	● This function depends on software availability. Angles can only be changed during scenes where different angles are recorded.	<b>—</b>
<b>You have forgotten your ratings password.</b>	● Return the ratings setting to “8”. While the disc tray is open, press and hold [◀◀/◀◀] and [▶▶/▶▶] on the main unit at the same time for 5 or more seconds.	<b>—</b>

## Displays

<b>The display is dim.</b>	● Go to the Display menu and change the display's brightness with “FL Display”.	<b>47</b>
<b>“12:00” is flashing on the unit's display.</b>	● The clock is not set.	<b>49</b>
<b>The displayed recording time and actual recording time differ.</b>	● Displayed recording time is based on the number of frames per second. This number is subject to minute variations. When recording over long periods, these variations may result in the difference between displayed recording time and actual recording time. This is normal.	<b>—</b>
<b>The display doesn't show the correct time. [MP3]</b>	● Times may not appear correctly when searching through tracks recorded with a variable bit rate.	<b>—</b>

## Remote control

<b>The remote control doesn't work.</b>	● [DVD, TV] is not switched to “DVD”. Switch to “DVD” when operating this unit.	<b>12</b>
	● The remote control and main unit are using different codes. Change the code on the remote control or main unit.	<b>45</b>
	● The batteries are depleted. Replace them with new ones.	<b>6</b>
	● Point the remote control at the remote control sensor on the main unit.	<b>6</b>
	● Remove obstacles from between the remote control and main unit.	<b>—</b>
<b>Cannot operate the television.</b>	● Change manufacturer code. Some televisions cannot be operated even if you change the code.	<b>10</b>
	● [DVD, TV] is not switched to “TV”. Switch to “TV” when selecting the receiving channel for the television.	<b>12</b>

## Recording and timer recording

Page

<b>Cannot record.</b>	• You haven't inserted a disc or the disc you inserted cannot be recorded on. Insert a disc the unit can record onto.	11
	• The disc is unformatted. Format the disc so this unit can record on it.	34
	• The write-protect tab on the cartridge is set to PROTECT.	11
	• Some programs have limitations on the number of times they can be recorded (CPRM).	14
	• The disc is protected with DISC SETTING.	34
	• The disc is full or nearly full. Erase unneeded programs or use another disc.	32
	• You cannot record on finalized DVD-R discs.	—
<b>VCR Plus+ programming does not work properly.</b>	• The guide channels are incorrect. Go to the Channel menu and correct them with "VCR Plus+ CH Setting".	8
	• The clock is wrong. Go to the Set Up menu and correct it with "Clock Settings".	49
<b>Timer recording does not work properly.</b>	• The timer program is incorrect. Correct the program.	26
	• The unit is not on timer recording standby. ("⊕" on the unit's display is not on.) Press [⏻, DVD POWER] to turn the unit off and make sure that "⊕" is on.	—
	• Different timer program times overlap.	—
	• The clock is wrong. Go to the Set Up menu and correct it with "Clock Settings".	49
<b>The unit switches to standby while making a timer recording.</b>	• The disc has run out of space. Use a disc that has enough space to record the program.	—
<b>The timer program remains even after recording finishes.</b>	• The program remains if you select "DAILY" or "WEEKLY".	25
<b>Timer recording does not stop even when [■] is pressed.</b>	• Press [■] and then [ENTER] within 5 seconds to turn "⊕" off. Recording stops.	—
<b>The available recording time doesn't increase even after erasing recordings on the disc.</b>	• As this unit is unable to erase data written to DVD-RAM with a computer, the available recording time does not increase. The data will be erased if you reformat the disc.	34
	• If the disc is dirty, wipe with the DVD-RAM/PD disc cleaner (optional) before formatting.	50
<b>A part or whole of a recorded program has been lost.</b>	• If there is a power failure or the plug is disconnected from the household AC outlet while recording or editing, the program may be lost or the disc may become unusable. → We cannot offer any guarantee regarding lost programs or discs. You will have to format the disc or use a new disc.	34

Discs make sounds as they rotate. This does not indicate a malfunction.

## Maintenance

The precision parts in this unit are readily affected by the environment, especially temperature, humidity, and dust. Cigarette smoke also can cause malfunction or breakdown.

To clean this unit, wipe with a soft, dry cloth.

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.

Observe the following points to ensure continued listening and viewing pleasure.

Dust and dirt may adhere to the unit's lens over time, making it impossible to record or play discs. Use every 1 to 4 months, depending on frequency of use and the operating environment. Read the lens cleaner's instructions carefully before use.

## Product Service

1. **Damage requiring service**—The unit should be serviced by qualified service personnel if:
  - (a) The AC power supply cord or AC adaptor has been damaged; or
  - (b) Objects or liquids have gotten into the unit; or
  - (c) The unit has been exposed to rain; or
  - (d) The unit does not operate normally or exhibits a marked change in performance; or
  - (e) The unit has been dropped or the cabinet damaged.
2. **Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.

3. **Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
4. **Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

### Product information

For product information or assistance with product operation:

**SAMSUNG ELECTRONICS AMERICA, INC. -CONSUMER ELECTRONICS CUSTOMER SERVICE**  
 400 Valley Road, Suite 201, Mt Arlington, NJ 07856  
 1-800-SAMSUNG (1-800-726-7864)  
[www.samsungusa.com](http://www.samsungusa.com)

# Specifications

<b>Recording system:</b>	DVD video recording standards (DVD-RAM), DVD video standards (DVD-R)
<b>Optical pick-up:</b>	System with 1 lens, 2 integration units (662 nm wavelength for DVDs, 790 nm wavelength for CDs)
<b>Recordable discs:</b>	12 cm (5") 4.7 GB DVD-RAM discs 12 cm (5") 9.4 GB DVD-RAM discs 8 cm (3") 2.8 GB DVD-RAM discs 12 cm (5") 4.7 GB DVD-R discs 8 cm (3") 1.4 GB DVD-R discs (for General Ver. 2.0)
<b>Recording time:</b>	Max. 6 hours (using 4.7 GB disc) XP: 60 minutes SP: 120 minutes LP: 240 minutes EP: 360 minutes
<b>Discs played:</b>	12 cm (5") 4.7 GB DVD-RAM discs 12 cm (5") 9.4 GB DVD-RAM discs 8 cm (3") 2.8 GB DVD-RAM discs 12 cm (5") 4.7 GB DVD-R discs 8 cm (3") 1.4 GB DVD-R discs (for General Ver. 2.0) DVD-VIDEO discs CD-Audio discs (CD-DA) Video CD discs CD-R/CD-RW discs (CD-DA, Video CD, MP3 formatted discs) <b>MP3</b> <ul style="list-style-type: none"> <li>● Maximum number of tracks and groups recognizable: 999 tracks and 99 groups</li> <li>● Compatible compression rate: between 32 kbps and 320 kbps</li> </ul>
<b>Video system</b>	
<b>TV system:</b>	NTSC system, 525 lines, 60 fields
<b>Recording system:</b>	MPEG2 (Hybrid VBR)
<b>Input:</b>	LINE (pin jack)×3, 1.0 Vp-p; 75 Ω S connector×3 Y: 1.0 Vp-p; 75 Ω C: 0.286 Vp-p; 75 Ω
<b>Output:</b>	LINE (pin jack)×1, 1.0 Vp-p; 75 Ω S connector×1 Y: 1.0 Vp-p; 75 Ω C: 0.286 Vp-p; 75 Ω
<b>Component video output (480P/480i):</b>	Y: 1.0 Vp-p; 75 Ω P <sub>B</sub> : 0.7 Vp-p; 75 Ω P <sub>R</sub> : 0.7 Vp-p; 75 Ω
<b>Antenna reception input:</b>	TV Channel: 2ch–69ch, 75 Ω CATV Channel: 1ch–125ch, 75 Ω

<b>Audio system</b>	
<b>Recording system:</b>	Dolby Digital (XP/SP/LP/EP)
<b>Input:</b>	LINE (pin jack)×3 Reference input: 309 mVrms FS: 2 Vrms (1 kHz, 0 dB) Input impedance: 47 kΩ
<b>Output:</b>	LINE (pin jack)×1 Reference output: 309 mVrms FS: 2 Vrms (1 kHz, 0 dB) Output impedance: 1 kΩ (Load impedance: 10 kΩ)
<b>Number of channels:</b>	Recording: 2 channels Playback: 2 channels
<b>Other input/output connectors:</b>	Digital audio optical output connector
<b>Operating temperature range:</b>	5 °C–40 °C (41 °F–104 °F)
<b>Operating humidity range:</b>	10 %–80 % RH (no condensation)
<b>Clock unit:</b>	Quartz-controlled 12-hour digital display
<b>LASER Specification</b>	
<b>Class /LASER Product</b>	
<b>Wave length:</b>	775–815 nm 655–666 nm
<b>Laser power:</b>	No hazardous radiation is emitted with the safety protection
<b>Power supply:</b>	AC 120 V, 60 Hz
<b>Power consumption:</b>	26 W
<b>Dimensions:</b>	Approx. 430 (W)×79 (H)×283 (D) mm [Approx. 16 <sup>15</sup> / <sub>16</sub> "(W)×3 <sup>1</sup> / <sub>8</sub> "(H)×11 <sup>3</sup> / <sub>16</sub> "(D)] (excluding protrusions)
<b>Mass:</b>	Approx. 3.7 kg (8.14 lbs)

**Power consumption in standby mode:** approx. 3.2 W

### Note

Specifications are subject to change without notice.  
Mass and dimensions are approximate.

## Limited Warranty (ONLY FOR U.S.A.)

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS AMERICA, INC.(SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for the following limited warranty period:

### One (1) Year Parts and Labor

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States, and does not include transportation, installation, removal or reinstallation. Warranty repairs must be performed by SAMSUNG's authorized service center. To receive warranty service, the original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation to and from service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge with new or reconditioned parts, if found to be defective during the limited warranty period specified above. The product must be returned during the warranty period with transportation charges prepaid to SAMSUNG's designated service center. Prior to returning any product for warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. SAMSUNG does not warrant uninterrupted or error-free operation of the product. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to : damage which occurs in shipment; application and uses for which this product was not intended; failures or problems which are caused by products or equipment not supplied by SAMSUNG; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; improper connection with any peripheral; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating instructions, customer adjustments, maintenance and environmental instructions that are covered and prescribed in the instruction book; use of non-SAMSUNG or unauthorized parts, supplies, accessories or equipment which damage this product or result in service problems; failures or problems due to incompatibility with other equipment.



# Limited Warranty (ONLY FOR CANADA)

Samsung Electronics Canada Inc.(SECA), warrants that this product is free from defective material and workmanship.

SECA further warrants that if this product falls to operate properly within the specified warranty period and the failure is due to improper workmanship or defective materials, SECA will repair or replace the product at its option.

All warranty repairs must be performed by a SECA Authorized Service Center.(The name and address of the location nearest you can be obtained by calling toll free : 1-800-SAMSUNG)

## LABOR

---

**One year (Carry-in)**

## PARTS

---

**One year**

On carry-in models, transportation to and from the service center is the customer's responsibility.

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to the authorized service center at the time service is requested.


## EXCLUSIONS (WHAT IS NOT COVERED)

This warranty does not cover damage due to accident, fire, flood and/ or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use or damage that occurs in shipping. Exterior and interior finish, lamps, glass are not covered under this warranty. Customer adjustments which are explained in the instruction manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in Canada.


### HEADQUARTERS

SAMSUNG ELECTRONICS CANADA, INC.  
7037 FINANCIAL DRIVE MISSISSAUGA, ONTARIO L5N 6R3 CANADA  
FABRIQUE EN CORÉE  
TEL: 1-905-542-3837  
www.samsung.ca

## Conexiones del televisor y de la antena

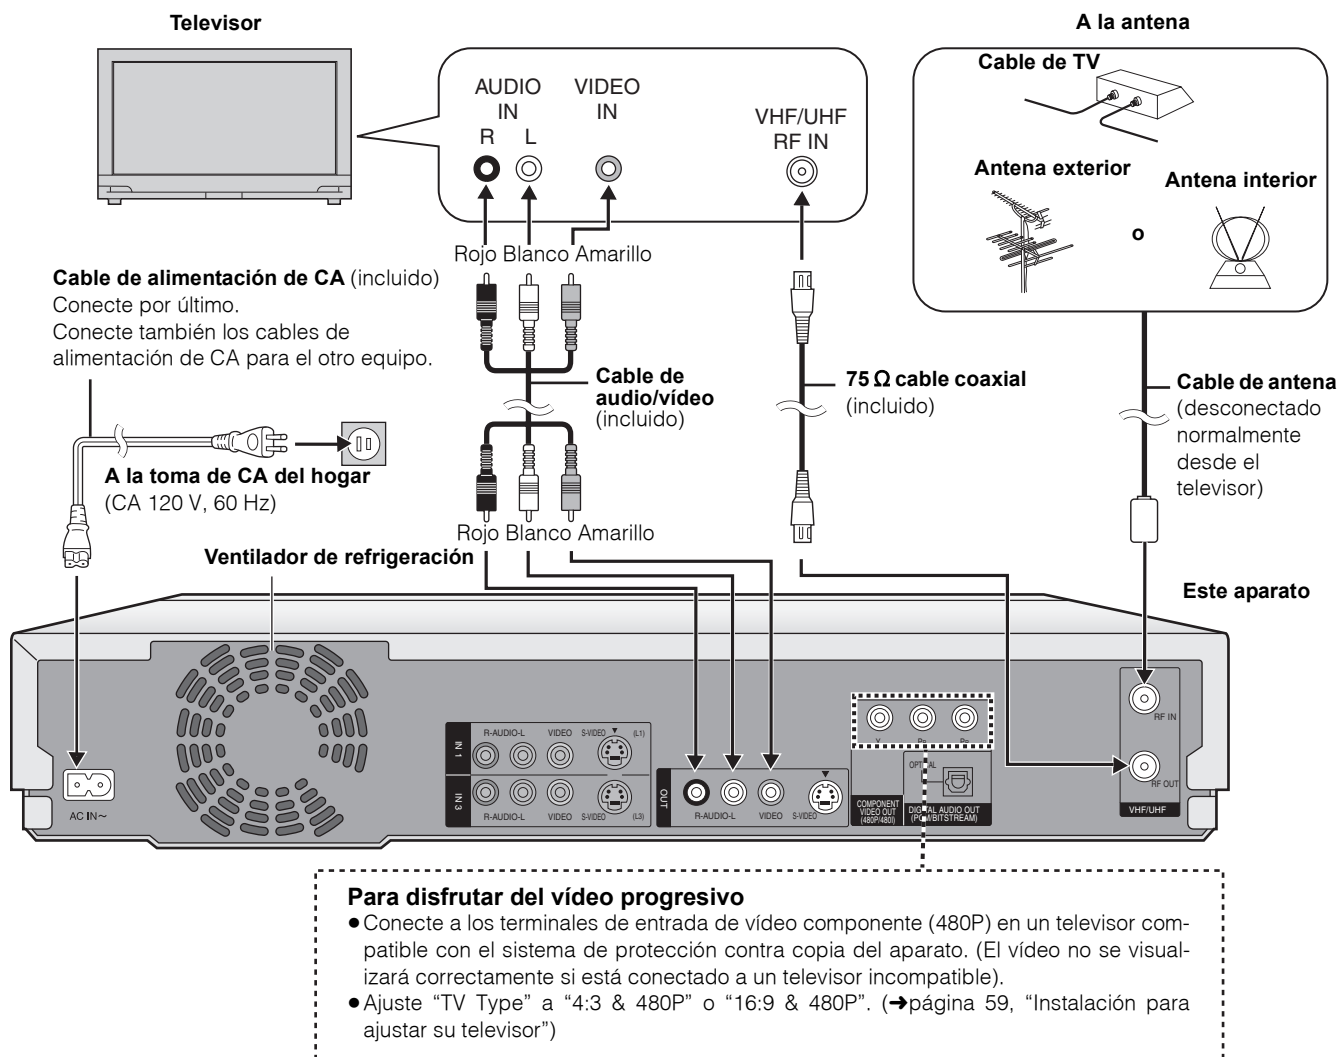

Español

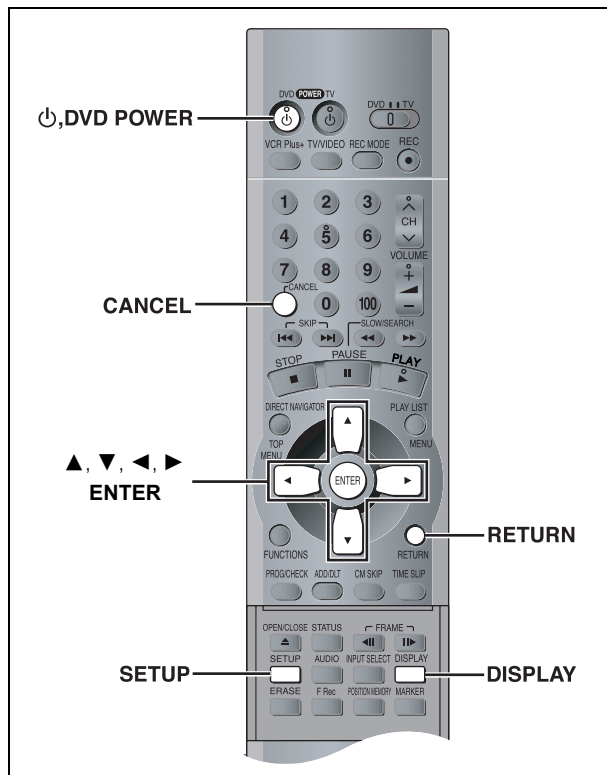

### Preparación

- Confirme que la antena esté conectada correctamente.
- Encienda el televisor y seleccione en él la entrada de vídeo apropiada para ajustar las conexiones realizadas al aparato.

### Plug-in para Sintonización automática

- 1** Pulse [**⏻**, DVD POWER] para encender el aparato.
- 2** Pulse [**▲**, ▼] para seleccionar "Español" y pulse [ENTER].
- 3** Pulse [ENTER].  
Se activa el plug-in para la Sintonización automática y el aparato transforma las emisoras que puede recibir en canales.
- 4** Cuando el visualizador muestre la hora correcta Pulse [ENTER] para desactivar el plug-in para Sintonización automática.

## Guía VCR Plus+ para ajuste de canales

Ajuste esta guía de canales de manera que pueda utilizar los códigos + VCR Plus para la grabación con temporizador.

- 1 Pulse [SETUP] para visualizar los menús.**
- 2 Pulse [▲, ▼] para seleccionar “Canal” y pulse [▶].**
- 3 Pulse [▲, ▼] para seleccionar “VCR Plus+ Ajuste canal” y pulse [ENTER].**
- 4 Pulse [▲, ▼] para seleccionar la guía de canales que desea ajustar y pulse [▶].**
  - Compruebe en las guías de televisión las guías de canales para las emisoras.
  - Al seleccionar la guía de canales, pulse y mantenga pulsado [▲, ▼] para desplazar la pantalla hacia arriba y hacia abajo.
- 5 Pulse [▲, ▼] para seleccionar el canal correspondiente a la guía de canales y pulse [◀].**
  - Compruebe en las guías de televisión el número de canal para las emisoras.
  - Para borrar un número, pulse [CANCEL].
  - Repita los pasos 4 y 5 si es necesario.
- 6 Pulse [ENTER].**

Vuelve a aparecer la pantalla del paso 2.

### Para volver a la pantalla anterior

Pulse [RETURN].

### Cuando haya finalizado

Pulse [SETUP].

## Instalación para ajustar su televisor

### Cambie los ajustes si su televisor es:

- De pantalla panorámica (relación del ancho a la altura de la imagen 16:9)
- Progresivo
  - Si desea información más detallada, lea el manual de instrucciones de su televisor.

- 1 Pulse [SETUP] para visualizar los menús.**
- 2 Pulse [▲, ▼] para seleccionar “Pantalla TV” y pulse [▶].**
- 3 Pulse [▲, ▼] para seleccionar “Tipo TV” y pulse [ENTER].**
- 4 Pulse [▲, ▼] para seleccionar el elemento y pulse [ENTER].**

### Para volver a la pantalla anterior

Pulse [RETURN].

### Cuando haya finalizado

Pulse [SETUP].

### Si selecciona el elemento para salida progresiva (480P)

Seleccione Vídeo en el menú en pantalla y ajuste “Transferencia” de acuerdo con el tipo de material en reproducción durante la reproducción.

Durante la reproducción

1. Pulse [DISPLAY].
2. Pulse [▲, ▼] para seleccionar “Vídeo” y pulse [▶].
3. Pulse [▲, ▼] para seleccionar “Progresiva” y pulse [▶] dos veces.
4. Pulse [▲, ▼] para seleccionar “Transferencia” de acuerdo con el tipo de material en reproducción.

Disco	Imagen	Normal
Repr.	DNR	ACT
Vídeo	Progresiva	ACT
Audio	Transferencia	Auto 1



**Auto1 (normal):** Para material cinematográfico

**Auto2:** Para material cinematográfico (igual que Auto1, capaz de convertir vídeo progresivo de 30 cuadros por segundo).

**Vídeo:** Para material de vídeo

### Note

- Si el aparato está conectado al TV a través de VIDEO OUT o S-VIDEO OUT, la salida se entrelaza sólo (incluso al seleccionar la salida progresiva).
- Cuando la salida progresiva está activada, no se pueden visualizar encabezamientos cerrados.

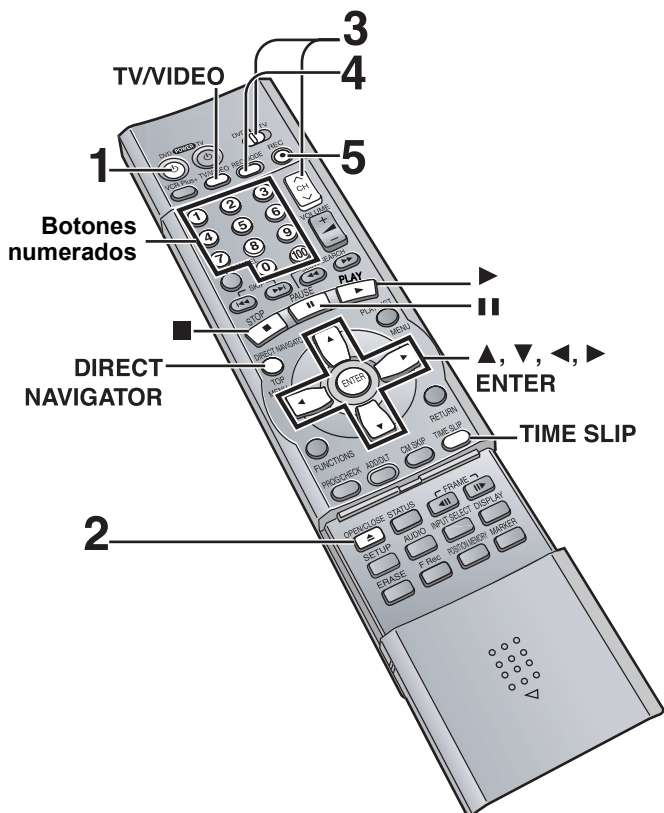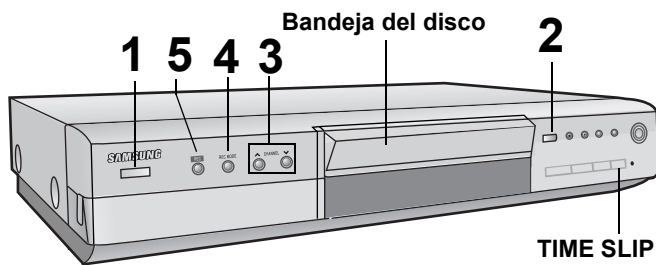

## RAM DVD-R

 
- 1 Pulse [⏻, DVD POWER] para encender el aparato.
- 2 Pulse [▶ OPEN/CLOSE] para abrir la bandeja e introduzca un disco (→ siguiente página).
  - Vuelva a pulsar el botón para cerrar la bandeja.
  - En un disco de doble cara, no es posible grabar de manera continua desde una cara a la otra. Será necesario expulsar el disco y darle la vuelta.
- 3 Asegúrese de que [DVD, TV] se encuentre en la posición "DVD" y pulse [^, v, CH] para seleccionar el canal.

por ejemplo., al seleccionar el canal 4



- 4 Pulse [REC MODE] para seleccionar el modo de grabación (→ siguiente página).

por ejemplo., al seleccionar "XP"



- 5 Pulse [●, REC] para iniciar la grabación.



## Para detener la grabación

Pulse [■].

## Para hacer una pausa en la grabación

Pulse [⏸]. Vuelva a pulsar para reanudar la grabación.

## Apagado automático

El aparato pasa al modo en espera después de aproximadamente 6 horas en el modo de parada. Puede desactivar esta función o cambiar el tiempo a 2 horas en el Temporizador de desconexión del Menú de instalación.

### Note

- Durante la grabación no se pueden cambiar ni el canal ni el modo de grabación.
- Suelte la protección durante la grabación. **RAM**
- Al utilizar un soporte DVD-RAM por primera vez con este aparato, formateélo y asegúrese de que la grabación sea precisa.
- En la grabación en DVD-R hay limitaciones.
- Durante la grabación de sonido MTS en DVD-R, únicamente se puede grabar o el canal principal o el subcanal. Seleccione en "Select MTS" del Menú de audio.

## Para su referencia


- Puede grabar hasta 99 programas en un disco.
- Este aparato es compatible con el sistema **Content Protection for Recordable Media (CPRM)** de manera que se pueden grabar emisiones que permitan realizar una copia, como algunas emisiones CATV, en 4.7 GB/9.4 GB DVD-RAM (éstas son compatibles con CPRM). No es posible grabar en DVD-R ni 2.8 GB DVD-RAM.
- La grabación se realizará en el espacio libre del disco. Los datos no se sobrescribirán.

**Si se aflojase accidentalmente el cable de alimentación de CA o si se interrumpiese la alimentación por alguna otra razón durante la grabación o edición, podría perderse el contenido del disco.**

## Introducción de discos

### RAM DVD-R

Puede introducir un disco con o sin estuche.

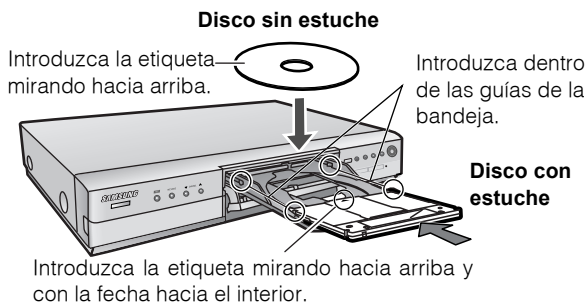

### Note

- Cargue discos de doble cara de manera que la etiqueta de la cara que desee grabar/reproducir quede mirando hacia arriba.
- Al utilizar DVD-RAM de 8 cm (3"), retire el disco del estuche e introdúzcalo, asegurándose de que quede alineado con la ranura.

## Modos de grabación y tiempo de grabación aproximado en horas

Disco	DVD-RAM		DVD-R (4.7 GB)
	De una sola cara (4.7 GB)	De doble cara (9.4 GB)	
XP (Alta calidad)	1	2	1
SP (Normal)	2	4	2
LP (Disco de larga duración)	4	8	4
EP (Disco de extra larga duración)	6	12	6

## Visualización del televisor durante la grabación

### RAM DVD-R

Las imágenes siendo grabadas no se ven afectadas. Interruptor [DVD, TV] a "TV".

- ① **Pulse [TV/VIDEO] para cambiar el modo de entrada del televisor a "TV".**
- ② **Pulse [▲, ▼, CH] para cambiar canales.**
  - También puede seleccionar el canal con los botones numerados.  
por ejemplo., "5": [0] → [5]  
"15": [1] → [5]  
"115": [100] → [1] → [5]

## Reproducción durante la grabación

### RAM

### Reproducción desde el inicio del programa que está grabando—Reproducción encadenada

#### Pulse [▶] (PLAY).

La reproducción se inicia desde el principio del programa que se está grabando. (Se enciende el indicador Time Slip).

### Grabación y reproducción simultáneas

Puede reproducir un programa grabado previamente.

- 1 **Durante la grabación**  
**Pulse [DIRECT NAVIGATOR].**  
Se enciende el indicador Time Slip.
- 2 **Pulse [▲, ▼] para seleccionar un programa y pulse [ENTER].**


### Revisión de imágenes grabadas durante la reproducción—Time Slip

Puede reproducir el programa que se está grabando para comprobar que se está grabando correctamente. También puede comprobar las partes que se han grabado previamente.

- 1 **Pulse [TIME SLIP].**  
Se enciende el indicador Time Slip.  
La reproducción se inicia a partir de los 30 segundos anteriores. Las imágenes que se están grabando en ese momento se muestran como imágenes dentro de imágenes y podrá escuchar el audio de reproducción.
- 2 **Pulse [▲, ▼] para introducir la hora y pulse [ENTER].**
  - Pulse [TIME SLIP] para mostrar las imágenes de reproducción enteras. Vuelva a pulsar para mostrar las imágenes de reproducción y grabación.

### Para detener la reproducción y la grabación

- ① **Pulse [■].** (La reproducción se detiene).  
Espere 2 segundos.
- ② **Pulse [■].** (La grabación se detiene).
  - Para detener la grabación con temporizador, pulse [■], después [ENTER] en un transcurso de 5 segundos.

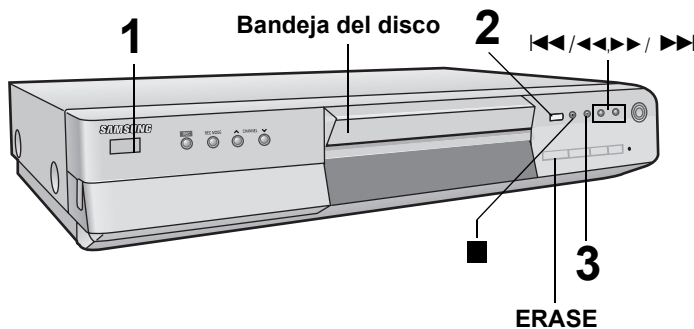

RAM DVD-R DVD-V VCD CD MP3

**1** Pulse [⏻, DVD POWER] para encender el aparato.

**2** Pulse [▲ OPEN/CLOSE] para abrir la bandeja e introducir un disco (→ página 61).


- Vuelva a pulsar el botón para cerrar la bandeja.
- Si está activada la protección del estuche, pulsando [▲ OPEN/CLOSE] se iniciará automáticamente la reproducción. **RAM**
- En un disco de doble cara, no es posible reproducir de manera continua desde una cara a la otra. Será necesario expulsar el disco y darle la vuelta.

**3** Pulse [▶] (PLAY).

El aparato tarda algún tiempo en leer el disco antes de iniciar la reproducción. (Cuando aparece una pantalla de menús en el televisor → siguiente página)



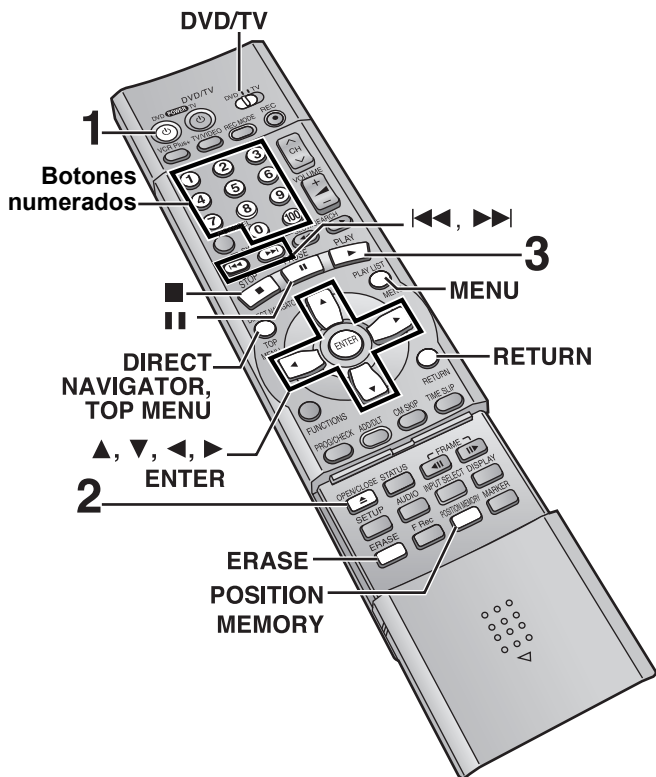

- Si la función de reanudación (→ más abajo, Para detener la reproducción) no está activa, la reproducción se iniciará desde el programa grabado más recientemente.



## Para detener la reproducción

Pulse [■].

- Cuando "PLAY" parpadea en el visualizador, se está activando la función de reanudación. Pulse [▶] (PLAY) para iniciar la reproducción desde la posición en que la detuvo. 
- Para cancelar la función, pulse [■] hasta que se apague "PLAY" (también se cancela la posición al apagar el aparato o abrir la bandeja del disco).
- Al detener la reproducción puede que aparezca el salvapantallas en el lado derecho. Vuelva a pulsar [■] y podrá utilizar el sintonizador del aparato para ver el televisor. 

## Para hacer una pausa en la reproducción

Pulse [⏸]. (Vuelva a pulsar para reanudar la reproducción).

## Apagado automático

El aparato pasa al modo en espera después de aproximadamente 6 horas en el modo de parada. Puede desactivar esta función o cambiar el tiempo a 2 horas en el Temporizador de desconexión del Menú de instalación.

## Note

- Si se carga un disco, se pondrá en marcha el aparato y se iniciará la reproducción al pulsar [▶] (PLAY).
- Al reproducir un disco con una sola pista de audio, puede que se siga mostrando el vídeo del disco anterior en el televisor.
- Los niveles reales de sonido para DVD de Vídeo son inferiores en relación a la emisión de televisión o a la reproducción de otros discos. Para evitar una subida repentina del volumen al conectar desde DVD de Vídeo, reduzca el ajuste de volumen antes de reproducir otras fuentes o conectar la emisión de televisión.

## Cuando aparece una pantalla de menús en el televisor

### VCD

Interruptor [DVD, TV] a "DVD" y

**Pulse los botones numerados (0, 1–9) para seleccionar un elemento.**

por ejemplo., "5": [0] → [5]

"15": [1] → [5]

### DVD-V

**Pulse [▲, ▼, ◀, ▶] para seleccionar un elemento y pulse [ENTER].**

• Puede que también sea posible utilizar los botones numerados (0, 1–9) para seleccionar un elemento.

**Otros botones utilizados para activar menús**

Si desea más información sobre el funcionamiento, lea las instrucciones de los discos.

[▶▶][▶▶/▶▶]: Muestra el siguiente menú.

[◀◀][◀◀/◀◀]: Muestra el menú anterior.

[RETURN]: Muestra la pantalla de menús. **VCD**

[TOP MENU]: Muestra la primera pantalla de menús. **DVD-V**

[MENU]: Muestra la pantalla de menús. **DVD-V**

### Note

- Los discos siguen girando mientras se muestran los menús. Pulse [■] una vez finalizada la visualización para mantener en buen estado el motor del aparato y la pantalla del televisor.
- Si aparece "⊘" en el televisor, la unidad o disco impiden el funcionamiento.
- Las funciones disponibles varían de un disco a otro.

## Memoria de posición

### RAM DVD-R DVD-V VCD CD MP3

Después de apagar el aparato, puede iniciar la reproducción desde una posición memorizada.

(Cuando se muestra el tiempo de reproducción transcurrido).

**1 Durante la reproducción**  
**Pulse [POSITION MEMORY].**

**2 Después de pasar el aparato a la posición de modo en espera y de volver a ponerlo en funcionamiento**  
**Pulse [▶] (PLAY).**

La reproducción se inicia desde la posición memorizada. (La posición se cancela).

### Note

#### DVD-R DVD-V VCD CD MP3

• La posición se cancela al abrir la bandeja del disco.

#### RAM

- Los posiciones siguen estando memorizadas incluso tras haber abierto la bandeja del disco.
- Si el disco está protegido contra escritura, no se pueden marcar posiciones.

**Para su referencia**

Si pulsa [■] antes de pasar el aparato a la posición de modo en espera después de pulsar [POSITION MEMORY] para memorizar una posición, se reanudará la reproducción desde la posición pulsada [■] al pulsar [▶] (PLAY).


## Utilización del Navegador directo

### RAM DVD-R

Al grabar una serie de programas, se crea un lista. Puede utilizar esta lista para encontrar programas para su visualización.

**1 Pulse [DIRECT NAVIGATOR].**

El programa resaltado se reproduce de fondo.

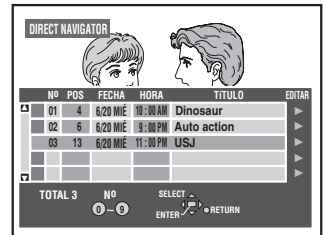

**2 Pulse [▲, ▼] para seleccionar el programa y pulse [ENTER].**

• También puede seleccionar programas con los botones numerados.

por ejemplo., "5": [0] → [5]

"15": [1] → [5]

La reproducción de las imágenes que se estaba reproduciendo de fondo continúa.

**Para detener la reproducción**

Pulse [■].

**Para cancelar la lista de programas**

Pulse [DIRECT NAVIGATOR].

### Sobre la lista de programas

#### Protección contra escritura

Se visualiza cuando se ha protegido el programa.

#### Protección contra copia


Se visualiza cuando se ha grabado un programa que dispone de protección contra copia, de emisiones CATV, por ejemplo.

#### Incapaz de reproducir

Se visualiza si no es posible reproducir el programa.

#### Grabación en proceso

Se visualiza cuando el programa se está reproduciendo.

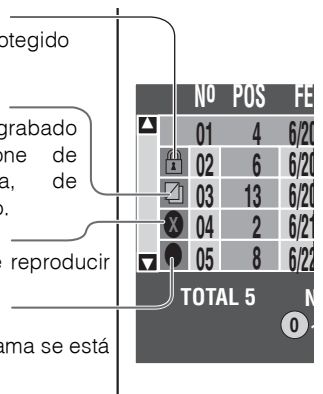

## Para borrar un programa que se está reproduciendo

**Ya que el programa borrado con este procedimiento no se puede recuperar, debería asegurarse de que desea borrarlo antes de realizar la operación.**

**1 Pulse [ERASE].**

Se visualizará una pantalla de confirmación.

**2 Pulse [◀] para seleccionar "Borrar" y pulse [ENTER].**

• En el aparato principal, pulse [◀◀◀] y [ERASE].

### Note

• No es posible borrar el programa al realizar una grabación y reproducción simultáneas (→ página 61). **RAM**

• La cantidad de espacio que queda en el disco no aumenta incluso al borrar programas. **DVD-R**

# Index

<b>Angle</b> .....	36	<b>Finalize</b> .....	34	<b>Ratings password</b> .....	46
<b>Antenna system</b> .....	7	<b>Flexible Recording (FR)</b> .....	15, 23	<b>Recording mode</b> .....	15
<b>Audio attribute</b> .....	36	<b>Format DVD-RAM</b> .....	34	<b>Re-initialize setting</b> .....	46
<b>Channel caption</b> .....	9	<b>FUNCTIONS menu</b> .....	23	<b>Repeat play</b> .....	37
<b>Channel setting</b> .....	9	<b>Language code list</b> .....	48	<b>Resume function</b> .....	16
<b>Chasing play</b> .....	22	<b>Marker</b> .....	20	<b>SETUP menu</b> .....	48
<b>Cleaning</b>		<b>MPEG-DNR</b> .....	38	<b>Shorten Segment</b> .....	32
disc .....	50	<b>MP3</b> .....	21	<b>Simultaneous rec and play</b> .....	22
lens .....	54	<b>On-screen display</b> .....	39	<b>Sound track</b> .....	36
main unit .....	54	<b>On-screen menu</b> .....	36	<b>Subtitle</b> .....	36
<b>Clock setting</b> .....	49	<b>PCM Down Conversion</b> .....	47	<b>Time Slip</b> .....	19, 22
<b>CM Skip</b> .....	18	<b>Picture</b> .....	38	<b>Timer recording</b> .....	24–26
<b>Connection</b>		<b>PLAY FROM TOP</b> .....	23	<b>Transfer</b> .....	38
amplifier, system component .....	42	<b>Play list</b> .....	28, 30	<b>TV Type</b> .....	10
antenna .....	44	<b>Position memory</b> .....	17	<b>VCR Plus+</b>	
antenna, television .....	5	<b>Progressive</b> .....	5, 10, 38, 50	guide channel .....	8
cable TV box, satellite receiver .....	41	<b>Properties</b>		timer recording .....	24
video equipment .....	43	play list .....	30	<b>V.S.S.</b> .....	37
<b>CPRM system</b> .....	50	program .....	32		
<b>Dialog Enhancer</b> .....	37	<b>Protection</b>			
<b>Direct Navigator</b> .....	17	cartridge .....	11		
<b>Divide Program</b> .....	32	disc .....	34		
<b>Edit Scenes</b> .....	30	program .....	32		
<b>Enter title</b>					
disc .....	34				
play list .....	30				
program .....	24, 32				
<b>Erase</b>					
all program .....	34				
play list .....	29, 30				
play list scene .....	29, 31				
program .....	17, 32				

## Índice

<b>Reproducción encadenada</b> .....	61	<b>Modo de grabación</b> .....	61
<b>Conexión</b>		<b>Función de reanudación</b> .....	62
antena, televisor .....	58	<b>Grabación y reproducción simultáneas</b> .....	61
<b>Navegador directo</b> .....	63	<b>Time Slip</b> .....	61
<b>Borrar</b>		<b>Tipo TV</b> .....	59
programa .....	63	<b>VCR Plus+</b>	
<b>Memoria de posición</b> .....	63	guía de canales .....	59
<b>Progresivo</b> .....	58		

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.