
Philips Portable DVD Player PET7402A

Quick start guide

Prepare (for in-car use)


- 1 Attach the main unit and the second screen to the back of the front seat headrests.
- 2 Connect the supplied AV cable to the AV OUT jack on the main unit and the AV IN jack on the second screen.
- 3 Connect the supplied car adaptor cable to the DC IN jacks on the main unit and the second screen, and to the car cigarette lighter socket.

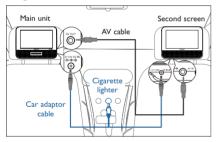

Prepare (for domestic use)

Connect additional equipment (TV for example)

- Connect the AV OUT socket on the main unit to the video and audio sockets on a TV as shown directly.
- 2 Connect the AC adaptor cable to the DC IN Jack on the main unit and the power outlet.

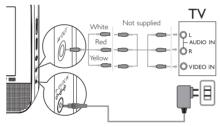

- **3** Switch on the TV and set to the correct video-in channel.
 - → You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

² Enjoy



- 1 Slide the **ON/OFF** switch to **ON** to switch on the main unit.
- 2 Slide **OPEN** ▶ on the main unit.
- **3** Remove the protective card (if any) and load a disc with the label side facing up.
- 4 Close the disc compartment.
 - → Playback will start automatically. If not, press ►II/OK.
- 5 To stop playback, press ■.

Note:

During play, you can:

- Press OPTION to select some play options: audio, subtitle, repeat, and time display.
- Press BRIGHTNESS on the main unit or rotate BRIGHTNESS -/+ on the second screen to adjust brightness of screen to match lighting conditions.

