

⚠️ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution:

- Be sure power is not connected **BEFORE** installing the receiver.
- To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:
- **ALWAYS** keep remote controls out of reach of children. **NEVER** permit children to operate, or play with remote control transmitters.
 - Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
 - **ALWAYS** keep gate or garage door in sight until completely closed. **NEVER** permit anyone to cross path of moving gate or door.

INSTALLATION

- Unplug the opener before proceeding.
- **OPEN RECEIVER:** Insert a small screwdriver in slot on receiver front panel as shown. Twist up actuator cover.
- **CONNECT RECEIVER AND OPENER:** Remove about 1/4" (6 mm) of insulation from each end of the 2-strand bell wire. Connect one end to the receiver screw terminals (polarity is **NOT** required). Route wire along the channels and out the bottom as shown.
- Connect the other end of the bell wire to the two opener terminals labeled "2" (white) and "1" (red), "common" and "command" or the terminals used for the push button control.
- Use insulated staples to secure bell wire between receiver and opener. Length of bell wire depends on where the receiver will be installed. Replace actuator cover.
- Choose a 120Vac polarized outlet for the receiver which is **OUT OF THE REACH OF CHILDREN**. **Plug receiver into selected outlet. Return power to the opener.**

PROGRAMMING THE REMOTE TO THE RECEIVER

With Security+®, the code between the remote control and the receiver changes with each use, accessing over 100 billion new codes.

You can activate your opener with up to 8 Security+® remote controls and one Security+® Keyless Entry.

1. Pry open the front panel of receiver case with a screwdriver. Re-connect power to opener.
2. Press and release the "SMART" actuator on the receiver. The "SMART" indicator light will glow steadily for 30 seconds.
3. Within 30 seconds, press and hold the button on the hand-held remote that you wish to operate your garage door.

The opener will now operate when either the receiver actuator or the remote control push button is pressed.




Repeat Steps 2 and 3 for each remote control that will be used to operate the garage door opener.

TO ERASE ALL REMOTE CONTROL CODES

Press and hold the "SMART" actuator on the receiver panel until the indicator light turns off (about 6 seconds). All transmitter codes are now erased. Then follow the steps above to reprogram each remote control.

NOTICE TO U. S. CONSUMERS:

Some states prohibit the service or repair of garage door openers which cannot be made to comply with the safety standards contained in UL 325 (1988 revision). In order to comply with both the letter and the spirit of these laws, this universal radio control should not be used with any LiftMaster®, Chamberlain®, or Sears Craftsman® garage door opener manufactured prior to April 1, 1982. To find out if your Chamberlain-made garage door opener was manufactured prior to or after April 1, 1982, please call 1-800-528-9131 before installing this universal radio control.

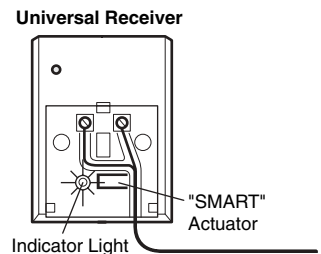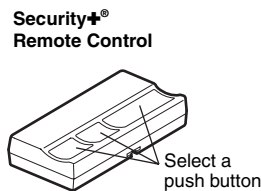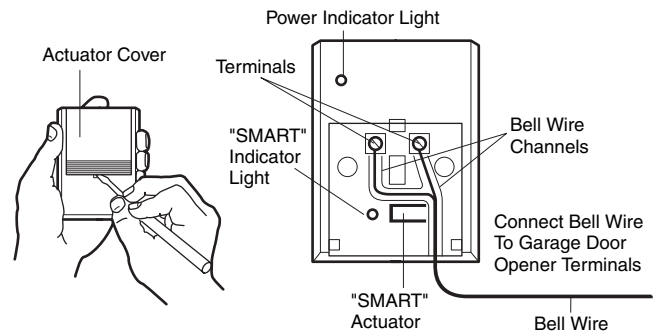

NOTICE: To comply with FCC and or Industry Canada (IC) rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. **THERE ARE NO OTHER USER SERVICEABLE PARTS.**

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Replacement Parts

3-Button remote control953D
Visor clip29C137
3V2032 Lithium battery10A20
Owner's manual114A3103
Owner's manual - Spanish114A3103SP