



CREATOR

31013



3 IN **1**



 
31020



31022



31025

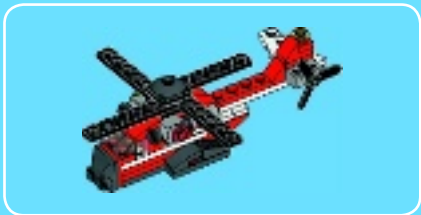

1



2



 
3



4



5

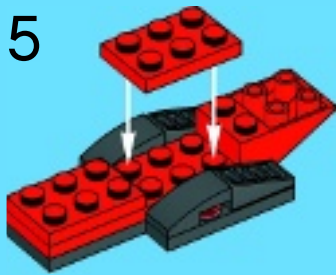

6



7



8



9



10

 





1



2

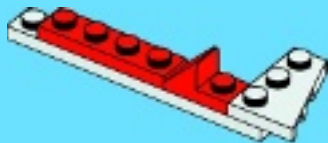


3

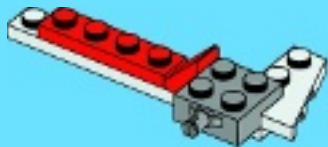 

4



 5

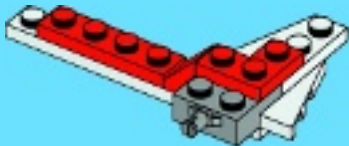


1




2



 
6

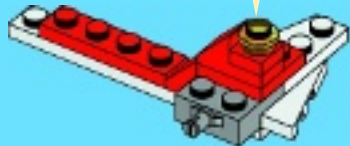


11

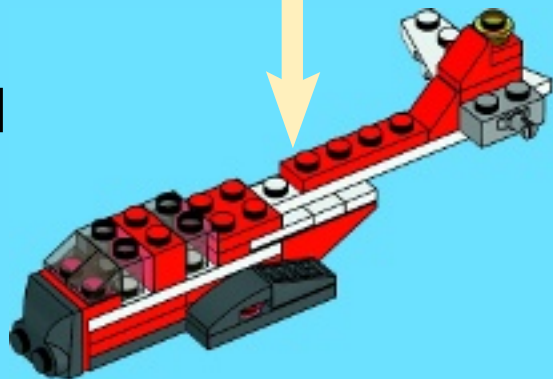 

12

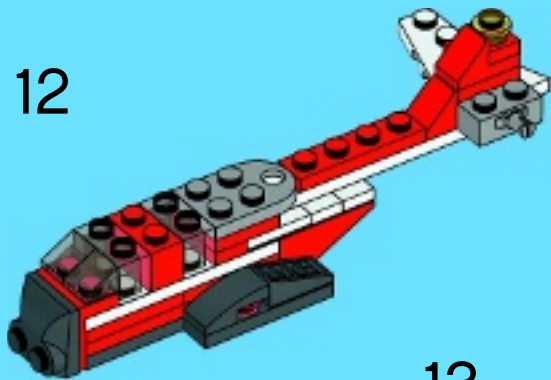 

13

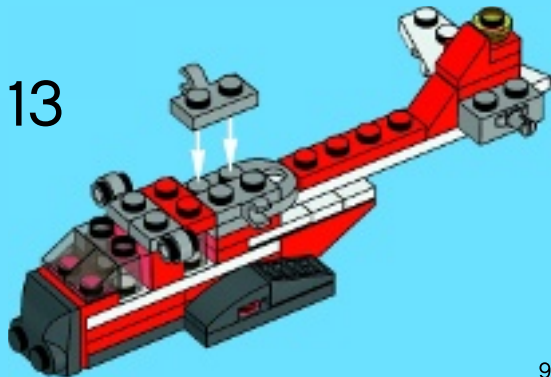 

14



1

 


2




2x

15

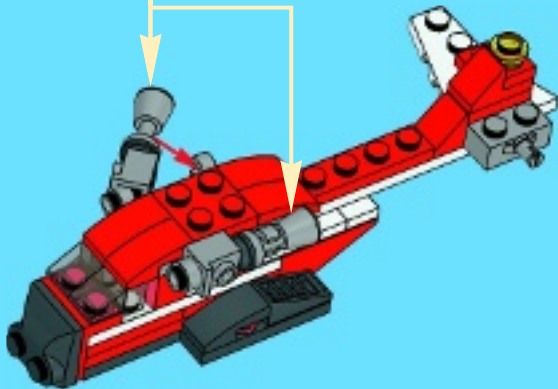


16

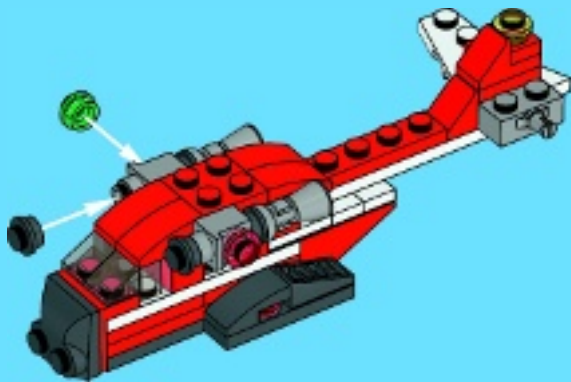 


17



 18

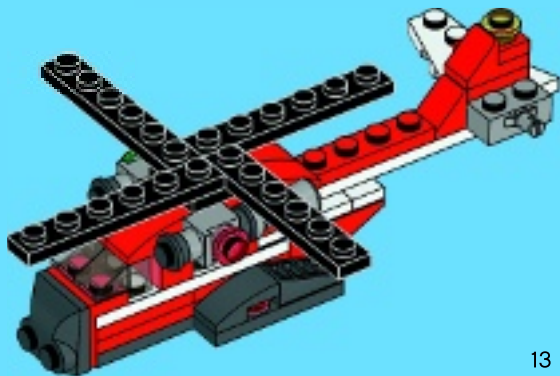


19

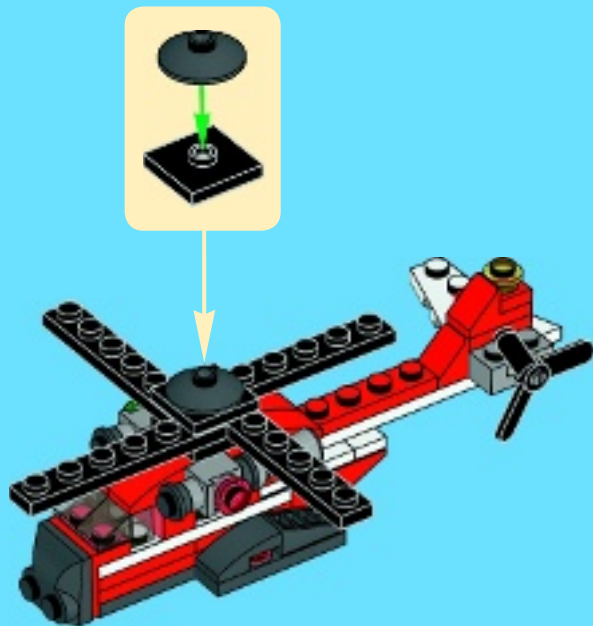 





1

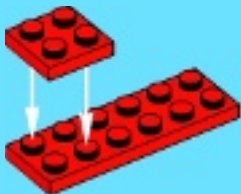 

2

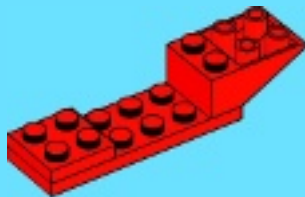 

3

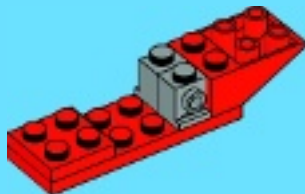 



1



2



3



 
4



5



4

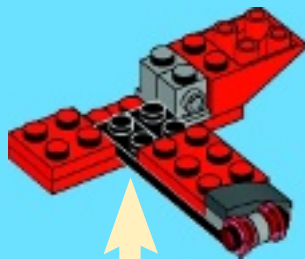



1



2



3



 
4





5




5

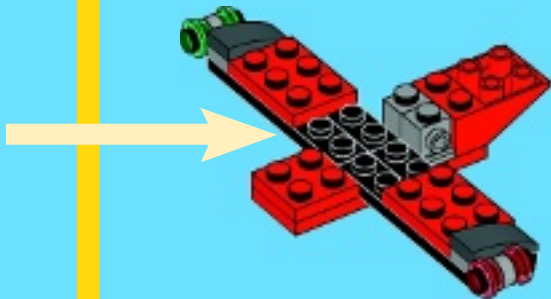


6

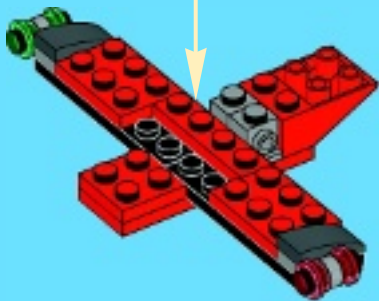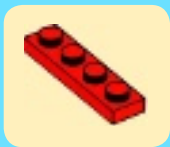  


7

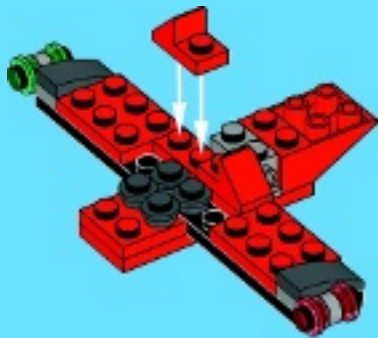 


8

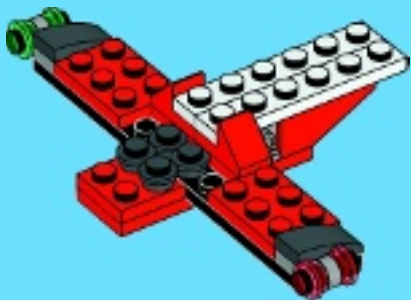 


9

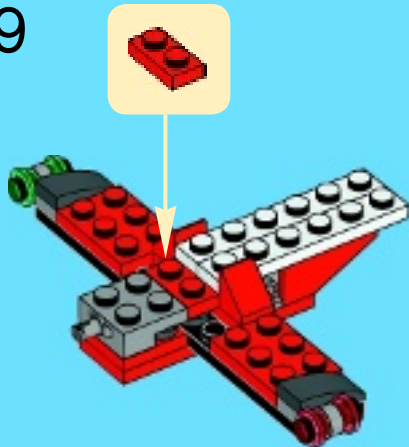 


10

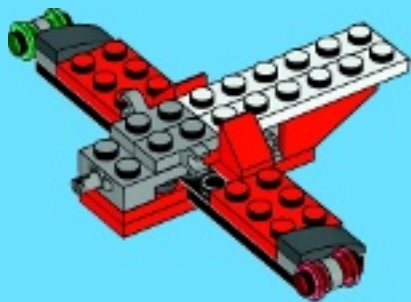 


11

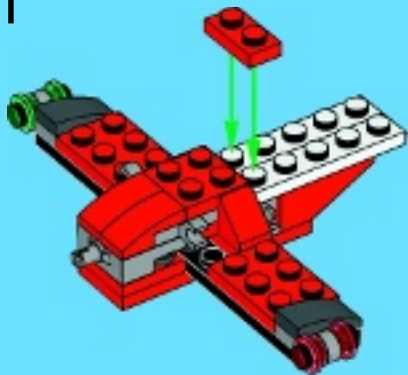 

12

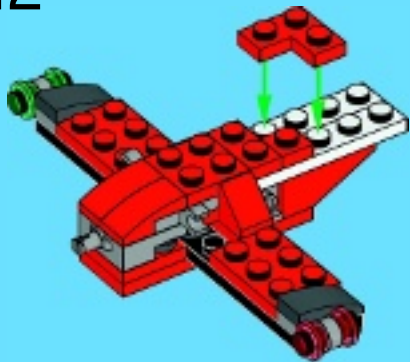 

13

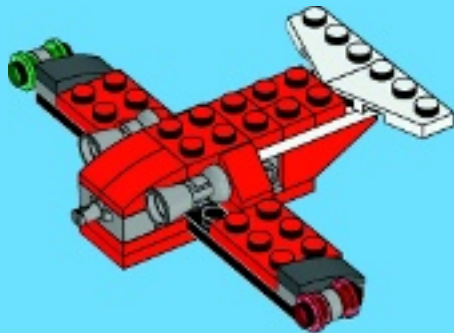 

1



2



 
3



4



14

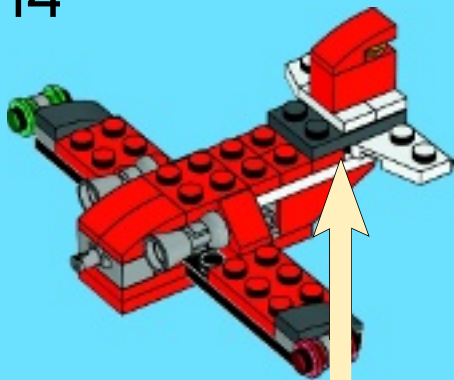

15





1



2



1



2

 


2x

3



4

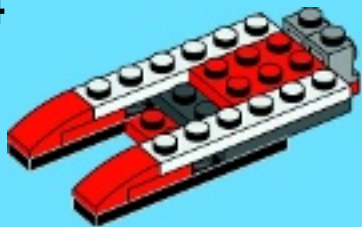

5



 
6




7



8

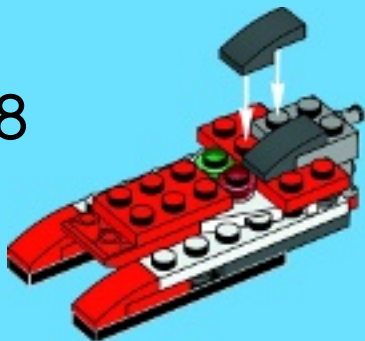

9

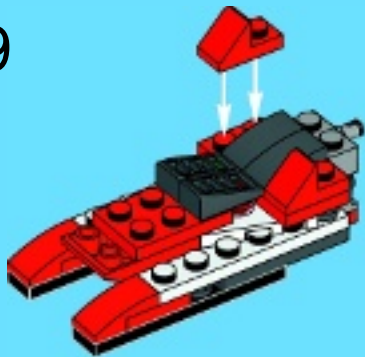 

10



11



12





2x
6051511



2x
366601



1x
346001



1x
306801



1x
4179874



1x
4179875



2x
4211476



2x
4632575



2x
6028812



1x
4211419



2x
4261919



1x
6018081



1x
4540203



1x
300421



2x
4603263



1x
4500462



4x
6029946



1x
302421



2x
302321



1x
242021



2x
302221



2x
302121



1x
371021



1x
379521



1x
6048856



1x
4565323



2x
3005741



1x
3005744



2x
3005748



2x
4226179



2x
4244368



1x
4289255



1x
368026



4x
366626



2x
6029948



1x
4211043



4x
4210633



1x
4211010



2x
4540386



1x
4218696



1x
4243831



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



6071633 / 6071637

LEGO.com



LEGO and the LEGO logo are trademarks of the/son des marques de commerce de/son marcas registradas de LEGO Group. ©2014 The LEGO Group