

Franklin®

BOOKMAN®

EXPANDABLE ELECTRONIC BOOK

HOLY BIBLE
King James Version

USER'S GUIDE

KJB-440

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN PRODUCT.

YOUR USE OF THE BOOKMAN PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE

All rights in the BOOKMAN PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN PRODUCT on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN PRODUCT or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN PRODUCT. You may not export or reexport, directly or indirectly, the BOOKMAN PRODUCT without compliance with appropriate governmental regulations. The BOOKMAN PRODUCT contains Franklin's confidential and propriety information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Contents

Welcome to the world of BOOKMAN! BOOKMAN is a powerful, portable electronic reference with a built-in book and a slot in the back for more books.

With this King James Version of the *Holy Bible*, you can quickly find any Bible

 
 



 

 
verse, as well as the occurrences of any word and phrase in the Bible. You can also place bookmarks for personalized reference.

To learn how to use other BOOKMAN books, read their User's Guides.

Installing the Batteries	4
Installing a Book Card	4
Selecting a Book	5
Using the Color Keys	5
Changing the Settings	6
Viewing a Demonstration	6
Reading the Bible	7
Finding Bible Verses	8
Finding Words	9
Finding Phrases	10
Highlighting Search Words	11
Expanding Your Searches	11
Viewing Footnotes	12
Using Bookmarks	13
Sending Words Between Books	14
Resetting Your BOOKMAN	15
Index	17

Key Guide

Function Keys

	Clears a request.
	Shows the main menus.
	(red) Expands a search.
	(green) Places a bookmark.
	(yellow) Shows a footnote.
	(blue) Shows bookmark list.
	Exits the selected book.
	Turns BOOKMAN on or off.







 

► Understanding Color Keys

The color keys (red, green, yellow, and blue) perform the functions listed above only for the BOOKMAN book described in this User's Guide.

Other books have their own color key functions, which are labelled on their book cards and listed in their User's Guides. For more information, read "Using the Color Keys."

* Hold  while pressing the other key.

Other Keys

	Backs up (e.g., erases letters).
	Shifts  to type an apostrophe.
	Enters a request or selects a menu item.
	Shows help messages.
	Types a space or pages down.
	Shows the verse number.
	Types a colon or apostrophe.


 



 

Direction Keys



Move in indicated direction.

UP/DN Page up or down.

Star Key Combinations*

 + 	Sends a word between books.
 + UP or DN	Show the next or previous chapter or match.
 +  or 	Go to start or end of a menu chapter, or help message.
 + Q...	Shifts the top row of letters to type numbers.

Installing the Batteries

BOOKMAN model KJB-440 uses two CR2032 batteries. Here is how to install or replace them.

Warning: When the batteries lose power or are removed from BOOKMAN, information that you entered in its built-in book and in an installed book card will be erased.

1. Turn **BOOKMAN** over.
2. Slide off its battery cover in the direction of the triangle.
3. Install the batteries with their plus signs facing you.
4. Replace the battery cover.

 
► Resuming Where You Left Off

You can turn off BOOKMAN at any screen. When you turn BOOKMAN on again, the last screen that you viewed appears.

Installing a Book Card

Warning: Never install or remove a book card when BOOKMAN is turned on. If you do, information that you entered in its built-in book and in an installed book card will be erased.

1. Turn **BOOKMAN** off.
2. Turn **BOOKMAN** over.
3. Align the book card tabs with the notches in the slot.

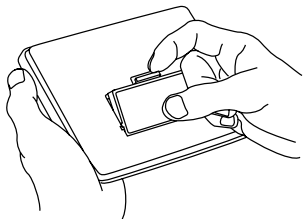

4. Press the book card until it snaps into place.

► Removing Book Cards

Warning: When you remove a book card without its own battery to install another book card, information that you entered in the first book card will be erased.



Selecting a Book

Once you have installed a book card in your BOOKMAN, you must select which book you want to use.

1. Turn **BOOKMAN** on.
2. Press **CARD**.



These are sample books.

3. Press  or  to highlight the book you want.



4. Press **ENTER** to select it.

 
► About Screen Illustrations

Some screen illustrations in this User's Guide may differ from what you see on screen. This does not mean that your BOOKMAN is malfunctioning.

Using the Color Keys

The red, green, yellow, and blue keys on your BOOKMAN change functions according to which book is selected.

When the built-in book is selected, the color keys function as labelled on the BOOKMAN keyboard. When a book in a book card is selected, the color keys function as labelled on its book card.

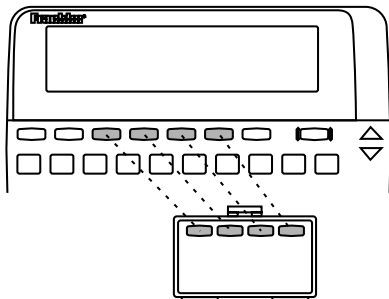

Remember, the color keys for book card books function as labelled on their book cards, not as labelled on the BOOKMAN keyboard.

Changing the Settings

You can adjust the type size, shutoff time, and screen contrast. The type size changes the number of lines of text appearing on screen. The shutoff time is how long BOOKMAN stays on if you forget to turn it off.

1. Press **MENU**.
2. Press the arrow keys to highlight the **Other** menu.



3. Highlight **Set Type Size**, **Set Shutoff**, or **Set Contrast**.
4. Press **ENTER**.
5. Highlight a setting.
6. Press **ENTER** to select it.
7. Repeat these steps to change other settings.

► A Quick Contrast Change

When the KJB-440 is the selected book, you can also change the screen contrast by pressing **CLEAR** and then repeatedly pressing **↑** or **↓**.

Viewing a Demonstration

Before you start using this book, you may want to view a demonstration.

If the book is built-in, the demonstration automatically appears the first time that you select the book. To stop the demonstration, press **CLEAR**. To disable it, highlight the **Other** menu and select *Disable Demo*.

If the book is a book card, select *View Demo* under *Other* to view its demonstration.

► Help is Always at Hand

You can view a help message at virtually any screen by pressing **HELP**. Press the direction keys to read it. To exit help, press **BACK**.

To read a tutorial about this book, select *Tutorial* under *Other*.

► Just Follow the Arrows

The flashing arrows on the right of the screen show which arrow keys you can press to move through menus or view more text.

 
Reading the Bible

The simplest way to use this Bible is to select a book from the Old or New Testament and then read its text.

1. Press **MENU**.
2. Press the arrow keys to highlight *Old* or *New*.



3. Highlight a book title (e.g., *Romans under New*).



4. Press **ENTER** to select it.



5. Press the direction keys to read.
6. Press **MENU** to return to the menus.
7. Press **CLEAR** to clear your menu selection.

 
Reading the Bible

► Understanding Text Markings

- Verse numbers are boldfaced at the start of verses.
- A ¶ indicates a new paragraph.
- Italics indicate words added by the original translators of the King James Bible.
- Horizontal lines indicate the end of chapters, notes, and help messages.

► Where in the Bible Am I?

At any Bible verse, you can view its book, chapter, and verse number by pressing (?*).






Finding Bible Verses

To go directly to a specific Bible verse, enter its book title, chapter number, and verse number.

 
If you enter only a book title and chapter number, you go to the start of the chapter. If you enter only a book title, you go to the start of that book.

1. Press **CLEAR**.
2. Type a book title, chapter number, and verse number.



To type a number, hold  and press a numbered key. Type a colon or a space between the chapter and verse number. To type a colon, press . To erase a character, press **BACK**.

 
3. Press **ENTER**.



4. Press the direction keys to read.
5. Press **CLEAR** to clear your request.

Finding Bible Verses

► Verse Finding Tips

- Type abbreviations instead of complete book titles (e.g., *PS* for *Psalms* or *EPH* for *Ephesians*).
- Type an Arabic or Roman numeral before books of more than one volume (e.g., *1 Samuel* or *II Kings*). To type numbers, hold  while pressing a numbered key.
- Some book titles, such as *Numbers* and *John*, are also valid search words. When you search for one of these ambiguous words, a menu like this appears:



 
To read the book, press **ENTER**. To search for the word(s), select *Search for. . .*

Finding Words


Just as if you were using a concordance, you can search for almost any word in this Bible. Simply enter search words to find their occurrences, or matches. After a word search, only those books with matches are listed under *Old* and *New*.

1. Press CLEAR.

2. Type up to five words.



 
3. Press ENTER to view the first match.



Bullets mark the matches.

4. Hold and press the DN key to view the next match.

To view a previous match, hold  and press the UP key.

5. Press MENU.



Finding Words

6. Select a book under *Old* or *New*.

7. Press CLEAR to clear your request.

► If You Misspell a Word

If you enter a misspelled word, or enter a word not in this Bible, spelling corrections appear. Select a correction from the list. Or press BACK to change your request.

► If You Do Not Find Words

If you enter two or more words not in this Bible, you see the menu below.



To expand the search to include inflections and synonyms of your words, press ENTER.

To change your search word(s), select *Change Your Request*.

Finding Phrases



You can search for phrases—adjacent or nearly adjacent words in a particular order—by selecting an ordered search and a narrow search width.

1. Press **MENU**.
2. Select **Ordered Search** from the Search menu.



3. Press **MENU**.
4. Select **Set Search Width** from the Search menu.



5. Select **Close Together**.
6. Enter a phrase (e.g., *holy spirit*).
7. Hold  and press the **DN** key repeatedly to view the next matches. To view previous ones, hold  and press **UP**.
8. Press **CLEAR** when done.

Finding Phrases

► About Ordered Searches

When you select *Ordered Search*, you find words only in the order that you enter them. For example, an ordered search for *holy spirit* does not find *spirit holy*.

► About Search Widths

The search widths set how far apart search words can be in matches.

Search Width	Distance
<i>Close Together</i>	nearly adjacent
<i>Not as Close</i>	a few words apart
<i>Far Apart</i>	many words apart
<i>Very Far Apart</i>	up to a few verses

► About Unsearchable Words

These words are too common to search for: a, an, and, are, as, be, but, by, for, from, he, her, him, his, I, in, is, it, me, my, not, O, of, our, out, shall, shalt, she, that, the, thee, their, them, they, thou, thy, to, unto, up, upon, us, was, we, were, with, ye, you.

 
Highlighting Search Words

You can also search for a word by highlighting it in a verse. Try this example.

1. Go to *Genesis 15:6*.

To learn how, see "Finding Bible Verses."

2. Press ENTER to start the highlight.



To turn the highlight off, press BACK.

3. Press the arrow keys to highlight *righteousness*.



4. Press ENTER to search for the highlighted word.

5. Hold and repeatedly press the DN key to view the next matches.

6. Press MENU to view those books with matches.

 
7. Press CLEAR when done.

Expanding Your Searches


You can expand your word searches up to three times to find inflections, synonyms, and similar words.

1. Press CLEAR.


2. Enter a word (e.g., *belief*).



 3. Press MORE to expand the search.



 4. Press MORE twice to fully expand the search.



5. Press MENU to view those books with matches.

6. Press CLEAR when done.

Expanding Your Searches

► Understanding Expansions

Each time that you press MORE to expand a search, similar words are added to your search and more matches are found.

The first time that you press MORE, inflections are added (e.g., *believe* and *believed* to *belief*).


The second time that you press MORE, compound and related words are added (e.g., *believer* and *unbelief* to *belief*).

The third time that you press MORE, synonyms are added (e.g., *understand* and *obeyed* to *belief*).

When you search for a phrase, words similar to any or all your search words are found.



Sometimes pressing MORE only once does not expand a search because your search word(s) have no inflections in this Bible. In that case, press MORE a second and a third time to expand your search.

Viewing Footnotes

Whenever you see a  after a word in a verse, that word has a footnote. Try this example.

1. Go to *Psalm 16:7*.

To learn how, see “Finding Bible Verses.”

 I will bless the LORD, who hath given me counsel: my reins  also instruct me in



Notice the footnote marker.

2. Press NOTE.

Reins or *kidneys* here refers to the seat of the affections, corresponding to



3. Press the direction keys to read the footnote.



4. Press BACK to go back to the verse.


► Understanding Footnotes

 
The footnotes in this Bible have been added by Franklin Electronic Publishers to clarify the meaning of archaic English words. These footnotes are not part of the original King James Bible.




Viewing Footnotes

► When More Than One Footnote Marker Appears

Sometimes more than one  will appear on screen. In that case, pressing NOTE displays the footnote of the first .

To view footnotes of subsequent markers, press ENTER and then the arrow keys to highlight a .



 
candle, and put it under a ' bushel, but on a candlestick and it giveth .



Press ENTER to view its footnote. Press BACK to go back to the verse.

Using Bookmarks

It's easy to place up to 30 bookmarks at verses for quick reference.

1. Press MARK at any verse to place a bookmark.

 




 I am the LORD thy God; which brought thee out of the land of Egypt, from the .

 The marks its placement.

2. Press LIST to view your bookmark list.


3. Press to highlight a verse.





Deuteronomy 5:6
John 3:16
 

 This is a sample list.

4. Press ENTER to view its verse.



 The LORD /s my shepherd; I shall not want.
2 He maketh me to lie down .

Using Bookmarks

► Deleting a Bookmark

To delete a bookmark, first press LIST. Then highlight a verse on your bookmark list. Then press D to delete it.

► Deleting All Bookmarks

Caution: When you delete all your bookmarks as described below, the menus are reset to their original settings: *Ordered Search* off, *Close Together* search width, 9 screen contrast, *Medium* type size, and 2 *Minutes* shutoff time.

 
To delete all your bookmarks at once, first turn off BOOKMAN. Then hold ON/OFF and press CLEAR to reset it.

Sending Words Between Books

This BOOKMAN can send words between certain books.

To send a word, you must first install a book card in your BOOKMAN, and that book card must be able to send or receive words. To learn if a book card can send or receive words, read its User's Guide.

1. Highlight a word in this book.



16 And he believed in the
LORD; and he counted it to
him for righteousness.



To highlight a word in text, press ENTER and then press the arrow keys.

To highlight a word in a list, press the arrow keys.

2. Hold and press CARD.

3. Highlight the other book.

4. Press ENTER.

The word that you highlighted appears in the other book.

5. Press ENTER to look up the word.

Resetting Your BOOKMAN

If the keyboard fails to respond, or if the screen performs erratically, first press CLEAR and then press ON/OFF twice. If nothing happens, follow the steps below to reset it.

Warning: Pressing the reset button with more than light pressure may permanently disable your BOOKMAN. Also, resetting BOOKMAN erases settings and information entered in its built-in book and in an installed book card.

1. Hold CLEAR and press ON/OFF.

If nothing happens, try Step 2.

2. Use a paper clip to *gently* press the BOOKMAN's reset button.

The reset button is recessed in a pin-sized hole on the back of the BOOKMAN. Look for it on the battery cover or near the book card slot.

This unit may change operating modes due to electrostatic discharge. Normal operation of this unit can be re-established by pressing the reset button, ON/OFF, or by removing or replacing the batteries.

 
Book Card Care

• Do not damage the contacts on the book cards or slot.

Caution: Touching these electrical contacts with statically charged objects, including your fingers, could erase information entered in a book card or built-in book.



• Do not put excessive pressure on the book cards.

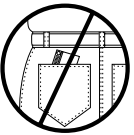

• Do not expose the book cards to heat, cold, or liquids.



Specifications

Model KJB-440

- Batteries: 2 CR2032 3-volt
- Size: 12 x 1.4 x 8.3 cm.
- Weight: 3.5 oz. without batteries

© 1989-1997 Franklin Electronic Publisher, Inc., Burlington, NJ 08016 USA. All rights reserved.

Scripture taken from the Holy Bible, King James Version.

BOOKMAN is a registered trademark Franklin.

U.S. Patents 4,490,811; 4,982,181; 4,891,775; 5,113,340; 5,153,831; 5,203,705; 5,218,536; 5,249,965; Euro. Patent 0 136 379. PATENTS PENDING.

FCC Notice: Complies with the limits for a Class B computing device pursuant to Subpart B of part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

ISBN 1-56712-135-7

Limited Warranty (U.S. only)

FRANKLIN warrants to you that the BOOKMAN PRODUCT will be free from defects in materials and workmanship for one year from purchase. In the case of such a defect in your BOOKMAN PRODUCT, FRANKLIN will repair or replace it without charge on return, with purchase receipt, to the dealer from which you made your purchase or Franklin Electronic Publishers, Inc., One Franklin Plaza, Burlington, NJ 08016, within one year of purchase. Alternatively, FRANKLIN may, at its option, refund your purchase price.

Data contained in the BOOKMAN PRODUCT may be provided under license to FRANKLIN. FRANKLIN makes no warranty with respect to the accuracy of data in the BOOKMAN PRODUCT. No warranty is made that the BOOKMAN PRODUCT will run uninterrupted or error free. You assume all risk of any damage or loss from your use of the BOOKMAN PRODUCT.

This warranty does not apply if, in the sole discretion of FRANKLIN, the BOOKMAN PRODUCT has been tampered with, damaged by accident, abused, misused, or misapplication, or as a result of service or modification by any party, including any dealer, other than FRANKLIN. This warranty applies only to products manufactured by or for FRANKLIN. Batteries, corrosion, or battery contacts and any damage caused by batteries are not covered by this warranty. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, WRITTEN OR ORAL, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE FRANKLIN'S OBLIGATION TO REPLACE OR REFUND AS SET FORTH ABOVE IN THIS WARRANTY. Some States do not allow the exclusion of implied warranties, or limitations on how long a warranty lasts. This warranty gives you specific rights; you may also have additional rights which vary from State to State. This warranty shall not be applicable to the extent that enforcement of any provision may be prohibited by applicable law. FRANKLIN SHALL IN NO EVENT BE LIABLE TO YOU OR TO ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR ANY OTHER INDIRECT LOSS OR DAMAGE, ARISING OUT OF YOUR PURCHASE, THE MANUFACTURE OR SALE OF THE BOOKMAN PRODUCT, THIS LICENSE, OR ANY OBLIGATION RESULTING THEREFROM OR THE USE OR PERFORMANCE OF THE BOOKMAN PRODUCT UNDER ANY LEGAL THEORY, WHETHER BREACH OF CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER CAUSE OF ACTION OR PROCEEDING, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY, OR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). FRANKLIN'S ENTIRE LIABILITY FOR ANY CLAIM OR LOSS, DAMAGE, OR EXPENSE FROM ANY SUCH CAUSE SHALL IN NO EVENT EXCEED THE PRICE PAID FOR THE BOOKMAN PRODUCT. THIS CLAUSE SHALL SURVIVE FAILURE OF AN EXCLUSIVE REMEDY. This license and warranty is governed by the laws of the United States and the State of New Jersey.

Index

- ? key 7
- ¶ 7
- arrow keys 6
- auto-resume feature 4
- auto-shutoff 6
- batteries, installing 4
- book cards
 - care of 15
 - installing 4
 - removing 4
 - selecting in BOOKMAN 5
 - viewing demonstration in 6
- bookmarks
 - deleting 14
 - placing 13
- colons, typing 3, 8
- color keys
 - functions of 3
 - general use of 3, 5
- contrast, changing 6, 7
- copyrights 16
- deleting bookmarks 14
- Direction keys 3
- end of chapter markers 7
- expanding searches
 - after no matches found 9
 - levels of 12
- FCC notice 16
- footnotes 12
- function keys 3
- help messages, viewing 6
- italics, meaning of 7
- keys
 - color (red, green, yellow, blue) 3, 5
 - Direction keys 3
 - Function keys 3
 - Star key combinations 3
- misspellings, correcting 9
- MORE key 11, 12
- New menu 7
- numbers, typing 3
- Old menu 7
- Ordered search 10
- Other menu 6
- patents 16
- phrases, finding 10
- resetting 15
- screen contrast 6, 7
- search widths 10
- searching
 - expansions 11, 12
 - for phrases 10

Index

- for verses 8
- for words 9
- for words by highlighting them 11
- for words in other books 14
- ordered searches 10
- search widths 10
- unsearchable words 10
- sending words between books 14**
- shutoff time, changing 6**
- specifications 16**
- spelling correction 9**
- Star key, use of 3**
- text markings, understanding 7**
- trademarks 16**
- troubleshooting tips 15**
- type size, changing 6**
- typing**
 - colons 3, 8
 - numbers 3, 8
- viewing**
 - Bible verses 8
 - footnotes 12
 - help messages 6
 - menus 7
- warranty 16**

