


Example of a starting Serial # UT8060210000001

UT8	06	0210	000001
Model #	Plant #	Year/month	Serial Number



CONSOLE ASSEMBLY (ENG/ENG)  
 REX22D9

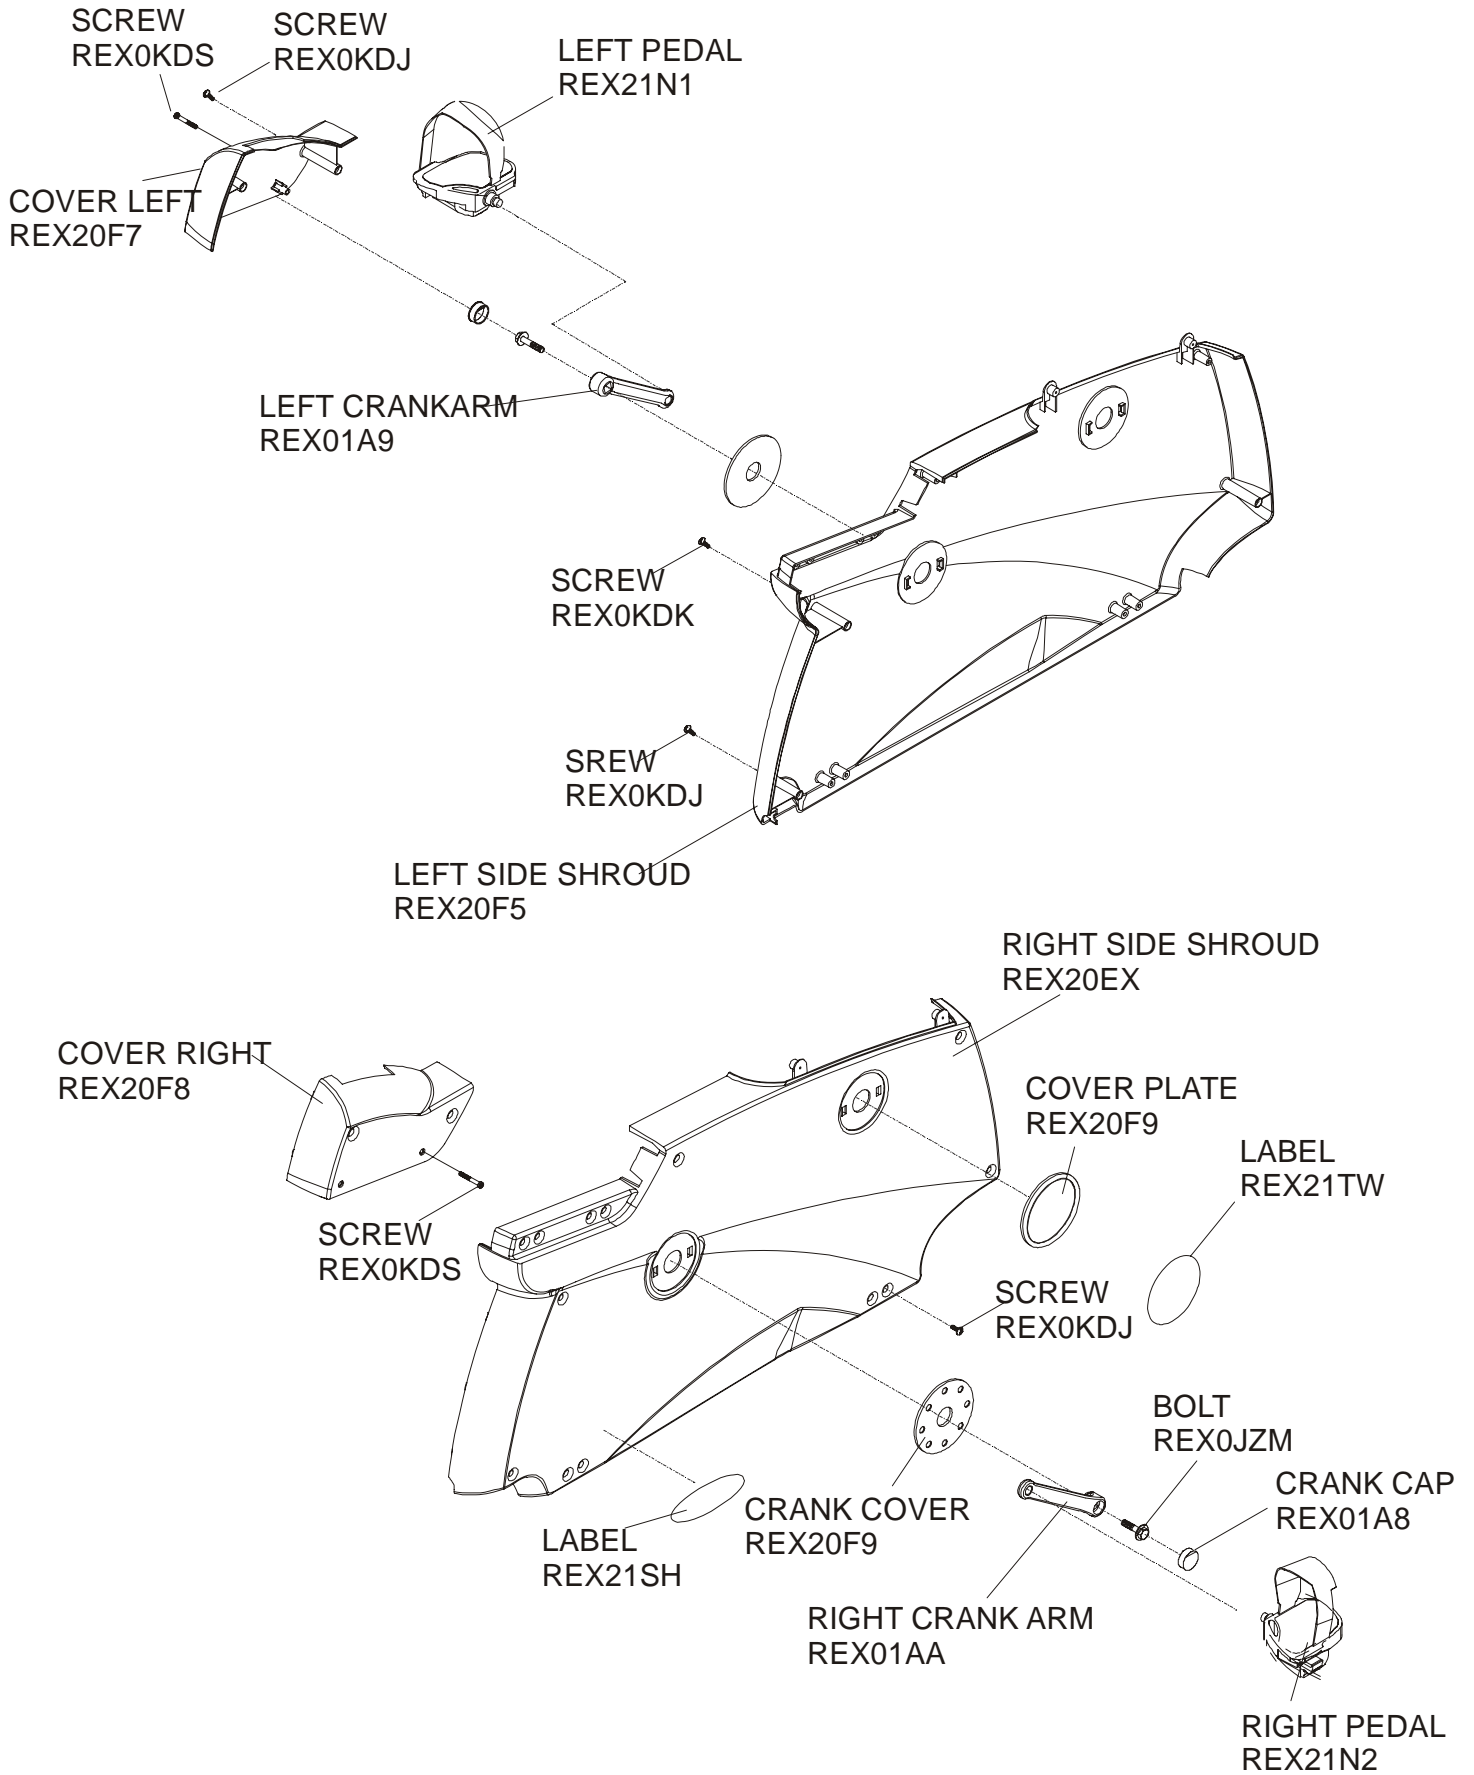