



## Camera/Camcorder Light

# LED30

Thank you for purchasing the PROMASTER® LED30 Camera/Camcorder Light.



Please read the following instructions before use.

### Installing the Batteries

Gently remove the cover on the back of the light.



Insert 2 AA batteries (not included) into the battery compartment.  
Be sure to observe the correct polarity (+,-) as indicated.



After the batteries are properly installed, use the on/off switch to power the light.

### Mounting the LED30 Light

You can mount your LED30 Camera/Camcorder light to the built-in accessory shoe on your camera or camcorder. If your camera or camcorder does not have an accessory shoe, use the included mounting bracket as follows:

Connect screw (**A**) to the tripod mount of your camcorder/camera.

Slide your light into the accessory shoe (**B**) of the bracket



### Specifications

<b>Light source:</b>	30-5mm super bright LED lamps
<b>Beam angle:</b>	60°
<b>Luminance:</b>	23 Lux @ 10'
<b>Color rendering index:</b>	≥85
<b>Color temperature:</b>	5600K
<b>LED longevity:</b>	>10000h
<b>Power input:</b>	AA Battery × 2
<b>Housing size(mm):</b>	100 x 45 x 32
<b>Weight(g):</b>	60

Code 7193

Made in China

[www.promaster.com](http://www.promaster.com)

Fairfield, CT 06611