

Breville

www.breville.com.au

Breville

BarVista
Coffee and Spice Grinder

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre
Australian Customers

✉ Breville Customer Service Centre
Locked Bag 2000
Botany NSW 2019
AUSTRALIA
☎ Customer Service: 1300 139 798
Fax (02) 9384 9601
Email Customer Service: askus@breville.com.au

New Zealand Customers

✉ Breville Customer Service Centre
Private Bag 94411
Greenmount
Auckland, New Zealand
☎ Customer Service: 09 271 3980
Fax 0800 288 513
Email Customer Service: askus@breville.com.au



© Copyright. Breville Pty. Ltd. 2005
BarVista is a trademark of Breville Pty. Ltd.
Due to continual improvements in design or otherwise, the product you purchase may differ slightly from the one illustrated in this booklet.

Model BCG300 Issue 1/05

Instructions for use

Model BCG300



Contents

	Page
Introduction	3
Breville recommends safety first	4
Know your Breville BarVista Coffee and Spice Grinder	6
Operating your Breville BarVista Coffee and Spice Grinder	7
Handy hints	8
Care and cleaning	9

Congratulations

on the purchase of your new Breville BarVista Coffee and Spice Grinder.

Breville recommends safety first

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

Important safeguards for your Breville BarVista Coffee and Spice Grinder

- Carefully read all instructions before operating and save for future reference.
- Do not place the Coffee and Spice Grinder near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.
- Remove any promotional stickers or packaging materials before using the Coffee and Spice Grinder for the first time.
- Do not place the Coffee and Spice Grinder on, or near a hot gas or electric burner, or where it could touch a heated oven.
- Always turn the power off at the outlet and then remove the plug from the power outlet before attempting to move the grinder, when the coffee grinder is not in use and before cleaning and storing.
- The Coffee and Spice Grinder will not operate until the transparent cover is locked in position.
- Do not leave the Coffee and Spice Grinder appliance unattended when in use.
- Do not use on metal surfaces, for example, a sink drain board.
- Do not use on an inclined surface.
- To protect against electric shock, do not immerse the power supply cord, plug or Coffee and Spice Grinder in water or any other liquid.
- Do not operate the Coffee and Spice Grinder continually for longer than 60 seconds. Allow appliance to cool down for 10-15 minutes after extended continuous operation.
- Keep the appliance clean. Follow cleaning instructions provided in this book.

Important safeguards for all Electrical Appliances

- Unwind the cord fully before use.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance. Do not leave the appliance where children can touch hot surfaces.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply cord, plug or actual appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Know your Breville BarVista Coffee and Spice Grinder

Operating your Breville BarVista Coffee and Spice Grinder



Before first use

Remove any promotional stickers or packaging material attached to your Coffee and Spice Grinder.

1. Remove transparent cover by turning counter-clockwise to unlock position, then lift straight up. Ensure the grinder is clean and empty.
2. Twist the removable bowl clockwise into the locked position.
3. Pour whole coffee beans directly into removable bowl and fill to desired level as indicated inside the bowl. (Min 2 cups – Max 12 cups)
4. Return the transparent cover to locked position over the removable bowl. Make sure the arrow on the transparent cover is aligned with the unlock symbol on side of grinder. Turn lid clockwise to lock in position.
5. Slowly release the power plug from the storage position by pulling outwards until it stops. Insert the power plug into a 230/240v power outlet and turn the power switch on.
6. Rotate Grind Selector control dial to select desired fineness of grind. Rotating from left to right, coarse to finer.
7. Position the Cup Slider control to the total number of cups to be ground. Slide up and down from 2 cups to 12 cups.
8. Press START button and release once grinding has begun. The Coffee and Spice Grinder will stop automatically when grinding is complete. To stop grinding cycle at any time, push START button. If START button is pressed again, grinder will start from beginning of timed cycle.
9. After grinding is completed, switch the power off at the power outlet and remove the plug from the power outlet.
10. Remove the transparent cover by turning counter-clockwise to unlock position, lift straight up. Twist the removable bowl anti-clockwise to unlock position and lift straight up. Empty ground coffee into an airtight container for use and storage.
11. Clean the coffee grinder and rewind the cord. To rewind cord: turn base clockwise, using either the interior finger grips or the outside of the base.

The Coffee and Spice Grinder will only operate with the transparent cover in locked position.

Note

Handy hints

- For best coffee flavour, store coffee beans in an airtight container.
- Grind coffee beans immediately before brewing.
- Grinding times will vary by amount and fineness setting.
- To ensure optimal grinding performance, allow your Coffee and Spice Grinder to cool for at least one minute between uses.
- Coffee flavour and strength is a personal preference. Vary the type of coffee beans, amount of coffee and fineness of grind to find the flavour you prefer.
- To grind amounts not on controls, select the next closest amount listed.
- The BarVista Coffee and Spice Grinder will not grind anything that is sticky or extremely hard ie. chocolate, whole nutmeg, candied fruits etc.
- The BarVista Coffee and Spice Grinder will not make pastes of any fruits, seeds, nuts or fresh or herbs ie. curry pastes, nut batters.

- The BarVista is not recommended for chopping garlic, parmesan cheese and nuts.
- To grind dry seeds, dry spices or dry herbs, place one to four tablespoons of dry food in the removable bowl. Select desired fineness of grind and position the cup slider control according to the level indicated in the removable bowl i.e. 2 cups – 12 cups. If unsure of fineness of grind, start with the coarse setting, and repeat as necessary to achieve the desired fineness of grind. Press **START** button to start grinder. When desired ground size is reached, press **START** to stop grinder.

Care and cleaning

Do not immerse motor base or cord in water or any other liquid. Do not fill the stainless steel grinding base with water or any other liquid.

1. Always switch the power off at the power outlet and then remove the plug from the power outlet before cleaning the Coffee and Spice Grinder.
2. Remove transparent cover by turning counter-clockwise to unlock position, lift straight up.
3. Remove the grinding bowl by turning counter-clockwise until it comes loose from the base. Lift removable bowl straight up out of base.
4. The removable bowl and lid can be washed in hot soapy water, rinsed and dry thoroughly.
5. Wipe base with a damp cloth. Wipe exterior of unit with slightly damp cloth. Polish with a soft, dry cloth. Do not use abrasives.
6. Hold grinder and turn the base clockwise to rewind cord.

Storage

Always switch off at the power outlet, remove the plug from outlet. Follow directions for cleaning and store in an upright position on a flat surface on your bench top or in an accessible cupboard.

